

htc

User guide _____



HTC One M9+ Supreme Camera
Edition

Contents

Features you'll enjoy

Personalization	9
Fingerprint sensor	10
Imaging	10
Sound	12

Unboxing

HTC One M9+ Supreme Camera Edition	14
Back panel	15
Slots with card trays	15
nano SIM card	16
Storage card	17
Charging the battery	20
Switching the power on or off	20
Want some quick guidance on your phone?	21

Phone setup and transfer

Setting up HTC One M9+ Supreme Camera Edition for the first time	22
Restoring your backup from your cloud storage	23
Transferring content from an Android phone	24
Ways of transferring content from an iPhone	25
Transferring iPhone content through iCloud	25
Transferring contacts from your old phone through Bluetooth	25
Other ways of getting contacts and other content	26
Transferring photos, videos, and music between your phone and computer	27
Using Quick Settings	27
Getting to know your settings	29
About the fingerprint scanner	29
Updating your phone's software	31
Getting apps from Google Play	33
Downloading apps from the web	34
Uninstalling an app	34

Your first week with your new phone

Basics	35
HTC Sense Home widget	44
Motion Launch	46
Lock screen	51
Notifications	54
Working with text	56
HTC Help	60

Personalizing

Themes	61
More ways to personalize	64

HTC BlinkFeed

What is HTC BlinkFeed?	71
Turning HTC BlinkFeed on or off	72
Restaurant recommendations	72
Ways of adding content on HTC BlinkFeed	73
Customizing the Highlights feed	74
Saving articles for later	74
Posting to your social networks	75
Removing content from HTC BlinkFeed	75

Camera

Camera basics	76
Selfies and people shots	81
Raw Camera	83
Split Capture	84
Panoramic shots	85
Other camera features	86
Camera settings	87

Gallery

Viewing photos and videos in Gallery	89
Adding photos or videos to an album	92
Copying or moving photos or videos between albums	92
Tagging photos and videos	92
Searching for photos and videos	93
Finding matching photos	94
Viewing Pan 360 photos	94
Changing the video playback speed	95
Trimming a video	95
Saving a photo from a video	95
Viewing, editing, and saving a Zoe highlight	96
One Gallery	96

Photo Editor

Basics	97
Editing continuous shots	99
Creative effects	101

Phone calls

Making a call with Smart dial	107
Making a call with your voice	107
Dialing an extension number	108
Returning a missed call	108
Speed dial	108
Calling a number in a message, email, or calendar event	108

Making an emergency call	109
Receiving calls	109
What can I do during a call?	109
Setting up a conference call	110
Call History	111
Switching between silent, vibrate, and normal modes	111
Home dialing	112

Messages

Sending a text message (SMS)	113
Sending a multimedia message (MMS)	113
Sending a group message	114
Resuming a draft message	114
Replying to a message	114
Forwarding a message	115
Moving messages to the secure box	115
Blocking unwanted messages	116
Copying a text message to the nano SIM card	116
Deleting messages and conversations	116

Entertainment

HTC BoomSound with Dolby Audio	118
HTC Music	119
FM Radio	122
HTC Connect	122

Power and storage management

Battery	127
Phone storage	130
File Manager	132

Sync, backup, and reset

Online sync	134
Backup	135
HTC Sync Manager	140
Reset	142

People

Your contacts list	144
Setting up your profile	145
Adding a new contact	145
Editing a contact's information	146
Getting in touch with a contact	147
Importing or copying contacts	147
Merging contact information	148
Sending contact information	149
Contact groups	149
Private contacts	150

Calendar and Email

Viewing the Calendar	152
Scheduling or editing an event	153
Choosing which calendars to show	153
Sharing an event	154
Accepting or declining a meeting invitation	154
Dismissing or snoozing event reminders	155
Checking your mail	156
Sending an email message	157
Reading and replying to an email message	157
Managing email messages	158
Searching email messages	159
Working with Exchange ActiveSync email	159
Adding an email account	160
What is Smart Sync?	161

Google Search and apps

Google Now	162
Google Search	164
Google Chrome	165
Google Drive	166
Google Maps	168
YouTube	170

Other apps

HTC Dot View	172
HTC Car	174
Scribble	176
Clock	178
Weather	179
Voice recorder	179

Internet connections

Turning the data connection on or off	180
Managing your data usage	180
Wi-Fi connection	182
Connecting to VPN	183
Using HTC One M9+ Supreme Camera Edition as a Wi-Fi hotspot	185
Sharing your phone's Internet connection by USB tethering	186

Wireless sharing

Bluetooth	187
NFC	189

Settings and security

Turning location services on or off	191
Airplane mode	191
Scheduling when to turn data connection off	192
Automatic screen rotation	192

Setting when to turn off the screen	192
Screen brightness	192
Touch sounds and vibration	193
Changing the display language	193
Glove mode	193
Installing a digital certificate	194
Pinning the current screen	194
Disabling an app	195
Assigning a PIN to a nano SIM card	195
Accessibility features	195
Accessibility settings	196
Turning Magnification gestures on or off	196
Navigating HTC One M9+ Supreme Camera Edition with TalkBack	197

Trademarks and copyrights

Index

About this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Some apps may not be available in all regions or with your mobile operator.

Important note on recoverable data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your mobile device, including personal information.

Features you'll enjoy

Personalization

Designed with you in mind, HTC One M9+ Supreme Camera Edition is filled with innovations that help it to adapt to your life.


Themes



Make HTC One M9+ Supreme Camera Edition feel more personal by customizing how it looks with your own photos and then mix and match with different sets of icons, sounds, color schemes, and more. See [What is the Themes app?](#) on page 61.


HTC Sense Home

Your Home screen adapts to your needs at home, at work, and on the go. See [What is the HTC Sense Home widget?](#) on page 44.

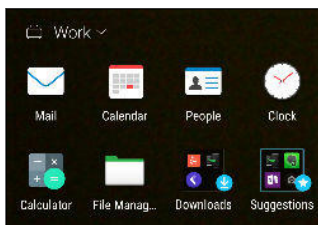

New lock screen notifications make it easier to find what you've missed, see upcoming events, get restaurant recommendations, and more. See [HTC BlinkFeed Notifications](#) on page 52.

HTC BlinkFeed

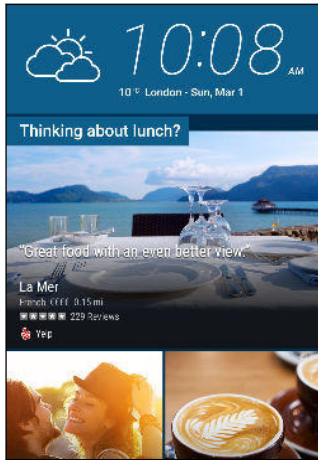

Get your favorite topics, news, social media, and more conveniently delivered to one place on your phone. Even get suggestions for points of interests and places to eat! See [What is HTC BlinkFeed?](#) on page 71.

Fingerprint sensor

You can use the fingerprint scanner on HTC One M9+ Supreme Camera Edition to quickly wake up and unlock your phone with your fingerprint.

You can register up to 5 fingerprints. See [About the fingerprint scanner](#) on page 29.

Imaging

Made to help you capture your memories to share with family and friends.


Faster focus and sharper, brighter photos

HTC One M9+ Supreme Camera Edition has laser autofocus and Optical Image Stabilization (OIS) that can help to speed up the camera focusing speed and enhance photo quality. See [Back panel](#) on page 15.

RAW capture

HTC One M9+ Supreme Camera Edition can capture photos in RAW format. See [Taking a RAW photo](#) on page 83.

Bokeh

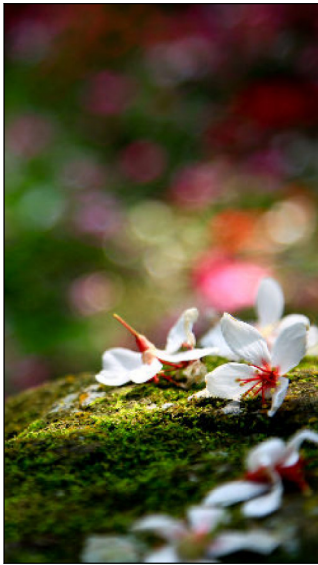

When using Bokeh mode with the main camera, you can focus on any object by just tapping it, which blurs the background for an artistic effect. See [Changing the focus in Bokeh mode](#) on page 80.

Split Capture



Use Split Capture mode to record yourself and the action in front of you. See [Using Split Capture mode](#) on page 84.

Front camera features

Enjoy using the variety of selfie-friendly features with the Camera app.


- Live Makeup – Before taking your selfie, use Live Makeup to smoothen your skin. See [Applying skin touch-ups with Live Makeup](#) on page 82.
- Instant selfie shots – Flash a smile, and the camera instantly captures your smiling face. Or, Just say "Cheese"! See [Using Auto Selfie](#) on page 82 and [Using Voice Selfie](#) on page 82.
- Photo Booth – Take 4 selfies and the camera automatically merges them into a single picture. See [Taking selfies with Photo Booth](#) on page 83.

One Gallery

One Gallery lets you view all your photos and videos that are stored on HTC One M9+ Supreme Camera Edition as well as on favored online services right from the Gallery app. You can also find similar photos and videos using Image match or by searching with keywords or tags. See [One Gallery](#) on page 96.

Photo Editor

The Photo Editor app enhances your photos, from basic edits to elegant effects!

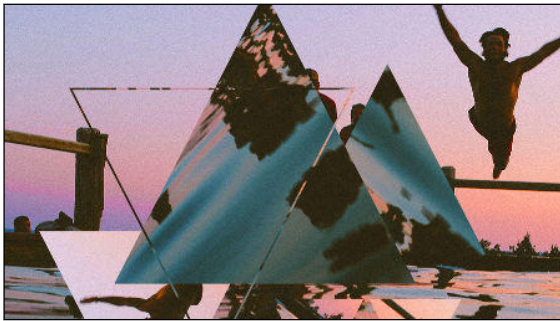

Make a photo surreal. Blend in shapes, elements, and prismatic effects. See [Prismatic](#) on page 103.



Superimpose one image onto another and create a unique composition only you can imagine! See [Double Exposure](#) on page 104.



Face Fusion uses two photos such as your selfie and a photo of your favorite celebrity to merge your looks together. See [Face Fusion](#) on page 105.

Sound

Discover audio bliss on HTC One M9+ Supreme Camera Edition through its built-in speakers or headphones. Easily connect wireless speakers to your phone.

HTC BoomSound with Dolby Audio

Hear what you've been missing. HTC BoomSound™ gives you a rich, authentic sound experience, whether you're listening to music, watching a video, or playing a game. To find out more, see [Toggling modes in HTC BoomSound](#) on page 118 and [Using HTC BoomSound with headphones](#) on page 118.


HTC Connect

Simply swipe up the screen with three fingers to stream music or video from HTC One M9+ Supreme Camera Edition to your speakers or TV. Control the volume and playback with your

phone! You can even enjoy your favorite music on multiple speakers. See [What is HTC Connect?](#) on page 122.

Unboxing

HTC One M9+ Supreme Camera Edition

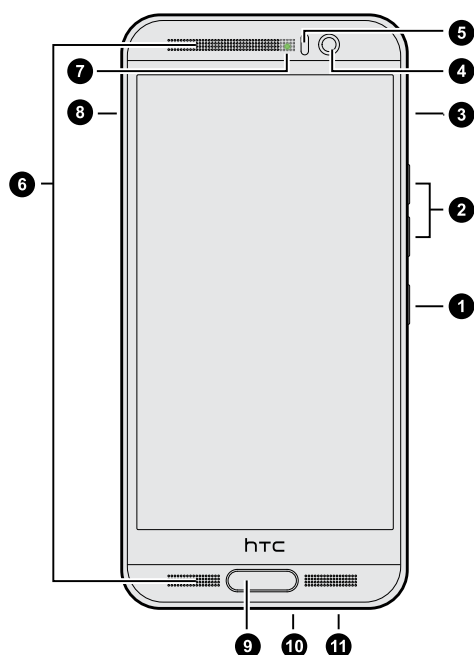

1. POWER
2. VOLUME
3. microSD™ card slot with eject hole
4. Front camera
5. Proximity sensor
6. Dual speakers
7. Notification LED
8. nano SIM card slot with eject hole
9. Fingerprint scanner
10. USB connector
11. 3.5mm headset jack




You need a 4G/LTE™ plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.



- If you want to use a case or screen protector, don't cover and block the proximity sensor. Purchase a case or screen protector designed for HTC One M9+ Supreme Camera Edition .
- Avoid liquid or dust from entering the microphone hole to prevent damage to the microphone.
- Avoid connecting third-party headsets or accessories with metallic charms that dangle near the headset jack. Using these may affect signal reception.

Back panel

HTC One M9+ Supreme Camera Edition has laser autofocus and Optical Image Stabilization (OIS). Laser autofocus speeds up camera focusing speed and improves contrast detection in low-light situations. OIS reduces blur from hand movements while you shoot.

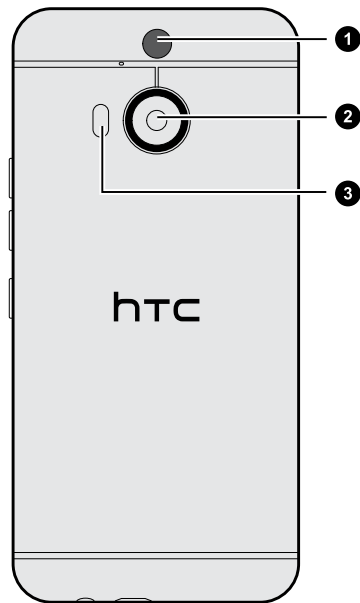


1. Laser autofocus sensor
2. Main camera with OIS
3. Flash

Slots with card trays

With HTC One M9+ Supreme Camera Edition facing up, the nano SIM slot is on the left side and the microSD slot on the right side. There are trays inside the slots that are used for inserting your cards.

When inserting the eject tool into the tray eject holes to remove the card trays, make sure not to press on the trays to avoid damaging the eject mechanism inside the slots.

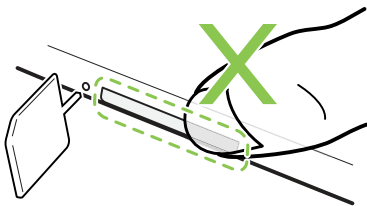


Also, if you want to use a protective case, make sure to buy a case that's designed for HTC One M9+ Supreme Camera Edition and that doesn't block the trays.

nano SIM card


HTC One M9+ Supreme Camera Edition uses a nano SIM card.

Use a standard nano SIM card only. Inserting a modified card that is thicker than the standard nano SIM card may cause the card to not fit properly or damage the card slot.

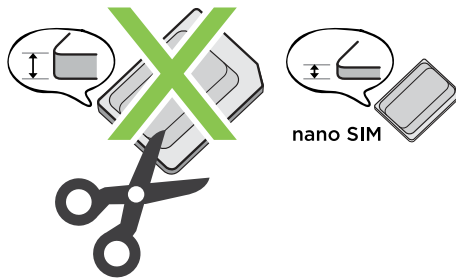


Inserting a nano SIM card

1. Hold the phone face down.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the nano SIM card slot.

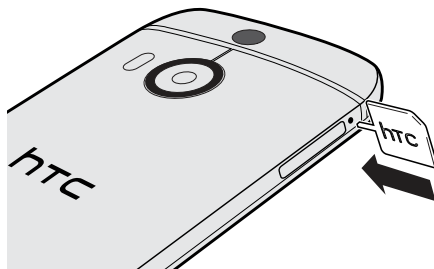

3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.
4. Place the nano SIM card into the tray, with the gold contacts facing up and cut-off corner facing out.

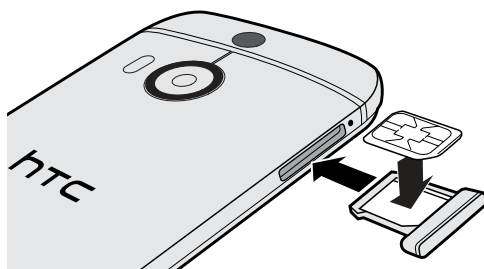


5. Insert the card tray back into the slot.

Removing a nano SIM card



Make sure to switch off HTC One M9+ Supreme Camera Edition before removing the card.

1. Hold the phone face down.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the nano SIM card slot.

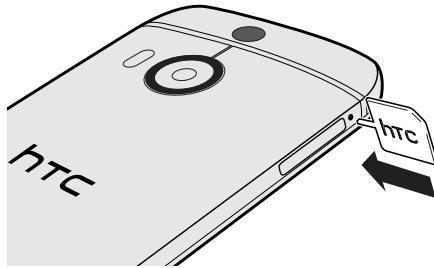

3. Push the tip all the way into the hole until the card tray ejects.
4. Pull the card tray out, and remove the nano SIM card.
5. Make sure that you insert the empty card tray back into the slot.

Storage card

Use a storage card to store your photos, videos, and music. When you need to free up phone storage space, you can also move certain apps to the storage card, if the apps support this feature.




The storage card is optional and sold separately.




- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Inserting the microSD card

1. Hold the phone face up.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the microSD card slot.

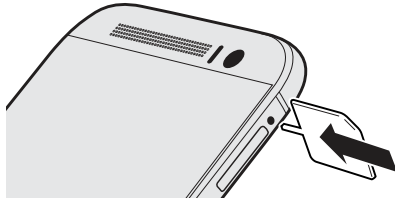

3. Push the tip all the way into the hole until the microSD card tray ejects.
4. Pull the microSD card tray out, and place the microSD card—contacts facing down—into the tray.

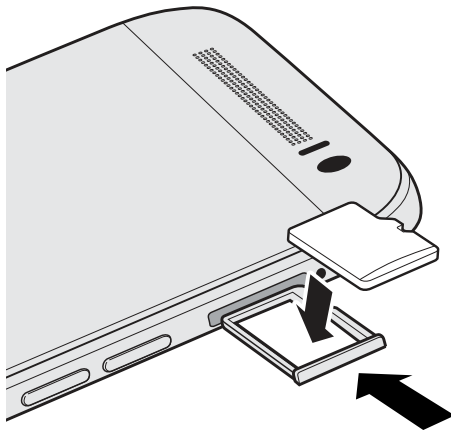

5. Insert the microSD card tray back into the slot.

Unmounting the storage card

When you need to remove the storage card while HTC One M9+ Supreme Camera Edition is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.


1. From the Home screen, tap  > **Settings** > **Storage**.
2. Tap **Unmount SD card**.

Removing the microSD card



Make sure to unmount your microSD card before removing it.

1. Hold the phone face up.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the microSD card slot.

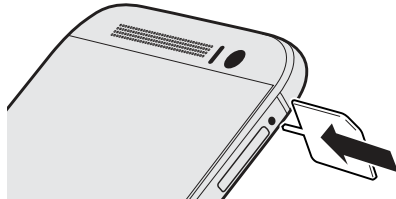

3. Push the tip all the way into the hole until the microSD card tray ejects.
4. Pull the microSD card tray out, and remove the microSD card.

After removing the microSD card, make sure that you insert the empty microSD card tray back into the slot.


Charging the battery

Before you turn on and start using HTC One M9+ Supreme Camera Edition, it is recommended that you charge the battery.



- If the battery has been discharged for several days, you may need to charge HTC One M9+ Supreme Camera Edition for several minutes before powering it on.
- Use only the adapter and the USB cable that came with HTC One M9+ Supreme Camera Edition to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.

1. Insert the small end of the USB cable into the USB connector.

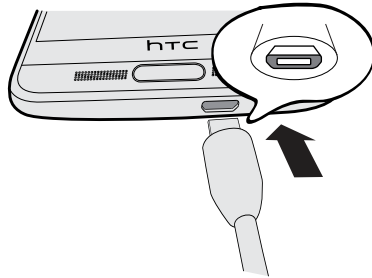

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



- As a safety precaution, the battery may stop charging to avoid overheating.
- Avoid charging the battery in hot environments.
- When you're using the web browser and charging the battery, HTC One M9+ Supreme Camera Edition may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

Switching the power on or off

Switching the power on

Press the POWER button until HTC One M9+ Supreme Camera Edition vibrates.



When you turn on HTC One M9+ Supreme Camera Edition for the first time, you'll need to set it up.

Switching the power off

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

Want some quick guidance on your phone?

Check out the friendly walkthroughs and the FAQs in the Help app to learn how to use your phone.

- When you see a Tips & Help tile in HTC BlinkFeed™, just tap the tile to know more about the tip.
- From the Home screen, tap , and then find and tap **Help**.

You can then tap **Search help articles & videos**, and enter what you're looking for. Or you can tap  to browse how-tos, FAQs, and more.

Phone setup and transfer

Setting up HTC One M9+ Supreme Camera Edition for the first time

When you switch on HTC One M9+ Supreme Camera Edition for the first time, you'll be asked to set it up.



You can enable TalkBack to navigate by voice feedback before selecting the language. Press and hold two fingers on the screen until you hear a message saying that accessibility mode is enabled.

Walk through the on-device setup to choose your Internet connection, sign in to your accounts, set up your screen lock, and more.

During the setup, there are different ways you can choose to transfer or restore content to HTC One M9+ Supreme Camera Edition . It is recommended to choose just one of the following methods to avoid overwriting content that has already been imported to HTC One M9+ Supreme Camera Edition :

- Use Google[®] backup if you've used it to back up your old phone before and you only need to restore apps and no other types of content. On the Get your apps & data screen, choose your old phone and the apps you want to restore to HTC One M9+ Supreme Camera Edition .

If you have other types of content to transfer or restore from your old phone, tap **Restore from this backup**, and then select **Set up as new device**.

- Use HTC Backup to restore a previous backup from your cloud storage. On the HTC Advantage screen, sign in with the account credentials that you used as your HTC Account. Or you can tap **Restore from HTC Backup** on the Transfer or restore content screen.
- If you have content from another phone that you want to transfer, whether it's from an Android[™], iPhone, or other phone, tap **Transfer content** on the Transfer or restore content screen.

Depending on the type of old phone that you have, see the following for more details:

[Transferring content from an Android phone](#) on page 24

[Ways of transferring content from an iPhone](#) on page 25

[Transferring contacts from your old phone through Bluetooth](#) on page 25



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings. For more information on location services, see [Turning location services on or off](#) on page 191.

Restoring your backup from your cloud storage

If you used HTC Backup before, you can restore a previous backup when you turn HTC One M9+ Supreme Camera Edition on for the first time or after a factory reset.



Depending on the amount of content, restoring a backup to HTC One M9+ Supreme Camera Edition through your data connection may incur additional data costs and take a long time. Using a Wi-Fi® connection is recommended.

1. From the Add your account screen, sign in to your Google Account.
2. If you see the Get your apps & data screen, tap **Restore from this backup**, and then select **Set up as new device**.



You'll see this screen when you've previously backed up an old phone using Google backup. Do not restore anything from Google backup when you want to restore a backup from HTC Backup.

3. On the HTC Advantage screen, sign in with the account credentials that you used as your HTC Account.

Or if you skipped this screen, tap **Restore from HTC Backup** on the Transfer or restore content screen, and then sign in with the account credentials that you used as your HTC Account.
4. Choose the backup that you want to restore to HTC One M9+ Supreme Camera Edition .
5. If prompted, choose whether to use your mobile data or Wi-Fi connection for restoring your backup.
6. Follow the onscreen instructions to restore your backup and to continue setting up your phone.
7. Slide open the Notifications panel to check if there's any notification to finish setting up your phone.

Free apps from Google Play™ will be restored in the background, and you can track the progress via a notification in the status bar. To restore paid apps, you need to download and install them from Google Play.

Your apps will appear on the Apps screen as they are installed. The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You may continue using HTC One M9+ Supreme Camera Edition while apps are being restored.

Transferring content from an Android phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to HTC One M9+ Supreme Camera Edition .

The types of locally stored content on your old phone that the HTC Transfer Tool can transfer include contacts, messages, calendar events, music, photos, videos, and some settings. More types of data such as call histories, email accounts, and some HTC app settings can be transferred from HTC phones that have HTC Sense™ 5.5 or higher.



- You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.
- If your old phone has Android version 2.1 or an earlier version, you need to use Bluetooth® transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 25.

1. From the Home screen, tap  > **Settings** > **Get content from another phone**.
2. Choose whether to transfer from an HTC Android phone or other Android phone.
3. Tap **Full transfer**, and then tap **Next**.
4. Follow the steps shown on HTC One M9+ Supreme Camera Edition to download the HTC Transfer Tool from Google Play to your old phone, install it, and open the tool.
5. When you see a PIN on your old phone, make sure the same PIN also appears on HTC One M9+ Supreme Camera Edition before you continue.

If the PIN code doesn't appear, tap **Retry** on your old phone. If it still won't appear, this may mean that your old phone is unable to connect to HTC One M9+ Supreme Camera Edition . When this happens, try another transfer method.
6. Tap **Confirm** on your old phone.
7. On your old phone, choose the types of content you want to transfer, tap **Transfer**, and then tap **Yes**.
8. On your old phone, read the onscreen message, and then tap **Yes**.
9. Wait for the transfer to finish.
10. Tap **Done** on both phones.

Ways of transferring content from an iPhone

If you have an iPhone, there are 3 easy ways to transfer your contacts, messages, and other content to HTC One M9+ Supreme Camera Edition .

- Back up and restore iPhone content through iCloud. To find out how, see [Transferring iPhone content through iCloud](#) on page 25.
- Back up iPhone content using iTunes on your computer, and then use HTC Sync Manager to transfer the content to HTC One M9+ Supreme Camera Edition . For details, see [Transferring iPhone content and apps to your HTC phone](#) on page 141.
- If you only need to copy your contacts, you can use Bluetooth transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 25.

Transferring iPhone content through iCloud

If you have an iCloud account, sync iPhone content to your iCloud storage, and then transfer the content to HTC One M9+ Supreme Camera Edition . You can transfer the following types of content from iCloud: contacts, bookmarks, text messages, messages from iMessage, calendar events, and photos.

1. From the Home screen, tap  > **Settings** > **Get content from another phone**.
2. Tap **iPhone** > **Import from iCloud backup**.
3. Follow the steps shown onscreen to back up your iPhone content to your iCloud storage.
4. Enter your iCloud email address and password, and then tap **Sign in**.
5. Choose the iPhone backup that you want to transfer to HTC One M9+ Supreme Camera Edition , and then tap **Next**.
6. Choose the types of content you want to transfer, and then tap **Import**.
7. Wait for the transfer to finish, and then tap **Done**.



Only some contact details can be transferred, such as the contact name, photo, postal address, email address, birthdate, anniversary date, and notes.

Transferring contacts from your old phone through Bluetooth

Use Bluetooth if you only need to transfer contacts from an iPhone, a phone that has Android version 2.1 (or earlier version), or other types of phones.

1. From the Home screen, tap  > **Settings** > **Get content from another phone**.
2. Choose whether to transfer from an Android phone, iPhone, or other phone types.
3. If you chose to transfer from an Android phone, tap **Quick transfer**.
Or to transfer from iPhone, tap **Transfer contacts over Bluetooth**.

4. On your old phone, turn Bluetooth on.
5. Follow the onscreen instructions on your old and new phones to pair them and start the data transfer.



- Depending on the capabilities of your old phone, you may be able to transfer not only contacts but also other data such as calendar events and text messages through Bluetooth.
- Use your iCloud storage or HTC Sync Manager to transfer more types of content from an iPhone.

Other ways of getting contacts and other content

There are different ways you can individually add contacts and other content to HTC One M9+ Supreme Camera Edition .

Sync with your computer	Use HTC Sync Manager to sync contacts, documents, playlists, and more between HTC One M9+ Supreme Camera Edition and your computer running a Windows® or OS X operating system. You can also use it to transfer your iTunes backup that contains contacts, messages, and other content from an iPhone from your computer to HTC One M9+ Supreme Camera Edition .
Google Account	Google contacts are imported to HTC One M9+ Supreme Camera Edition after you sign in to your Google Account. You can also create more Google contacts right from HTC One M9+ Supreme Camera Edition .
Social network accounts	Log in to your favorite social networks to sync contact information from them.
Microsoft® Exchange ActiveSync®	HTC One M9+ Supreme Camera Edition syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Outlook.com account	Sync personal contacts from your Microsoft Outlook.com account.
Phone contacts	You can create contacts locally on HTC One M9+ Supreme Camera Edition , if you don't prefer to store them on your online accounts.
nano SIM card	Copy all your nano SIM contacts to HTC One M9+ Supreme Camera Edition .

Transferring photos, videos, and music between your phone and computer

Here are ways you can transfer your media from or to your computer.

- Connect HTC One M9+ Supreme Camera Edition to your computer. Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- Download and use the HTC Sync Manager software on your computer. You can set it up to automatically get music, photos, and videos off HTC One M9+ Supreme Camera Edition to your computer. You can also sync playlists from your computer to the phone.

If you have an iPhone, you can also connect it and transfer camera roll photos to your computer using HTC Sync Manager. Then reconnect HTC One M9+ Supreme Camera Edition and copy them over.

- Use cloud storage services to put your media in one place so you can manage them anywhere —on your computer, HTC One M9+ Supreme Camera Edition , and other mobile devices.

Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi and Bluetooth on or off.

1. Do any of the following:
 - With two fingers, swipe down from the status bar.



- Swipe down twice from the status bar.
2. To turn a setting on or off, just tap its tile.
 3. To change the options for a setting, press and hold its tile. Or tap **⋮**.

Customizing Quick Settings

You can remove, replace, or rearrange the tiles in Quick Settings.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



2. Tap  and do one of the following:
 - In the Quick Settings list, press and hold  next to the item you want to move and drag it to rearrange the list.
 - Under Hidden items, press and hold  and drag it up to make it available in Quick Settings.



There is a limit to the number of tiles that can be shown in Quick Settings. You may need to remove an existing item to make space for another one. To remove an item, drag it below Hidden items.

Getting to know your settings

Want to change the ringtone, set up a Wi-Fi connection, or add your accounts? Do this and more in Settings.

1. Open Settings either from the Quick Settings panel or the Apps screen.
 - With two fingers, swipe down from the status bar to open Quick Settings, and then tap .
 - From the Home screen, tap  to switch to the Apps screen, and then tap **Settings**.
2. Here are some of the basic settings you can change:
 - Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
 - Tap **Sound & notification** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
 - Tap **Personalize** to change the wallpaper, add apps and widgets to the Home screen, and more.
 - Tap **Accounts & sync** to add and sign in to your different accounts, such as email, social networks, and more.
 - Tap **Security** to help secure HTC One M9+ Supreme Camera Edition, for example with a screen lock.



Tap  in Settings to quickly find options and settings.

About the fingerprint scanner

You can quickly wake up and unlock the HTC One M9+ Supreme Camera Edition using your fingerprint. You can add up to 5 fingerprints.

When setting up and using the fingerprint scanner, follow these tips:

- Make sure your finger and the fingerprint scanner are dry and clean.
- Use the entire pad of your finger, including the sides and tip.
- When recording your fingerprint, touch the scanner until it vibrates.
- The fingerprint scanner has 360° readability—you can touch a recorded finger at any angle to the scanner to turn on the screen or unlock the HTC One M9+ Supreme Camera Edition.




You may not be able to set the fingerprint scanner to unlock HTC One M9+ Supreme Camera Edition, if you've signed in to an Exchange ActiveSync account that requires you to set a different screen lock option (such as password). Check with your Exchange Server administrator if your Exchange ActiveSync account supports the fingerprint scanner.

Adding a fingerprint the first time

1. From the Home screen, tap , and then tap **Settings > Fingerprint scanner**.
2. Tap **Add fingerprint > Start**.

If you haven't already set up a lock screen pattern, PIN, or password, you'll be asked to set one up. See [Setting a screen lock](#) on page 51.

3. Tap **Next**.
4. Choose which finger or thumb to use, and touch the scanner until it vibrates.

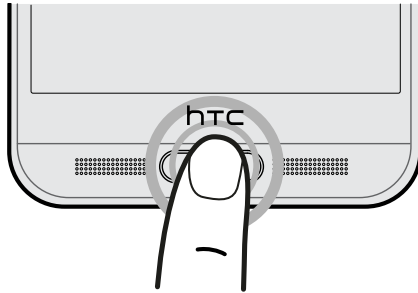

5. Repeatedly touch the scanner until the fingerprint has been successfully recorded. You'll get the best results if you hold your finger in the same direction when touching the scanner.
6. After you've successfully recorded your fingerprint, tap **Done**.

You can now use your fingerprint to wake up and unlock your HTC One M9+ Supreme Camera Edition.



You'll need to input your backup lock screen pattern, PIN, or password if the scanner doesn't identify your fingerprint after four attempts. You'll only have 10 additional attempt before your data is deleted from the HTC One M9+ Supreme Camera Edition.

Adding, removing, or editing fingerprints

1. From the Home screen, tap , and then tap **Settings > Fingerprint scanner**.
2. Enter your pattern, PIN, or password.
3. Do any of the following:
 - Tap **Add fingerprint** to add another fingerprint.
 - Tap a recorded fingerprint to rename or delete it.
 - Tap **Reset Fingerprint scanner** to delete all recorded fingerprints.
 - Select **Home button** if you want to be able to tap the fingerprint scanner to go to the Home screen when the screen is on.
 - Select **Wake up screen** if you want to be able to tap the fingerprint scanner to wake up the screen.

Updating your phone's software

HTC One M9+ Supreme Camera Edition can check and notify you if there's a new update available.

Updates for some HTC apps and features, such as HTC Sense Home, may be downloaded and installed from Google Play. See [Installing app updates from Google Play](#) on page 32 for details.

Checking your system software version

Before installing a system software update, you can check first what Android and HTC Sense versions you have on your phone.

1. From the Home screen, tap  > **Settings** > **About**.
2. Tap **Software information**.

Enabling automatic updates

You can choose to automatically download and install software updates for HTC or mobile operator apps.

1. From the Home screen, tap  > **Settings** > **About**.
2. Tap **Software updates**.
3. To save on data usage, you can choose to update through Wi-Fi only.
4. Choose whether to auto-download system updates, app updates, or both.

App updates are installed automatically. You'll still need to confirm when to install system software updates.

Installing a software update

When HTC One M9+ Supreme Camera Edition is connected to the Internet and there's a new software update available, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the system update notification.
2. If you don't want to download the update using your data connection, select **Update over Wi-Fi only**.
3. Tap **Download**.
4. When download is complete, select **Install now**, and then tap **OK**.

After updating, HTC One M9+ Supreme Camera Edition will restart.

Installing an application update

When Internet connection is on and there's an available update for your HTC or mobile operator apps, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the update notification.

The Updates screen opens with the list of application updates to be installed.

2. Tap an item to view its details, and then tap .
3. When you're done reviewing the updates, tap **Install**. You'll be asked to restart HTC One M9+ Supreme Camera Edition if needed.

Installing app updates from Google Play

Some HTC apps and third-party apps get updated with improvements and bug fixes through Google Play. You can manually update apps or set your phone to automatically download and install app updates when available.

1. From the Home screen, tap , and then find and tap **Play Store**.
2. Tap  to open the slideout menu.
3. Tap **My apps**.

You'll see a list of apps installed on your phone.

4. Under Updates, tap an app.
5. Tap **Update**.
6. Tap **Accept**.



In Play Store, tap  > **Settings** > **Auto-update apps** to choose how you want Google Play to update your apps.

Checking for updates manually

1. From the Home screen, tap  > **Settings** > **About**.
2. Tap **Software updates**. HTC One M9+ Supreme Camera Edition checks if updates are available.



If you don't have Internet connection, you'll be prompted to turn on mobile data or connect to a Wi-Fi network. Once connected, tap **Check now** to check for updates.

Getting apps from Google Play

Google Play is the place to go to find new apps for HTC One M9+ Supreme Camera Edition . Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



- You need a Google Wallet™ account to buy paid apps or to make in-app purchases. If you already have a Google Account, just add Google Wallet by signing in with your existing username and password at wallet.google.com.
- The name of the Play Store app may differ depending on your region.
- The ability to purchase apps varies by region.

Finding and installing an app

When you install apps and use them on HTC One M9+ Supreme Camera Edition , they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC One M9+ Supreme Camera Edition . You're responsible for the results of using downloaded apps.

1. From the Home screen, tap , and then find and tap **Play Store**.
2. Browse or search for an app.
3. When you find the app that you like, tap it and read its description and user reviews.
4. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
5. Tap **Accept**.



Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing the app, tap  > **Auto-update**.

To open the app, go to the Apps screen and tap the app.

Restoring apps from Google Play

Upgraded to a new phone, replaced a lost one, or performed a factory reset? Restore apps that you previously downloaded.

1. From the Home screen, tap , and then find and tap **Play Store**.
2. Tap  to open the slideout menu.
3. Tap **My apps**, swipe to the All tab, and then tap the app you want to restore.
4. Install the app.

For more details, refer to the Google Play help.

Downloading apps from the web

You can download apps directly from websites.



- Apps downloaded from websites can be from unknown sources. To help protect HTC One M9+ Supreme Camera Edition and your personal data, we strongly recommend that you only download from websites you trust.
- Before you can install the downloaded app, make sure that you've set HTC One M9+ Supreme Camera Edition to allow installation of third-party apps in **Settings > Security > Unknown sources**.

1. Open the browser, and then go to the website where you can download the app you want.
2. Follow the website's download instructions for the app.



After installing the app, make sure to go back to **Settings > Security** and clear the **Unknown sources** option.

Uninstalling an app

If you no longer need an app that you've downloaded and installed, you can uninstall it.



Most of the preloaded apps cannot be uninstalled.

From the Apps screen, press and hold the app you want to remove, and then drag it to **Uninstall**.



If you purchased an app in Play Store, you can uninstall it for a refund within a limited time. To know more about the refund policy for paid apps, refer to the Google Play help.

Your first week with your new phone

Basics

HTC Sense Home

After you've turned on and set up HTC One M9+ Supreme Camera Edition for the first time, you'll see the Home screen.

- Set up the HTC Sense Home widget to experience the convenience of a Home screen that automatically adjusts when you're at home, work, or outdoors. See [What is the HTC Sense Home widget?](#) on page 44.
- Swipe right and you'll find HTC BlinkFeed. You can customize HTC BlinkFeed to show posts from your social networks, headlines from your favorite news media, and more. For details, see [What is HTC BlinkFeed?](#) on page 71.
- Swipe left and you'll discover space for adding your favorite widgets, apps, and more so they're just a tap away. You can also add panels. For details, see [Adding or removing a widget panel](#) on page 67.
- You can change the apps on the launch bar at the bottom of the Home screen. See [Launch bar](#) on page 65.



While you're in another screen or app, press  to return to the last Home screen you visited.

Onscreen navigation buttons

HTC One M9+ Supreme Camera Edition has onscreen navigation buttons at the bottom of the screen which rotate when you change the orientation.

Standard navigation buttons

	Back
	Home
	Recent apps

Fourth navigation button options

	Hide navigation bar
	Turn off screen
	Auto rotate
	Notifications
	Quick settings

See [Adding a fourth navigation button](#) on page 36.

Adding a fourth navigation button

You can add a fourth navigation button to make it easier to turn the display off, toggle auto-rotate, and more.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Tap **Change navigation buttons**.
3. Tap a fourth navigation button to add it. To have only three navigation buttons, make sure none of the fourth button options are selected.
4. Tap **Done** to save and apply your customization.

Rearranging the navigation buttons

Right-handed or left-handed? Customize the placement of the navigation buttons to fit what's most comfortable for you.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Tap **Change navigation buttons**.
3. Rearrange the navigation buttons by dragging  next to the button names. The resulting order from top to bottom in the list will be the corresponding order from left to right on the navigation bar.
4. Tap **Done** to save and apply your customization.

Sleep mode

Sleep mode saves battery power by putting HTC One M9+ Supreme Camera Edition into a low power state while the display is off. It also stops accidental button presses when HTC One M9+ Supreme Camera Edition is in your bag.

Switching to Sleep mode

To turn off the display and switch to Sleep mode, briefly press the POWER button. You can also double-tap the lock screen.

HTC One M9+ Supreme Camera Edition also automatically goes into Sleep mode when it's left idle for a while. You can change the time before HTC One M9+ Supreme Camera Edition sleeps by setting the screen timeout. For details, see [Setting when to turn off the screen](#) on page 192.

Waking up from Sleep mode

- Press the POWER button.
- Use Motion Launch™ to wake up and unlock your phone directly to an app or screen. See [What is Motion Launch?](#) on page 46.

Unlocking the screen

Swipe up to unlock the screen.

If you've set up a screen lock, you'll be asked to provide your credentials before HTC One M9+ Supreme Camera Edition unlocks.



If you've set an event reminder or an alarm, you can snooze or dismiss the event or alarm right from the lock screen. Just drag  or  up.

Motion gestures


Use motion gestures to mute HTC One M9+ Supreme Camera Edition, lower the ring volume, and more.

Lift phone to auto answer a call

To automatically answer an incoming call, lift the phone and look at the screen first to see who's calling before you hold it to your ear.

You can turn this feature on or off. Go to Settings, tap **Call**, and then select or clear **Auto answer calls**.

Flip to mute

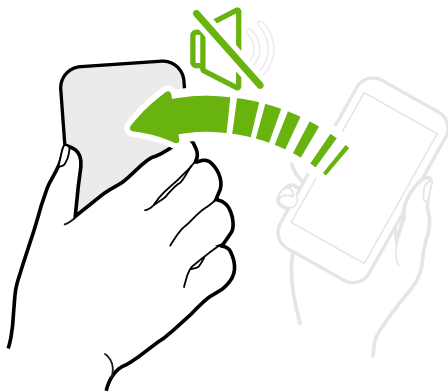

If your phone is facing up when a call comes in, turn the phone over to mute it.

If you go to Settings and then tap **Sound & notification** > **Flip to mute**, you can set your phone to:

Mute once	Mute only once after flipping the phone. While the phone is still facing down, it will ring again when there are other incoming calls.
Mute always	After flipping the phone to mute a call, keep it always muted while it's still facing down when there are other incoming calls.

Pick up to lower volume



In a business meeting or restaurant, pick HTC One M9+ Supreme Camera Edition up when a call comes in to lower the ring volume automatically.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Quiet ring on pickup**.


Increase ring volume automatically while phone is in your pocket or bag



Pocket mode makes HTC One M9+ Supreme Camera Edition recognize when your phone is in your bag or pocket and raise the ring volume so that you can hear it in noisy environments.

You can turn this feature on or off. Go to Settings, tap **Sound & notification**, and then select or clear **Pocket mode**.

Rotate HTC One M9+ Supreme Camera Edition for a better view

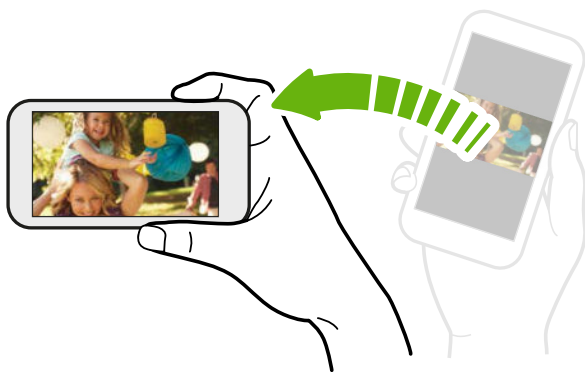


For many screens, you can automatically change the screen orientation from portrait to landscape by turning HTC One M9+ Supreme Camera Edition sideways.

When entering text, you can turn HTC One M9+ Supreme Camera Edition sideways to bring up a bigger keyboard.

Touch gestures


Use touch gestures to get around the Home screen, open apps, scroll through lists, and more.

Tap

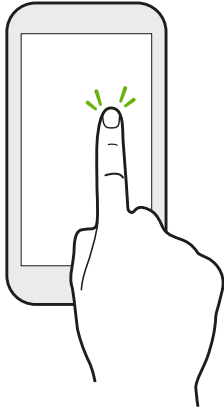


Tap the screen with your finger when you want to select onscreen items such as application and settings icons, or press onscreen buttons.

Press and hold

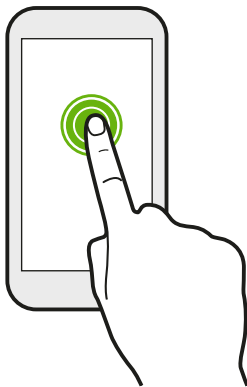


To open the available options for an item (for example, a contact or link in a webpage), just press and hold the item.

Swipe or slide

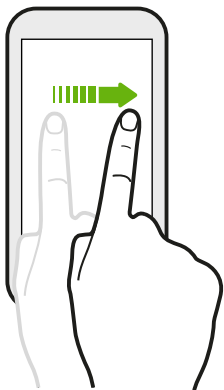

Quickly swipe your finger horizontally across the screen to go to other Home screen panels. Swipe vertically to scroll through a list, document, and more.

Drag

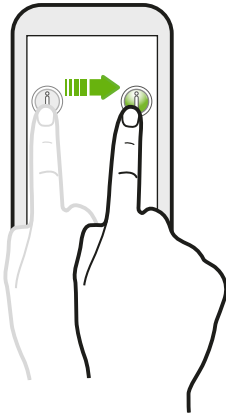


Press and hold your finger with some pressure before you start to drag. While dragging, don't release your finger until you have reached the target position.

Flick



Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes, such as when moving right and left on the Home screen, or flicking through a contacts or message list.

Press and flick

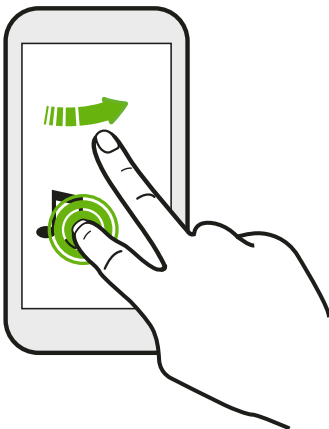


On the Home screen, you can easily move a widget or icon from one screen to another.


Press and hold the widget or icon with one finger, and flick the screen to the new location with another finger.

Slide with two fingers

In some apps, like Gallery, Messages, Mail, or the web browser, slide two fingers apart to zoom in when viewing a picture or text.

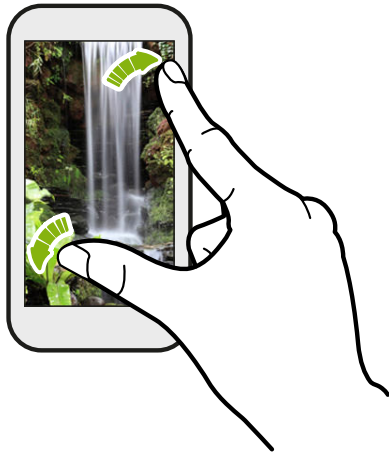


Slide two fingers together to zoom out of the picture or text.

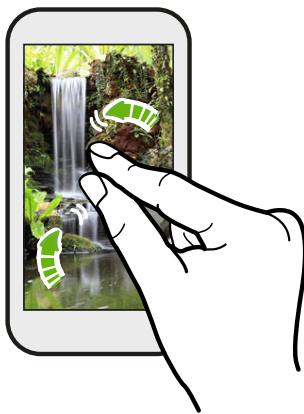


Two-finger swipe

Swipe down from the status bar using two fingers to access Quick Settings.

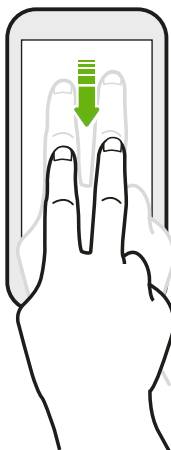

Three-finger swipe

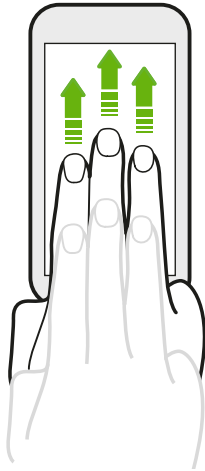

- Swipe up the screen with three fingers and HTC Connect™ streams music or video from HTC One M9+ Supreme Camera Edition to your speakers or TV respectively. You can also share streaming media from apps such as YouTube®.
- Swipe down to disconnect from your speakers or TV.



Media gesture is turned on in Settings by default, which makes the three-finger gesture work for sharing media.

Three-finger tap



While using the Car app, tap the screen with three fingers to activate the voice command mode.



This feature may not be available in all languages.

Opening an app

- Tap an app on the launch bar at the bottom of the Home screen.
- Tap  to go to the Apps screen, and then tap the app you want to use.
- On the Apps screen, tap , and then enter the name of the app you're looking for.

Opening an app or folder from the lock screen

On the lock screen, drag an app or folder icon up to unlock the screen and directly go to the app or folder.



The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, replace the apps or folders on the launch bar.

If you've set up another security layer like a screen lock pattern or PIN, you'll be asked to provide your credentials first before HTC One M9+ Supreme Camera Edition opens the app or folder.

Sharing content


Have something to share, such as a photo or video?

- In an app, just tap the share icon:  or .
- If you don't see the icon, tap  > **Share**.

Switching between recently opened apps

When you're multitasking and using different apps on HTC One M9+ Supreme Camera Edition, you can easily switch between the apps you've recently opened.

Press  to see recently-opened apps.

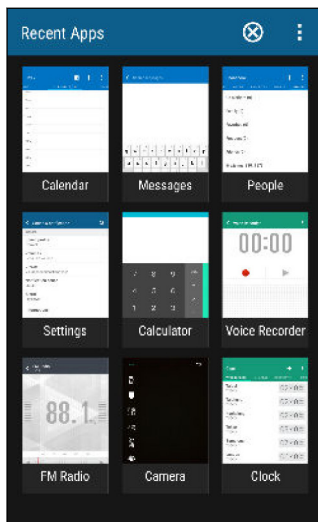

- To switch back to an app, just tap it.
- To remove an app from the list in grid view, drag it up.
If you're using the card view, drag it left or right.
- To view more opened apps, swipe right to view their thumbnails.
- Tap  > **Settings** > **Layout**, and then choose between card or grid view.

Refreshing content

In some apps, you can easily refresh content that's synced or downloaded from the Web with a simple finger gesture.

1. While viewing content such as weather or Mail inbox, scroll to the top of the screen.
2. Pull down with your finger, and then release to refresh.

Capturing your phone's screen

Want to show off your high game score or write a blog post about HTC One M9+ Supreme Camera Edition features? It's easy to take a picture of the screen and share it from Gallery.

Press and hold POWER and VOLUME DOWN at the same time.

The image is saved in the Screenshots album in Gallery.



You can also share the image when you see  in the status bar. Open the Notifications panel and tap  under the screenshot notification. If you don't see , slide two fingers apart on the screenshot notification.

HTC Sense Home widget

What is the HTC Sense Home widget?

Get quick access to apps, shortcuts and folders you use most frequently based on where you are. With the HTC Sense Home widget, HTC One M9+ Supreme Camera Edition continually adapts to how you use it. For example, apps you use most frequently for work, will show up when you're at your office. The HTC Sense Home widget changes depending on whether you're at home, work, or somewhere else.


Setting up the HTC Sense Home widget

Setting up the HTC Sense Home widget is quick and easy.




- If you don't see the HTC Sense Home widget, add it to your Home screen. See [Adding Home screen widgets](#) on page 66.
- Make sure you turn on location services in your phone settings. See [Turning location services on or off](#) on page 191.

1. On the setup screen of the HTC Sense Home widget, tap **Tap to personalize > Let's explore**.

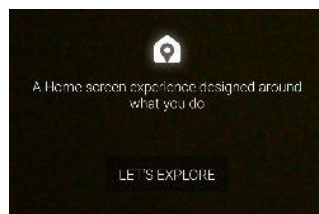

2. Tap where you are to finish setting up the widget.

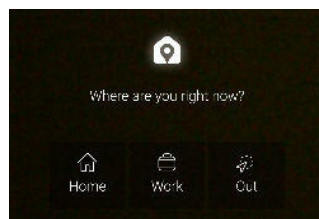

3. On the widget, tap  >  > **Personalize HTC Sense Home**.
4. Select all the options on the screen, and then press .

Setting your home and work locations

In the HTC Sense Home widget, set your home and work locations based on your address, Wi-Fi network, or both.

You can associate multiple addresses and Wi-Fi networks to each of these locations. Using your set addresses or Wi-Fi networks, the HTC Sense Home widget will be able to determine where you are and display the appropriate apps.

1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
2. Tap  >  > **Set locations**.
3. Choose the location you want to set.
4. Tap  and do one of the following:
 - Tap **Address** and then enter your street address or select it on the map.
 - Tap **Wi-Fi network** and select one or more Wi-Fi networks you want to associate with the location.
5. When you've finished setting your home and work locations, press .

Manually switching locations

The HTC Sense Home widget automatically changes locations based on where you are. You can also manually change the location in the HTC Sense Home widget.

For the HTC Sense Home widget to change locations automatically, you need to make sure that location services is turned on. See [Turning location services on or off](#) on page 191.

1. On your Home screen, slide right or left until you see the HTC Sense Home widget.
2. Tap , and then tap the location you want.



Pinning and unpinning apps

Pinning apps, shortcuts, or folders to the HTC Sense Home widget ensures they stay on the widget.

Items in the HTC Sense Home widget will have one of two states: pinned or unpinned. Unpinned items will be automatically changed to more frequently used items.

1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
2. Do one of the following:
 - To pin an item, press and hold it until you see .
 - To unpin an item, press and hold it until the unpinning progress bar has completed.

Adding apps to the HTC Sense Home widget

Add your favorite apps, shortcuts, or folders to the HTC Sense Home widget.

1. From the Home screen, tap .
2. Press and hold the app, shortcut, or folder you want to add to the widget.
3. Drag the item to where you want in the HTC Sense Home widget.

The app, shortcut or folder will be added to the HTC Sense Home widget and pinned in place.

Turning smart folders on and off

Smart folders are folders in the HTC Sense Home widget that dynamically change contents depending on the apps you download and use. If you don't want to see recently downloaded or recommended apps, you can turn off the smart folders.

1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
2. Tap , and then tap  > **Show/hide smart folders**.
3. Select the smart folders you want to show or hide.
4. Tap **OK**.

Motion Launch

What is Motion Launch?

Motion Launch is a combination of a motion gesture followed by a finger gesture. With Motion Launch, you don't have to reach for the POWER button to wake up HTC One M9+ Supreme Camera Edition. Using a combination of simple gestures, you can wake up to your Home screen, HTC BlinkFeed, and more.

See the following:

- [Waking up to the lock screen](#) on page 47
- [Waking up and unlocking](#) on page 48
- [Waking up to the Home widget panel](#) on page 48
- [Waking up to HTC BlinkFeed](#) on page 49

- [Auto launching the camera with Motion Launch Snap](#) on page 49
- [Making a call with Quick call](#) on page 50

Turning Motion Launch gestures on or off

Choose the Motion Launch gestures you want on or off in Settings.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



2. Tap  > **Display & gestures** or **Display, gestures & buttons**.
3. Tap **Motion Launch gestures**.
4. Select the Motion Launch gestures you want.


Waking up to the lock screen

Go from sleep mode to the lock screen without reaching for the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9+ Supreme Camera Edition unlocks.

1. Lift the phone in portrait orientation.
2. Immediately double-tap the screen.

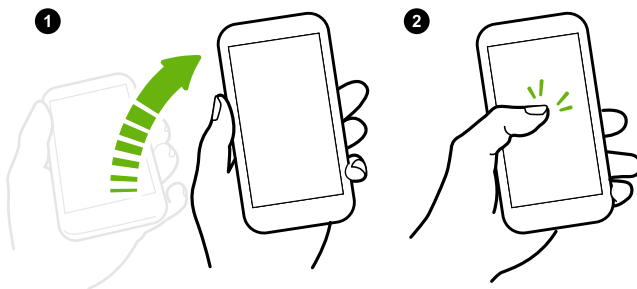

Make sure you're not touching the screen when the phone vibrates.


Waking up and unlocking

Go from sleep mode and unlock HTC One M9+ Supreme Camera Edition to the last screen you were using without reaching for the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9+ Supreme Camera Edition unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe up from the bottom half of the screen.

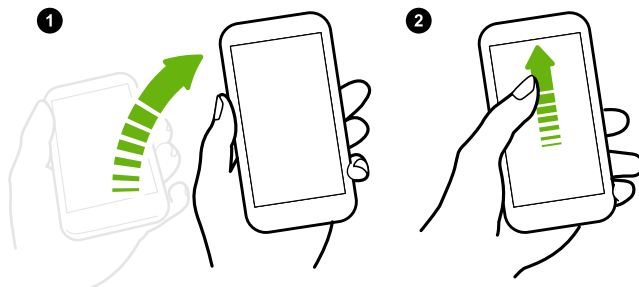

Make sure you're not touching the screen when the phone vibrates.


Waking up to the Home widget panel

Go from sleep mode to the Home widget panel without reaching for the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9+ Supreme Camera Edition unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe left from the right side of the screen.

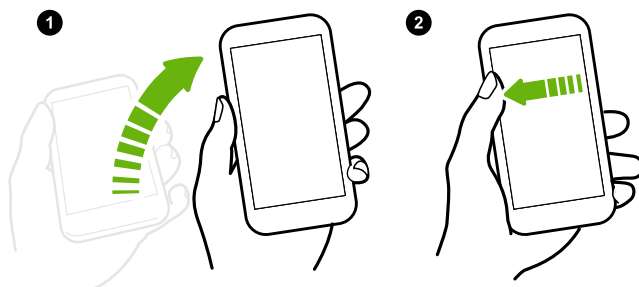

Make sure you're not touching the screen when the phone vibrates.


Waking up to HTC BlinkFeed

Go from sleep mode to HTC BlinkFeed without reaching for the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9+ Supreme Camera Edition unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe right from the left side of the screen.

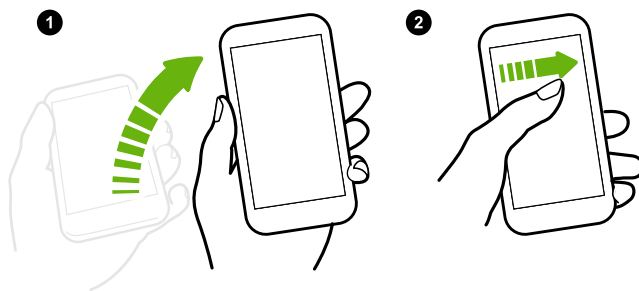


Make sure you're not touching the screen when the phone vibrates.

Auto launching the camera with Motion Launch Snap

When the screen is off, you can wake up the phone directly to the Camera app.

- Press and hold the VOLUME UP or VOLUME DOWN button, and then lift the phone in landscape orientation.
- Or first lift the phone in landscape orientation, and then press the VOLUME UP or VOLUME DOWN button right away.

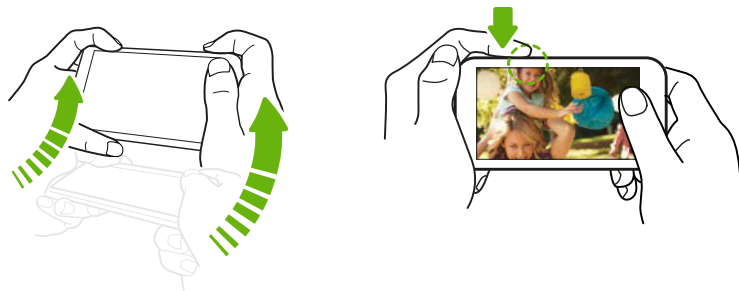

If you've set up a screen lock with credentials, you'll be asked to provide your credentials when you exit the Camera app.


Making a call with Quick call

When the screen is off and HTC One M9+ Supreme Camera Edition is in sleep mode, easily make a call by just swiping and using voice commands.



- This feature may not be available in all languages.
- Make sure to select the **Swipe down to turn on voice dialing** option in **Settings > Display & gestures > Motion Launch gestures**.
- If you've set a screen lock with credentials, you'll be asked to provide your credentials first before you can make the call.

1. Lift the phone in portrait orientation.
2. Immediately swipe down from the top half of the screen.

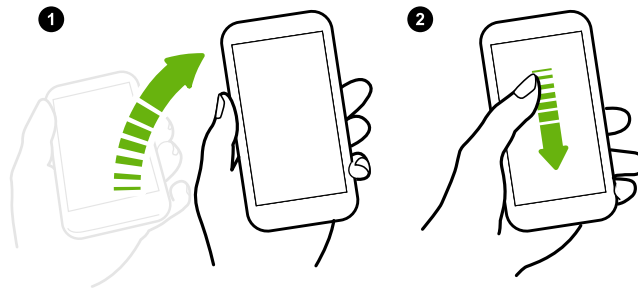

3. When you see the microphone icon on the screen, hold the phone close to your mouth, and then say "Call" and the contact name. For example, say "Call Jennifer".
4. You can then do one of the following:

- If there are several contacts with the same first name, say the full name of the contact you want to call.
- If a contact has several phone numbers, you'll see the following:

1. [full name] Home
2. [full name] Mobile
3. [full name] Work

Just say the item number of the one you want to call. For example, say "2" to call the second one.

Or say the full name and type of phone number as shown on the screen. For example, say "Jennifer Singer Mobile".

- If you're asked to confirm, say "Yes" or "No".
- To cancel the call, say "Cancel".

Bypassing the screen lock for Quick call

If you've set a screen lock with credentials, you can set HTC One M9+ Supreme Camera Edition to skip the security screen so you can immediately place calls with Quick call.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



2. Tap  > **Display & gestures** or **Display, gestures & buttons**.
3. Tap **Motion Launch gestures**.
4. Select the **Swipe down to turn on voice dialing option**, and then select the **Bypass Security screen** option.

Lock screen

Setting a screen lock

Help protect your personal information and help prevent others from using HTC One M9+ Supreme Camera Edition without your permission.

Choose to set a screen lock pattern, numeric PIN, or other means of locking your phone. You'll be asked to unlock the screen every time HTC One M9+ Supreme Camera Edition is turned on or when it's idle for a certain period of time.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**.
3. Select a screen lock option and set up the screen lock.
4. Tap **Lock phone after**, then specify the idle time before the screen is locked.



You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Setting up Smart Lock

Set up your phone to detect your face or another trusted device before you can unlock the screen.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**, and then select and set up a screen lock.
This will be your backup screen lock method.
3. On the Security screen, tap **Smart Lock**.

4. Confirm your screen lock.
5. Choose what you want your phone to detect before it unlocks.
6. Follow the onscreen instructions.
7. Tap **Lock phone after**, and then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC One M9+ Supreme Camera Edition to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face > Improve face matching**. Follow the onscreen instructions.

Turning lock screen notifications on or off

You can choose to turn lock screen notifications on or off.

1. From the Home screen, tap  > **Settings > Sound & notification**.
2. Tap **When device is locked > Don't show notifications at all**.



If you change your mind later, you can tap **Show all notification content** to turn lock screen notifications on.

Interacting with lock screen notifications

Besides seeing notifications on the lock screen, you can also interact with them.

1. Tap twice on a notification to go directly to the related app.
2. To see the entire list of notifications on the lock screen, swipe down on the lock screen. You can tap on a blank area of the screen to return to the lock screen.
3. Swipe left or right on the notification to remove it.
4. Press and hold a notification to see more related information.
5. Tap  to prioritize or block notifications from the related app.

HTC BlinkFeed Notifications

From time to time, you'll see HTC BlinkFeed notifications, such as a suggestion for a nearby restaurant or a recommended article.

1. Double-tap the notification to see the full notification.
For restaurant recommendations, tap  or the notification text.
2. Tap the notification again to get more information about the restaurant recommendation or to read the article in HTC BlinkFeed.



If you don't want to see restaurant recommendations on your lock screen, go to HTC BlinkFeed, and then tap  >  > **Settings > Notification on lock screen**. Then clear the **Meal time bundle** option.

Changing lock screen shortcuts

To change apps (or other shortcuts) on the lock screen, change the ones on the launch bar. To find out how, see [Launch bar](#) on page 65.

Changing the lock screen wallpaper

Use any photo you've taken with the camera as the lock screen wallpaper.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Under Themes, tap **Change or edit theme**.
3. Tap  > **Next** > **Edit** > **Other wallpapers**.
4. Slide to the Lock screen thumbnail, tap **Change wallpaper**, and then choose a source for your wallpaper.
5. Tap  > **Preview** > **Finish**.
6. Enter a title for the theme, ensure the **Apply this theme now** option is selected. Then tap **OK**.

Turning the lock screen off

Rather not have to unlock your phone every time you wake it up? You can turn the lock screen off in Settings.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock** > **No lock screen**.

To turn the lock screen on again, in Security settings, tap **Screen lock** > **Lock screen**.

Notifications


Notifications panel

Notification icons inform you of new messages, calendar events, alarms, and activities in progress such as files downloading.



When you see notification icons, open the Notifications panel to check out details of the notifications that you've received.

To open the Notifications panel, slide down from the top of the screen.

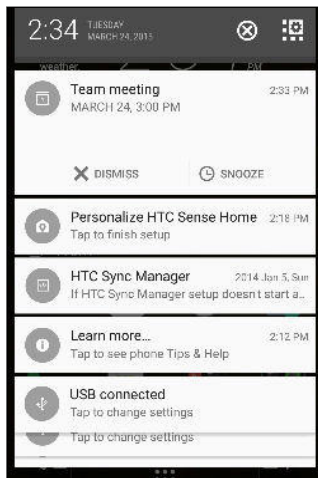

- Some notifications allow you to take immediate action. For example, tap a missed call notification to return the call or reply with a text message.
- Tap the notification icon on the left to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all notifications and close the Notifications panel, tap .

If you have several notifications, scroll through the list screen to see them all.



You can change what app notifications you want to receive. See [Managing app notifications](#) on page 55.

Managing app notifications

You can set the priority of app notifications or completely block notifications for apps you don't want to be notified about.

1. From the Home screen, tap  > **Settings** > **Sound & notification**.
2. Tap **App notifications**, and then tap the app you want manage.


You can also press and hold a notification in the notifications panel, and then tap .

3. Tap the **On/Off** switch next to Block or Priority depending on what you want to do.

Settings for app notifications are applied to notifications in the Notifications panel and the lock screen.

Notification LED

The notification LED shows a:

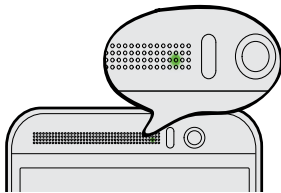

- Solid green light when HTC One M9+ Supreme Camera Edition is connected to the power adapter or a computer and the battery is fully charged.
- Flashing green light when you have a pending notification.
- Solid orange light when the battery is being charged.
- Flashing orange light when the battery level reaches very low.

Choosing when to flash the notification LED

You can change when to flash and which apps will flash the LED when there are new notifications.

1. From the Home screen, tap  > **Settings** > **Sound & notification**.
2. Under Notification, tap **Flash notifications**. Choose whether to always flash the LED or flash it only when the screen is off.
3. Tap **App light notifications**. Choose which app notifications you want the LED to flash for.




In other apps, check their settings to find out if they have an option for flashing the LED.

Working with text

Selecting, copying, and pasting text

In HTC apps such as Mail and Messages, you can select and copy text, and then paste or share it.

1. Press and hold on a word.
2. Drag the start and end anchors to highlight the surrounding text you want to select.

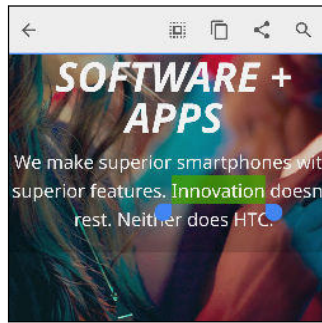

3. After you have selected the text you want to copy, tap .

The selected text is then copied to the clipboard.

4. In a text entry field (for example while composing an email), press and hold at the point where you want to paste the text.
5. Tap  or **Paste**.

Sharing text

1. After you have selected the text you want to share, tap  or .
2. Choose where to paste and share the selected text, such as in an email message or social network status update.

The HTC Sense keyboard

Typing is fast and accurate with the HTC Sense keyboard.

- Word prediction also saves typing time. As you type, you'll see word suggestions that you can choose from. You can even add words to the word prediction dictionary. See [Entering text with word prediction](#) on page 58.
- You can type words by just speaking. See [Entering text by speaking](#) on page 59.
- Turn on the Trace keyboard so you can type words by just sliding your finger from one letter to another. See [Using the Trace keyboard](#) on page 59.
- Just swipe right to access the numeric and symbol keyboard. Or swipe left to switch between languages.
- The keys have secondary numbers, punctuation symbols, or other characters that you can insert without having to switch to the numeric and symbol keyboard.

For example, just press and hold a key on the first row to insert a number.

- Choose from a wide selection of emoji.
- Show or hide navigational arrow keys on the keyboard. If you enable the arrow keys in Settings, they'll only appear on the portrait keyboard.

Entering text

The onscreen keyboard becomes available when you tap a text field in an app.

Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.

- Tap  to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- Swipe right to show number and symbol keys. To return to the main keyboard, swipe left.
- Press  to close the onscreen keyboard.



To open the keyboard settings, press and hold the comma key if you see  above the key. Or go to **Settings > Language & keyboard > HTC Sense Input**.

Choosing and switching between keyboard languages

If multiple keyboard languages are available on HTC One M9+ Supreme Camera Edition, you can choose which languages to enable in the onscreen keyboard.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection**, and then choose the languages you want.

To change the keyboard language, do any of the following:

- Swipe left on the onscreen keyboard (not available if you're using trace keyboard).
- Tap the language key, for example, , until you see the keyboard language you want to use.
- Press and hold the language key, and then drag your finger to the keyboard language you want to use.

Entering text with word prediction

Ever started typing something you weren't sure how to spell? With word prediction, you'll see suggested words displayed just above the keyboard.



Word prediction and next word prediction are enabled by default.

To enter text in word prediction mode, do any of the following:

- Tap the space bar to insert a highlighted word in the suggestion list.
- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.



In some keyboard languages such as English and Spanish, if you've accidentally chosen a wrong word from the suggestion list, you can go back and change it by tapping the word and selecting another suggestion.

Setting a second language for word prediction

You can set the word prediction to be bilingual. As you type, you'll get word suggestions in the languages that you've selected.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection > Bilingual prediction**, and then choose the language you want.

Adding words to the dictionary

For certain keyboard languages such as English and Spanish, you can add frequently-used names and acronyms to the word prediction dictionary to easily find them in the suggestion list.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Personal dictionary > +**.
3. Enter a word.
4. Tap **OK**.



While you're entering text using the Standard keyboard layout, tapping a suggested word that's not in the dictionary (usually the first word shown in the suggestion list) automatically stores it.

Editing or deleting words in the dictionary

1. Go to Settings, and then tap **Language & keyboard** > **HTC Sense Input**.
2. Tap **Personal dictionary**.
 - To edit a word, tap the item in the list.
 - To delete items from the dictionary, tap  > **Delete**. Select the words you want to remove, and then tap **Delete**.

Using the Trace keyboard

Instead of tapping the keys on the onscreen keyboard, you can "trace" to type words.



This feature is available only for Latin-based languages.

1. Turn on the Trace keyboard in **Settings** > **Language & keyboard** > **HTC Sense Input**.
2. On the onscreen keyboard, slide your finger from one letter to the next to enter a word.
3. Lift your finger when the word is completed.
4. If you want to continue entering text, slide your finger over the letters again to enter the next word.



If the word that appears after you traced isn't the one you want, you can:

- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.

Entering text by speaking

No time to type? Try speaking the words to enter them.

1. Tap an area where you want to enter text.
2. On the onscreen keyboard, press and hold .
3. When you see the animated microphone button and the words "Speak now", say the words you want to enter.



To set the voice input language, tap the language bar above the microphone button. You can choose one or more languages. Available languages may vary.

4. If a word doesn't match what you've spoken and it's underlined, tap the underlined word to delete it or to see more choices.
5. Enter punctuation marks by saying the name (for example, say "comma").

HTC Help

Having hardware or connection problems?

Before calling for support, you can first use the Help app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

From the Home screen, tap , and then find and tap **Help**.



If HTC Help is not preinstalled on your phone, you can download it from Google Play.

Personalizing

Themes

What is the Themes app?

Themes brings a quick and easy way for you to customize HTC One M9+ Supreme Camera Edition with wallpapers, sounds, icons, and more.

Log in with your HTC account to browse from the available themes in the Themes store, or make your own.

Downloading themes

Find and download pre-made themes that make it easy for you to personalize your HTC One M9+ Supreme Camera Edition .

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap **Get Started**.
3. Sign in with your preferred account.
4. On the Recommended screen, swipe left or right under each category to browse recommended items.
5. To see all available items for a category, swipe left and tap **See all**.
6. Tap an item to see the details screen.
7. Tap **Download**.

To apply the theme after it has finished downloading, tap **Apply**. If your theme has custom sounds, all of your ringtones and alert tones will also change.

Bookmarking themes

While browsing themes, you can bookmark them so that you can easily find them later.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Browse the categories to find something you like.
3. Tap the item and then tap . You'll find the bookmark in My themes. See [Finding your themes](#) on page 63.



You can remove the bookmark by tapping .

Creating your own theme from scratch

You can create and customize your own theme and even share it for others to download.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **Choose Home image** to set the main wallpaper for your theme.
3. Select an image from Gallery or take a photo with Camera.
4. Move or enlarge the crop box to the area of the image you want to include and tap **Done**.
5. Tap **Next**.
6. Swipe up or down to the pre-defined style to select for your theme.
If you don't want to customize your theme further, tap **Next** to save your theme.
7. Tap **Edit**, then tap any of the categories you want to customize, and experiment with the settings until you're satisfied.
8. When you're ready, tap **Preview** to see what your theme will look like.
9. Tap **Finish**, then name your theme and tap **OK** to save your theme.

To apply the theme right away, make sure you select the **Apply this theme now** option.

Editing a theme

After creating a theme, you can still edit it.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes** > **Edit current theme**.
3. Make the changes you want to the theme.
4. Tap **Save** to update the current theme.

Mixing and matching themes


After selecting a theme, you can mix and match parts from other themes such as sounds, icons, wallpapers, and more.



To mix and match themes, you need to first download theme components from the catalog.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes** > **Edit current theme**.
3. Tap **Color** and select a color scheme.
4. Tap any of the other categories you want to change.
5. Tap an item in the category. If the category is empty, tap  and choose one of the collections to select from.
6. Tap **Apply** to apply the change to your current theme.

7. Tap  until you see the mix and match screen. Continue making changes until you're satisfied with the result.

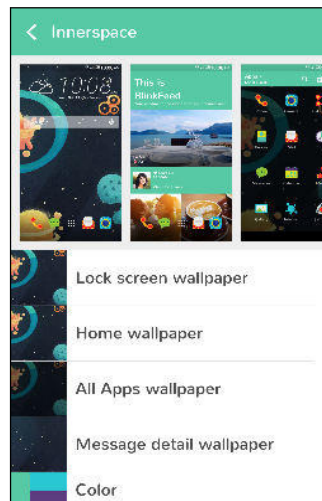

8. Tap **Save copy** to save your new theme, or if you're editing a theme that you copied tap **Save** to save the changes.

Finding your themes

Themes you created or downloaded can be found in your theme collection. You'll also find the themes you bookmarked.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes**.

Sharing themes

Share themes, wallpapers, icons, and more with friends and family.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Browse to the theme you want to share and tap it to view the details.
3. While viewing the details page of any item in the catalog, tap  to share.

Deleting a theme

You can delete a theme if you no longer want to keep it on your phone.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes**, and then swipe to the **My collections** tab.
3. Tap  > **Remove**.
4. Tap the themes you want to remove from your collection.
5. Tap **Remove**.

If the theme you deleted is currently applied, it will still be applied to HTC One M9+ Supreme Camera Edition until another theme is applied.

More ways to personalize

Personalization settings

Aside from using Themes, you can also make HTC One M9+ Supreme Camera Edition look and sound the way you want in Settings.

- Choose a ringtone and other sounds that you like to use. See [Ringtones, notification sounds, and alarms](#) on page 64.
- Personalize your Home screen with a different wallpaper. See [Home wallpaper](#) on page 64.
- For the lock screen, you can use the same wallpaper as your Home screen or choose a different wallpaper. See [Changing the lock screen wallpaper](#) on page 53.
- Change the fonts. See [Changing the display font](#) on page 65.
- Change the apps on the launch bar. See [Launch bar](#) on page 65.
- Populate your Home screen with widgets and shortcuts. See [Adding Home screen widgets](#) on page 66 and [Adding Home screen shortcuts](#) on page 66.
- Need another widget panel? See [Adding or removing a widget panel](#) on page 67.
- Set HTC BlinkFeed or a widget panel as your main Home screen. See [Changing your main Home screen](#) on page 68.
- Organize your apps. See [Arranging apps](#) on page 69.

Ringtones, notification sounds, and alarms

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Under Sound, choose different sounds for your ringtone, system notification, and alarm.
Go to the Messages, Mail, and Calendar apps to choose sounds for new messages, email, and event reminders respectively.



Want alarms to ring louder but notifications to be more discreet? In Settings, tap **Sound & notification** > **Volumes** and set the volume levels for each sound type.

Home wallpaper

Choose from the available wallpapers, or use any photo you've taken with the camera.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Change Home screen wallpaper**.
3. Choose from where you want to select a wallpaper.

To use a photo you captured with the camera, tap **Gallery**, choose and crop a photo, and then tap **Done**.

Changing the display font

You can change the font style and size of the display font or you can download new fonts online.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Under Font, tap **Font style** and choose one of the built-in fonts or tap  to go online and download new fonts.
3. Tap **Font size** to choose the size of the font.

Downloading fonts

You must be logged on to your HTC Account to download fonts.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Under Font, tap **Font style** and then tap .
3. Tap  to select a category.
4. Select a font style, and then tap **Download**.
5. Tap **Apply**.

Launch bar

The launch bar gives you one-touch access to commonly used apps (and other shortcuts). You can replace the apps on the launch bar with the ones you often use.

1. Press and hold the app you want to replace, and then drag it out to .



2. Tap  to go to the Apps screen.
3. Press and hold an app, and then drag it to the empty slot on the launch bar.



- You can also group apps on the launch bar into a folder. See [Grouping apps on the widget panel and launch bar](#) on page 69.
- The apps (or other shortcuts) on the lock screen are the same as the ones on the launch bar.

Adding Home screen widgets

Widgets make at-a-glance important information and media content easily available. Choose from a selection of widgets and add the most useful ones to your Home screen.

1. Press and hold an empty space on a widget panel.
2. In the pop-menu, tap **Add apps and widgets**.
3. Tap ▼ > **Widgets**.
4. Scroll through the widgets, or tap 🔍 to search for a specific widget.

Some widgets are available in different styles and sizes.


5. Press and hold and then drag the widget to a widget panel you want to add it to.

You can also add widgets that allow you to quickly switch on or off certain settings such as Wi-Fi and Bluetooth.

Changing the settings of a widget

You can modify basic settings of some widgets (for example, the People widget).

1. Press and hold a widget on your Home screen, and then drag it to ⚙️.

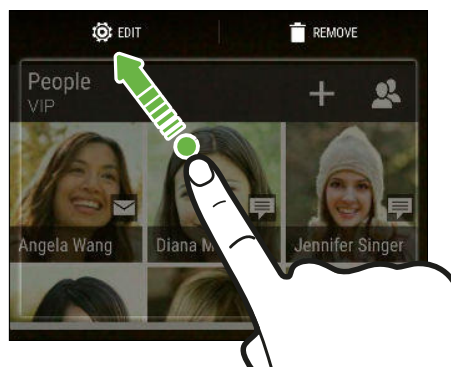

2. Customize the widget settings.

Resizing a widget

Some widgets can be resized after you've added them to your Home screen.

1. Press and hold a widget on the Home screen, and then release your finger. If a border appears, that means the widget is resizable.
2. Drag the sides of the border to enlarge or shrink the widget size.

Adding Home screen shortcuts

Place apps you often use on any widget panel of your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap ▼ > **Apps** or **Shortcuts**.

4. Scroll through the apps or shortcuts, or tap  to search for one.
5. Press and hold and then drag an app or a shortcut to a widget panel you want to add it to.



To add an app from the Apps screen, press and hold the app, and then drag it to a widget panel.

Editing Home screen panels

Adding or removing a widget panel



- You won't be able to add a new widget panel if you've already reached the maximum limit.
- HTC BlinkFeed always appears as the first panel (if it's not removed). A widget panel cannot be added before HTC BlinkFeed.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. To add a new widget panel, swipe left until you see the  icon, and then tap it.
4. To remove a widget panel, swipe left or right until you see the panel, and then tap **Remove**.
5. When done, press .

Arranging widget panels




A widget panel cannot be moved and inserted before HTC BlinkFeed.

1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home screen.
2. Press and hold a widget panel thumbnail, and then drag it left or right to the position that you want.
3. When you're done arranging widget panels, press .

Moving a widget or icon

You can easily move a widget or icon from one widget panel to another.

1. Press and hold the widget or icon with one finger.
2. With another finger, flick left or right to rotate the screen to another widget panel.

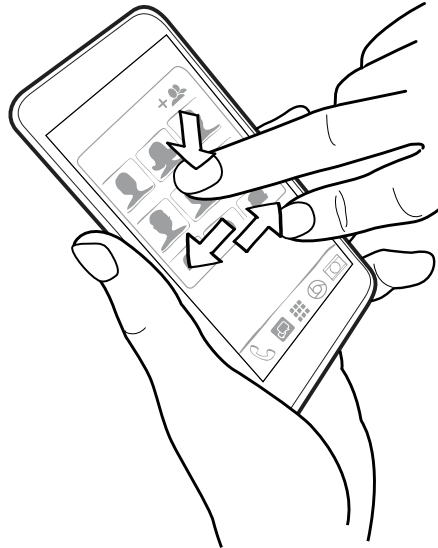

3. Release the widget or icon.

Removing a widget or icon

1. Press and hold the widget or icon you want to remove, and then drag it to .
2. When the widget or icon turns red, lift your finger.

Changing your main Home screen

Set HTC BlinkFeed or a widget panel as your main Home screen.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. Swipe left or right until you see the panel that you want to use as your main Home screen.
4. Tap **Set as home**.
5. Press .



Pressing  from an app will first return you to the last panel you were in. Just press  again to go to your main Home screen.

Grouping apps on the widget panel and launch bar

1. Press and hold an app, and then drag it over to another app to automatically create a folder.



2. Tap the folder to open it.
3. Tap the folder window's title bar, and then enter a new folder name.
4. Add more apps into the folder. Tap **+**, select your apps, and then tap **Done**.

You can also add shortcuts to settings or information to a folder. Add a shortcut first to a widget panel, and then drag it over to the folder.

Removing items from a folder

1. On the launch bar or widget panel, tap a folder to open it.
2. Press and hold an app or shortcut in the folder, and then drag it out to .

Arranging apps

On the Apps screen, you can rearrange the apps and change the layout.

1. From HTC BlinkFeed or any widget panel, tap .
2. Tap , and then choose how to arrange apps, such as alphabetically.
If you want to group apps into folders or rearrange them, select **Custom**.
3. Tap  > **Grid size** to choose whether to display more or fewer apps per page.

Moving apps and folders

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app or folder, and then do one of the following:
 - Drag the app or folder to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
 - Drag the app or folder to the  or  arrow to move it to another page.
4. When you're done moving apps and folders, tap .

Grouping apps into a folder

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app, and then drag it over to another app to automatically create a folder.
4. To add more apps, drag each app over to the folder.

5. To name the folder, open the folder, tap its title bar, and then enter a folder name.
6. When done, tap ✓.

Removing apps from a folder

1. On the Apps screen, tap ▼ > **Custom**.
2. Tap ⋮ > **Rearrange apps**.
3. Tap the folder to open it.
4. Press and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
5. When you're done removing apps, tap ✓.


Hiding or unhiding apps

1. On the Apps screen, tap ⋮ > **Hide/Unhide apps**.
2. Select the apps you want to hide, or clear their check boxes to unhide them.
3. Tap **Done**.

HTC BlinkFeed

What is HTC BlinkFeed?

Get the latest about your interests or stay in touch with friends right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear.

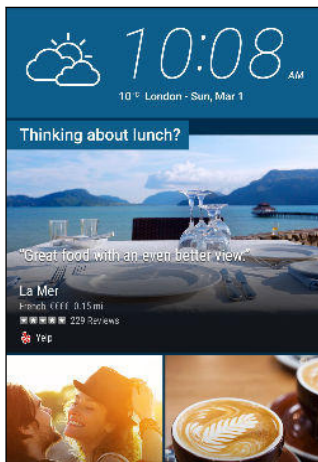

- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap a tile to view the content or to comment on a post or status update.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can press  or  to scroll to the top.
- Scroll to the top and pull down on the screen to manually refresh the stream.
- Swipe right on HTC BlinkFeed to open the slideout menu where you can choose the type of feeds or add your custom topics to display.



You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.

Turning HTC BlinkFeed on or off

1. On the Home screen, slide two fingers together.



2. Tap .

3. Do one of the following:

- To turn on HTC BlinkFeed, swipe right until you see **+ BlinkFeed**, then tap it.



- To turn off HTC BlinkFeed, swipe to the thumbnail and then tap **Remove**.

Restaurant recommendations

Can't think of what to eat? Get recommendations for restaurants nearby in HTC BlinkFeed.



- Make sure you've given HTC Sense Home permission to access your location. See [Setting up the HTC Sense Home widget](#) on page 44.
- Make sure you've added personalized content to HTC Sense. See [Ways of adding content on HTC BlinkFeed](#) on page 73.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Settings**.
3. Tap **Notification on lockscreen** and make sure **Meal time bundle** is selected.

To get restaurant recommendations, you'll need to actively use HTC BlinkFeed daily. Restaurant recommendations will show up as a tile in HTC BlinkFeed and also on your lock screen.

Viewing restaurant recommendations

View photos of the restaurant, get directions to the restaurant, and more.

1. When you see a restaurant recommendation tile, tap it to view more information.
2. You can do the following:
 - Tap the photo tile or **View Photos** to browse photos of the restaurant.
 - Tap the map icon or address to see the location in Google Maps™. From there, you can get directions.
 - If you see a phone number, tap the phone number to call the restaurant.
 - If you see numbers at the bottom, tap on a number to see alternative restaurant recommendations.

Ways of adding content on HTC BlinkFeed

Personalize HTC BlinkFeed to show articles and status updates from your favorite news sources, categories, editions, and apps.

Selecting feeds

Discover stories and articles on HTC BlinkFeed based on your interests, favorite categories, and popular news channels or websites.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Add content**.
3. Choose a category.
4. Select one or more feed sources.

You can tap a name first to check out a particular feed, and then tap  to add it to HTC BlinkFeed.

While browsing the Highlights feed, you may get recommendations for new stories or sources that may be of interest to you. Tap  in a tile that says **New** to subscribe to its website or channel's feed.

Showing content from your apps and social networks

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.



You need to sign in to your social networks to see their feeds on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Services & Apps**, and then select the apps and social networks you like.

Searching and adding a topic of interest

Looking for a more specific topic? Search for and select topics of interest to display them on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **Search for content**, and then enter the topic you're looking for.
3. Tap a result, and then tap  to add it under Custom topics.

Subscribing to multiple regional editions

Want to keep up to date on current events in more than one region? You can show one or more editions of your choice on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Add content**.
3. Tap , and then select a locale or region.
4. Select the feed sources to add.

Customizing the Highlights feed

Go to the Highlights feed to see a mix of top trending articles and status updates from the feed sources you added. You can also set the Highlights feed to only show items from your favorite news sources, categories, and apps.



You cannot add custom topics and RSS to the Highlights feed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Settings** > **Choose Highlights topics**.
3. Select the feed sources you want to appear in Highlights.

Saving articles for later

Don't have time to read that potentially interesting article? You can bookmark articles to your reading list.

Do one of the following:

- While viewing an article, tap .
- On HTC BlinkFeed, press and hold the tile of the article you want to bookmark. Then tap **Read later**.

To access your reading list on HTC BlinkFeed, swipe right, and then tap **News reading list** in the slideout menu.

Posting to your social networks

You can easily post a status update from HTC BlinkFeed.



You need to sign in to your social networks before you can post a status update from HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Compose**, and then choose a social network.
3. Compose your status update and post it on your social network.

Removing content from HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.

- To remove a tile, press and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu, tap  > **Remove content**, select one or more items, and then tap **Remove**.

To unsubscribe to a localized edition, tap  on the Remove content screen. Tap **Remove editions**, select one or more items, and then tap **Remove**.


Camera

Camera basics

Camera screen

Take great photos and videos with the camera.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  to see all controls on the Viewfinder screen.

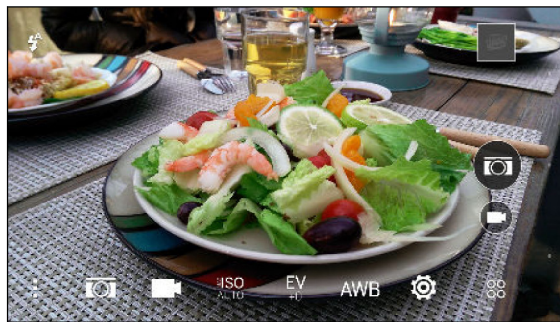

Choose a scene to use for taking photos.



Choose a scene to use for recording videos.



Choose an ISO level or set it back to **Auto**. Higher ISO works best in low light conditions.



Choose an exposure value. The higher the exposure value is, the brighter your photos or videos will be.



Choose a white balance setting that matches your current lighting environment.



Choose from more basic and advanced camera settings.

Choosing a capture mode

Switch to a capture mode to use for taking photos or videos.

On the Viewfinder screen, tap , and then tap a capture mode.

You can also just swipe across the Viewfinder screen to switch between capture modes:

- In landscape view, swipe from the top or bottom edge of the screen.
- In portrait view, swipe from the left or right edge of the screen.

Zooming

- Before taking a photo or video, slide two fingers apart to zoom in or together to zoom out.
- When you're recording video, you can freely zoom in or out while recording.

Turning the camera flash on or off

Tap the flash icon to choose a flash setting.

When using  or , the camera intelligently sets the best flash brightness for your photo.

Taking a photo

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it.
4. When you're ready to take the photo, tap .

Tips for capturing better photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

Improving focus and sharpness

- HTC One M9+ Supreme Camera Edition has autofocus, which works best on a subject that is not moving too much. To change the focus, on the Viewfinder, tap the subject you want to focus on.
- If the subject is moving, on the Viewfinder, press and hold the subject to lock the focus.
- You can set the sharpness before taking a photo in the Camera settings, or manually adjust the sharpness of a photo in Photo Editor.

Generally, it is better to sharpen a blurry image rather than to reduce the sharpness in an image.

Taking well-lit photos

- HTC One M9+ Supreme Camera Edition automatically adjusts the focus and exposure. If the image appears underexposed or that it appears dark on the Viewfinder, tap a part of the image that is in shadow. Conversely, tap a well-lit object in the image if the image seems to be overexposed. Focus on an object with a neutral tone for a balanced exposure. Keep in mind that tapping on another object may shift the focus from your subject.
- If you are using the default settings and the photo still appears too dark, switch to Night scene, but place HTC One M9+ Supreme Camera Edition on a level surface to keep it steady.

- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC One M9+ Supreme Camera Edition steady or place it on a level surface when using HDR.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.

Other tips

- In Camera settings, tap **Grid** to help frame the subject better or improve the composition.
- If taking photos under fluorescent or incandescent bulbs and the subject appears to be off-color, tap **AWB**, and then choose a white balance setting. Check the image on the Viewfinder and select the option that displays the closest color to the natural color of the subject.
- In Camera settings, you can tap **Image adjustments** and adjust the contrast, saturation, and sharpness before taking the photo.
- After capturing the photo, you can fine-tune the contrast, brightness, and other settings in Photo Editor.

Recording video

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by just tapping it on the Viewfinder screen.
5. Tap the flash icon to turn the flash on or off.
6. Tap  to pause the recording, and then tap  to resume.
7. To stop recording, tap .

Setting the video resolution

1. Switch to **Camera** mode.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap **Video Quality**, and then choose a video resolution.

Taking a photo while recording a video—VideoPic

Use the **Normal** video scene when you want to take a photo while recording video.

1. On the Home screen, tap the camera icon to open the Camera app.
2. On the Viewfinder screen, tap  to show the camera options.
Make sure you see the  icon which means the **Normal** video scene is selected.
3. Tap  to start recording.

4. While recording, tap  whenever you want to capture a still shot.
5. Tap  to stop recording.

Using the volume buttons for taking photos and videos


In the Camera app, you can set the VOLUME buttons to function as the shutter release or zoom controls.

1. On the Home screen, tap the camera icon to open the Camera app.
2. On the Viewfinder screen, tap .
3. Tap  > **Volume button options**.
4. Choose how you want to use the volume buttons when you're in the Camera app.

Closing the Camera app

To give you a full view of the Viewfinder screen, HTC One M9+ Supreme Camera Edition replaces , , and  with small dots.

Tap a dot to show these buttons again, and then tap  or  to close the Camera app and return to the Home screen or the previous screen.

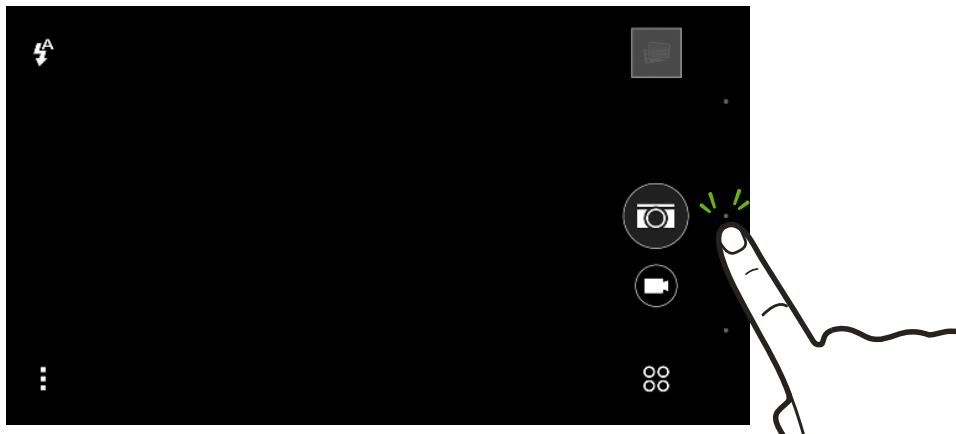

Taking continuous camera shots

Do you want to take photos of moving subjects? Whether it's your kid's football game or a car race, you can capture the action. Use the **Auto** scene when you want to take continuous camera shots.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. On the Viewfinder screen, tap  to show the camera options.

Make sure you see the  icon which means the **Auto** scene is selected.

4. Press and hold the onscreen shutter button .

The camera takes up to 20 consecutive shots of your subject.

5. Choose what you want to do with the continuous shots:
 - To keep just one photo, select the photo that you like the most, and then tap **Best shot**.
 - Tap **Delete**, select the unwanted shots, and then tap **Delete** to save only the remaining shots.
 - To save the whole batch of shots, just press .

Changing the focus in Bokeh mode

Use Bokeh mode to focus on any object that you see on the Viewfinder screen and blur its background.



You need to be within a distance of 10 to 60 cm (4 in. to 2 ft) from the object you want to focus on.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  > **Bokeh**.
If you don't see this mode, tap **Add** > **Bokeh** to add it first to the capture modes.
3. On the Viewfinder screen, tap the object you want to focus on.
4. When you're ready to take the photo, tap .

Tap the small image thumbnail to open the photo you've just taken in Gallery and see the bokeh effect.

Selfies and people shots

Tips for taking selfies and people shots

Do you want yourself, your family, and friends to look best in your shots? Here are some camera options you can adjust or select before taking selfies and people shots.

Portrait scene

Using the Portrait scene helps a little in smoothing the skin in your selfies and people shots.

1. Switch to **Camera** or **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap  to select the Portrait scene.

Live Makeup for selfies

Touch up your skin with Live Makeup before taking your selfie. See [Applying skin touch-ups with Live Makeup](#) on page 82.

Angle of selfies

Do you want the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen?

1. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap  > **Camera options**.
4. Select the **Save mirror image** option.

Skin touch-ups for people shots

Beautify the skin of your subjects before taking their shots.

1. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
2. On the Viewfinder screen, tap  to show the camera options.
3. Make sure you're using the  scene setting.
4. Tap .
5. Tap **Make-up level**, and then adjust the skin smoothing level.

Applying skin touch-ups with Live Makeup

Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie** or **Photo Booth** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
3. To change the skin smoothing level, drag the slider across the adjustment bar.



The adjustment bar is shown on the Viewfinder screen by default. To hide it, tap  > , and then clear the **Live Makeup** option.

Using Auto Selfie

Keep still to take an auto selfie—or just smile! You just need to turn this feature on in the camera settings.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap  > **Camera options**.
5. Select the **Auto Selfie** option, and then press .
6. Pose and frame yourself on the Viewfinder screen.
7. To take your selfie automatically, look at the front camera, and then:
 - Stay still until the white box turns green on the Viewfinder screen.
 - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

Using Voice Selfie

Voice Selfie lets you easily take photo or video selfies using voice control. You just need to turn this feature on in the camera settings.



This feature may not be available in all languages.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap  > **Camera options**.
5. Select the **Voice Selfie** option, and then press .

6. Pose and frame yourself on the Viewfinder screen.
7. Look at the front camera, and then:
 - Say **Cheese** or **Capture** to take a photo selfie.
 - Say **Action** or **Rolling** to record a video selfie.



You can also use voice capture with the main camera. Switch to **Camera** mode, and then turn on **Voice capture** in the camera settings. Voice capture may not be available in all languages.

Taking photos with the self-timer

When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Choose a capture mode you want to use. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 76.
3. On the Viewfinder screen, tap to show the camera options.
4. Depending on your selected capture mode, do one of the following:
 - Tap if you see this icon, and then tap the countdown time that you want.
 - Tap > **Self-timer**, and then drag the slider to set the countdown time.
5. To start the timer, tap . The camera takes the photo after the countdown.

Taking selfies with Photo Booth

Take several selfies and combine them into a single picture.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap > **Photo Booth**.
If you don't see this mode, tap **Add** > **Photo Booth** to add it first to the capture modes.
3. On the Viewfinder screen, tap > , and then choose a layout for your selfies.
4. To start capturing, tap .

The Camera app will take four selfies, capturing each shot every 2 seconds. You can change your pose for every shot.

Raw Camera

Taking a RAW photo

Use Raw Camera mode to take professional RAW photos.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap > **Raw Camera**.

If you don't see this mode, tap **Add** > **Raw Camera** to add it first to the capture modes.

3. Tap a setting, and then drag its slider to make adjustments.

To change a setting back to auto, tap .

4. When you're ready to take the photo, tap .

How does the Camera app capture RAW photos?

The Camera app captures a photo in both the DNG RAW format and JPG format.

Digital Negative (DNG) is an open-standard lossless RAW image format. Since a RAW file is typically 2 to 6 times larger than a JPEG file and is not viewable in most photo viewer apps, a photo is captured in both DNG and JPG formats. When you use the HTC Gallery app, you'll see the JPG copy of the photo, with a  icon to indicate that there is a DNG RAW file of that photo.

RAW photos are not processed when captured to preserve most of the original image data—such as dynamic range—so you can adjust lighting or make professional adjustments using advanced editing tools. After making adjustments, save the RAW photo as a JPG file if you want to print or share it.

Split Capture

Using Split Capture mode

Use the Split Capture mode to capture your selfie and the scenery in front of you. The split-screen shot can either be both photos or both videos.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  > **Split Capture**.

If you don't see this mode, tap **Add** > **Split Capture** to add it first to the capture modes.

3. Drag the middle node to vertically adjust the size of the windows. Drag the top or bottom node to split the screens diagonally.



4. Tap  to toggle between the following options:

	Synchronous shot	Use the main and front cameras to capture both photos or both videos at the same time.
	Asynchronous shot	Separately capture photos or videos with the main and front cameras. You can record different lengths of videos.

5. When taking a synchronous shot, tap  to take photos or  to record videos with both cameras.

- When taking an asynchronous shot, tap  to take a photo or  to record a video with the main camera. Tap the button again to capture your selfie.

If you recorded video with the main camera, the video starts playing in its split window after you stop recording. After or while viewing the video, tap  to record your video selfie.

If you need to retake the shot, tap  to start over.

- To save the split-screen shot, tap .

Panoramic shots

Taking a panoramic photo

Get a wider shot of landscapes in one sweep.



Some camera features are not available when you're in Sweep panorama mode, such as zooming.

- On the Home screen, tap the camera icon to open the Camera app.
- Tap  > **Panorama**.
- If Pan 360 is selected, tap  > , and then tap  to switch to **Sweep panorama** mode.
- When you're ready to take the shot, tap .
- Pan left or right in either landscape or portrait view. Hold HTC One M9+ Supreme Camera Edition as smoothly as you can to automatically capture frames.

You can also tap  to stop capturing anytime.

The camera stitches the frames into a single photo.

Taking a Pan 360 photo

The world isn't flat and your photos shouldn't be either. Take a 360-degree panorama of what's around you.



Some camera features are not available when you're in this mode, such as zooming.

- On the Home screen, tap the camera icon to open the Camera app.
- Tap  > **Panorama**.
- On the Viewfinder screen, tap  to show the camera options.
- Tap , and then tap  to switch to **Pan 360** mode.
- Hold HTC One M9+ Supreme Camera Edition at face level so you'll have more room to capture scenes above or below you.


6. When you're ready to take the first shot, center the white box within the Viewfinder markers. The camera automatically captures the frame.
7. To take succeeding shots, pan HTC One M9+ Supreme Camera Edition up, down, left, and right as smoothly as you can.

As you pan in one direction, you'll see another white box. Center the white box again within the Viewfinder markers.



Stand in the same spot even as you turn around to take more shots. For best results, remember to:

- Avoid capturing scenes with moving objects.
- Keep at least five meters distance from the scene.

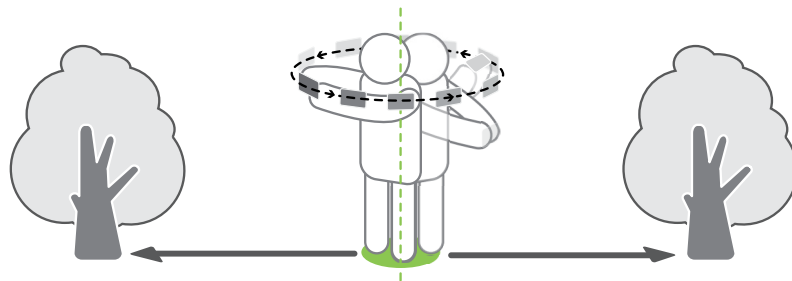

8. Pan repeatedly until you get your desired frames or when you don't see any more boxes.

To stop capturing anytime, tap .

Photos taken with Pan 360 are indicated by the  icon in Gallery.

Other camera features

Using HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.



HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** or **Selfie** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. On the Viewfinder screen, tap  to show the camera options.

4. Tap , and then tap .
5. To take an HDR photo, tap .

Recording videos in slow motion

Relive high speed action bit by bit and add a touch of suspense to your videos.



Audio is recorded when you're in this scene, but will only be available when video is played back in normal speed.


1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. Tap  to start recording.
6. To stop recording, tap .

Camera settings

Manually adjusting camera settings

Want to have expert command of your camera settings for different environments or lighting conditions? You can manually adjust the values for settings like white balance, exposure, ISO, and more.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 76 for details.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap **M**.
5. Tap a setting, and then drag its slider to make adjustments.

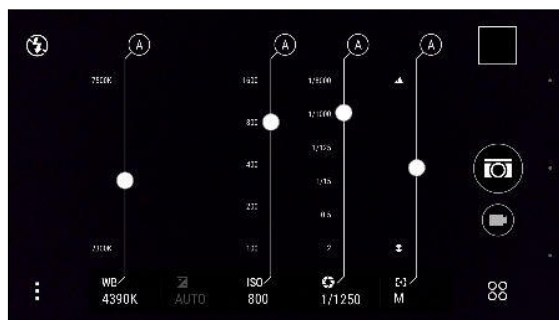

6. To change a setting back to auto, tap .

7. When done, tap . To display the settings again, just tap .
8. When you're ready to take a photo, tap .



You can save your customized settings as a new capture mode. See [Saving your settings as a capture mode](#) on page 88 for details.

Saving your settings as a capture mode

Save a scene or your custom settings as a new capture mode so you can conveniently use it anytime you need it.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap , and then tap a capture mode you want to use.



Some capture modes may not support modifying the camera settings.

3. On the Viewfinder screen, tap  to show the camera options.
4. Modify the settings as desired.
5. When done, tap  > **Save custom camera**.
6. Enter a name, and then tap **Save**.

Tap  on the Viewfinder screen, and then tap your created capture mode whenever you want to use it.



To remove a capture mode that you added, tap , press and hold the mode, and then drag it to the **Delete** option.

Gallery

Viewing photos and videos in Gallery

Reminisce about good times. Use Gallery to view all your photos and videos. View them by time, album, or location. When viewing your photos and videos, the onscreen navigation buttons will be hidden. Tap anywhere on the screen to see Gallery controls and onscreen navigation buttons.

Viewing photos and videos organized by time

Switch to Timeline view when you want to view your photos and videos according to when they were taken.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Timeline** to switch to Timeline view.
You'll then see tab icons for switching between different layouts.
3. Tap  to see your photos and videos individually arranged in a feed.
4. Tap  to see your photos and videos in a grid layout.
5. Tap  to see your photos and videos organized by events.
6. Tap  to see your photos and videos organized by year, then tap a month to see the shots you've taken at that time.
7. Tap a photo or video to see it in full screen.



You can also slide two fingers together or apart on the screen to scroll through the Timeline, feed, grid, and year layouts.

Viewing photos and videos by album

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap a photo or video to see it in full screen.

Viewing your favorite photos

Easily see all your favorite photos in one place. You can add photos to the My favorites album.

- To add a photo, find and view the photo in full screen, tap the photo, and then tap  > **Favorite**.
- To view these favorite photos, open the My favorites album.
- To remove a photo from the My favorites album, press and hold the thumbnail and then tap **Remove**.

Showing or hiding albums

Have too many albums cluttering up Gallery? You can choose to show or hide albums.

1. In Gallery, tap  > **Albums**.
2. Tap  > **Show/hide albums**.
3. Choose which albums you'd like to show or hide.

Renaming an album

If you have created albums to organize photos, you can rename these albums.

1. In Gallery, tap  > **Albums**.
2. Press and hold the album that you want to rename.
3. Tap **Rename**.



Some albums, such as Camera shots and Screenshots, cannot be renamed.

Viewing photos by location

Using Map view, you can view photos according to location.



Only photos with geo-tag info appear on the map.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Locations** to switch to Locations view.
You'll see tiles of photos taken at specific locations, with numbers that indicate how many photos were taken in each location.
3. Tap  to display Map view.

4. Zoom out or pan across the map until a numerical location indicator  appears.
The number in the location indicator shows how many photos were taken in that area.
5. Tap the location indicator to see the photos taken in that area.



Want to know where you took a particular photo? While viewing the photo in full screen, tap anywhere on the screen, and then tap  > **Show on map**. (**Show on map** is available when you've enabled **Geo-tag photos** in Camera.)

Adding location information

Want to specify more than just the city? You can add names of points of interests (POI) to your photos too.

1. In Gallery, tap  > **Locations**.
2. Tap a tile to open it.
3. Swipe to the Places tab.
4. Tap **Tap to edit location** > **Add a new place**.
5. Tap a point of interest to add a POI from the list or tap **New place** to manually enter a new name.
6. Tap **Save**.

Changing location information

1. In Gallery, tap  > **Locations**.
2. Tap a tile to open it.
3. Swipe to the Places tab.
4. Find the grouping you want to rename, then tap  and try one of the following:

Selecting another POI	1. Tap Edit location > Tap to edit location. 2. Tap a point of interest or tap New place to manually enter a new name. 3. Tap Save.
Renaming the location	1. Tap Rename this place. You'll only see Rename this place if the name is stored on HTC One M9+ Supreme Camera Edition . 2. Enter a new name. 3. Tap Save.

Adding photos or videos to an album

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Open a group of photos and videos, such as an event in Timeline view or an album.
4. Tap  > **Add to album**.
5. Select the photos or videos you want to add, and then tap **Next**.
6. Create an album or select an album that you've already created in Gallery. To create a new album to move or copy to, tap .



To add a single photo or video to an album, press and hold the photo or video. Tap **Add to album**, and then select the destination album or create a new album.

Copying or moving photos or videos between albums

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap  > **Move to** or **Copy to**.
5. Select the photos or videos you want to move or copy and then tap **Next**.
6. Select an album to move or copy the photos or videos to. To create a new album to move or copy to, tap .

Tagging photos and videos

Make your photos and videos easy to find by adding tags, such as short names or keywords.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap a tile to open a group of photos and videos.
4. Tap  > **Add tag**.
5. Select items that you'll tag with the same keywords, then tap **Next**.
6. Type in a keyword, and then tap .

Or, to use an existing tag, just tap it below the text field.

7. Add more keywords when needed.

8. If you need to remove a tag you've added, just tap the tag, and then tap **OK**.
9. Tap **Save**.



To tag a single photo or video, press and hold the photo or video. Tap **Add tag**, and then enter your keywords.

Viewing your tagged photos and videos

1. In Gallery, tap > **Tags**.

You'll see tiles of your used tags, with numbers that indicate how many photos and videos belong to each tag.

2. Tap a tile to open it and view tagged photos and videos.

Renaming a tag

You can rename a tag that you've already added to your photos and videos.

1. In Gallery, tap > **Tags**.
2. Find the tile of the tag you want to rename, then tap > **Rename tag**.
3. Type the new tag name in the text field, then tap .
4. Tap **OK** to save your changes.

Removing tags

1. In Gallery, tap > **Tags**.
2. Find the tile of the tag you want to modify.
3. To untag photos and videos, tap the tile, and then tap > **Remove tag**. Select the items, then tap **Remove**.
4. To completely delete a tag, tap in the tile, then tap **Remove tag**.



Deleting a tag will not delete any of your photos and videos.

Searching for photos and videos

You can search the Gallery using tags and photo locations.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap .
3. In the search field, type a tag or a location associated with the photo or video you're looking for.

You can also search for photo taken on a specific date. You must use the same date format as that set in **Settings > Date & time**, such as 01/13/2015.

4. Tap .
5. Select what you want from the matching results.

Finding matching photos

Looking for photos of a specific person? Use Image match to find photos faster instead of browsing through Gallery.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap .
4. Tap **Image match** and find and tap a photo that is visually similar to what you want to find. You'll then see the results of the search for matching photos.
5. From the results of the search, tap other photos that are most similar to what you want to find and do one of the following:
 - Tap **Continue** to further refine the search.
 - Tap **Finish** to finish searching.
6. On the Images matched screen, select all of the images you want to save to a new album, and then tap **Save**.



You can also find matching images while viewing a photo in full screen. Tap  > **Image match**.

Viewing Pan 360 photos

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap a tile to open the thumbnail view.
4. When you see the Pan 360 photo you want, tap it to view in full screen. You can identify Pan 360 photos by the  icon on the thumbnail.
5. Tap  to explore the Pan 360 photo.
6. Try any of the following:
 - Tilt HTC One M9+ Supreme Camera Edition or drag your finger on the screen to pan the photo.
 - Tap the rotation indicator at the top left corner to re-center the photo.
 - Slide two fingers together or apart to zoom the photo.
 - Rotate two fingers to rotate the photo.
 - Tap  to save the current view of the photo.

Changing the video playback speed

Want to add a cinematic flair to your video by slowing down a particular scene? You can vary the playback speed of a selected section of a slow motion video.



You can only change the video playback speed of videos captured using the slow motion scene in the Camera app.

1. In Gallery, open the video you want to play in full screen. You can identify slow motion videos by the  icon on the thumbnail.
2. Tap  to switch between normal and slow motion playback.
3. To adjust the playback speed of the video, tap  > **Edit** > **Adjust playback speed**.
4. Frame the sequence you want to slow down by moving the left and right sliders.
5. Drag the slider up or down to choose how fast you want the sequence to play.
6. Tap  to watch the result.
7. Tap .

The edited video is saved as a copy. The original video remains unedited.

Trimming a video

1. In Gallery, open the video you want to play in full screen.
2. Tap the onscreen controls to pause or resume playback, adjust the volume, and more.



Tap  to share the video on your home network.

3. To trim the video, tap  > **Edit**.
4. Drag the trim sliders to the part where you want the video to begin and end.
5. Tap  to preview your trimmed video.
6. Tap .

The trimmed video is saved as a copy. The original video remains unedited.

Saving a photo from a video

It's easy to save a still shot from a video.

While you're watching a video in Gallery, tap  to capture a still shot.

You can also pause the playback and drag the slider to the image you want before tapping .

Viewing, editing, and saving a Zoe highlight

When you view a group of photos and videos such as in an album, Gallery automatically composes a Zoe™ highlight. A Zoe highlight is a collection of clips—which can be photos, videos, or both—that Gallery has preselected, with added background music and special effects. You can edit the Zoe highlight, and then save it as a video.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
If you are in Timeline view, you need to go to the Events  or Year  tab.
3. Tap a tile to open a group of photos and videos. You'll then see a preview of the Zoe highlight play automatically.
4. Tap  to edit the Zoe highlight.
Add or change the clips, choose a theme, or change the background music. While selecting clips, press and hold a clip to set it as the start or end clip.
5. When you're done editing the Zoe highlight, tap  to save it as a video.

You'll find the saved video in the Zoe Highlights album.

One Gallery

See all your photos and videos in one place.

With One Gallery, you can view all the photos and videos that are stored on HTC One M9+ Supreme Camera Edition as well as on favored online services right from the Gallery app on your phone.

What's more, you can easily find similar photos and videos using Image match or by searching with keywords or tags. See [Finding matching photos](#) on page 94 and [Searching for photos and videos](#) on page 93.



If One Gallery is not preinstalled on your phone, you can download it from Google Play.

Turning on One Gallery

One Gallery lets you view your Facebook, Flickr®, Google Drive™, and Dropbox pictures and videos in Gallery.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **General Settings** > **One Gallery**.
3. Tap **Next** and then select the online account you want to sign in with.
4. Choose the online services whose photos and videos you want to see in Gallery. One Gallery will then sync with the accounts.
5. After the accounts have been synced, tap .

You'll then be able to see your online photos and videos in Gallery.

Photo Editor

Basics

Choosing a photo to edit

You can select photos to edit from Photo Editor or Gallery.

1. From the Home screen, tap , and then find and tap **Photo Editor**.
2. Tap **Gallery** to open an existing photo on your phone, and then browse for the item to edit.
Or, tap **Camera** if you want to take a new photo to edit.

A slideout menu appears where you can choose editing options.



You can also tap  while viewing a photo in full screen from the Gallery app.

Adjusting your photos

Use the available adjustment tools to crop, rotate, flip, or straighten photos.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Essentials** > .
3. Choose to rotate, crop, flip, or straighten the photo.
4. Tap  and make more adjustments, if needed.
5. Press  to return to the Essentials screen.
6. Tap  to save changes.

Except for when applying rotation, edited photos are saved as new photos. The original remains unedited.

Drawing on a photo

Scribble on your photos for fun or to highlight an interesting part.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Flair** > .
3. Drag the stroke slider to adjust the stroke thickness.
4. Tap  to open the toolbar, choose a pen type, and then tap  to hide the toolbar.

5. Choose a pen color from the color bar.
6. Draw on the photo.
You can tap  to switch to full screen view.
7. To undo or redo an action, open the toolbar, and then tap  or .
Or, you can use the eraser from the toolbar to remove specific parts of your drawing.
8. Tap  when done.
9. Tap , and then tap  to toggle between the before and after photos.
10. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Applying photo filters

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then choose one of the available filters.
4. Tap .
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Creating and applying a custom filter

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then scroll to the end of the predefined filters bar.
4. Tap **Custom**.
5. Make changes to the filter by adjusting the controls on exposure, saturation, white balance, and more.
6. If you need to rearrange the order of your settings to achieve a particular effect, you can press and hold a setting and drag it to a new position.
Rearranging the settings may reset values to the default.
7. Tap .
8. Press  to return to the Essentials screen.
9. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Retouching photos of people

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Touch up**.
3. Choose a facial touch-up to apply, and then customize its settings.
4. Tap .
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Fixing red eye in photos

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then tap .
4. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Editing continuous shots

Always Smile

Finding it difficult to choose a group shot with the most smiles and the fewest blinks? Retouch a group shot so everyone looks their best in the photo.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see circles around any faces detected in the photo.
3. Select one face at a time and drag it sideways with your finger to select the expression you want.
4. Tap  when done.
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

GIF creator

Create an animated gif that you can quickly upload and share.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see an animation of the frames.
3. Drag the trim sliders to the part where you want the animated gif to begin and end.
4. Tap .
5. On the next screen, you can choose the direction you want the animation to play, set the speed of the animation, choose which frames you want to include, and more.
6. Tap  when done.
7. Select the file quality of your animation, and then tap **OK**.

The animation is saved as a gif. You can identify a gif by the  icon on the thumbnail in Gallery.

Sequence Shot

Hop, skip, or jump. Create a sequence shot to stitch a series of actions into one photo.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see frames that you can combine in one photo.
3. Select the frames that you want to include in the sequence shot.
4. Tap  when done.
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Object Removal

Did a pedestrian or passing car ruin your otherwise perfect shot of a famous landmark? Retouch the photo to remove unwanted people or objects.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
2. In the slideout menu that opens, tap **Effects** > . You'll see frames around areas in the photo where objects have been automatically removed.
3. To retain an object, tap  on its image on the film strip.
4. Tap  when done.
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Creative effects

Shapes

Add some pattern to your photo by adding and blending shapes.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Choose a shape to add to your photo.
4. Select a shape color by dragging the color slider.
5. Drag the shape to move it.
6. Drag your fingers apart or together on the shape to adjust its size.
7. Press and hold the shape with two fingers and then drag your fingers in a circular motion to rotate it.
8. Tap  to open the toolbar.
9. Tap , choose a different blending option for the selected layer, and then tap .
10. Tap  > , and then drag the slider to adjust the shape's opacity.
11. If you want to adjust your photo to blend with the shape, tap  to switch from the shape layer to the photo layer.

12. Tap a setting to adjust its values, and then tap > .




13. Tap ✓ to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Photo Shapes


Photo Shapes lets you add a shape to your image and fill it with another photo.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Choose a second image to be the fill for your selected shape.
4. Choose a shape to add to your photo.
5. Tap  to switch to the shape layer. You should see the shape layer icon .
6. Drag the shape mask to move it.

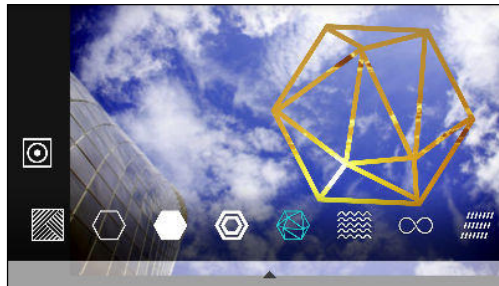

7. Drag your fingers apart or together on the shape mask to adjust its size.
8. Press and hold the shape mask with two fingers, and then drag your fingers in a circular motion to rotate it.
9. Tap  to return to the image layer , and then drag your fingers apart or together on the image to adjust the image size inside the mask.
10. Tap  to open the toolbar.
11. Tap , choose a different blending option for the selected layer, and then tap > .
12. Tap  > , and then tap a setting to adjust its values.

13. If you want to adjust your photo to blend with the image fill, tap  to switch from the image fill layer to the photo layer.

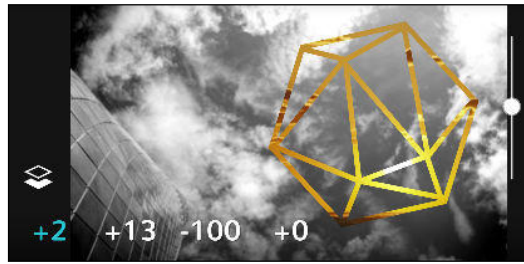


14. Tap a setting and drag the slider to adjust its values, and then tap .
15. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Prismatic

Got a bright and colorful image? Use Prismatic effect for fresh crystal prism patterns.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Choose a prismatic pattern to apply to your photo.
4. Tap  to switch to the shape layer. You should see the shape layer icon .
5. Drag the shape to move it.
6. Drag your fingers apart or together on the shape to adjust its size.
7. Press and hold the shape with two fingers, and then drag your fingers in a circular motion to rotate it.
8. Tap  to return to the image layer , and then drag your fingers apart or together on the image to adjust its size.
9. Tap  to open the toolbar.
10. Tap , adjust the settings for your photo layer, and then tap .

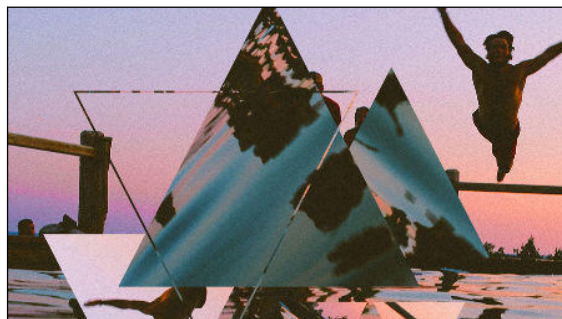

11. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.


Double Exposure

With Double Exposure, combine and blend two photos and create something surreal.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Choose your second image. This will be your top layer .



4. Drag the layer to move it.
5. Drag your fingers apart or together on the layer to adjust its size.
6. Tap  to open the toolbar.
7. Tap , choose a different blending option for the selected layer, and then tap .
8. Tap  > , tap a setting, and then drag the slider to adjust its values.
9. If you want to adjust your background layer to blend with the top layer, tap  to switch to the background layer.

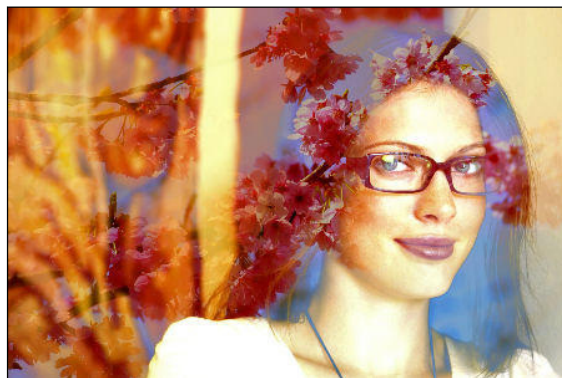


10. Tap a setting and drag the slider to adjust its values, and then tap .
11. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Elements

Add animated elements to your photo.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > ❄️.
3. Tap an element type to apply to your photo.
4. Tap ▲ to open the toolbar.
5. Tap 📏, draw an animation path or area for the selected effect, and then tap ✓.

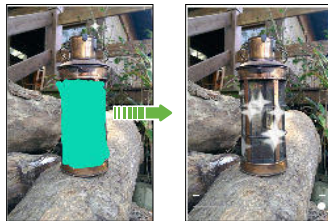

6. Tap ⏮️+ to adjust the animation speed and intensity.
7. Press and hold an area with two fingers, and then drag your fingers in a circular motion to rotate the animation.
8. When you are satisfied with the result, tap ✓ and choose to save as a photo or video.

Face Fusion

Wonder what you would like if you shared the same features as another person? Face Fusion uses a person's photo and a target face to merge the two photos into one.



To use Face Fusion, be sure that:

- The faces in each photo have to be 100 x 100 pixels or larger in size.
- Facial shots are without glasses and are not covered by hair, a hat, or any other item.
- Subjects should look towards the camera for best results.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 97 to find out how.
2. In the slideout menu that opens, tap **Effects** > 🗑️.
3. Tap + and then browse to the photo that you want to merge with.

4. Drag the slider to apply Face Fusion to the image.



To choose another target face, just tap the thumbnail of the target person and browse to a new photo.

5. When you are satisfied with the result, tap ✓ and choose to save as a photo or video.

Phone calls

Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Enter the phone number or first few letters of the contact's name to see the top matching contact.
3. If there are a number of matches found (for example, 8 matches), tap the number to see all the matches.
4. Tap the contact you want to call.



- To check other phone numbers associated with the contact, tap  beside the contact name.
- If the phone number has an extension, tap  after connecting to the main line and then dial the extension number.

Making a call with your voice

Call a contact hands-free using your voice.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap .
3. Say the name of contact you want to call. For example, say "Call [person's name in phonebook]."
4. Follow screen instructions to make the call.

Dialing an extension number

To skip voice prompts when dialing an extension number, do one of the following:

- After dialing the main number, press and hold *. A comma (,) is added to the number you are dialing. Enter the extension number, and then tap the call button. You will be connected to the mainline and then to the extension number.
- After dialing the main number, press and hold # to add a semicolon (;). Enter the extension number after the semicolon, and then tap the call button. After connecting to the main line, tap **Send** to dial the extension number.

You can save phone numbers with an extension in the People app.

Returning a missed call

You'll see the missed call icon  in the status bar when you miss a call.

1. Slide the Notifications panel open to check who the caller is.
2. To return the call, tap **Call back**.

If you have multiple missed calls, tap the missed calls notification to open the Call History tab.

Speed dial

Use Speed dial to call a phone number with a single tap.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap  > **Speed dial** > . You can also press and hold an unassigned key on the dialpad, and then tap **Yes**.
3. Select a contact from the list.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

To use Speed dial, press and hold the speed dial number you want to call.

Calling a number in a message, email, or calendar event

When you receive a text message, email, or calendar event that has a phone number in it, you can just tap the number to place a call.

Making an emergency call

In some regions, you can make emergency calls from HTC One M9+ Supreme Camera Edition even if the nano SIM card has been blocked or if you don't have one installed.



If you don't have a network signal, you won't be able to make an emergency call.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Dial the emergency number for your locale, and then tap **Call**.



If you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping **Emergency call** on the screen.

Receiving calls

When you receive a phone call from a contact, the Incoming call screen appears.



HTC One M9+ Supreme Camera Edition will automatically adjust the ringtone volume when you use the polite ringer and pocket mode features.

Answering or rejecting a call

Do one of the following:

- Tap **Answer** or **Decline**.
- If you've set up a lock screen, drag  or  upwards.
- Press the POWER button twice to reject a call.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC One M9+ Supreme Camera Edition face down on a level surface.



If **Flip to mute** option in **Sound & notification** settings is set to **Mute once**, HTC One M9+ Supreme Camera Edition will still ring when there are subsequent incoming calls.

What can I do during a call?

When a call is in progress, you can turn the speakerphone on, place the call on hold, and more.

Putting a call on hold

To put the call on hold, tap  > **Hold**. The status bar then displays the hold call icon .

To resume the call, tap  > **Unhold**.

Switching between calls

If you're already in a call and you accept another call, you can switch between the two calls.

1. When you receive another call, tap **Answer** to accept the second call and put the first call on hold.
2. To switch between the calls, tap the person you want to talk to on the screen.

Turning the speakerphone on or off during a call



To decrease potential damage to your hearing, do not hold HTC One M9+ Supreme Camera Edition to your ear when the speakerphone is on.

- On the call screen, tap . The speakerphone icon  appears in the status bar.
- To turn the speakerphone off, tap .

Muting the microphone during a call

On the call screen, tap  to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon  appears in the status bar.

Ending a call

Do one of the following to end the call:

- On the call screen, tap **End Call**.
- Slide the Notifications panel open, then tap **End Call**.

Setting up a conference call

Conference calling with your friends, family, or co-workers is easy. Make or accept a call, and then simply dial each subsequent call to add it to the conference.



Make sure that you have conference calling service activated. Contact your mobile operator for details.

1. Make a call to the first conference call participant.
2. When connected, tap  > **Add call**, and then dial the number of the second participant. The first participant is put on hold.
3. When connected to the second participant, tap .

4. To add another participant, tap , and then dial the number of the contact.
5. When connected, tap  to add the participant to the conference call. Tap  to access options such as ending the call with a participant.
6. To end the conference call, tap **End Call**.

Call History

Use Call History to check missed calls, your dialed numbers, and received calls.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Swipe to view the Call History tab.
3. Do one of the following:
 - Tap a name or number in the list to call.
 - Press and hold a name or number in the list to display the options menu.
 - Tap  to display just a particular type of call such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

1. On the Call History tab, tap  next to the new phone number.
2. Choose whether to create a new contact or save the number to an existing contact.

Clearing the Call History list

1. On the Call History tab, tap  > **Remove call history**.
2. Select the items you want to delete, or tap  > **Select all**.
3. Tap **Delete**.

Blocking a caller

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

On the Call History tab, press and hold the contact or phone number you want to block, and then tap **Block caller**.



You can always remove a caller from your blocked list. On the Call History tab, tap  > **Blocked contacts**. In the All tab, press and hold a contact, and then tap **Unblock contacts**.

Switching between silent, vibrate, and normal modes

Do one of the following:

- To change from silent to normal mode, press the VOLUME UP button.
- To change from vibrate to normal mode, press the VOLUME UP button twice.
- Go to Settings, and then tap **Sound & notification** > **Sound profile**.

Home dialing

When you're on a trip abroad, it's easy to dial friends and family from home.

Your home country code is automatically added when you call your contacts while roaming. But when manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.



Using a roaming service may incur additional charges. Check with your mobile operator for rates before using a roaming service.

Changing the default country code for Home dialing

1. From the Home screen, tap , and then tap **Settings > Call**.
2. Tap **Home dialing settings**.
3. Select a country, and then tap **OK**.

Turning off Home dialing

If you prefer to manually enter complete phone numbers to call while roaming, you can turn off Home dialing.

1. From the Home screen, tap , and then tap **Settings > Call**.
2. Clear the **Home dialing** option.

Messages

Sending a text message (SMS)

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Enter a contact name or mobile number in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , or press  to save the message as a draft.



- There is a limit on the number of characters for a single text message (displayed above ). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Sending a multimedia message (MMS)



Before attaching and sending a high-resolution video, compress it first so that the file size doesn't exceed the message size limit.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Enter a contact name, mobile number, or email address in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , and then choose an attachment type.
6. Select or browse for the item to attach.
7. After adding an attachment, tap  to see options for replacing, viewing or removing your attachment.
8. Tap , or press  to save the message as a draft.

Sending a group message

Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.



Group MMS may incur extra data fees.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Tap , and then select multiple recipients.
4. To send a group SMS, tap , and then select **Send as individual**. Clear this option to send your message as a group MMS.

Group SMS	Your message will be sent to the recipients as a text message and you will be charged by your mobile operator for each message sent. Replies of your recipients are sorted separately.
Group MMS	Similar to a group chat, sending a group MMS lets your recipients join the conversation you've started. HTC One M9+ Supreme Camera Edition also organizes message replies in a single conversation thread. If this is your first time to send a group MMS, you may need to enter your mobile phone number.

5. Tap the area that says **Add text**, then enter your message.
6. Tap .

Resuming a draft message

If you switch to another app or if you receive an incoming call while composing a text message, the message is automatically saved as a draft.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a draft message, and then edit the message.



To see all draft messages in one place, tap , and then tap **Filter > Drafts**.

3. Tap .

Replying to a message

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Tap the area that says **Add text**, and then enter your message.
4. Tap .

Replying to a contact's other phone number

When a contact has multiple phone numbers stored on HTC One M9+ Supreme Camera Edition , you can select which phone number to reply to.

Keep in mind that if you don't select another number, your response will be sent to the phone number that your contact used to send the last message.

1. While viewing the exchange of messages with a contact, tap  > **Recipient phone number** and select which phone number you want to reply to.
2. Tap the area that says **Add text**, then enter your reply message.
3. Tap .

Forwarding a message

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to view the exchange of messages with that contact.
3. Tap a message, and then tap **Forward**.

Moving messages to the secure box

You can move private messages to the secure box. You will need to enter a password to read these messages.



- The secure box does not encrypt messages.
- Messages stored on a nano SIM card cannot be moved to the secure box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap  > **Move to secure box**.
4. Select the messages, and then tap **Move**.



To move all the messages from a contact, on the Messages screen, press and hold the contact and tap **Move to secure box**.

- To read messages in the secure box, on the Messages screen, tap  > **Secure**. If it is your first time to use the secure box, set a password.
- To remove messages or contacts from the secure box, press and hold the contact (or phone number) and tap **Move to general box**.

Blocking unwanted messages

Declutter your Messages screen by moving spam messages from contacts to the block box. If you have blocked a contact, that contact's text or picture messages will also be in the block box.

- Open the Messages app, press and hold a contact (or phone number) and tap **Block contact**.
- To block multiple contacts, tap  > **Block contacts**, select the contacts, and tap **Block**.

When the contact sends you messages, you will not see them in the Messages screen or receive notifications and calls.

To read messages in the block box, on the Messages screen, tap  > **Block**.



- To remove messages or contacts from the block box, press and hold the contact (or phone number) and tap **Unblock**.
- To completely discard future messages from blocked contacts, tap  > **Settings** > **General**, and then clear the **Save block message** option.

Copying a text message to the nano SIM card

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message, and then tap **Copy to SIM**. The  icon is displayed.

Deleting messages and conversations

Open the Messages app and do any of the following:

Delete a message	Open the conversation thread with a contact, tap the message, and then tap Delete message. To delete multiple messages within a conversation, tap  > Delete messages > Delete by selection, and then select the messages to delete.
Delete a conversation	Press and hold a contact (or phone number), and then tap Delete. To delete multiple conversations, tap  > Delete threads, and then select the conversations to delete.



In the Messages settings, tap **General** > **Delete old messages** to auto delete old messages.

Preventing a message from being deleted

You can lock a message to prevent it from being deleted even if you delete the other messages in the conversation.

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.
3. Tap the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon  is displayed.

Entertainment

HTC BoomSound with Dolby Audio

Toggling modes in HTC BoomSound

Turn on HTC BoomSound with Dolby Audio™ in Settings and experience a whole new level of mobile audio from the speakers on HTC One M9+ Supreme Camera Edition .

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **HTC BoomSound with Dolby Audio** to toggle between Theater mode and Music mode.



HTC BoomSound with Dolby Audio is not available over HDMI, Bluetooth, Miracast™, or USB audio out.

Using HTC BoomSound with headphones

Turn on HTC BoomSound with Dolby Audio and put on your headphones to enjoy refined audio details in a more personal way.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Plug your headphones into the headphone jack.
3. Tap the HTC BoomSound with Dolby Audio **On/Off** switch.
4. Tap **HTC BoomSound with Dolby Audio**, and then select an option from the Choose your headphones screen. HTC One M9+ Supreme Camera Edition remembers the headphone profile you chose so you don't have to select it again next time.



HTC BoomSound with Dolby Audio is not available over HDMI, Bluetooth, Miracast, or USB audio out.

HTC Music


Listening to music

Enjoy your favorite songs on HTC One M9+ Supreme Camera Edition using the Music app.



When you open the Music app for the first time, you'll be asked if you would like to automatically download related content, such as album covers and artist photos, to HTC One M9+ Supreme Camera Edition.

1. From the Home screen, tap , and then find and tap **Music**.
2. Swipe to the different tabs to browse by category.
3. Tap a song to play.
4. Tap the onscreen icons to control music playback, repeat songs, and more.

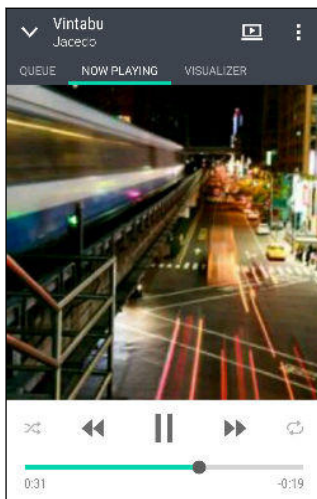

	Press and drag your finger across the progress bar to jump to any part of the song.
	Turn shuffle on or off. (Shuffle is off when button is gray.)
	Cycle through the repeat modes: repeat all songs, repeat current song, and don't repeat.
	Play your music on a DLNA® compliant TV or audio system.
	Minimize the Now playing screen to continue browsing your music collection.



When you're listening to music and the screen display turns off, press POWER to turn the screen back on and control the music playback directly on the Lock screen.

Music playlists

Personalize your music experience by creating music playlists. Make a playlist containing just your favorite songs or create one to match your mood for the day. You can make as many playlists as you like.

1. From the Home screen, tap , and then find and tap **Music**.
2. Swipe to the Playlists tab.
3. Tap , and then enter a playlist name.
4. To add songs, tap  beside the title text box, browse your music collection, and then tap a song to add.

Repeat this step to add more songs.

5. You can also:

Rearrange songs	Drag  to move the song to its new position.
Delete songs	Select the songs you want to remove from the playlist.
Change playlist name	Type the new name of the playlist in the title text box.

6. Tap **Save**.

You'll find newly created playlists on the Music app's Playlists tab.

To edit or delete a playlist you've created, from the Playlists tab, tap a playlist to open it, and then tap  > **Edit playlist** or **Delete**.

Adding a song to the queue

While playing a song, you can also browse other tracks stored on HTC One M9+ Supreme Camera Edition. Add a song or an album to the queue so it plays when the current playlist has finished playing.

1. While a song is playing, browse for other tracks.
2. Do any of the following:
 - Browse for the album or playlist that you want, press and hold it, and then tap **Add to queue**.
 - Browse for an artist or song, and then tap  > **Add to queue**.

The songs you've added appear on the Queue tab.

Updating album covers and artist photos



To save on data usage, you might want to connect to a Wi-Fi network when updating your album covers and artist photos. In Music settings, select **Wi-Fi only**.

1. From the Home screen, tap , and then find and tap **Music**.
2. Swipe to the Artists or Albums tab.
3. Tap  > **Update artist photos** or **Update album art**.

If you want HTC One M9+ Supreme Camera Edition to automatically check and update your music collection, tap  on the Music app's main screen, and then tap **Settings**. Select **Album art** and **Artist photos**.

Setting a song as a ringtone

Pick a song from your Music library and set it as your ringtone or as ringtone for a favorite contact.

1. From the Home screen, tap , and then find and tap **Music**.
2. Play the song that you want to set as a ringtone.

3. Tap  > **Set as ringtone**.
4. Tap **Phone ringtone** or **Contact ringtone**.

If you select **Contact ringtone**, choose the contacts you want to associate the ringtone with.

Trimming an MP3 ringtone

Use the Music app's ringtone trimmer if you want to set only a part of the song as ringtone.

1. Play the song that you want to set as a ringtone.
2. Tap  > **Set as ringtone** > **Trim the ringtone**.
3. Drag the trim sliders  to the part where you want the ringtone to begin and end.
For a more precise trimming, tap the left or right arrow buttons. Time markers indicate where you are on the song.
4. When you're done trimming, tap **Set as**.
5. Choose whether to set your trimmed song as your **Phone ringtone** or **Contact ringtone**.



You can see your new ringtone in the phone settings. Go to **Settings** > **Sound & notification** > **Ringtone**.

Viewing song lyrics

Love a song so much that you want to sing along? HTC One M9+ Supreme Camera Edition gives your music an extra kick with song lyrics and cool music visualizations.



To save on data usage, connect to a Wi-Fi network when downloading lyrics. In Music settings, select **Wi-Fi only**.

1. From the Home screen, tap , and then find and tap **Music**.
2. Browse to the song you want to play and tap it.
3. Swipe to the Visualizer tab to view the lyrics. Song lyrics appear onscreen if content has been successfully downloaded.



Want a different visual for your music? Tap  > **Scene** and select a scene. If you want the scene to change for every song, select **Random**.

4. Tap the screen to display the lyrics in full screen.
5. To jump to another part of the song, tap the screen to make the progress bar appear. Press and drag your finger across the progress bar, or press and hold  or .



Not all languages are supported.

Finding music videos on YouTube

It's easy to find music videos of the song you're listening to on YouTube.

On the Now playing screen, tap  > **Search** > **YouTube**.

FM Radio

Listening to FM Radio

Listen to your favorite radio stations using the FM Radio app.



You need to connect a headset first to the audio jack of HTC One M9+ Supreme Camera Edition to use FM Radio. FM Radio uses the stereo headset as the FM radio antenna.

1. From the Home screen, tap , and then find and tap **FM Radio**.
2. Tap .
The first time you open FM Radio, it scans for local FM stations that you can listen to.
3. While you're listening to an FM station, you can:
 - Tap or to go to the next or previous station.
 - Drag the slider to tune in to a frequency on the FM band. To fine tune the radio frequency, tap or .
 - Tap to mark a radio station as a favorite. To see your other favorites and preset stations, tap .
4. To turn off FM Radio, tap .

HTC Connect

What is HTC Connect?

With HTC Connect, wirelessly stream music or video from HTC One M9+ Supreme Camera Edition to your speakers or TV by just swiping up the screen with 3 fingers.

You can stream media to any of the following types of devices:

- Blackfire® compliant multi-room speakers
- Multi-room speakers that support the Qualcomm® AllPlay™ smart media platform
- DLNA compatible speakers and TV
- Miracast compatible display devices
- Bluetooth speakers
- HTC certified consumer electronic devices or accessories that have the HTC Connect logo:




Some devices may need to be paired before you can share to them.

To see a list of supported devices or accessories, go to htc-connect.com/certified-devices.html. For more information about HTC Connect, see www.htc-connect.com.


Using HTC Connect to share your media

Before you start, make sure you have set up your speakers, TV, or appliance to connect to your Wi-Fi network. Refer to its documentation on how to set it up.

1. Open and play any music or other media content that you want to share from HTC One M9+ Supreme Camera Edition .
2. Swipe up with three fingers on the screen.

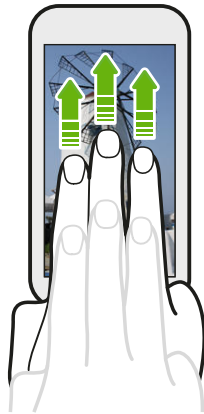

3. Choose the device you want to connect to.

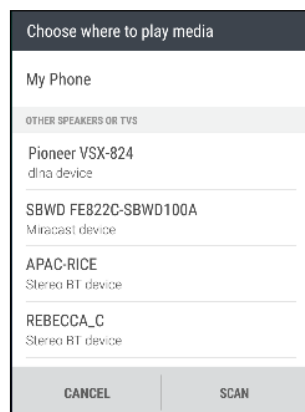

4. Once connected, use your phone to control the volume, pause or resume playback, and more.
5. To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.


Streaming music to Blackfire compliant speakers



Play music simultaneously to multiple Blackfire compliant speakers from HTC One M9+ Supreme Camera Edition .

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on HTC One M9+ Supreme Camera Edition .
2. Swipe up with three fingers on the screen.
HTC One M9+ Supreme Camera Edition then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll see the available speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - To stream music to another speaker, just tap it.
 - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

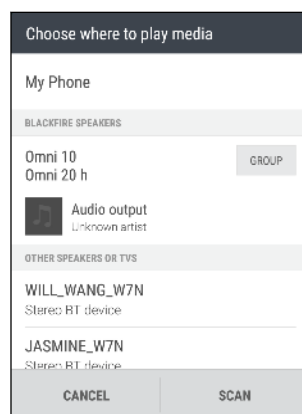

Renaming the speakers

You can rename your Blackfire compliant speakers in Settings.

1. Make sure the speakers are connected to your Wi-Fi network.
2. From the Home screen, tap **Settings** > **HTC Connect**.


HTC One M9+ Supreme Camera Edition then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available Blackfire speakers listed.

3. Tap **:** next to a speaker name.
4. Enter the new speaker name, and then tap **Done**.

Streaming music to speakers powered by the Qualcomm AllPlay smart media platform

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on HTC One M9+ Supreme Camera Edition .
2. Swipe up with three fingers on the screen.
HTC One M9+ Supreme Camera Edition then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - Just tap another speaker to stream music to it.
 - To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.

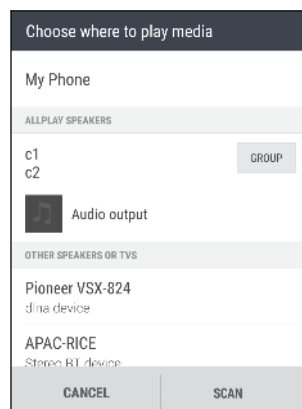


HTC BoomSound Connect app

If you're using Qualcomm AllPlay powered speakers, download and install the HTC BoomSound Connect app to HTC One M9+ Supreme Camera Edition to manage them, queue your songs to a shared speaker, and more.

1. Connect HTC One M9+ Supreme Camera Edition to a speaker or grouped speakers. For details, see [Streaming music to speakers powered by the Qualcomm AllPlay smart media platform](#) on page 125.
2. When you're prompted to download HTC BoomSound Connect, download and install the app.
3. Open the HTC BoomSound Connect app.

4. Use the controls in the app to control music playback and adjust the speaker volume.

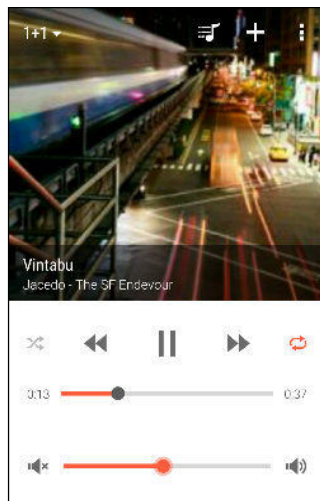

5. To switch between speakers, tap ▼ next to the current speaker name, and then tap another speaker.
6. When several phones are streaming music to the same speaker, tap + to add your music to the queue.
7. To view the queue and check where your music is lined up in the list, tap 🎵.
8. Tap ⋮ to access HTC BoomSound Connect settings. You can rename speakers or clear the queue.

Power and storage management

Battery

Displaying the battery percentage

You can check the percentage of remaining battery power right from the status bar.

1. From the Home screen, tap  > **Settings** > **Power**.
2. Select **Show battery level**.

Checking battery usage

See a ranking list of apps that are using the battery. You can also see how much and how long the battery has been used for each app.

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap **Battery usage**, and then tap an app to check how it's using the battery. You'll see how much battery power is used by resources such as the CPU for the app and other use details.



If you see buttons while viewing an app's battery use details, you can tap them to adjust settings that affect battery usage, stop the app, and more.

Checking battery history

Check how long you've been using HTC One M9+ Supreme Camera Edition since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap **History** to view battery usage over time.

Using power saver mode

Power saver mode helps to increase battery life. It reduces the usage of phone features that drain the battery such as the display and data connection.

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap the Power saver **On/Off** switch to turn power saver mode on or off.

If you want to choose which phone features to conserve power for, tap **Power saver**.



If power saver mode's **Data connection** option is selected, HTC One M9+ Supreme Camera Edition automatically disconnects from the mobile network after 15 minutes when the screen is off and the data connection is idle (no download activity, streaming, or data usage). It reconnects and then disconnects periodically when the data connection is idle to save battery power.

Keep in mind though that the **Sleep mode** option for the data connection in **Settings** > **Power**, when enabled, overrides power saver mode.

Extreme power saving mode

In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap the Extreme power saving mode **On/Off** switch to turn extreme power saving mode on or off.

If you want to set when to automatically switch this mode on, tap **Extreme power saving mode** and select a battery level.

Tips for extending battery life

How long the battery can last before it needs recharging depends on how you use HTC One M9+ Supreme Camera Edition. HTC One M9+ Supreme Camera Edition power management helps to increase battery life.

If you like more control by tweaking settings on your own, try out some of these battery saving tips.

Check your battery usage

Monitoring your battery usage helps you identify what's using the most power so you can choose what to do about it. For details, see [Checking battery usage](#) on page 127.

Manage your connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.
- Turn GPS on only when a precise location is needed, such as while using navigation or location-based apps. See [Turning location services on or off](#) on page 191.

- If the **Sleep mode** option in **Settings > Power** is enabled, at low peak times, your phone will turn off the data connection after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage). The data connection resumes when you switch the screen back on.
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages.

Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time.
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.

Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used.

For more details, see [Settings and security](#) on page 191 and [Personalizing](#) on page 61.

Manage your apps

- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them.

If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. See [Disabling an app](#) on page 195.

Limit background data and sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often. Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- If you have many email accounts, consider prolonging the sync time of some accounts.

In the Mail app, select an account, tap  > **Settings > Sync, Send & Receive**, and then adjust the settings under Sync schedule.

- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  to edit and remove unneeded cities.

- Choose widgets wisely.

Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

- In Play Store, tap  > **Settings**, and then clear **Add icon to Home screen** to avoid automatically adding Home screen app shortcuts whenever you've installed new apps. Also tap **Auto-update apps** > **Do not auto-update apps** if you're fine with updating apps from Play Store manually.

Other tips

To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound & notification** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.

Phone storage

Types of storage

Want to know what types of storage you can use for your apps, data, and files?

HTC One M9+ Supreme Camera Edition has these storage types:

Phone storage	This storage combines both the internal storage, where apps, email, data, and text messages are stored, and the file storage, where photos, videos, and music files are kept. If you are running out of phone storage, see Making more storage space on page 131 for some tips on how to free up space.
Storage card	Use a storage card for storing more files. You can also set some apps to store data or files directly to the card.
USB storage	When you plug in an external USB storage device (such as a USB flash drive or an SD card reader), you can view photos and videos stored on the device right from Gallery and play songs stored on the device in Music. You can also open PDFs and edit Office documents. You need a special cable to connect HTC One M9+ Supreme Camera Edition and a USB storage device. HTC One M9+ Supreme Camera Edition supports USB storage devices (except portable hard drives) up to 128 GB.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Copying files to or from HTC One M9+ Supreme Camera Edition

You can copy your music, photos, and other files to HTC One M9+ Supreme Camera Edition .



Save and close your files before copying them from your computer to HTC One M9+ Supreme Camera Edition , or vice versa.

1. Connect HTC One M9+ Supreme Camera Edition to the computer using the supplied USB cable. You'll see options for viewing or importing files on the computer screen.
2. Choose to view files.
3. Copy the files from your computer to HTC One M9+ Supreme Camera Edition , or vice versa.
4. After copying the files, disconnect HTC One M9+ Supreme Camera Edition from the computer.

Making more storage space

As you use HTC One M9+ Supreme Camera Edition , you'll accumulate data and fill its storage capacity over time. Here are some tips on how to increase storage space.

Run the storage wizard

Free up space in the storage by uninstalling apps and deleting files you no longer want to keep. In Settings, tap **Storage** > **Make more space**.

Manage photos and videos

- After taking continuous camera shots, keep only the best shot. Discard the rest, if you don't need them.
- After editing a photo or trimming a video, the original file is kept. Delete original files or move them elsewhere, such as to your computer.
- If you're only sending videos through MMS, use a lower resolution. Hi-res video takes up more space. In Camera settings, tap **Video Quality** to change the resolution.

Remove unused themes

Themes can quickly consume up storage space because themes can include images, sounds and icons. Remove themes you're not using. See [Deleting a theme](#) on page 63.

Back up data and files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see [Ways of backing up files, data, and settings](#) on page 135.

Disable some apps

See [Disabling an app](#) on page 195.

Move some apps to the storage card

Some third-party apps can be moved from the phone storage to the storage card. Go to **Settings > Apps > On SD card** to see which apps can be moved. To move, tap an app, and then tap **Move**.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

File Manager

About File Manager

Use the File Manager app to browse and organize your files and folders on your phone storage and storage card.

You can also browse for files and folders on your external USB storage device when you have it connected to your phone. For details, see [Types of storage](#) on page 130.

Switching between storage types

1. From the Home screen, tap , and then find and tap **File Manager**.
2. Swipe left or right to switch to a file storage where you want to browse or organize your files.

Searching for files

1. In File Manager, tap .
2. In the search box, enter a few characters of the filename, and then tap the Enter key . Matching filenames from the root and subfolders are then displayed.
3. Tap a file to open it.

Sorting your files

1. In File Manager, tap  > **Sort**.
2. Choose how you want to sort your files and folders.

Copying or moving files

1. In File Manager, browse for the file or folder.
2. Select items to copy or move.
3. Tap **Copy** or **Move to**.
4. Press , and then browse for the folder where you want to copy or move the files.
Or tap  > **Create folder** to create a new folder.
5. Tap **Paste**.

Favoriting files

1. In File Manager, browse for the file or folder.
2. Select items to favorite.
3. Tap .

To remove an item from the Favorites tab, select the item and tap **Remove from favorites**.

Deleting files or folders

1. In File Manager, browse for the file or folder.
2. Select items to delete.
3. Tap **Delete**.

Sync, backup, and reset

Online sync

Adding your social networks, email accounts, and more

You can sync contacts, calendars, and other information from your social networks, email accounts, and online services on HTC One M9+ Supreme Camera Edition. Depending on the account type, signing in to your online accounts lets you sync updates between HTC One M9+ Supreme Camera Edition and the Web.

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap .
3. Tap the account type you want to add.
4. Follow the onscreen instructions to enter your account information.



- In **Settings** > **Accounts & sync**, tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts.
- You can add several Google Accounts.

Syncing your accounts

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts on or off.
3. To manually sync individual accounts, tap an account type, and then do one of the following:
 - Tap  next to the account you want to sync, and then tap **Sync now**.
 - Tap  > **Sync now** on the Account settings screen.



On the Account settings screen, you can also change the sync settings for an account.

Removing an account

Remove accounts from HTC One M9+ Supreme Camera Edition if you no longer use them. Removing an account does not remove accounts and information from the online service itself.

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap an account type.

3. Tap **⋮** next to the account you want to remove.
Or if you're on the Account settings screen, tap **⋮**.
4. Tap **Remove**.



Some personal data may be retained by the third-party app after you have removed the account from HTC One M9+ Supreme Camera Edition.

Backup

Ways of backing up files, data, and settings

Worried that you might lose important stuff on HTC One M9+ Supreme Camera Edition? Back up HTC One M9+ Supreme Camera Edition before you erase the storage, do a factory reset, or upgrade to a new phone.

HTC Backup

Use the built-in HTC Backup to back up your accounts, settings, contacts stored on your phone, text messages, and more to the cloud so that it will be easier to restore them on HTC One M9+ Supreme Camera Edition (after a factory reset) or newer phone.

HTC Sync Manager

Use HTC Sync Manager to import music, photos, and videos from HTC One M9+ Supreme Camera Edition to your computer. You can also sync locally stored contacts, calendar events, bookmarks, and playlists between HTC One M9+ Supreme Camera Edition and your computer.

Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of HTC One M9+ Supreme Camera Edition on your computer.

Other backup options

If you want, you can separately back up your data or files.

Some apps allow you to back up data to the phone storage or storage card so you can easily restore them after a factory reset. Just make sure not to erase the phone storage or storage card when you do a factory reset.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Messages	Back up your text messages to the phone storage or storage card, or save them as an email attachment.
Contacts	▪ Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone. ▪ If you have locally stored contacts in the People app, export them to the phone storage or storage card.
Files	Manually copy and paste files by connecting HTC One M9+ Supreme Camera Edition to your computer as a disk drive.
Other data	Check other apps to see if they support exporting data to the phone storage or storage card.

Using HTC Backup

Save the time and frustration of re-creating your personalized HTC One M9+ Supreme Camera Edition experience when you do a factory reset or buy another phone. On HTC One M9+ Supreme Camera Edition, use HTC Backup to do a daily backup to the cloud so you can easily restore your content and settings next time.

HTC Backup uses your Google Drive or Dropbox storage to keep your content and settings. It can back up and restore the following:

Personalization settings	These include your feed sources in HTC BlinkFeed, widgets, wallpaper, Home screen layout, and ringtones.
Accounts and passwords	HTC Backup stores the login credentials for many popular email and social network accounts, such as Exchange ActiveSync, Outlook.com, and POP/IMAP.
Apps and settings	These include your contacts stored on HTC One M9+ Supreme Camera Edition, text messages, call history, web bookmarks, Wi-Fi networks, free apps you've installed, grid size and sort order on the Apps screen, and more.

Backing up HTC One M9+ Supreme Camera Edition to Google Drive

Turn on HTC Backup to do a daily backup of your phone over Wi-Fi. Turn it on by selecting **Back up phone daily** while doing the on-device setup. If you didn't do so, use the HTC Backup app.



Depending on the amount of content, doing a manual backup through data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.

1. From the Home screen, tap , and then find and tap **HTC Backup**.
2. Tap **Turn on automatic backup**.
3. Make sure **Back up phone daily** is selected, and then tap **Next**.

4. Log in to your HTC Account by signing in with your Google Account or Facebook account.
5. To do a daily backup, make sure the **Automatic backup** switch is on. You can also tap **Back up now** to manually back up your phone anytime.

You'll see the most recent backup date and time under Backup history.

Restoring your backup to HTC One M9+ Supreme Camera Edition from Google Drive

If you backed up your phone to your online storage before, you can restore your backup to HTC One M9+ Supreme Camera Edition, or to a new HTC phone.



- Depending on the amount of content, restoring your backup to your phone through your data connection may incur additional data costs and take a long time. Using a Wi-Fi connection is recommended.
- To restore paid apps, you need to download and install them from Google Play.

1. When you turn on a new HTC phone for the first time or after a factory reset, select **Restore from HTC Backup** on the Transfer or restore screen.
2. Make sure to sign in using the same account that you used to back up your phone before. Your backup history will then be displayed.
3. Select a backup, and then tap **Next**.
4. If you used your HTC Account or Facebook account to backup your phone, sign in to your Google Account to access your Google Drive.
5. Follow the onscreen instructions to restore your backup and to continue setting up your phone.
6. Slide open the Notifications panel to check if there's any notification to finish setting up your phone.

Free apps from Google Play will be restored in the background, and you can track the progress via a notification in the status bar.

The Apps and Home screen shortcuts will be reorganized as in your backup after all of your apps have been installed. You may continue using your phone while apps are being restored.



You can also open the HTC Backup app, and then tap **Restore from backup**. Just make sure that you've already signed in to the same account that you used to back up your phone before.

Restoring a backup will overwrite the current data and settings on HTC One M9+ Supreme Camera Edition.

Switching from your previous online storage to Google Drive

After you've restored a saved backup from your Dropbox storage to HTC One M9+ Supreme Camera Edition, remember to change your backup storage and use Google Drive from now on.

1. From the Home screen, tap , and then find and tap **HTC Backup**.
2. Tap **Change backup settings**.
3. Tap  > **Select storage service**.
4. Select **Google Drive**, and then tap **OK**.
5. Sign in to your Google Account, if you haven't done so.

Backing up your data locally

If you want to separately back up your content such as contacts and text messages on HTC One M9+ Supreme Camera Edition, here are some tips on how to export or import your data.

Backing up your contacts

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Export to phone storage** or **Export to SD card**.
4. Select an account or type of contacts to export.
5. To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts.
If you don't need a password, tap **No**.
6. Tap **OK**.

Restoring contacts

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from phone storage** or **Import from SD card**.
3. If you have more than one account set up, tap the type for the imported contacts.
4. If you have multiple backups available, select the backup you want to import, and then tap **OK**.
5. Enter the password you've set for this backup, and then tap **OK**.

Backing up your text messages

Keep important text messages by backing them up to the phone storage. You can easily restore backed up text messages after you've deleted them from your message list.



Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS** > **Back up** > **Back up SMS**.
3. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
4. Enter a name for your backup file, and then tap **OK**.

Backing up text messages by email



You need to set up your email account in the Mail app.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS**.
3. Tap **Back up** > **Back up SMS via mail**.
4. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
5. Enter your email address.
6. Compose your email message, and then send it.

Restoring text messages

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS** > **Restore**.
3. Choose how you want to restore the messages, and tap **Next**.
4. Tap the backup to import.
5. Enter the password you've set for this backup. If you didn't set a password, select **This backup file is not password protected**.
6. Tap **OK**.

To restore text messages that were backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import. Enter the password you've set for this backup or select **This backup file is not password protected**.

HTC Sync Manager

About HTC Sync Manager

HTC Sync Manager supports a computer running a Windows or OS X operating system.

Here's what you can do with HTC Sync Manager.

View and manage media on your computer and phone

- Browse and manage music, photos, and videos that are on your computer and your phone.
- Import iTunes and Windows Media® Player playlists from your computer to HTC Sync Manager.
- Play music, videos, and playlists using the built-in player.

Transfer content

- Transfer iPhone photos, text messages, contacts, and more to your HTC phone. You can also find and install the same apps that you were using on your iPhone.
- Import all music, photos, and videos from your HTC phone to your computer.
- Copy selected music, photos, or videos from your computer to your phone.
- Import documents from your computer to your phone.

Back up and restore

Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another HTC phone.

Sync playlists and data

Sync music playlists and data such as contacts and calendar between your phone and your computer.

Installing HTC Sync Manager on your computer



- You can install HTC Sync Manager on Windows XP or later versions. To install it on a Mac computer, you need OS X 10.6 or later versions.
- If you have problem in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.

1. Download the HTC Sync Manager installer from the HTC support site: htc.com/hsm/.
2. Launch the installer and follow the onscreen instructions.
3. Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.



If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transferring iPhone content and apps to your HTC phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone. If you're using an HTC phone that has HTC Sense 6, HTC Sync Manager also enables your phone to find and install the same apps that you were using on your iPhone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **Home > Transfer & Backup**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Select your iPhone backup file, and then click **OK**.
6. Select the types of content you want to transfer to your HTC phone.
You can choose whether to replace the content on your HTC phone with the iPhone content.
7. Click **Start**. Wait for HTC Sync Manager to finish transferring content.
8. When done, slide the Notifications panel open on your HTC phone, and then tap .

Choose which apps you were using on iPhone you want to find in Google Play and download to your HTC phone.

Getting help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (htc.com/hsm/). Or open the Help that comes with the software.



On Windows, click  in HTC Sync Manager, and then click **Help**.

Reset

Restarting HTC One M9+ Supreme Camera Edition (Soft reset)

If HTC One M9+ Supreme Camera Edition is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button, and then tap **Restart**.
3. When asked to confirm, tap **Restart**.

HTC One M9+ Supreme Camera Edition not responding?

If HTC One M9+ Supreme Camera Edition does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER and VOLUME UP buttons for at least 10 seconds.
HTC One M9+ Supreme Camera Edition then restarts.

Resetting HTC One M9+ Supreme Camera Edition (Hard reset)

If HTC One M9+ Supreme Camera Edition has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state—the state before you turned on the phone for the first time.



Factory reset will remove all data on your phone storage, including apps you've downloaded and installed, your accounts, your files, as well as system and app data and settings. Be sure to back up any data and files you want to keep before you do a factory reset.

1. From the Home screen, tap  > **Settings** > **Backup & reset**.

2. Tap **Reset phone**.

To also delete media and other data from your storage card, select **Erase SD card**.

3. Tap **OK**.




A factory reset may not permanently erase all data from your phone, including personal information.

People

Your contacts list

The People app lists all contacts you've stored on HTC One M9+ Supreme Camera Edition and from online accounts you're logged in to. Use the People app to easily manage communications with people that matter to you.

1. From the Home screen, tap , and then find and tap **People**.

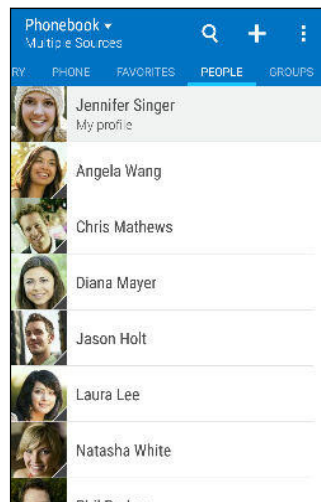

2. On your contacts list, you can:
 - View your profile and edit your contact information.
 - Create, edit, find, or send contacts.
 - Tap a contact photo to find ways to quickly connect with the contact.
 - See when a contact has sent you new messages.



To sort your contacts by their first or last name, tap  > **Settings** > **Sort contacts by**.

Filtering your contacts list

When your contacts list gets long, you can choose which contact accounts to show.

1. On the People tab, tap .
2. Choose the accounts that contain the contacts you want to display.
3. Press .

Finding people

Search for contacts stored on HTC One M9+ Supreme Camera Edition, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, you can:
 - Find people in your contacts list. Tap , and then enter the first few letters of the contact name in the Search people box.
 - Find people on your company directory. Tap , enter the first few letters of the contact name in the Search people box, and then tap **Search contacts in your Company Directory**.



Aside from searching for a contact by name, you can search using a contact's email address or company name. On the People tab, tap  > **Settings** > **Search contacts by**, and then choose a search criteria.

Setting up your profile

Store your personal contact information to easily send it to other people.

1. From the Home screen, tap , and then find and tap **People**.
2. Tap **My profile**.
3. Tap **Edit my contact card**.
4. Enter or edit your name and contact details.
5. Tap  or the current photo to change your contact photo.
6. Tap .

Aside from your contact details, swipe to the Updates tab to see updates you've posted on your social networks.

Adding a new contact

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap .
3. Tap the **Name** field, and then enter the contact name. Tap  to separately enter the contact's given, middle, or family name and name suffix, such as Jr.
4. Select the Contact type. This determines which account the contact will sync with.
5. Enter the contact information in the fields provided.
6. Tap .

When you tap the added contact in your contacts list, you'll see the contact information and your exchange of messages and calls. Depending on the contact type, you may also see the person's social network updates or events.

How do I add an extension number to a contact number?

While creating a new contact or editing a contact's details in People, you can add an extension number to their number so you can skip the voice prompts when calling.

1. After entering the number of the main line, do one of the following:
 - Tap **P(,)** to insert a pause before the phone dials the extension number. To insert a longer pause, enter **P(,)** several times.
 - Tap **W(,)** to be prompted to confirm the extension number.
2. Enter the extension number.

Editing a contact's information




Social network contacts cannot be edited.

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Edit contact**.
3. Enter the new information.
4. Tap .

Getting in touch with a contact

1. From the Home screen, tap , and then find and tap **People**.
2. Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.

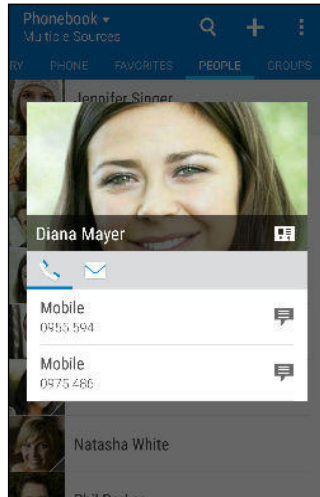

For more ways of getting in touch with your contact, tap an icon below the contact photo.

Importing or copying contacts

Importing contacts from your nano SIM card

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap  > **Manage contacts**.
3. Tap **Import/Export contacts** > **Import from SIM card**.
4. If prompted, select which account you'd like to import your contacts to.
5. Select the contacts you want to import.
6. Tap **Save**.

Importing a contact from an Exchange ActiveSync account

1. On the People tab, tap  and enter the contact's name or email address in the search box.
2. Tap **Search contacts in your Company Directory**.
3. Tap the name of the contact you want copied to HTC One M9+ Supreme Camera Edition.
4. Tap  to import the contact.

Copying contacts from one account to another



Contacts from social networks may not be able to be copied.

1. On the People tab, tap > **Manage contacts**.
2. Tap **Copy contacts**, and then choose a contact type or online account to copy from.
3. Select a contact type or account you want to save to.

Merging contact information

Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

Accepting contact link suggestions

When HTC One M9+ Supreme Camera Edition finds contacts that can be merged, you'll see a link notification when you open the People app.

1. From the Home screen, tap and then find and tap **People**.
2. On the People tab, tap the Contact link suggestion notification when available. You'll see a list of suggested contacts to merge.
3. Tap next to the contact you want to merge. Otherwise, tap to dismiss the link suggestion.



If you don't want to receive contact link suggestions, on the People tab, tap > **Settings**. Clear the **Suggest contact link** option.

Manually merging contact information

1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
2. Tap > **Link**.
3. You can:
 - Under **Suggest links**, link the contact to an account.
 - Under **Add contact**, tap one of the options to link to another contact.

Breaking the link

1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
2. Tap > **Link**.
3. Under the **Linked contacts** section, tap beside an account to break the link.

Sending contact information

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, do one of the following:

To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo), and then tap Send contact as vCard .
Your contact information	Press and hold My profile , and then tap Send my profile .

3. Choose how you want to send the vCard.
4. Select the type of information you want to send.
5. Tap **Send**.

Sending multiple contact cards

1. On the People tab, tap  > **Send contacts**.
2. Select the contacts whose contact information you want to share
3. Tap **Send**.
4. Choose how you want to send the contact cards.

Contact groups

Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

HTC One M9+ Supreme Camera Edition also syncs with groups you've created in your Google Account.

Creating a group

1. From the Home screen, tap , and then find and tap **People**.
2. On the Groups tab, tap .
3. Enter a name for the group, and then tap  > **Add contact to group**.
4. Select the contacts you want to add, and then tap **Save**.
5. When your group is complete, tap **Save**.

Sending a message or email to a group



You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. On the Groups tab, tap the group you want to send a message or email to.
2. Go to the Group action tab.
3. Choose if you want to send a group message or group email.

Editing a group

1. On the Groups tab, press and hold the group, and then tap **Edit group**.
2. You can:
 - Change the group name. You can only change the name for groups that you have created.
 - Add more contacts to the group. Tap > **Add contact to group**.
 - Select the contacts you want to remove from the group.
3. Tap **Save**.

Removing contact groups

1. On the Groups tab, tap > **Edit groups**.
2. Select the contact groups you want to remove.
3. Tap **Save**.

Private contacts

If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.

Adding a contact to the private contacts list



Contacts must have a phone number before they can be added to the private contacts list.

1. From the Home screen, tap and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Add to private contacts**.

To view your private contacts list, on the People tab, tap > **Manage contacts** > **Private contacts**.

Organizing your private contacts

1. On the People tab, tap  > **Manage contacts** > **Private contacts**.
2. To add contacts to the private contacts list, tap , select the contacts you want to add, and then tap **Save**.
3. To remove private contacts from the list, tap  > **Remove private contact**, select the contacts you want to remove, and then tap **Remove**.

Calendar and Email

Viewing the Calendar

Use the Calendar app to view your events, meetings, and appointments. If you've signed into your online accounts, related events will also appear in Calendar.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap , and then choose a calendar view.



If you see the current date  icon, tap it to return to the current date.

Month view

In month view, you will see markers on days that have events. Upcoming events for the day are also shown at the bottom of the screen.

- Swipe left or right across the screen to view succeeding or previous months.
- Tap a day to view the events for that day.
- Press and hold a day to see more options.

Day and agenda views

Day view shows your day's schedule and weather forecast for the next few days, while agenda view gives a quick glance of all your day's events.

- Swipe left or right across the screen to view succeeding or previous days.
- Tap an event to view its details.
- If the event is a contact's birthday or anniversary, tap it to send a greeting.



Need to see the event time in another time zone? In Day view, tap  > **Select 2nd time zone** > **Choose location**, and then enter the city name.

Week view

Week view displays a chart of the events of one week.

- Swipe left or right across the screen to view succeeding or previous weeks.
- Tap an event (shown as colored blocks) to view its details.
- Check the week number in the upper left corner of the chart.
- Select the day you start a week by tapping  > **Settings** > **First day of week**.

Scheduling or editing an event

You can create or edit events on HTC One M9+ Supreme Camera Edition , and also sync events with your Exchange ActiveSync calendar. You can also create, modify, and sync events with your Google calendar.



Editing events is not supported for all accounts.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. On any Calendar view, do one of the following:

Create an event	Tap  . Tap  , and then select the calendar you will add the event to.
------------------------	---

Edit an event	View an event, and then tap  .
----------------------	---

3. Enter and set the event details. Aside from setting the event name, date, time, and location, you can:

Invite contacts from your Exchange ActiveSync or Google account	Tap  , and select the contacts you want to invite.
Set the event to repeat	Tap the Does not repeat button, and then select a repeat schedule. You can then set the repeat frequency and end date.
Create an event note	While viewing the event details, tap Create note .

4. Tap **Save**.

If you've invited people to the event, tap **Send** or **Send update**.

Checking your schedule for an event

Avoid juggling multiple meetings at the same time. In Calendar, you can check your appointments to see if a new event would conflict with your schedule.

1. When creating or editing an event, tap **Check calendar**.
2. Press and hold the event box, and then drag it to an available time slot.
3. Drag the top and bottom nodes to adjust the event's time duration. You'll see a message if there are conflicts with other scheduled events.
4. Tap **Done** to return to the event screen, and then save your event.

Choosing which calendars to show

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap  > **Accounts (All calendars)** or **Accounts (Multi-calendar)**.

3. Select or clear an account you wish to show or hide.

If you have multiple calendars under an online account, tap  to select the items to include.

4. Tap **Save**.



Calendars are synced on HTC One M9+ Supreme Camera Edition, even if they are hidden.

Sharing an event

You can share a calendar event as a vCalendar using Bluetooth or by sending it as a file attachment with your email or message.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Do one of the following:
 - While viewing an event, tap  > **Share via**.
 - In day, agenda or week view, press and hold an event and then tap **Share via**.
3. Choose how you want to send the event.



You can also forward accepted meeting invitations from your Exchange ActiveSync calendar. While viewing an event, tap  > **Forward**. Compose your email message, and then send it.

Accepting or declining a meeting invitation

Switch to Invites view to see meeting invitations which you have not yet accepted or declined.



You must set up an Exchange ActiveSync account to receive meeting invitations in Calendar.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap  > **Invites**, and then tap a meeting invitation.
3. Accept, decline, or tentatively accept the invitation, or propose a new time.



Tap  to choose from more options, such as moving the invitation to a folder.

If you need to cancel an accepted meeting invitation or propose a new time, view the event details in Calendar, and then tap **Response**.

Dismissing or snoozing event reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.

1. Slide the Notifications panel open.
2. If the notification shows that there are multiple reminders, tap it to see all the reminders. You can then choose to snooze or dismiss them.
3. If you see a single event notification, spread your two fingers on the notification to expand it. You can then:
 - Tap **Snooze** or **Dismiss**. Or drag the notification left or right to dismiss it.
 - Tap **Send mail** to send a quick response to the meeting attendees.




To edit the preset quick responses or add your own, open Calendar, and then tap **:** > **Settings** > **Quick response**.

If you don't want to dismiss or snooze the calendar reminders, press  from the Notifications panel to keep them pending in the notifications area of the status bar.

Checking your mail

The Mail app is where you read, send, and organize email messages from one or more email accounts that you've set up on HTC One M9+ Supreme Camera Edition .

1. From the Home screen, tap , and then find and tap **Mail**. The inbox of one of your email accounts appears.
2. Do any of the following:
 - Tap an email message to read.
 - To display email messages in another mail folder, tap  > **Folder**, and then tap the folder you want to view.
 - To switch between email accounts or view email messages from all your accounts, tap .

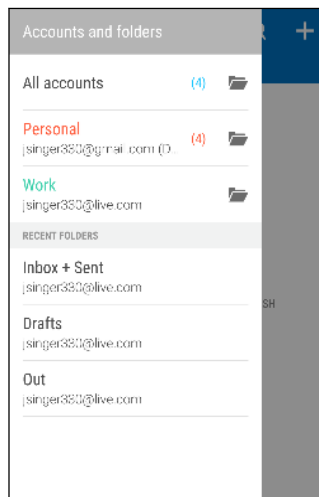

- To change an email account's settings, select the account first and then tap  > **Settings**.

Organizing your inbox

Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.

1. Switch to the email account that you want to use.
2. In the inbox, tap  > **Edit tabs**.
3. Select the tabs you want to add to the inbox.
4. To arrange the tabs, drag , and then move the tab to its new location.
5. Tap **Done**.
6. Swipe to the added tab to check your email messages.

Sending an email message

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to the email account that you want to use.
3. Tap .
4. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap  > **Show Cc/Bcc**.

5. Enter the subject, and then compose your message.
6. Do any of the following:
 - Add an attachment. Tap  and then choose what you want to attach.
 - Set the priority for an important message. Tap  > **Set priority**.
7. Tap .



To save the email as draft and send it later, tap  > **Save**. Or press .

Resuming a draft email message

1. In an email account inbox, tap  > **Folder > Drafts**.
2. Tap the message.
3. When you finish editing the message, tap .

Reading and replying to an email message

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to the email account you want to use.
3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap  to expand the conversation, and then tap the email message.

4. Tap **Reply** or **Reply All**.



Tap  for more actions for the email.

Quickly replying to an email message

You can quickly respond to a new email message from the Home screen or lock screen.

1. When you receive a new email message notification, slide the Notifications panel down.
2. On the email preview, tap **Reply all**.
If you have several notifications and you don't see the email options, expand the email preview by sliding two fingers apart on the notification.
3. Compose your reply message and tap .

Saving an image in an email message



- Depending on your mail size limit settings, you may need to tap **Display images** to see images that are embedded in an email.
- Inline images may not display correctly when using certain mail accounts.

While viewing an email message, press and hold an embedded image, and then tap **Save image**. You'll find the saved image in the **All downloads** album in Gallery.

You can also copy the image to the clipboard or set it as your wallpaper.

Managing email messages

The Mail app provides easy ways to sort, move, or delete your email messages.

Sorting email messages

Customize how you sort your email messages.

In an email account inbox, tap  > **Sort**, and select from the sorting options.

Moving email messages to another folder

1. Switch to the email account you want to use.
2. Select the email messages you want to move.



To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Move to**, and then select a folder.

Deleting email messages

1. Switch to the email account you want to use.
2. Select the email messages you want to delete.



To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Delete**.

Searching email messages

1. From the Home screen, tap , and then find and tap **Mail**.
2. Tap .
3. If you want to refine or filter your search, tap , check the search options, and then tap **OK**.
For example, you can focus the search on a part of an email or filter email messages that have attachments or tagged as high priority.
4. In the search box, enter the words you want to search for.
5. Tap a result to open the email message.

Searching for emails from a contact

Do you remember the sender, but can't find a particular email from him or her?

1. Switch to the email account you want to use.
2. Press and hold an email message from a contact.
3. Tap **Show all mail from sender**. A list of email messages from that contact appears.

Working with Exchange ActiveSync email

Enjoy the powerful email features of Microsoft Exchange ActiveSync right on HTC One M9+ Supreme Camera Edition. Flag important email messages, set your out of the office reply, or send invites to your next team meeting while you're on the go.

Flagging an email

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to your Exchange ActiveSync account.
3. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.



To flag an email message inside a conversation, tap  to expand the conversation, and then tap the flag icon of the email message.

Setting your Out of the office status

1. Switch to your Exchange ActiveSync account.
2. Tap  > **Out of the office**.
3. Tap your current office status, and then select **Out of the office**.
4. Set the dates and times.
5. Enter the auto-reply message.
6. If you want a different auto-reply message for recipients outside your organization, tap the **Send replies to external senders** option, and then enter the auto-reply message in the box.
7. Tap **Save**.

Sending a meeting request

1. Switch to your Exchange ActiveSync account.
2. Tap  > **New meeting invitation**.
3. Enter the meeting details.
4. Tap **Save**. Or tap **Send** if you've invited people to the meeting.

Adding an email account

Set up additional email accounts such as another Microsoft Exchange ActiveSync account or an account from a Web-based email service or email provider.



If you're adding a Microsoft Exchange ActiveSync or a POP3/IMAP email account, ask your network administrator or email service provider for additional email settings that you may need.

1. From the Home screen, tap , and then find and tap **Mail**.
2. Tap  > **Add account**.
3. Select an email account type from the list of email providers. Otherwise, tap **Other (POP3/IMAP)**.
4. Enter the email address and password for your email account, and then tap **Next**.



Some email accounts allow you to set the sync schedule. By default, HTC One M9+ Supreme Camera Edition uses Smart Sync to save battery power. See [What is Smart Sync?](#) on page 161.

5. Enter a name for your email account, and then tap **Finish setup**.

What is Smart Sync?

Smart Sync automatically extends the sync time the longer the Mail app is inactive. Set your email account to Smart Sync when you don't need to check new email messages frequently. Smart Sync helps save battery power.

If you want to receive email messages as they arrive, select another **Peak time sync** and **Off-peak sync** schedule in the email account's **Sync, Send & Receive** settings.

Google Search and apps

Google Now

Getting instant information with Google Now

Do you want to check the weather or your morning commute time before you start your day? Google Now™ delivers quick and up-to-date information that matters to you—all without the search.

Depending on your location, time of day, and previous Google searches, Google Now displays information cards that include:

- The day's weather and the weather forecast for upcoming days.
- The traffic conditions on your way to work or your commute back home.
- The directions and travel time to your next appointment.
- The next train or bus arriving at your platform or bus stop.
- Your favorite team's score and stats while you enjoy the game.

Open the Google Search app to use Google Now. From the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.

Setting up Google Now



Before setting up Google Now:

- Make sure that you're signed in to your Google account.
- Turn location services on and make sure that you have an Internet connection. For more information on location services, see [Turning location services on or off](#) on page 191.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap **Get started**.
3. Read the information screen and then tap **Yes, I'm in**. Google Now information cards will start to appear on the Google search screen.
4. To see all available information cards, swipe up the screen and tap **More**.
5. To keep a card from appearing on the Google search screen, tap  on the card you want to hide, and then tap **No**.

Depending on the information that you've allowed to share, more information cards will appear on the Google search screen as you use HTC One M9+ Supreme Camera Edition to search the Web, create appointments, set reminders, and more.

Changing card settings

You can easily customize the settings of Google Now cards to suit your information needs. For example, you can change the weather units in the Weather card or your transportation mode in the Traffic card.

1. From the Home screen, tap , and then find and tap **Google**.
2. Do any of the following:
 - To change a card setting, such as the weather unit on the Weather card, tap , and then tap the arrow buttons when available.
 - To change specific card information such as your work address, sports teams, or stocks you follow, tap  on the search bar, and then tap **Customize**. Choose the information you want to change.

Setting reminders in Google Now

Creating reminders in Google Now is an easy way to keep tab of things to do. You can set time or location-based reminders. When the reminder time is up or when you've arrived at the specified location, Google Now displays the Reminder card in the Google search screen and sounds a notification to alert you.



This feature may not be available in all languages.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Reminders**.
3. Tap .
4. Enter the reminder title, such as the task you want to be reminded of.
5. Select **Time** to set a time-based reminder or **Place** to set a location-based reminder.
6. Set the reminder time or location details.
7. Tap .

When the reminder time is due or when you've arrived at the location, the Reminder card will appear in the Google search screen. You can then dismiss or snooze the reminder.

Turning off Google Now

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Settings** > **Now cards**.
3. Tap the **On/Off** switch next to **Show cards**, and then tap **Turn off**.

Google Search

Searching HTC One M9+ Supreme Camera Edition and the Web

You can search for information on HTC One M9+ Supreme Camera Edition and on the Web. In the Google Search app, start your search by entering a keyword or by using Google Voice Search™.

To open Google Search, from the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.



Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.

Performing searches on the Web and HTC One M9+ Supreme Camera Edition

1. From the Home screen, tap , and then find and tap **Google**.
If you've already set up a Google account on HTC One M9+ Supreme Camera Edition, you will be given the option to sign in to Google Now. See [Getting instant information with Google Now](#) on page 162.
2. In the search box, enter what you want to search for. As you type, matching items on HTC One M9+ Supreme Camera Edition and suggestions from Google web search are shown.
3. If what you're searching for is in the list of suggestions, tap the item to search for it or open it in its compatible app.



You can also filter web search results by tapping any of the categories on the filter bar at the bottom of the screen.

Searching the Web with your voice

Use Google Voice Search to find information on the Web by speaking to HTC One M9+ Supreme Camera Edition.



This feature may not be available in all languages.

1. From the Home screen, tap , and then find and tap **Google**.
2. Say "OK, Google," and then say what you want to search for. After speaking, matching items from Google web search are shown.
3. If what you're searching for is in the list, tap the item to open it in its compatible app. Otherwise, say "OK, Google" to search again.

Setting search options

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Settings**.
3. Tap an option you want to set.

To get help or provide feedback, tap , and then tap **Help & feedback**.

Google Chrome

Browsing the Web

Visit your favorite websites or search the Web using Google Chrome™.

1. From the Home screen, tap , and then find and tap **Chrome**.
2. Tap the URL box at the top of the screen.
3. Enter the webpage address or search keywords.
4. On a webpage, you can:
 - Tap a link to open it, or press and hold a link to see more options.
 - Tap an email address to send a message to the email address.
 - Press and hold an image to save or copy it.

Using browser tabs

Open multiple browser tabs and quickly switch from one webpage to another.

From the Home screen, tap , and then find and tap **Chrome**.

- To add a browser tab, tap  > **New tab**. Repeat the same to open new browser tabs.
- To switch between tabs, tap  and then tap the tab you want to view.



You can turn off the feature that combines browser tabs with recent apps. Tap  > **Settings** > **Merge tabs and apps** and set it to off.

Setting browser options

Customize Google Chrome to suit your browsing style. You can set accessibility, privacy, security options, and more.

From the browser screen, tap  > **Settings**.

Bookmarking a webpage

Add your favorite webpages as bookmarks so you can access them quickly.

1. From the Home screen, tap , and then find and tap **Chrome**.
2. While viewing a webpage, tap  > .

3. On the Add bookmark screen, you can edit the bookmark name and save the bookmark in a new category folder.
4. Tap **Save**.

To view and open a bookmark, tap  > **Bookmarks**. Navigate to the bookmark you want to open, and then tap it.

Clearing your browsing history

1. From the Home screen, tap , and then find and tap **Chrome**.
2. While viewing a webpage, tap  > **History**, and then tap **Clear browsing data** at the bottom of the screen.
3. Choose which types of data to delete, and then tap **Clear**.

Private browsing

You can use incognito tabs to browse the Web with more privacy. Browser cookies are deleted and not shared when you close all incognito tabs. Pages you view in incognito also won't appear in your browser history (except for files you've downloaded).

From the browser screen, tap  > **New incognito tab**.

Google Drive

Using Google Drive on HTC One M9+ Supreme Camera Edition

Store your photos, documents, and other files on Google Drive to access them on HTC One M9+ Supreme Camera Edition, your computer, and your other mobile devices.

On HTC One M9+ Supreme Camera Edition, just use your Google Account to sign in to your Google Drive storage. You can then:

- Use Gallery to upload your captured photos to Google Drive.
- Share a link to your Google Drive files by email.
- View and edit Office documents that are stored in Google Drive. After creating new Office documents, you can also save them to Google Drive.
- View PDFs that are stored in Google Drive. You can also export Office documents as PDFs to Google Drive.
- Check your available Google Drive storage space in Settings.
- Back up HTC One M9+ Supreme Camera Edition to Google Drive, so you can easily restore your backup to another HTC phone next time.
- Use the Google Drive app to manage your online storage.



Uploading files requires you have the Drive app installed on HTC One M9+ Supreme Camera Edition. If this app is not preloaded, you can download and install it from Google Play.

Activating your free Google Drive storage

Use up to 115GB of free Google Drive storage. In addition to the default storage that you get from Google Drive, HTC One M9+ Supreme Camera Edition features an additional 100GB of online storage free for two years. Sign in to your Google Account on HTC One M9+ Supreme Camera Edition—and not from your computer or other non-HTC phones—to claim this offer.

1. From the Home screen, tap , and then find and tap **Drive**.
2. If this is your first time to open the Drive app, walk through the product tour until you see the additional storage offer.

If you've opened this app before and currently don't see the screen for redeeming the offer, tap  > **Settings** > **Product Tour** to walk through the product tour.

3. On the screen that shows the additional storage offer, tap **Redeem**.

Or to claim the offer at a later time, tap **Offer Details** and check up to when you can redeem the offer.



- If the Drive app is not preloaded on your phone, download it from Google Play.
- Additional terms and requirements may apply, including a subscription fee, after your two-year trial expires. For details, refer to the terms and conditions on the Google Drive support site at support.google.com/drive/?p=drive_offers_htc.
- The Drive app is owned by Google and is not provided by or associated with HTC Corporation.

Checking your Google Drive storage space

Check your available storage space right in the Google Drive app.

1. From the Home screen, tap , and then find and tap **Drive**.
2. Tap . You'll see your storage space on the slideout menu.

From time to time, check back on how much online storage space you still have before you upload more content.

Uploading your photos and videos to Google Drive

Use Gallery to upload your photos and videos to Google Drive.

1. In Gallery, tap , and then choose how you want to view your photos and videos.
2. Tap an album or event that contains the photos and videos you want to upload.
3. Tap .
4. From the selection menu, tap **Drive**.
5. Select the photos and videos you want to upload, and then tap **Next**.
6. Choose or create a folder in Google Drive.
7. Tap **Save** to upload.

Google Maps

About Google Maps

Google Maps lets you track your current location, view real-time traffic situations, and receive detailed directions to your destination.

It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.



- To find your location with Google Maps, you need to enable location sources.
- The Google Maps app does not cover every country or city.

Getting around maps

When you open Google Maps, you can easily find your location on the map or check out nearby places by panning and zooming in and out on the map.

1. From the Home screen, tap , and then find and tap **Maps**.
2. Tap  to show your current location. The blue marker  or  shows your current location on the map.
3. If you want to see more information overlaid on the map, tap , and then tap a map view such as **Traffic** or **Public transit** to toggle the view on and off.

Navigating the map

You can navigate the map using finger gestures.

- Slide your finger in any direction to pan.
- Double-tap the map or slide two fingers apart over an area to zoom in.

To zoom in while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb down.

- Double-tap the map with two fingers or slide two fingers together over an area to zoom out.


To zoom out while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb up.

- Press and hold an area with two fingers and then drag your fingers in a circular motion to rotate the map.
- Press and hold an area with two fingers and then slide up to see an angled view of the map. Slide down to return to overhead view.

Searching for a location

Use Google Maps to search for a location, such as an address or a type of business or establishment (for example, museums).

1. From the Home screen, tap , and then find and tap **Maps**.
2. Tap the search box and then enter the place you want to search for.
3. Tap the **Enter** key on the keyboard or tap a suggested search item. If there is only one search result, it will be marked with a place marker .

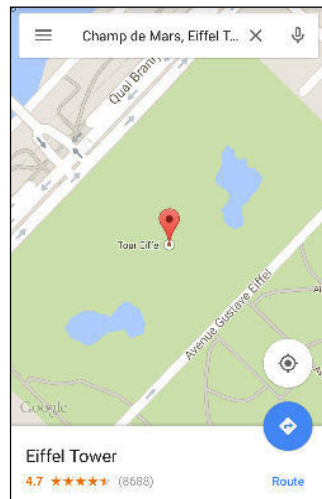

4. If there are multiple search results, they will be indicated by red dots or smart map icons. Swipe up from the bottom to see all of the search results or tap **List results**.
5. If available, tap **Filter** to narrow the search results.
6. Tap a card from the search results to check the address, get directions, see the location in Street View (if available), and more.
7. To check the next or previous location on the search, swipe the info sheet left or right.

To clear the map and search for another location, swipe the info sheet down (if it's expanded), and then tap .

Getting directions

Get detailed directions to your destination. Google Maps provides travel directions by car, public transit, bike, or foot.

1. From the Home screen, tap , and then find and tap **Maps**.
2. Tap .
3. Choose how you want to get to your destination.
4. Use your current location as starting point, or tap **Your location** to enter your starting point or select a location from your search history.

5. Tap **Choose destination**, and then enter or select your destination.



If you're taking public transit, tap  to set the date and time of travel, or tap **Options** to set your route preferences.

6. Tap a route or transit option to view the directions on the map. You'll also see the travel duration on the info sheet at the bottom of the screen.
7. Tap the info sheet to view the directions in a list.

When you're finished viewing or following the directions, tap  to reset the map. Your destination is automatically saved in the Google Maps history.

YouTube

Watching videos on YouTube

Check out the latest video sensations using the YouTube app.

1. From the Home screen, tap , and then find and tap **YouTube**.
2. Browse or search for a video.
3. When you find the video that you like, tap it.



Want to watch the video at a later time instead? Tap  next to the video title, and then tap **Add to Watch Later**. You can access the video again from your account profile's Watch Later list.

4. While watching a video, you can:
 - Turn HTC One M9+ Supreme Camera Edition sideways to watch the video in full screen.
 - Tap the video screen to pause or to resume playback, or drag the slider to jump to a different part of the video.
 - Scroll down the video information panel to see related videos and comments from other viewers.
 - Browse other videos by minimizing the video screen. Tap  or drag the video screen down to minimize. To close the video thumbnail, swipe it left or right.

Creating video playlists

Organize your favorite videos into playlists and watch them in the YouTube app.



Make sure that you're signed in to your Google account.

1. From the Home screen, tap , and then find and tap **YouTube**.
2. Browse or search for a video.
3. Tap  next to the video title, and then tap **Add to Playlist > Create new playlist**.

4. Enter the playlist name, and then tap **OK**.

If you don't want to share the video playlist, select **Private** before you tap **OK**.

5. To add another video to your playlist, browse or search for the video, and then tap  next to the video title.
6. Tap **Add to Playlist**, and then tap the playlist name.

Other apps

HTC Dot View

Personalizing HTC Dot View

If you bought the HTC Dot View™ case designed for HTC One M9+ Supreme Camera Edition, use its app to personalize what's seen through the case.

From the Home screen, tap , and then find and tap **HTC Dot View**.



The HTC Dot View app is available in Google Play. Make sure to install the latest app update.

Wallpaper

Choose a preset wallpaper, or create your own dotted wallpaper from a photo.

1. In the HTC Dot View app, tap  > **Themes**.


2. Choose a preset pattern as your wallpaper.


To create your own wallpaper, tap , and then choose whether to use an existing photo from Gallery or take a new photo. You can also add a wallpaper from the Themes app.

3. If you selected or taken a photo, crop the photo, and then tap **Done**.

4. Tap **Apply**.

For best results when creating your own wallpaper, use a simple image with distinct colors between the subject and background. For example, use an image that shows a high-contrast subject on a simple background.

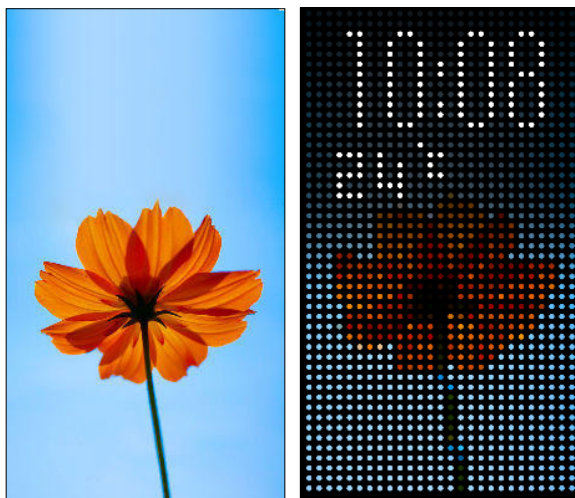

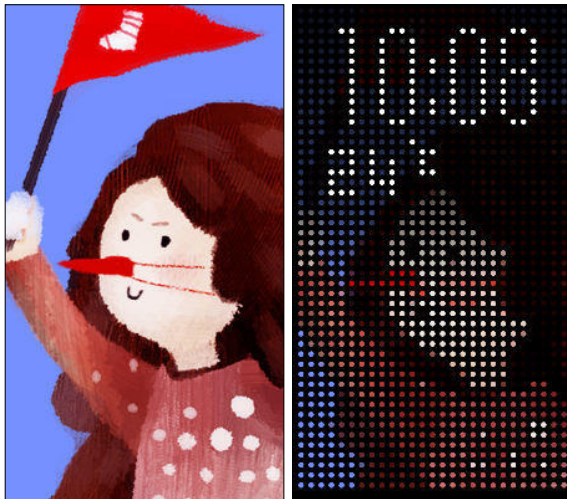

Types of notifications to display

Alerts for clock alarms, timers, and calendar events will automatically display through the HTC Dot View case. You can choose whether to display or hide notifications for apps—which include Mail, Messages, Phone, and more.

1. In the HTC Dot View app, tap  > **Settings** > **Notification settings**.
2. Choose which app notifications you want to show or hide.

Not seeing recent calls on HTC Dot View?

By default, up to 3 received or dialed numbers will be displayed on HTC Dot View.

- If you're not seeing them, open the HTC Dot View app, tap  > **Settings**, and then select **Show call history**.
- If you've set a screen lock with credentials, you need to select **Bypass security screen** to display the recent calls.

Music controls or app notifications not appearing on HTC Dot View?

Check if HTC Dot View Music Controls and Notifications are enabled in Settings.

1. Go to **Settings**, and then tap **Sound & notification** > **Notification access**.
2. Tap the **HTC Dot View Music Controls** and **HTC Dot View Notifications** options if they're not selected.

Need more details?

For more details, see the HTC Dot View Get started guide that comes with the case.

HTC Car

On the road with Car

Now when you drive, you can easily use HTC One M9+ Supreme Camera Edition to reach your destination, keep you entertained, and help you stay in touch with the people that matter to you. Access music, phone calls, maps, and more with Car.

1. From the Home screen, tap , and then find and tap **Car**.



The first time you open Car, you'll be asked to accept the terms and conditions.

2. Swipe up or down to see what you can do in Car.



When using Car, return to the main screen from any other screen by pressing .

Close Car by pressing  from the main screen.

Using voice commands in Car

Use your voice to control Car.



This feature may not be available in all languages.

1. In Car, tap the screen with three fingers to activate voice command mode.
2. Do one of the following:

Call someone	Say "Call [person's name in phonebook]"
Play music	Say "Play [song title, album, artist name, or genre]"
Find something on the map	Say "Navigate". When you hear Car ask you where you want to go, say the address or name of a point of interest.



You can also activate voice command mode by:

- Tapping **Speak** on the main screen in Car.
- Pressing the answer button on supported Bluetooth headsets.

Finding places in Car

1. In Car, tap **Navigation**.
2. To search for a place, tap  and enter a location in the search box.
3. To look up a previously searched for place, tap **Previous**.
4. To get directions for an upcoming event in Calendar, tap **Appointments** and then tap an upcoming appointment.

Exploring what's around you

Feeling adventurous? With just a few taps, you can find interesting places around you quickly.

1. In Car, tap **Navigation**.
2. Tap a category, for example **Restaurant** or **Parking** to see what's available near you.
3. Tap  to enter your own search keywords.

Playing music in Car

1. In Car, tap **Music**.
2. Swipe left or right to browse by category.
3. Tap  to search your collection.
4. Tap an album, song, or playlist to listen to it.

Making phone calls in Car

- Tap **Dialer** to open the dialpad.
- Tap **People** and then browse a category or search by entering a name.
- Tap **Speak** and say "Call" and the person's name. For example, say "Call Jennifer Singer".

Handling incoming calls in Car

When you receive an incoming call, you can easily answer or decline.

- If you hear a voice prompt, say "yes" or "no" to answer or decline a call.
- Tap **Answer** or **Decline**.

Customizing Car

- To change the default behavior of Car, tap **Settings**.
- To add more apps to Car, tap  and select an app.

Scribble

Using Scribble

Want to make a page for your digital scrapbook? Use the Scribble app to get artistic and combine photos, text, and illustrations in a note.

With several templates to choose from, you can even create lists or track your budget. Have a greeting card ready and link it to your friend's birthday in Calendar to send in a few taps.

Composing a note


1. From the Home screen, tap , and then find and tap **Scribble**.
2. Choose a template when you're prompted. Or, tap .
3. In the box that says **Title text here**, type in your note title.
4. Use the editing tools to enter text, record audio, and more.
5. Draw figures and insert images such as photos and illustrations. To find out how, see [Inserting images and illustrations in a note](#) on page 176.
6. Tap  for other options, such as changing the template, linking the note to an event, and more.
7. Tap  or  to undo or redo your actions.
8. Press  to save the note.

Inserting images and illustrations in a note

1. While composing a note, you can:
 - Tap  to take a photo, or tap  > **Insert picture** to select an image from Gallery.
 - Tap  to draw, or tap  to write text. You can change the pen characteristics.



- Tap  to insert a sticker.

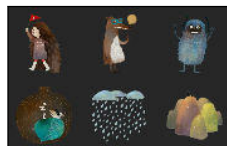

2. Press and hold an image to move, resize, or delete it. You can also use two fingers to rotate an image.

Creating a photo blog note

Think photos can best convey your story? Group photos into a note, and make it more entertaining by including photo collages, stickers, and more.



If inserting a collage, first group the photos in the same event or album in Gallery.

1. From the Home screen, tap , and then find and tap **Scribble**.
2. Tap  and choose the photo blog template.
3. Tap  to take a photo or select photos in Gallery to group them in a collage.



4. When inserting a collage, press and hold it, and then select a layout. You can also:
 - Press and hold, and then drag around a photo within the frame to put the subject in the center of the frame.
 - Press and hold, and then drag a photo over another to re-arrange them.
 - Slide two fingers apart to zoom in on a photo, or slide two fingers together to zoom out.
 - Tap another layout to change the current layout.
5. Tap the area above the date, and then use the editing tools to insert text and illustrations.
6. To add another page, tap . You'll see an onscreen message if you reached the maximum number of pages.
7. Press  to save the note.

Grouping notes into a notebook

- To group notes into a new notebook, tap  > **Group**.
- To group notes into an existing notebook, tap  > **Move to**.
- To create a new notebook, swipe to the Notebooks tab, and then tap .

Publishing and sharing a note

Upload and share your creative work on the Web and get your own Scribble blog site.

1. With a note opened, tap .
2. Tap **Share article**.
3. Select the account you want to use to publish the note to.
4. Type a description or tag your note.
5. Make sure that **Share your post** is selected.

6. Under **Share to**, tap where you also want to share the link that will be created. You'll be prompted to complete the action in the apps you selected.
7. Tap **Done**.

To view notes you've shared, swipe to the **Share** tab on the Scribble main screen.

Clock

Using the Clock

Get more from the Clock app than just the regular date and time. Use HTC One M9+ Supreme Camera Edition as a world clock to see the date and time in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.

Setting an alarm

You can set up one or more alarms.

1. From the Home screen, tap , and then find and tap **Clock**.
2. On the Alarms tab, select the check box of an alarm and then tap that alarm.
3. Under **Set alarm**, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.



- To turn off an alarm, clear the check box of that alarm.
- If you need to set more than three alarms, tap **+**.

Setting the date and time manually

1. From the Home screen, tap , and then find and tap **Clock**.
2. On the World Clock tab, tap  > **Local time settings**.
3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.



- To display military time, choose the **Use 24-hour format** option.

Weather

Checking Weather

Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

1. From the Home screen, tap , and then find and tap **Weather**. You'll see the weather for different cities, including where you are.
2. Tap a city to view weather information.
3. Swipe to the Hourly and Forecast tabs to view the forecast in your selected location.
4. To check the weather in other cities, tap , and then select the city you want.
5. To add more cities, tap  and then enter the location.
6. To change the temperature scale, update schedule, and more, tap  > **Settings**.

Your settings in the Weather app also control the weather information that is shown in the Clock and Calendar.

Voice recorder

Recording voice clips

Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

1. From the Home screen, tap , and then find and tap **Voice Recorder**.
2. Hold the microphone near the sound source.
3. Tap  to start recording a voice clip.



Voice Recorder can run in the background while you do other things on HTC One M9+ Supreme Camera Edition, except when you open other apps that also use audio functions.

4. Tap  to stop recording.

To play back the voice clip, tap .



To see your recorded voice clips, tap . Press and hold a voice clip to see options for sharing, setting it as a ringtone, and more.

Internet connections

Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.



You need a 4G/LTE plan to use your operator's 4G/LTE network for voice calls and data services. Check with your operator for details.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Mobile data **On/Off** switch to turn the data connection on and off.



If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC One M9+ Supreme Camera Edition as a Wi-Fi hotspot
- Sharing your mobile data connection by USB tethering

To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Turning data roaming on or off

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **Mobile data**.
3. Select or clear the **Data roaming** option.

Keeping track of your data usage

Monitor your data usage to help prevent going over your monthly data allowance.



Data usage measured by HTC One M9+ Supreme Camera Edition may differ from, and be less than, your actual data usage.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **Data usage**.
4. On the Mobile tab, select **Limit mobile data usage** and tap **OK** to automatically disable your data connection when you reach the set limit.
5. Drag the upper LIMIT line to set your monthly data limit.
6. Select **Alert me about data usage**, and then drag the lower ALERT line to set an alert before you reach your monthly data limit.
7. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.



If you're connecting HTC One M9+ Supreme Camera Edition to another portable Wi-Fi hotspot, tap  > **Mobile hotspots** to restrict background data from downloading that may incur extra data fees.

Viewing the data usage of apps

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **Data usage**.
4. Scroll down the screen to see a list of apps and their data usage info.
5. Tap an app to see more details.

Wi-Fi connection

To use Wi-Fi, you need access to a wireless access point or “hotspot”.



The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).

Turning Wi-Fi on or off

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Wi-Fi **On/Off** switch to turn Wi-Fi on or off.
3. Tap **Wi-Fi** to see a list of detected wireless networks.



- To manually scan for Wi-Fi networks, tap  > **Scan**.
- If the wireless network that you want is not listed, tap  > **Add network** to manually add it.

Connecting to a Wi-Fi network

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.
See [Turning Wi-Fi on or off](#) on page 182.
2. Tap a Wi-Fi network you want to connect to.
3. If you selected a secured network, enter the network key or password.
4. Tap **Connect**. You'll see the Wi-Fi icon  in the status bar when connected.

Connecting to a Wi-Fi network via WPS

If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect HTC One M9+ Supreme Camera Edition easily.

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks.
See [Turning Wi-Fi on or off](#) on page 182.
2. Tap  > **WPS Push**, and then press the WPS button on your Wi-Fi router.



To use the Wi-Fi Protected Setup (WPS) PIN method, tap  > **WPS Pin Entry**.

Logging into a public Wi-Fi network automatically (WISPr)

You can set HTC One M9+ Supreme Camera Edition to automatically log into a public Wi-Fi network that you regularly use. This saves you the trouble of going through the Wi-Fi provider's web authentication every time you connect to their Wi-Fi network. Just add your login credentials to the WISPr (Wireless Internet Service Provider roaming) settings.



The access point of the Wi-Fi network needs to support the WISPr web portal. Consult the Wi-Fi provider for details.

1. From the Home screen, tap , and then find and tap **Settings**.
2. If Wi-Fi connection is off, tap the **Wi-Fi On/Off** switch to turn it on.
3. Tap **Wi-Fi**.
4. Tap  > **Advanced**.
5. Under WISPr settings, select **Auto login** and then tap **WISPr account settings > Add a new account**.
6. Enter the service provider name, your login name (the full domain name), and password.
7. Tap  > **Save**
8. Connect to the public Wi-Fi network.



- If you have access to several public Wi-Fi networks, you can add up to five sets of login credentials to the WISPr accounts list.
- In the WISPr accounts list, press and hold an account to remove or edit it.

Connecting to VPN

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate or home network.

Before you can connect HTC One M9+ Supreme Camera Edition to your local network, you may be asked to:

- Install security certificates.
- Enter your login credentials.
- Download and install a required VPN app, if you're connecting to a secured enterprise network. Contact your network administrator for details.

Also, HTC One M9+ Supreme Camera Edition must first establish a Wi-Fi or data connection before you can start a VPN connection.

Adding a VPN connection



You must first set a lock screen PIN, password, or pattern before you can use credential storage and set up the VPN.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN** >  > **Add VPN profile**.
4. Enter the VPN settings and set them up according to the security details your network administrator gave you.
5. Tap **Save**.

Connecting to a VPN

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN**.
4. Tap the VPN that you want to connect to.
5. Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon  appears in the notification area of the status bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN

- In Settings, tap **More** > **VPN**. Tap the VPN connection, and then tap **Disconnect**.
- Slide the Notifications panel open. If you see the VPN notification, tap it, and then tap **Disconnect**.

Using HTC One M9+ Supreme Camera Edition as a Wi-Fi hotspot

Share your data connection with other devices by turning HTC One M9+ Supreme Camera Edition into a Wi-Fi hotspot.



- Make sure the data connection is turned on.
- You must have an approved data plan associated with your account from your mobile service provider to use this service. Devices connected to your Wi-Fi hotspot use data from your subscribed data plan.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **Mobile network sharing > Portable Wi-Fi hotspot**.

The first time you turn on the Wi-Fi hotspot, you'll need to set it up.

4. Enter a hotspot name or use the default.
5. Enter a password or use the default.

The password is the key other people need to enter on their device so they can connect and use HTC One M9+ Supreme Camera Edition as a wireless router.

6. To help make your Wi-Fi hotspot more secure, tap  > **Advanced**.

Choose from the available settings, and then press .

7. Tap the Portable Wi-Fi Hotspot **On/Off** switch to turn it on.

HTC One M9+ Supreme Camera Edition is ready to be used as a Wi-Fi hotspot when you see  on the status bar.



- To help minimize security risks, use the default security settings and set a strong and unique password.

Sharing your phone's Internet connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC One M9+ Supreme Camera Edition to connect to the Internet.



- To make sure that the USB drivers for HTC One M9+ Supreme Camera Edition are up-to-date, install the latest version of HTC Sync Manager on your computer.
- Make sure you have a USB tethering service enabled by your mobile operator.
- You may need to have USB tethering added to your data plan, and it may incur additional cost. Contact your mobile service provider for details.
- Make sure that mobile data is turned on.

1. Connect HTC One M9+ Supreme Camera Edition to your computer using the provided USB cable.
2. From the Home screen, tap , and then find and tap **Settings**.
3. Under Wireless & Networks, tap **More**.
4. Tap **Mobile network sharing** > **USB network setting** > **USB tethering**.

Wireless sharing

Bluetooth

Turning Bluetooth on or off

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Bluetooth **On/Off** switch to turn the Bluetooth connection on and off.
3. Tap **Bluetooth** to see a list of available devices.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Connecting a Bluetooth headset

You can listen to music over a Bluetooth A2DP stereo headset, or have hands-free conversations using a compatible Bluetooth headset.



Before you connect your headset, make it discoverable so HTC One M9+ Supreme Camera Edition can find it. Refer to your headset manual for details.

1. Turn Bluetooth on and check the list of available devices.
See [Turning Bluetooth on or off](#) on page 187.
2. If you don't see your headset listed, tap **Scan for devices** to refresh the list.
3. Tap the name of your headset in the Available Devices section. HTC One M9+ Supreme Camera Edition pairs with the headset and the headset connection status is displayed in the Paired Devices section.
4. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

When the Bluetooth headset is connected, you'll see  in the status bar.

Reconnecting a Bluetooth headset

Normally, you can easily reconnect your headset by switching on Bluetooth on HTC One M9+ Supreme Camera Edition , and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 187.
2. Tap the headset's name in the Paired Devices section.
3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in [Unpairing from a Bluetooth device](#) on page 188, and then follow the steps under [Connecting a Bluetooth headset](#) on page 187.

Unpairing from a Bluetooth device

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 187.
2. In the Paired devices section, tap  next to the device to unpair.
3. Tap **Unpair**.

Receiving files using Bluetooth

HTC One M9+ Supreme Camera Edition lets you receive various files with Bluetooth, including photos, music tracks, contact info, calendar events, and documents such as PDFs.



Refer to the device's documentation for instructions on sending information over Bluetooth.

1. Turn Bluetooth on.
See [Turning Bluetooth on or off](#) on page 187.
2. On the sending device, send one or more files to HTC One M9+ Supreme Camera Edition .
3. If asked, accept the pairing request on HTC One M9+ Supreme Camera Edition and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.
You'll then get a Bluetooth authorization request.
4. Tap **Pair**.
5. When HTC One M9+ Supreme Camera Edition receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap **Accept**.

6. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification to view the file.
7. You can also tap  > **Show received files** to view files received via Bluetooth.

NFC


Using NFC

With built-in NFC (near field communication) on HTC One M9+ Supreme Camera Edition, you can share content to another NFC-capable mobile device in an instant.



NFC may not be available in some phones.

Beam webpages, photos, contact information, and more by holding HTC One M9+ Supreme Camera Edition and the other device back to back.

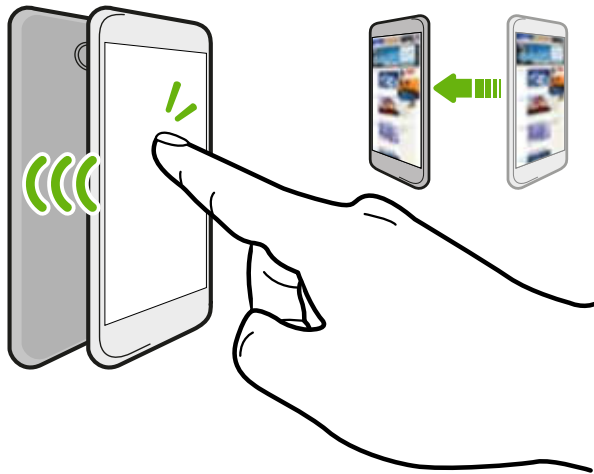

You can also use NFC for contactless payment. Availability of NFC payment depends on when your mobile operator launches this service. Contact your mobile operator for details.


Turning NFC on or off

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap the NFC **On/Off** switch to turn it on and off.

Beaming content

Make sure that both devices are unlocked and have NFC turned on. If the other device has an Android Beam™ option, make sure it is also turned on.

1. While viewing the content that you want to share, in the share options, tap **Android Beam**.
2. Hold HTC One M9+ Supreme Camera Edition and the other phone back to back.

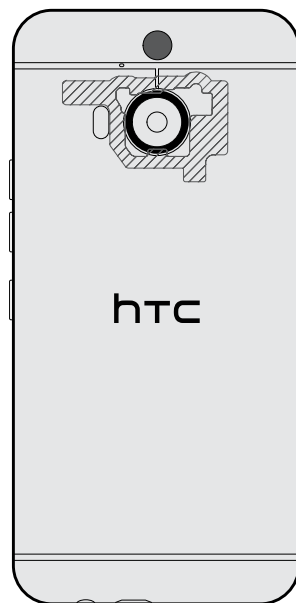

Make sure that the NFC area (shaded part) of HTC One M9+ Supreme Camera Edition and the other phone's NFC area are close to one another. Experiment by slightly moving the phones until a connection is made.

3. Tap the screen.

The shared content appears on the other screen. For some items that you've shared (such as contact information), additional instructions on how to save the item will appear on the receiving device.

Settings and security

Turning location services on or off

In order to find your location on HTC One M9+ Supreme Camera Edition, you need to enable location sources.

1. From the Home screen, tap  > **Settings** > **Location**.
2. Tap the **On/Off** switch to turn location services on and off.
3. Under Location sources, select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.

Turning off a location source (for example GPS) means no applications on HTC One M9+ Supreme Camera Edition will collect your location data through that location source. However, third party applications may collect — and HTC One M9+ Supreme Camera Edition may continue to provide — location data through other sources, including through Wi-Fi and signal triangulation.

Airplane mode

When you enable Airplane (Flight) mode, all wireless radios on HTC One M9+ Supreme Camera Edition are turned off, including the call function, data services, Bluetooth, and Wi-Fi.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.



- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.

Do any of the following to turn Airplane mode on or off:

- Press and hold POWER, and then tap **Airplane mode**.
- With two fingers, swipe down from the status bar to open the Quick Settings panel. Tap the **Airplane mode** tile to turn airplane mode on or off.

When enabled, the Airplane mode icon  is displayed in the status bar.

Scheduling when to turn data connection off

To help conserve power and data usage, you can set a time period when the data connection will automatically turn off during low peak times. This takes effect after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage).

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap **Sleep mode**.
3. To manually change the settings, clear **Learn sleep time automatically** if it's selected.
4. Under Sleep time, choose the start and end time when data connection is disabled.
5. Tap the Sleep mode **On/Off** switch to turn it on.

The data connection resumes when you switch the screen back on.

Automatic screen rotation



Automatic rotation is not supported in all applications.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Select or clear the **Auto-rotate screen** option to turn it on or off.

Setting when to turn off the screen

After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Screen timeout**, and then tap the time before the screen turns off.

Screen brightness

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Brightness level**.
3. With the **Automatic brightness** option selected, drag the slider to set the maximum brightness level. This sets a limit on how bright the screen will be when **Automatic brightness** is selected.
4. To set the brightness manually, clear the **Automatic brightness** option, and then drag the brightness slider to the left to decrease or to the right to increase the screen brightness.

Touch sounds and vibration

Some people like the sound or vibration feedback they get when touching the screen, and some don't. You can turn on or off various types of touch sounds and vibration on HTC One M9+ Supreme Camera Edition .

- Touch tones when tapping the phone dial pad
- Touch sounds when tapping onscreen items
- Screen lock sounds
- Pull-to-refresh sounds
- Vibration when pressing hardware buttons
- Touch sound and vibration when tapping the HTC Sense keyboard

Turning touch sounds and vibration on and off

1. From the Home screen, tap  > **Settings** > **Sound & notification**.
2. Under System, select the option you want to turn on or off.

Turning off keyboard sounds and vibration

1. From the Home screen, tap  > **Settings** > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Sound feedback** and then select **None** to turn off keyboard sounds.
4. Clear the **Vibration feedback** option to turn off keyboard vibration.

Changing the display language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

1. From the Home screen, tap  > **Settings** > **Language & keyboard**.
2. Tap **Language**, and then choose the language you want to use.

Glove mode

Turn Glove mode on so that the touch screen responds more accurately when you're wearing gloves.

1. From the Home screen, tap  > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Select the **Glove mode** option.

When Glove mode is turned on, you'll be able to see where you've tapped the touch screen.

Installing a digital certificate

Use client and Certificate Authority (CA) digital certificates to enable HTC One M9+ Supreme Camera Edition to access VPN or secured Wi-Fi networks, and also to provide authentication to online secure servers. You can get a certificate from your system administrator or download it from sites that require authentication.



- You must set a lock screen PIN or password before installing a digital certificate.
- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.

1. Save the certificate file in the root folder on HTC One M9+ Supreme Camera Edition .
2. From the Home screen, tap  > **Settings** > **Security**.
3. Tap **Install from storage**.
4. Browse to the certificate and select it.
5. Enter a name for the certificate and select how it will be used.
6. Tap **OK**.

Pinning the current screen

For added security when showing your phone to someone else, use the screen pinning option to lock the display on the current app.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Under Advanced, tap **Screen pinning**, and then tap the **On/Off** switch to turn it on.
3. On the Apps screen, open the app that you want.
4. Press , and then tap  on the app thumbnail.

If you're using the card view, press and hold the thumbnail of the latest app you opened, and then drag it up a little bit to see the  icon.

5. When prompted, tap **Start**.

If you're using a lock screen, select the **Ask for unlock pattern before unpinning** option for added security.

6. To unpin the screen, press and hold  and  at the same.

Disabling an app

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

1. From the Home screen, tap  > **Settings** > **Apps**.
2. Swipe to the All tab.
3. Tap the app, and then tap **Disable**.

Assigning a PIN to a nano SIM card

You can help to protect the nano SIM card by assigning a Personal Identification Number (PIN).



Make sure you have the default PIN provided by your mobile operator before continuing.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Set up SIM card lock**.
3. Choose to lock the card, enter the default PIN of the card, and then tap **OK**.
4. To change the card PIN, tap **Change SIM PIN**.

Restoring a nano SIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, the card will become “PUK-locked.”

You need a Pin Unlock Key (PUK) code to restore access to HTC One M9+ Supreme Camera Edition . Contact your mobile operator for this code.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **OK**.

Accessibility features

HTC One M9+ Supreme Camera Edition comes with features and settings that allow easy access and use of apps and functions.

Improve screen readability

If you have low vision, take advantage of these features to help improve screen readability.

- Increase the font size, use color inversion, or enable high-contrast text using the Accessibility settings. See [Accessibility settings](#) on page 196.
- Turn magnification gestures on. See [Turning Magnification gestures on or off](#) on page 196.
- Turn on automatic screen rotation. See [Automatic screen rotation](#) on page 192.

Get audible feedback

Use TalkBack to hear audible feedback on what you do on your phone. See [Navigating HTC One M9+ Supreme Camera Edition with TalkBack](#) on page 197.

Use your voice

You can use your voice to perform an action on HTC One M9+ Supreme Camera Edition .

- Search for information on the Web using Google Voice Search. See [Searching the Web with your voice](#) on page 164.
- Enter text with your voice. See [Entering text by speaking](#) on page 59.

Use Motion Launch

Motion Launch combines a motion and finger gesture to perform an action such as waking HTC One M9+ Supreme Camera Edition from sleep mode or launching the camera. See [What is Motion Launch?](#) on page 46.

- Open Camera with Motion Launch Snap. See [Auto launching the camera with Motion Launch Snap](#) on page 49.
- Make a quick call using HTC One M9+ Supreme Camera Edition . See [Making a call with Quick call](#) on page 50.

Accessibility settings

Use these settings to turn accessibility functions or services on or off. When you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback, you can also control them using these settings.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap or select the settings you want.

Turning Magnification gestures on or off

If you have low vision or would like to get a closer view of what's on the screen, use finger gestures to magnify portions of your phone's screen.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **Magnification gestures** and read the instructions on how to use it.
3. Tap the **On/Off** switch to turn Magnification gestures on or off.

Navigating HTC One M9+ Supreme Camera Edition with TalkBack

Use TalkBack if you need to navigate HTC One M9+ Supreme Camera Edition by spoken feedback. When you touch the screen, HTC One M9+ Supreme Camera Edition vibrates and gives you an audible response so you know what you are touching.



Not all languages are supported.

Turning TalkBack on

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap the **On/Off** switch.
3. Read the TalkBack disclaimer and then tap **OK**.

A short tutorial explaining how to use TalkBack will begin playing after you turn on TalkBack.



TalkBack works best if you turn off automatic screen rotation.

Turning Explore by touch on or off

Explore by touch allows HTC One M9+ Supreme Camera Edition to respond to shortcut gestures and screen touches with audible feedback. While Explore by touch is enabled when you turn on TalkBack, you can turn it off.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap  > **Settings**.
3. Under Touch exploration, clear the **Explore by touch** option.

You will no longer hear audible feedback from HTC One M9+ Supreme Camera Edition .

Using TalkBack gestures

When TalkBack is turned on and the Explore by touch setting is selected, the regular touch gestures are replaced by the TalkBack gestures.



Media gestures such as 3-finger swiping may not be available when TalkBack gestures are enabled.

Do one of the following:

Open an item	1. Drag your finger on the screen to find and select the item. 2. Double-tap anywhere on the screen to open the item.
Move an item	1. Drag your finger on the screen to find the item. 2. Double-tap anywhere on the screen, but don't lift your finger on the second tap. 3. Drag the item to a new spot and then lift your finger.
Scroll through a screen	Use two fingers to swipe up, down, left or right.
Unlock the lock screen	Use two fingers to swipe up from the bottom of the screen.
Open the Notifications panel	Use two fingers to swipe down from the top of the screen.

Assigning TalkBack shortcuts

TalkBack has customizable gestures that can be used to open the Notifications panel, view recent apps, access TalkBack controls, and more.



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap  > **Settings** > **Manage gestures**.
3. Tap any of the shortcut gestures, and then select an action.

Using TalkBack context menus

TalkBack has context menus for controlling continuous reading and global TalkBack controls. These menus can be accessed using TalkBack shortcut gestures.

1. Turn TalkBack on.
2. Do one of the following:
 - To open the continuous reading menu, use one finger to swipe up and right in one continuous movement.
 - To open the global context menu, use one finger to swipe down and right in one continuous movement.



If you already changed the TalkBack shortcut gestures, check your TalkBack settings for the appropriate gesture.

3. Press and hold anywhere on the screen.
4. Drag your finger around the screen to explore the options.



To cancel an action, drag your finger to your starting position.

Changing the TalkBack reading speed



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **Text-to-speech output** > **Speech rate**.
3. Select a speech rate.



You can test the speech rate by tapping **Listen to an example**.

TalkBack language settings

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **Text-to-speech output** > **Google Text-to-speech Engine**, and do one of the following:

Select a different language	Tap Language .
Install a voice	Tap Install voice data , and then tap the language. Tap  next to the voice data you want to install. When installation is completed, press  twice and tap Language .

3. Select the language you want to use.



Not all languages are supported.

Trademarks and copyrights

©2015 HTC Corporation. All Rights Reserved.

Dolby Audio manufactured under license from Dolby Laboratories. Dolby and Dolby Audio are trademarks of Dolby Laboratories.

HTC, the HTC logo, HTC One, the HTC One logo, HTC BlinkFeed, HTC BoomSound, HTC Connect, HTC Dot View, HTC Sense, Motion Launch, VideoPic, UltraPixel, Zoe, and all other HTC product and feature names are trademarks or registered trademarks in the U.S. and/or other countries of HTC Corporation and its affiliates.

Google, Android, Android Beam, Google Chrome, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, PowerPoint, Outlook.com, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc.

LTE is a trademark of European Telecommunications Standards Institute (ETSI).

DLNA is a trademark or registered trademark of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States, and other countries and used with permission. AllPlay is a trademark of Qualcomm Connected Experiences, Inc., and used with permission.

BLACKFIRE RESEARCH™ is a Registered Trademark (No. 3,898,359) of BLACKFIRE RESEARCH CORP.

Dropbox is a trademark of Dropbox, Inc.

iCloud, iPhone, iTunes, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

microSD is a trademark of SD-3C LLC.

Facebook is a trademark of Facebook, Inc.

FLICKR is a trademark of Yahoo! Inc.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and

international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

A

Accounts

- syncing 134

Airplane mode 191

Alarms

- setting 178

Android Beam

- See NFC

Apps

- arranging 69
- grouping into a folder 69
- hiding or unhiding 70
- icons on Home screen 66
- installing 34
- installing from Google Play 33
- installing from the web 34
- on Home screen 66
- restoring 33
- uninstalling 34
- updating 32

Auto Selfie 82

B

Backup

- about 135
- HTC Backup 136
- HTC Sync Manager 140
- options 135
- restoring backed up apps 33

Battery

- charging 20
- checking usage 127
- saving battery power 128

BlinkFeed

- See HTC BlinkFeed

Bluetooth

- connecting a Bluetooth headset 187
- receiving information 188

Bokeh 80

Browser

- bookmarks 165
- using 165

Burst mode 79

C

Calendar 152–155

- creating an event 153
- dual time zone 152
- meeting conflicts 153
- meeting invitations 154
- reminders 155
- sending quick response 155
- views 152

Call history 111

Camera

- basics 76–78
- Bokeh 80
- capture modes 76
- continuous shooting 79
- flash 77
- HDR 86
- manual settings 87
- Pan 360 85
- Photo Booth 83
- Portrait scene 81
- Raw Camera 84
- recording a video 78
- selfie 81–83
- slow motion 87
- Split Capture 84
- standby 76
- sweep panorama 85
- taking a photo 77
- taking photo while recording 78
- using volume buttons as controls 79
- video resolution 78
- zooming 77

Capture modes

- modifying and saving 88
- switching to 76

Capture screen 44

Car

- about 174
- handling calls 175
- HTC Car Kit 174
- navigation 175
- playing music 175
- voice commands 174

Change phone language 193

Clock 178

- alarm 178
- setting date and time 178

Conference call 110

Contacts

- adding 145
- copying contacts 26, 147
- importing contacts 26, 147
- transferring contacts 26, 147

Continuous shooting 79

Copy

- files 131

Copying

- text 56

D

Data connection

- data roaming 181
- sharing 186
- turning on or off 180
- usage 180

Data transferiPhone

- from iCloud 25

Data transfer

- from Android phone 24
- from iPhone 25
- through Bluetooth 25
- transferring contacts 26

Display

- changing the time before the screen turns off 192
- screen brightness 192
- screen rotation 192
- Sleep mode 36

DNG raw photos 84

Double exposure 104

Driving

See Car

E

Email

See Mail

Exchange ActiveSync

- flagging an email 159
- meeting request 160
- Out of office 160
- sending a meeting request 160

expanded storage 130

F

Face Fusion 105

Face unlock 51

Factory reset 143

Files

- copying 131

Finger gestures 39

Fingerprint

- about 29
- adding, removing, or editing 30

Firmware

See Software update

FM Radio 122

- using 122

Folder

- grouping apps 69
- grouping bookmarks 165
- removing items 69, 70

FOTA

See Software update

G

Gallery 89, 90, 95–105

- creating animated gif 100
- creating sequence shots 100
- custom effects 98
- editing group shots 99
- editing photos 97
- Face Fusion 105
- removing objects in photo 101
- Video Highlights
- See Zoe
- video trimming 95
- viewing photos and videos 89
- viewing photos and videos by event 89

- viewing photos by location 90
- watching videos 95
- Geotag 89
- Gestures
 - motion gestures 37
 - touch gestures 39
- Google Drive
 - about 166
 - storage space 167
 - uploading photos and videos 167
- Google Maps 168
- Google Now 162, 163
 - setting up 162
 - turning off 163
- Google Play
 - installing apps 33
 - refund 34
- Google Voice Search 164
- GPS (Global Positioning System)
 - See Location settings
- Group messaging 114

H

- Hands free 187
- Hard reset
 - See Factory reset
- HDR 86
- Headphones
 - See Bluetooth
- Home screen
 - adding or removing widget panel 67
 - apps 66
 - arranging widget panels 67
 - changing your main Home screen 68
 - feeds 71
 - folder 69
 - launch bar 65
 - rearranging widgets and icons 67
 - removing widgets and icons 67
 - shortcuts 66
 - wallpaper 64
 - widget panel 35
 - widgets 66
- Hotspot
 - See Wireless router
- HTC Backup 136
- HTC BlinkFeed
 - about 71

- adding regional editions 74
- deleting items 75
- posting to social networks 75
- saving articles for later 74
- selecting feeds 73
- setting up custom topics 74
- showing social network and app feeds 73
- turning on or off 72
- HTC Car
 - See Car
- HTC Clock 178
 - setting an alarm 178
- HTC Connect
 - about 122
 - streaming music to speakers 124, 125
 - streaming music, videos, or photos to media devices 123
- HTC Sense version 31
- HTC Sync Manager 140

I

- Idle screen
 - See Lock screen
- Internet
 - browser 165
- Internet connection
 - VPN 183
 - Wi-Fi 182
 - wireless router 185

K

- Keyboard
 - dictionary 58
 - entering text 57
 - entering text by speaking 59
 - HTC Sense keyboard 56
 - multi-language keyboard 57
 - predictive text 58
 - shortcuts 58
 - speech recognition 59

L

- Language
 - system language 193
- Live Makeup 82
- Location settings 191

Lock screen

- answering a call 109
- dismissing an alarm 37
- opening an app 43
- rejecting a call 109
- unlocking 37

Low battery 128

Low storage 131

M

Mail

- attachments 157
- carbon copy, blind copy (cc, bcc) 157
- deleting 159
- draft 157
- replying 157
- searching 159
- sending 157
- sorting 158

Mail folders

- moving email messages 158

Making calls

- calling 107

Maps

- Google Maps 168

Master reset

- See Factory reset

Media streaming

- See HTC Connect

Meeting request 160

Messages

- block box 116
- deleting a conversation 116
- draft message 113, 114
- forwarding 115
- group SMS 114
- locking 117
- replying 114
- secure box 115
- sending 113

microSD card 17

MMS

- See Multimedia message

Morph

- See Face Fusion

Multimedia message

- attachment 113

- group MMS 114

- sending 113

Music

- adding a song to a queue 120
- album covers 120
- artist photos 120
- listening 119
- lyrics 121
- playing music from the Lock screen 119
- playlist 119
- setting a song as ringtone 120
- transferring from iPhone 141

N

Navigation

- See Car

NFC (Near Field Communication) 189

Notifications

- panel 54

O

Online accounts

- adding accounts 134
- removing accounts 134
- syncing manually 134
- what can you sync with 134

Online storage

- Google Drive 166

P

Pair a Bluetooth headset 187

Pan 360 85

People

- adding a new contact 145
- contact groups 149
- contact link suggestions 148
- copying contacts 26, 147, 148
- editing contacts 146
- filtering your contacts 144
- groups 149
- importing contacts 26, 147
- merging contact information 148
- personal profile 145
- sending contact information 149
- transferring contacts 26, 147

Phone calls

- blocking a call 111
- call history 111
- calling 107
- conference call 110
- emergency call 109
- extension number 108
- missed calls 108
- Motion Launch 50
- muting the microphone 110
- putting a call on hold 110
- receiving calls 109
- Smart Dial 107
- speakerphone 110
- speed dial 108

Phone information 31

Phone settings

See Settings

Phone updates 31

Photo Booth 83

Photo shapes 102

Photos

- custom effects 98
- location 90
- transferring from computer 27
- transferring from iPhone 141
- viewing photos and videos 89
- viewing photos and videos by event 89
- viewing photos by location 90

Power

- charging the battery 20
- checking battery usage 127
- saving power 128
- sleep mode 36

Print screen

See Capture screen

Prismatic 103

PUK (PIN Unblock Key) 195

Q

Quick call 50

Quick settings 27

R

Radio

See FM Radio

Raw Camera 83, 84

Recent apps 43

Recording your voice 179

Reset 142, 143

Ringtone

- editing 121
- setting song as ringtone 120

Router

See Wireless router

S

Screen 36, 37, 44, 192

- adjusting brightness 192
- capture 44
- changing the time before the screen turns off 192
- idle screen 37
- rotation 192
- Sleep mode settings 192

Screen lock 51

Screen shot

See Capture screen

Scribble

- about 176
- composing a note 176
- grouping notes 177
- inserting images 176
- photo blog template 177
- templates 176

SD card 17

Search

- searching phone and Web 164
- voice search 164

Security

- fingerprint 29
- protecting phone with screen lock 51
- security certificates 183

self-timer 83

selfie

- Auto Selfie 82
- Live Makeup 82
- self-timer 83
- Voice Selfie 82

Sense Home

- adding apps to widget 46
- changing addresses 45
- manually switching locations 45
- pinning apps in widget 46
- setting up widget 44

- smart folders in widget 46
- unpinning apps in widget 46
- widget 44

Settings

- About 31
- Accessibility 196
- display language 193
- Storage 130

Setup

- contacts from old phone 26
- first-time setup 22
- photos, music, videos from old phone 27
- restoring backup from cloud storage 23

Shapes 101

Sharing

- events 154
- text 56

Shortcuts 43

Sleep mode 36

Slideshow

- highlight video 96

Slow motion video 87

Smart network sharing 186

SMS

- See Messages

Soft reset 142

Software update 31

Sound

- ringtone, notifications, and alarm 64
- switching profiles 111

Speakerphone 110

Speed dial 108

Split Capture 84

Storage 130

Sweep panorama 85

Sync

- HTC Sync Manager 140

T

Tethering

- See USB Tethering

Text message 113

Themes 61–63

- bookmarking 61
- creating 62
- deleting 63
- downloading 61
- editing 62

- finding 63
- mix and match 62
- sharing 63

U

Upgrade

- See Software update

Upload

- Google Drive 167

USB Tethering 186

V

Video Highlights

- See Zoe

VideoPic 78

Videos

- editing 95
- playback speed 95
- recording 78
- taking photo while recording 78
- transferring from computer 27
- watching 95

Voice input 59

Voice Recorder 179

Voice search 164

Voice Selfie 82

VPN 183, 184

- adding a connection 184
- connecting 184
- disconnecting 184

W

Waking up phone

- through power button 37

Wallpaper

- changing 64

Weather

- checking weather 179

Wi-Fi 182

- connecting via WPS 182
- turning on 182

Widgets

- adding 66
- changing settings 66
- rearranging 67

- removing 67, 68

- resizing 66

Wireless media sharing

- See HTC Connect

Wireless router 185

Word prediction 58

- bilingual prediction 58

Y

YouTube 121, 170

- finding videos of songs 121

- watching 170

Z

Zoe 96