

GM730 User Guide



CE 0168 ⓘ
www.lg.com

MMBB0345920 (1.1)

LG Electronics Inc.

GM730 User Guide

ENGLISH

Bluetooth QD ID B015251



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset is not recommended for blind and disabled people due to touch screen keypad.



GM730 User Guide

Congratulations on your purchase of the advanced and compact GM730 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use .	6	XT9 Keypad.....	43
Getting to know your phone	12	Using Transcriber	44
Open view	14	Drawing and writing on the screen..	48
Installing the USIM and battery	15	Recording a Note.....	51
Memory card.....	19	Searching Information.....	52
Resetting the device.....	20	Calls	53
Using your Touch screen.....	22	Making a call or a video call.....	53
Using your Joystick.....	24	Calling your contacts	53
Menu map.....	25	Answering and rejecting a call	53
Your Home Screen	26	In-call options.....	54
Select Home Screen	26	Adjusting call volume	55
Customising the LG Smart Home		Speed dialling	55
Screen.....	26	Viewing your call logs.....	55
Customising the Windows Mobile		LG Contacts.....	56
default screen	28	Searching for a contact	56
Quick keys	29	Adding a new contact	56
Viewing the status bar.....	30	Creating a group.....	57
Using the Multitasking function	31	Use your contact options	57
Using the Start Menu	32	Viewing information	58
Programs	32	Transferring your contacts	58
Settings.....	35	Messaging	59
Entering and Searching		Messaging.....	59
Information.....	40	Sending a message.....	59
Overview of Input Panel	40	Message folders	60
Using the Keyboard	41	Changing your text message	
Using Letter Recognizer.....	42	settings.....	60
Using Block Recognizer.....	42	Changing your multimedia message	
		settings.....	61

Contents

Setting up your email	62	Choosing a color tone	75
Setting up your e-mail through Microsoft® Exchange Server	62	Using the inner video camera.....	75
Setting up your email on famous email Service Provider	62	Watching your saved videos	75
Setting up your e-mail on Others.....	63	Multimedia.....	76
Sending e-mail / Write new e-mail ...	63	Pictures	76
Sending e-mail / Replying to an e-mail.....	64	My Pictures options menu	76
Managing the folder	64	Sending a photo	76
Changing email setting.....	64	Using a picture	77
Camera	65	Moving or copying a picture	77
Taking a quick photo	65	Creating a slide show.....	78
Once you've taken the photo	65	Checking your memory status	78
Getting to know the viewfinder.....	66	Music.....	78
Adjusting the exposure.....	67	Using a sound.....	78
Using the advanced settings.....	67	Videos	79
Changing the image size	69	Watching a video	79
Choosing a color effect	69	Sending a video clip.....	79
Using the inner camera.....	70	Games and Applications	79
Viewing your saved photos	70	Playing a game	79
Video Camera.....	71	Mobile Java.....	80
Shooting a quick video	71	Music.....	80
After taking a video	71	Playing a song	80
Getting to know the viewfinder.....	72	Creating a playlist.....	81
Adjusting the exposure.....	73	Playing a playlist	81
Using the advanced settings.....	73	Deleting a playlist.....	81
Changing the video image size.....	74	Using the radio.....	81
		Searching for stations	82
		Listening to the radio.....	82

UTILITIES	84	Settings	115
Adding an event to your calendar	84	Personalising your profiles.....	115
Changing your default calendar		Changing your Display settings.....	115
view	84	Changing your phone settings.....	116
Adding an item to your To Do list.....	85	Using flight mode.....	118
Setting your alarm	85	Change Date and Time	119
Using Office Mobile	86	Bluetooth.....	120
Using your calculator	93	Turn on Bluetooth	120
Backup your memory	93	Pairing with another Bluetooth	
Restore your memory	95	device	120
Schedule Sprite Backup	96	Sending and receiving your files using	
Mobile Zip	99	Bluetooth.....	121
ActiveSync.....	103	Changing your Bluetooth settings.	122
Setting up Windows Vista™	104	Wi-Fi.....	123
Set up synchronization in Windows		Turn on Wi-Fi	123
Mobile Device Center	104	Set up Wi-Fi.....	123
Synchronizing Information.....	107	Wireless network settings	124
Synchronizing via Bluetooth.....	110	Configuring Wi-Fi Connection	
Synchronizing Music, Video, and		Settings	125
Pictures.....	110	Clear Storage.....	126
The Web	112	GPS	127
Browser	112	DUN	129
Accessing the web	112	Accessories	131
Adding and accessing your		Network service	132
bookmarks.....	112	Technical data.....	132
Using browser option menus	113	Troubleshooting	134

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model GM730 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used

frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.969 W/kg (10g) and when worn on the body is 0.915 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are to required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge the handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is placed on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

- Do not subject this unit to environments where there is excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information stored on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones are subject to interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over Pacemakers, for example, in your breast pocket or in the proximity of a person with a pacemaker fitted.”
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Pull off the road and park before making or answering a call if driving conditions permit.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when driving on roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off or activate flight mode before boarding any aircraft.

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, e.g. in the bathroom.
- Do not leave the battery in hot or cold places, this may cause the battery performance to deteriorate.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption by the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

Proximity sensor

Inner camera

Earpiece


End key

- Rejects a call.
- Press once to return to the Home Screen.

Joystick/Optical Mouse

Call key

Dials a phone number and answers incoming calls.

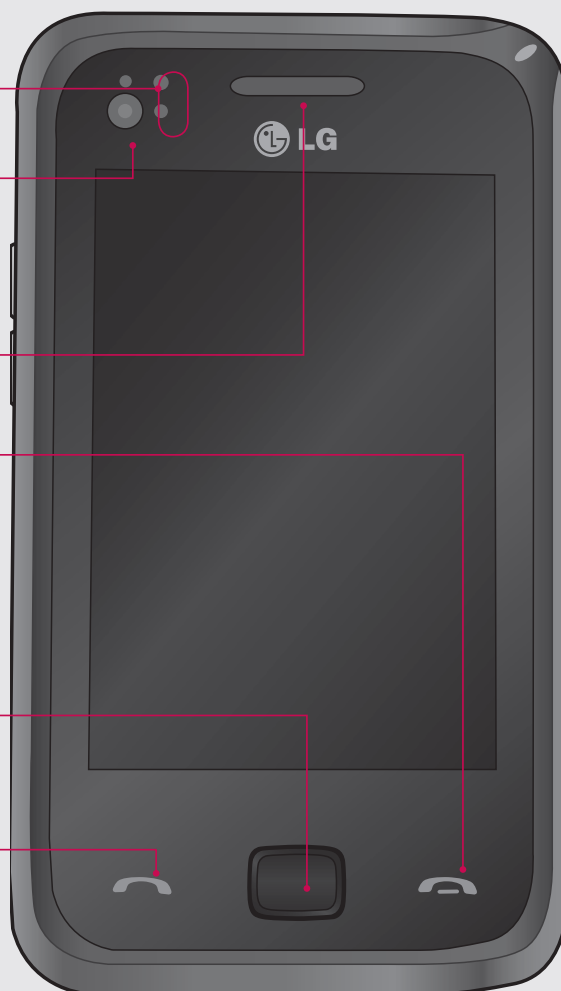

WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protection film on proximity sensor of LCD. It can cause a malfunction of the sensor.



**Charger, Data cable,
Ear-Microphone
(USB cable)**

TIP: To connect the USB cable, wait until the phone has powered up and has registered on the network.

Power / Lock/Unlock Key

- Long press (3sec) for Power ON / OFF.
- Short press to turn the screen off.

Camera key


- Go to camera preview directly by long pressing the camera key when on homescreen.



Volume keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a track:** controls track volume.

Open view

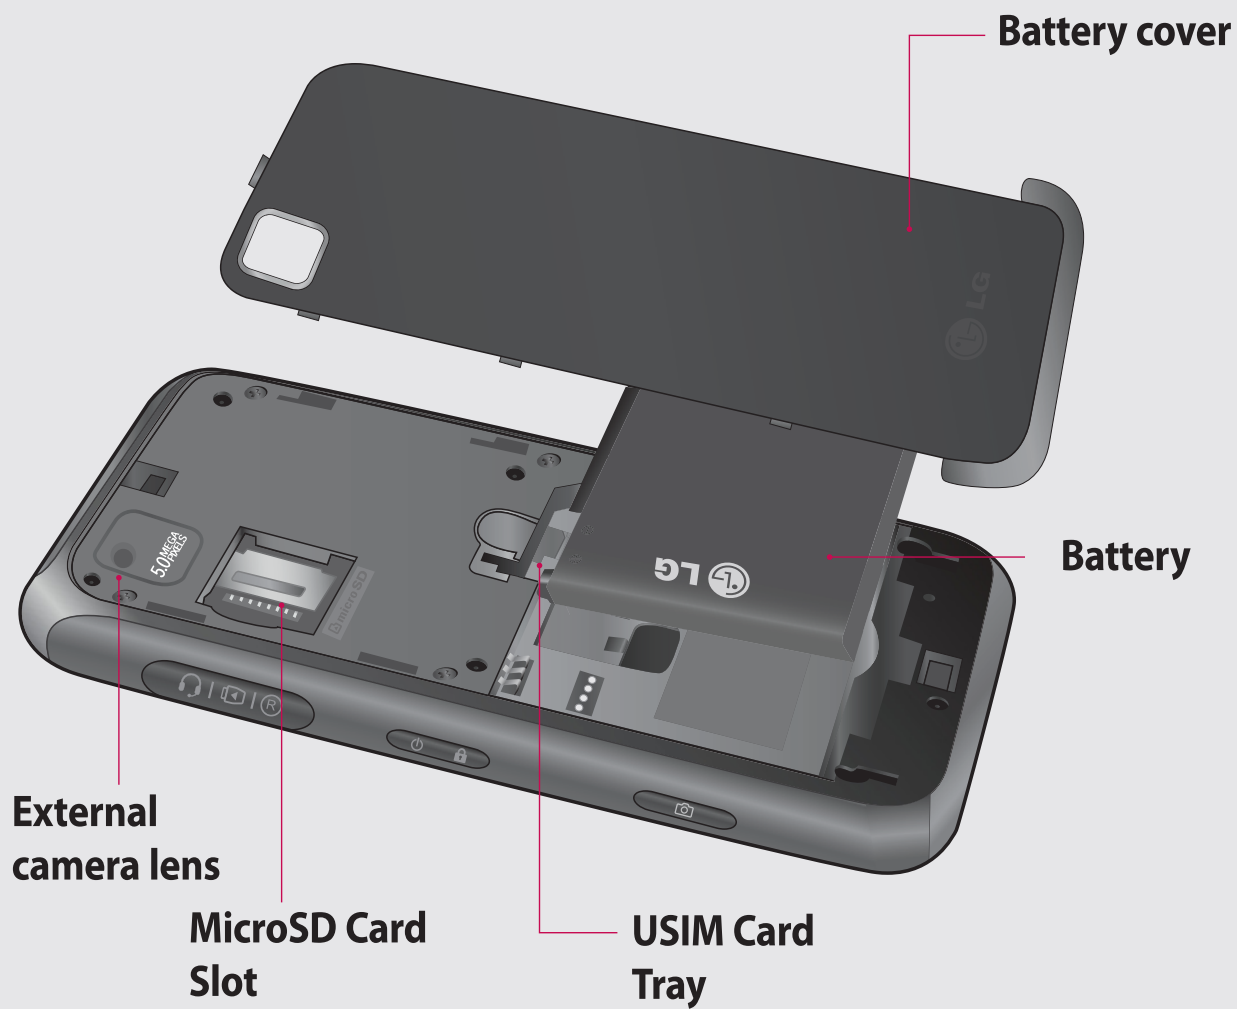

Installing the USIM and battery

1 Remove the battery cover


Slide the battery cover towards the bottom of the phone and away from it.



⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Remove the battery


Using the cut-out at the bottom lift it from the battery compartment.

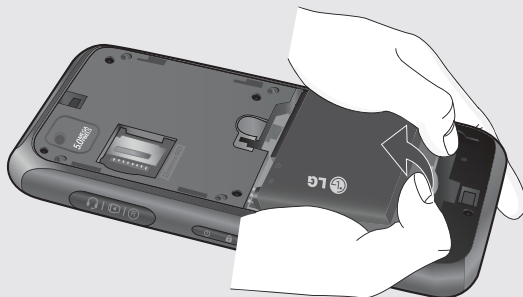

Installing the USIM and battery

3 Install the USIM card

Pull the USIM card holder out and put the USIM card into the USIM card holder. Make sure the gold color contact area on the card is facing downwards. Push the USIM card holder back.

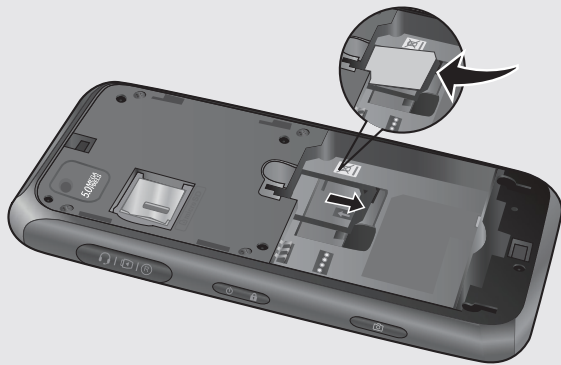

4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.



5 Charging your phone

Remove the charger socket cover on the side of your GM730. Insert the charger and plug it into a mains electricity socket. When you recharge your phone after device switch off, the phone's LED lights up red.

When the phone is fully charged, the LED lights up green.

When the battery is fully discharged, you can not power on the phone. It takes approx. 5~10 minutes to reach a charge state sufficient for booting.

If you press and hold the power button for approx. 1 second in charging mode, the phone is turned on.

NOTE: The battery must be fully charged initially to improve battery lifetime.

WARNING: Do not connect the charger to the phone without the battery. You must check the battery is inserted before charging.


WARNING: Do not remove your battery or USIM card while charging.

Installing the USIM and battery

WARNING: There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries in accordance with the maker's instructions.

WARNING: Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.

WARNING: Make sure that no sharp items come into contact with the battery. This could pose a fire risk.

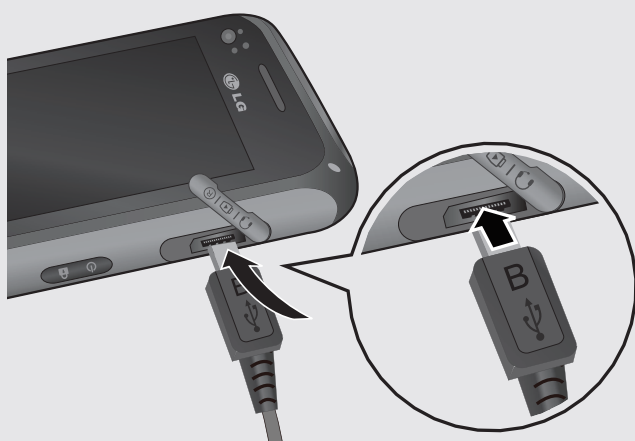

Memory card

Installing a memory card



You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

Slide the memory card into the slot at the top until it clicks into place. Make sure the gold color contact area is facing downwards.

 **WARNING:** Slide the memory card fully into the slot, otherwise, damage can occur.

 **WARNING:** Do not attach or remove memory card when the phone is switched on, as this may damage memory card.

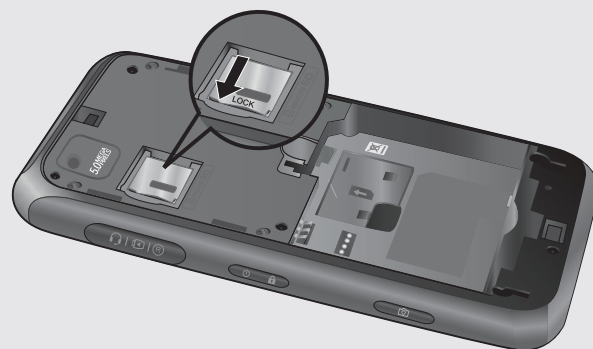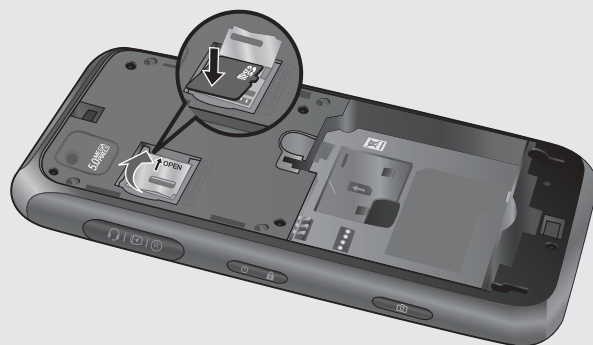

Resetting the device

Occasionally you may need to reset your device. A normal (or soft) reset of your device clears all active program memory and shuts down all active programs. This can be useful when the device is running slower than normal, or a program is not performing properly. A soft reset is also necessary after the installation of some programs. If a soft reset is performed when programs are running, unsaved work will be lost.

You can also perform a hard reset (also known as a full reset). A hard reset should only be performed if a normal reset does not solve a system problem. After a hard reset, the device is restored to its default settings—the way it was when you first purchased it and turned it on. Any programs you installed, data you entered, and settings you customized on the device will be lost.

To perform a soft reset

Find the Soft reset key. This is the small hole inside the charger socket cover on the right hand side of your device (shown enclosed by circles in the picture below).

Use the stylus to press the reset key and hold it for a while. Your device may shut down. Press the POWER button, the device restarts and displays the Home Screen.



3 Enter 1234 for the password twice.

4 Press **Enter**.

5 Select the memory to reset.

To perform a hard reset

A Hard Reset should only be performed after all other trouble shooting options have been exhausted. After a hard reset, the device is restored to its default settings - the way it was when you first purchased it and turned it on. Any programs you installed, data you entered, and settings you customized on your device will be lost.

1 Power the device ON

2 Tap **Start** > **Settings** > **System** tab > **Clear Storage**.

Using your Touch screen

Touch screen tips

The Home Screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- When the screen light is off, press the power key once to restore the Home Screen.
- Whenever your GM730 is not in use it will return to the lock screen.

Calibrate the device

Calibrating the device screen involves tapping with the stylus the center of a cross as it moves around the screen. This process ensures that when you tap the screen with your stylus, the tapped item is activated. If your device does not accurately respond to screen taps, follow these steps to re-calibrate.


- 1** Tap **Start > Settings > System tab > Screen**.
- 2** On the **Alignment** tab, touch **Align Screen**, and follow the instructions on the screen.
- 3** After calibration is completed, **Align screen** reappears. Click **OK** on upper right corner to return to setting mode.

Control the touch screen

The controls on the GM730 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any Application simply touch its icon.

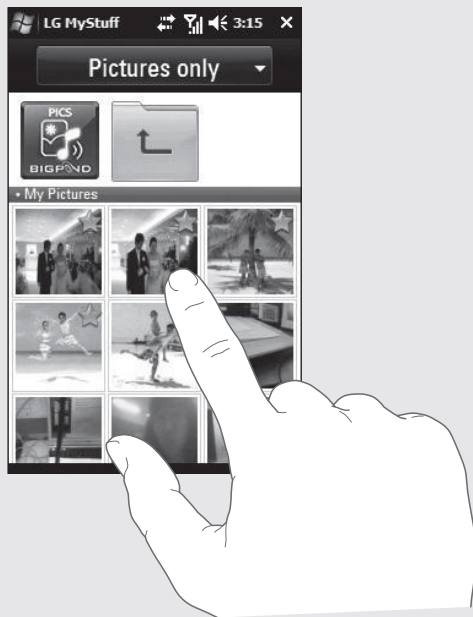

Scrolling


Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.



Using your Joystick

Select the Joystick function

- 1 Tap **Start** > **Settings** > **System** tab > **Optical Joystick**.
- 2 Select the **Mouse Mode**, if you want to use the Joystick as a trackpad to control an on screen mouse pointer. Click OK on the upper right corner to return to settings.

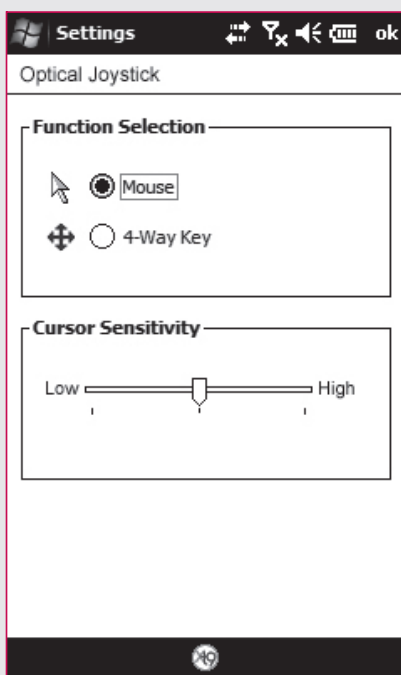

NOTE: 4-Way Key performance will be depended on the speed of finger movement.

How to use your Joystick

- 1 Put your finger on the Joystick sensor and move smoothly. The Mouse cursor on the screen will move with your finger movement. You don't need to press the Joystick when you move the mouse cursor.
- 2 Place the mouse cursor on the icon that you want to execute and press(click) the Joystick. The application that you select will be launched.

Menu map

Touch  in the Home Screen to open a **Top menu**. From here you can access further menus by scrolling through the icons: **Communication**, **Multimedia**, **Utilities** and **Settings**.

COMMUNICATION

-  LG Contacts
-  LG Message
-  Recent History
-  LG E-mail
-  Phone
-  Internet Explorer
-  Messenger

MULTIMEDIA

-  Music
-  My Stuff
-  Games
-  Camera
-  Video Camera
-  FM Radio
-  Mobile Java

UTILITIES

-  LG Alarms
-  LG Calendar
-  Multitasking
-  Office Mobile
-  Calculator
-  File Explorer
-  Tools

SETTINGS

-  Profiles
-  Display Settings
-  Phone
-  Bluetooth
-  ActiveSync
-  Wireless Settings
-  Message Settings
-  Date & Time
-  USB to PC

Your Home Screen

From this screen you can access menu options, make a call, view the status of your phone and do many other things.

Select Home Screen

- 1 Touch **Start** > **Settings** > **Personal** tab > **Home Screen**.
- 2 Select a layout for your device Home Screen. If you select **LG Smart Home Screen**, you will have a 5-Way Home Screen. If you select **Windows Mobile Default**, you can use Windows Mobile's Today screen.


Customising the LG Smart Home Screen



Get in touch with your GM730


- The User Interface is based on five types of Home Screens. To swap between the Home Screens just wipe quickly over the display from left to right or right to left.

Widget Home Screen

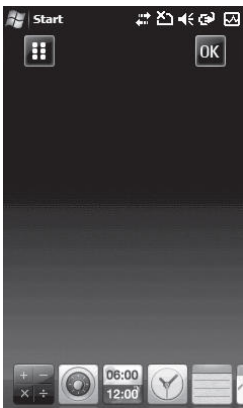


The Widget Home Screen can show your favourite widgets. If you press and hold an icon you will get into the edit menu where all the available widgets, not already on your screen, will be shown in a bar down at the bottom of the screen. To scroll through these flick across the widget bar.

Multimedia Home Screen

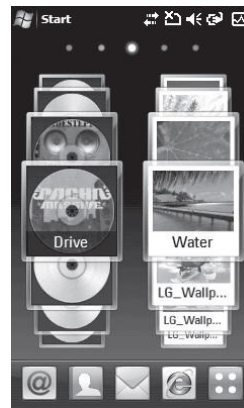

The Multimedia Home Screen can show your favorite pictures and movies on the right side of the screen and your favorite music on the left side of the screen.

Contact Home Screen

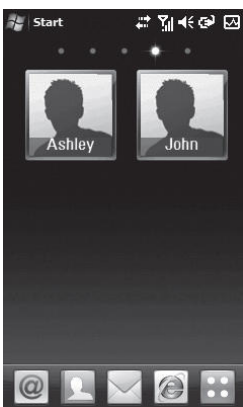

The contacts Home Screen can show your favorite contacts in a scroll through or list view.

Shortcut Home Screen




In the Shortcuts Home Screen, you can see the favorites shortcut icons.

To add your own icons, long-press the icons and you can then edit or add your own favorites icons.

Your Home Screen

Customising the Windows Mobile default screen

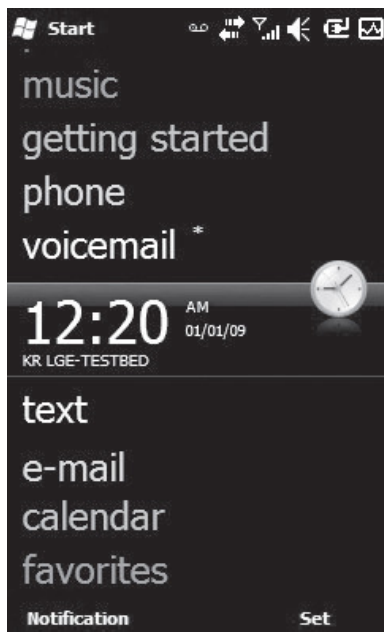

Touch **Start** > **Settings** > **Today** > **Items** tab.

- 1 Select the item you want to appear on the Today screen.
- 2 To change its position, tap **Move up** or **Move Down**. You can customise the further display options of Calendar and Tasks by tapping **Options**.

- 3 Check **Today timeout** then select the number of hours from the drop down list.

If you don't use your phone after the specified duration has elapsed, the screen switches to the Today screen.

- 4 Touch **Start** > **Settings** > **Today** > **Appearance** tab.

- 5 You can select the desired theme for the background.

- 6 If you use your own background image, tap **Use this picture as the background**. Tap **Browse** to locate the file you want.

LG Smart Home Screen



The LG Smart Home Screen displays the missed call list, unread messages, E-mail and upcoming appointments, tasks, and alarms. You can tap a section on the screen to open the associated program.

Quick keys

The quick keys on your LG Smart Home Screen provide easy, one-touch access to the functions you use most.

Icon	Description
	Touch to access the E-mail menu. You can check your received E-mail and create the new E-mail.
	Touch to open your contacts. To search for the number you want to call: Enter the name of the contact by touching  next to the New Contact touchpad. You can also create new contacts and edit existing ones.
	Touch to access the Message menu. From here you can create a new SMS or MMS.
	Touch to open Internet directly.
	Touch to open the full Top menu which is divided into four sub-menus.
	Touch to open File Explorer directly
	Touch to access LG App Store.
	Touch to access Alarms menu directly.
	Touch to open your LG Calendar to check your schedule.
	Touch to bring up the touch dialling pad, which lets you make a call.
	Touch to enter the Music menu directly.

Your Home Screen

Viewing the status bar

The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or GPRS are active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Bluetooth Hands-Free connection established
	Bluetooth Hands-Free channel opened
	Bluetooth High Quality Audio channel opened
	Indicates the remained battery power
	Indicates the battery is very low
	Battery charging
	Sound on


Icon	Description
	Sound off
	Ringer in vibration mode
	Connection is active
	Connection is not active
	Synchronization in progress
	Synchronization error
	Indicates maximum signal strength
	No signal
	Indicates Bluetooth service
	No phone service
	Searching for phone service
	Voice call in progress
	Calls are forwarded
	Call on hold
	Missed call or rejected call
	GPRS (General Packet Radio Services) available

Icon	Description
	EDGE (Enhanced Data Rates For Global Evolution) available
	WCDMA or HSDPA available
	New e-mail or text messages
	New voice mail
	There are more notifications. Tap the icon to view all
	USIM is not inserted. You can not use Network services without USIM
	Shows the list of running Applications by tapping this indicator

Using the Multi-tasking function

There are 2 ways to recall the Multitasking function.

- 1 By tapping the Multi-tasking icon in the status bar.
- 2 By Touching **Start** > **LG S-CLASS** > **Multitasking**. From here you can view the applications that are currently running and access or end them with one touch.

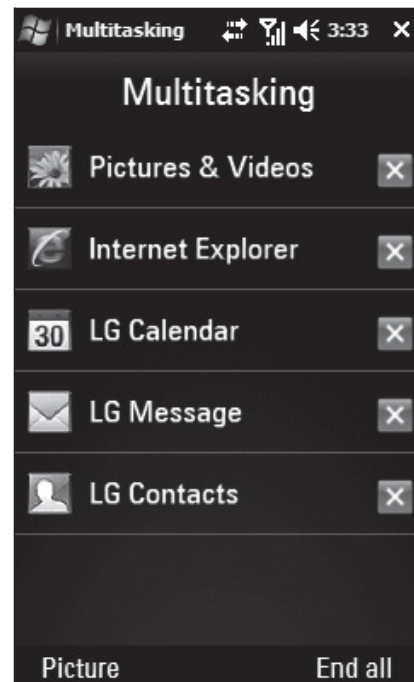

Using the Start Menu

The Start menu, located at the top left corner of the Today screen , displays a list of programs. It lets you easily switch from one program to another. You can start a program by selecting it from the menu.

Programs

The following are some of the icons for the programs that are already installed on your device.

Image	Menu	Description
	Today	Takes you to the Today screen.
	Phone	Opens the dialing screen and keypad.
	Text	Opens the Message menu (SMS/MMS).
	E-mail	Opens the Email accounts screen.
	Calendar	Opens the MS calendar
	Internet Explorer	Web Browser to access the Internet
	Contacts	Opens MS Contacts
	Marketplace	Link to (download) the Windows® Marketplace for Mobile application.
	Settings	Opens the phone's Settings menu.
	Pictures & Videos	Allows you to browse your phone folders for Pictures and Videos.
	Getting Started	Allows you to easily set up the most commonly used functions on your phone.

Image	Menu	Description
	Java	Opens the folder containing the pre-loaded apps, like Mobile Banking and Mobi4Biz.
	LG S-class	Opens the folder containing various applications, such as Camera, LG contacts, LG Calendar, Music, My stuff and more.
	Tools	Opens the folder that contains Tools, such as Adobe Reader LE, FM radio, Mobile zip, Sprite Backup, Stopwatch.
	DUN	Allows you to use your device as USB modem for another device.
	Search Widget	Allows you to connect to Internet using your data plan.
	Help	Allows you to view Help menu.
	Internet Sharing	Allows you to share the internet.
	Windows Live	Lets users sync their email from Windows Live Hotmail as well as their Windows Live Contacts

Using the Start Menu

Image	Menu	Description
	Office Mobile	Opens the folder containing the MS Office Mobile applications Excel Mobile, PowerPoint Mobile, OneNote Mobile and Word Mobile.
	File Explorer	File Explorer is a program for managing files on the phone and memory card
	Help	Opens up the help function, allowing you to access more information about how to use your phone.
	MSN Weather	Opens the MSN weather to check weather information.
	MSN Money	Allows you to view the information related to economy.
	Notes	Allows you to write the memo.
	Games	Opens the folder containing Games.
	ActiveSync	Allows you to connect ActiveSync program.
	Windows Media	Opens Windows Media Player.

Settings

You can adjust the device settings to suit the way you work. To see all available settings, tap **Start > Settings**, then tap the **Personal**, **System**, and **Connections** tabs located at the bottom of the screen.

Personal tab

Icon	Description
	Buttons Assign a program or function to a hardware button.
	Home Screen Select a layout for your device.
	Input Set options for each of the input methods.
	Owner Information Enter your personal information on your device.
	Phone To customise phone settings such as ring tone, set a PIN number for your USIM card, and more.

Using the Start Menu

System tab

Icon	Description
	About This is where you can see basic information such as the Windows Mobile® version and type of processor used on your device. You can also specify a name for your device.
	Backlight Set the backlight timeout and adjust brightness, External power Settings, Button settings.
	Certificates See information about certificates that are installed on your device.
	Clear Storage Tap this icon only when you need to remove all your data and files from the internal memory and also external memory(Provided) and reset your device to factory default settings.
	Customer Feedback You can participate in the Customer Experience Improvement Program by sending your feedback to Microsoft.
	Encryption Allow files on your storage card to be encrypted. Encrypted files will be readable only on your device.
	Error Reporting Enable or disable error reporting when errors occur on your device.
	External GPS Set the appropriate GPS communication ports, if required. You may need to do this when there are programs on your device that access GPS data or you have connected a GPS receiver to your device. See Help for details.

Icon	Description
	Optical Joystick Select your Joystick settings. If you choose Mouse Mode, mouse cursor appears on the screen and you can use your joystick as mouse. If you choose 4-Way Key Mode, you can use your joystick as a navigation key. You don't need to press the joystick when you move the cursor.
	LG X Button Set the "X" button to end programs immediately when you tap the button.
	Managed Programs This is where you can see the installation history of your device.
	Memory Check the device memory allocation status and memory card information. Memory Check the device memory allocation status and memory card information.
	Regional Settings Set the regional configuration to use, including the format for displaying numbers, currency, date, and time on your device.
	Remove Programs Remove programs that you installed on your device.
	Screen Change the screen orientation, re-calibrate the screen, and change the screen text size.

Using the Start Menu

Icon	Description
	System information Check your system information and storage information.
	Task Manager Check active task information. You can also stop currently running programs.

Connections tab

Icon	Description
	Connections Set up one or more types of modem connections for your device, such as phone dial-up, GPRS, and more, so that your device can connect to the Internet or a private local network.
	Domain Enroll Connect your device with company resources.
	GPS Setting Allows you to set GPS.
	USB to PC Allows you to connect from USB to PC.
	Config.GPRS Sets the GPRS authentication method, including None, PAP Authentication and CHAP Authentication.
	Wi-Fi Allows you to customize Wi-Fi settings.
	Wireless Manager Allows you to manage all wireless settings such as Wi-Fi, Bluetooth and Phone.


Other device settings

Icon	Description
	Bluetooth Allows you to customise Bluetooth settings.
	Clock & Alarms To set the device clock to the date and time of your local time zone or to a visiting time zone when you're travelling. Alarms can also be set at specified days and times of a week.
	Lock Set a password for your device.
	Sound & Notifications To enable sounds for events, notifications, and more, and set the type of notification for different events.
	Today To customise the appearance of and the information to be displayed on the Today screen.
	Microsoft My Phone To synchronizes your phone's contents with your My Phone account at http://myphone.microsoft.com

Entering and Searching Information

You are able to set the various input methods of the screen, including **Block Recognizer**, **Keyboard**, **Letter Recognizer**, **LG XT9 Keypad**, **Transcriber**. The Input Panel icon appears on the menu bar to indicate which input method is currently selected. The Input Selector arrow (shown at the right side of the Input Panel icon) opens a list of available input methods.

Overview of Input Panel

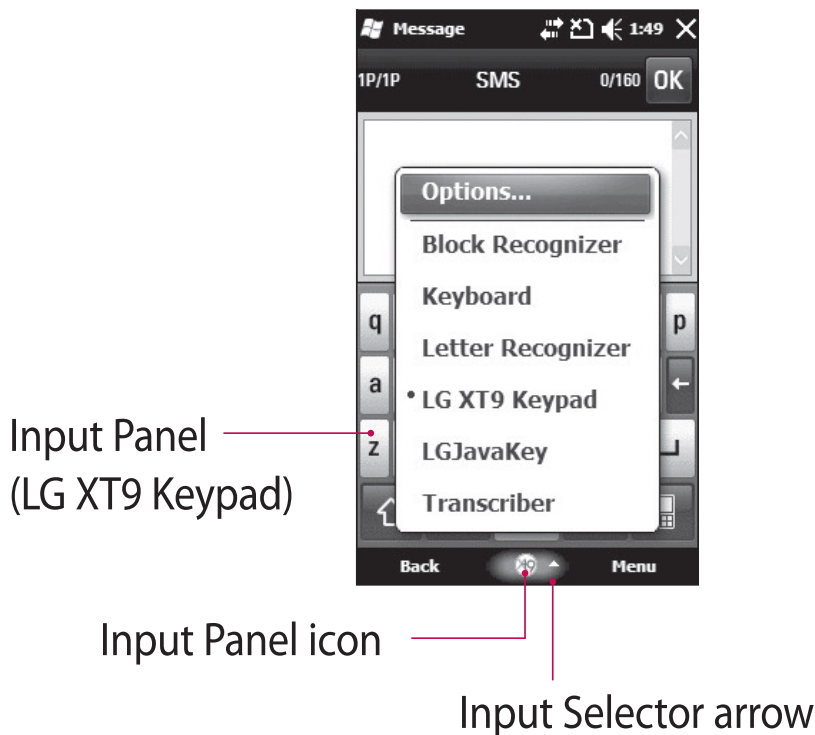

To change the input method, tap the Input Selector arrow.

Icon	Indicates the selected input method is
	The on-screen keyboard.
	Transcriber.
	Letter Recognizer or Block Recognizer.
	XT9 Keypad
	LGJavaKey

Using the Keyboard

To enter text, symbols, and numbers, you can either type using the QWERTY Keyboard, ABC characters or the standard onscreen **Keyboard**.

Using the standard on-screen Keyboard

The on-screen Keyboard is available when text entry is possible. You can enter text by tapping keys on the keyboard that is displayed on the screen.

Enter text using the on-screen keyboard

- ▶ The on-screen keyboard is available when text entry is possible.
- ▶ To make the keys larger, tap the Input Selector arrow, and then **Options**. In the **Input method** list, select **Keyboard**, and then tap **Large Keys**.
- ▶ General rule for entering text is same as MS based PC.


Entering and Searching Information

Using Letter Recognizer

With Letter Recognizer, you can write individual letters, numbers, and punctuation, which are then converted into typed text.

Enter text using Letter Recognizer


- ▶ Letter Recognizer is available when text entry is possible.

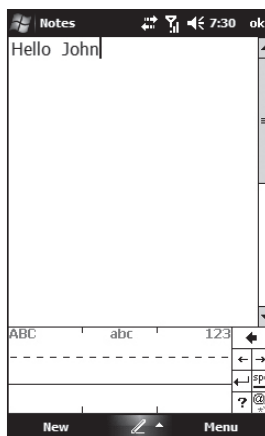

- ▶ Check  to see the demo for **writing** characters.

Using Block Recognizer

With Block Recognizer, you use a single stroke to write letters, numbers, symbols, and punctuation, which are then converted into typed text.

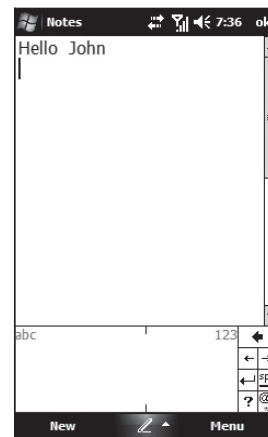

- ▶ Block Recognizer is available when text entry is possible.
- ▶ With Block Recognizer, you use a single stroke to write letters, numbers, symbols, and punctuation, which are then converted into typed text.

- ▶ Preferred word list will disappear if there is no user reaction for 6 seconds.
- ▶ Enter letters by writing in the abc (left) area of the box.
- ▶ Enter numbers by writing in the 123 (right) area of the box.
- ▶ Enter symbols and punctuation by tapping in either area of the box and then writing the desired character.
- ▶ Check  to see the demo for **writing** characters.

XT9 Keypad

With XT9 keypad, you can enter text by tapping keys displayed on the screen. This is the most common way to enter text with word prediction function.



- ▶ XT9 Keypad is available when text entry is possible.
- ▶ Enter letters by tapping the keys labelled with the required letters.

 Touch to turn on T9 predictive texting.

 Tap to change between the numbers, symbol and text keypads.

 Short press switches to uppercase for one keypress, long press switches to caps lock mode.

Entering and Searching Information

XT9 mode

In XT9 mode, you will see . The XT9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional multitap mode.

This is sometimes known as predictive text. This feature is supported only in portrait screen.


NOTE: You cannot activate XT9 in Search input box.

ABC mode

You can enter letters by tapping the key labeled with the required letter once or twice until the correct letter is displayed. Tap once for the first letters and twice for the second letters. This mode is known as multitap mode.

LGJavaKey

LGJavaKey is the navigation key used when you use a Java application. You cannot enter letters using LGJavaKey.

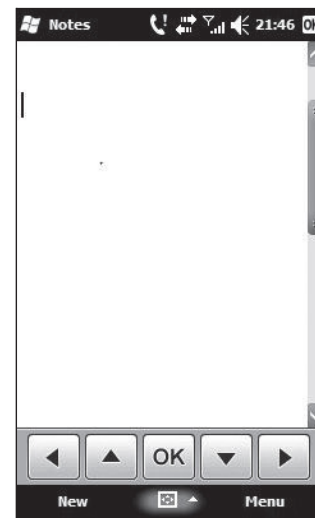

Using Transcriber

Transcriber is a handwriting recognition program that allows you to write in cursive, print, or a combination of both. Transcriber works transparently in the background of programs, recognizing words with its integrated dictionary. When

Transcriber is turned on, it interprets stylus movement anywhere on the screen as handwriting input. For more information about using Transcriber, see Help on your device.

To start Transcriber

- 1 Start a program that accepts user input, such as Word Mobile.
- 2 Tap the Input Selector arrow, and tap Transcriber. The Transcriber introductory screen appears.

To write using Transcriber

- 1 In a program, position the cursor where you want text to appear.
- 2 Use the stylus to write anywhere on the screen. The handwriting will be converted to text shortly after you lift the stylus from the screen.

To enter punctuation and symbols

Transcriber comes with an on-screen keyboard that provides an easy way to add punctuation or a

special symbol to existing text.

- ▶ From a program, tap  on the Transcriber toolbar. The keyboard remains visible until you tap the button again.

NOTE: To reposition the keyboard, tap and hold the title bar, then drag to the desired location.

When no text is selected, you can also open the keyboard by doing the  gesture.

To edit text

- 1 In a program, draw a line across the text you want to edit. This only appears to work if line goes from left to right.
- 2 After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.
- 3 Do either of the following:
 - ▶ Rewrite the text.
 - ▶ Use gestures to capitalize letters, insert a space, and so on.

Entering and Searching Information

Transcriber Gestures

Use quick strokes of the stylus to edit your text or to insert returns, spaces, or tabs.

Do	To
	Insert a paragraph return at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
	Insert a space at the cursor. The horizontal portion of the gesture must be at least two times longer than the vertical portion.
	Move the cursor one space back and erase any text. Do the gesture by drawing a line from right to left.

Do	To
	Open the menu of alternate words if a word is selected or the onscreen Transcriber keyboard if no text is selected. Do the gesture by drawing a line straight down and back up.
	Change the capitalization of a selected letter, word, or block of text. Do the gesture by drawing a line straight up.
	Undo the last action. Do the gesture by drawing a line straight up and back down.
	Copy the selected text. Do the gesture by drawing a line from left to right and back.

Do	To
	Cut the selected text. Do the gesture by drawing a line from right to left and back.
	Paste copied or cut text. Do the gesture by drawing a line from the lower left of the screen diagonally up toward the right and back down to the right.
	Insert a tab. The horizontal portion of the gesture must be at least two times longer than the vertical portion.

NOTE: You can also use the Enter, Space, and Backspace buttons on the Transcriber toolbar.

The Transcriber toolbar

Do	To
	You can set the transcriber options such as writing direction, text and shorthand.
	You can set the shape of letters as your handwriting.
	You can enter numbers, punctuation and symbols.
	You can change text input methods. • a mode. This is the default for optimum handwriting recognition. • 123 mode. Numbers and some letters are allowed and the calculator is activated. • A mode. All letters are automatically capitalized. If you are in A or 123 mode, recognition returns automatically to the default mode once you lift the stylus.

Entering and Searching Information

Do	To
	You can insert a space at the cursor.
	You can insert a paragraph return at the cursor.
	You can insert the cursor one space to the left.
	You can move the cursor one space to the right.
	Back and erase any text.
	Help

Drawing and writing on the screen

You can draw directly on the screen, or write on the screen and save notes in your own handwriting. To do this, you must set the input mode in Notes to **Writing**. If you prefer to use handwriting or frequently add drawings to your notes, you may find it helpful to set Writing as the default input mode. If you prefer typed text, set **Typing** as the default input mode.

To set the input mode for Notes

- 1 Tap **Start** > **Programs** > **Notes**.
- 2 In the note list, tap **Menu** > **Options**.
- 3 In the **Default mode** box, tap one of the following:

- ▶ **Writing** if you want to draw or enter handwritten text in a note.
- ▶ **Typing** if you want to create a typed note.
- 4 Tap **OK**.

To write a note

Tap **Start > Programs > Notes**.

- 1 In the note list, tap **New**.
- 2 Write your text on the screen.
- 3 When finished, tap **OK** to return to the note list.

NOTE: To select handwritten text, tap and hold next to the writing. As soon as dots appear, and before they form a complete circle, quickly drag across the writing. If a letter crosses three ruled lines, it is treated as a drawing rather than text.

To draw in a note

- 1 Tap **Start > Programs > Notes**.
- 2 In the note list, tap **New**.
- 3 To draw on the screen, use the stylus like a pen.
- 4 A selection box appears around your drawing.
- 5 When finished, tap **OK** to return to the note list.

NOTE: To select a drawing (for example, to copy or delete it), tap and hold the drawing briefly. When you lift the stylus, the drawing is selected.

Entering and Searching Information

Quick reference

Search > Find	Find the word in this document
Search > Find prev	Find the word before current focused word
Search > Snap to result	Move to current focused word
Search > Cancel	Cancel finding the word
Thumbnail > Off	Turn the thumbnail off
Thumbnail > Document map	View the document map
Thumbnail > Magnify	View the document through magnifying glass
Goto > Page	Go to the page you want
Goto > First	Jump to the first page
Goto > Prev	Go to the previous page
Goto > Next	Go to the next page
Goto > Last	Jump to the last page

Recording a Note

You can create a stand-alone recording (voice note) or you can add a recording to a note.


To create a voice note

- 1 Tap **Start > Programs > Notes**.
- 2 Do one of the following:
 - ▶ To create a stand-alone recording, record from the note list.
 - ▶ To add a recording to a note, create or open a note.
- 3 If you do not see the Recording toolbar, tap **Menu > View Recording Toolbar**.
- 4 Hold your device's microphone near your mouth or other source of sound. Press the record button from the Recording Toolbar.

- 5 If you are adding a recording to a note, tap OK to return to the note list when finished.
- 6 If you are recording when a note is open, an icon will appear in the note.
- 7 If you are creating a stand-alone recording, the recording will appear in the note list.

To record a voice note during a call

- 1 Tap the recording icon to record a voice note during a call.
- 2 If you finish recording, the pop up message as below image.

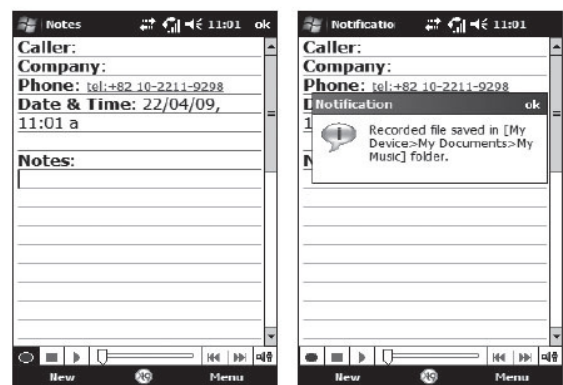

Entering and Searching Information

NOTE: When you start recording during a call, there isn't the notification beep sound to inform the other end user.

To change recording formats

- 1 Tap **Start > Settings > Personal tab > Input**.
- 2 Tap the **Options** tab, and in the **Voice recording format** list, tap the format you want.
- 3 Tap **OK**.

NOTE: You can also change recording formats from within Notes. In the note list, tap **Menu > Options > Global Input Options link** (at the bottom of the page).

Searching Information

You can search for files and other items stored on your device in the My Documents folder or on the storage card. You can search by file name or by word.

For example, you can search in e-mail messages, notes, appointments, contacts, and tasks, as well as in online Help.

To search for a file or an item

- 1 Tap **Start > Programs > Search**.
- 2 In **Search for**, enter the file name, word, or other information you want to search for.
- 3 If you have looked for this item before, tap the **Search for** arrow and select the item from the list.
- 4 In **Type**, select a data type to help narrow your search.
- 5 Tap **Search**.
- 6 The **My Documents** folder and subfolders are searched.
- 7 In the **Results** list, tap the item you want to open.

Calls

Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Key in the number on the keypad.
To delete a digit, press the clear key.
- 3 Touch the  key or **Voice Call** to place the call. Touch  to place the video call.
- 4 To end the call, touch the  key.

TIP! To enter + for making international calls, press and hold down **0+**.

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Calling your contacts

- 1 From the Home Screen touch  to open your **LG Contacts**.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the list, touch the contact you want to call and select the number to use if there is more than one for that contact
- 4 Touch **Voice call** or **Video call**.


Answering and rejecting a call

When your phone rings press the  hard key or **Answer** soft key to answer.

Press the  hard key to reject an incoming call.

Calls

In-call options

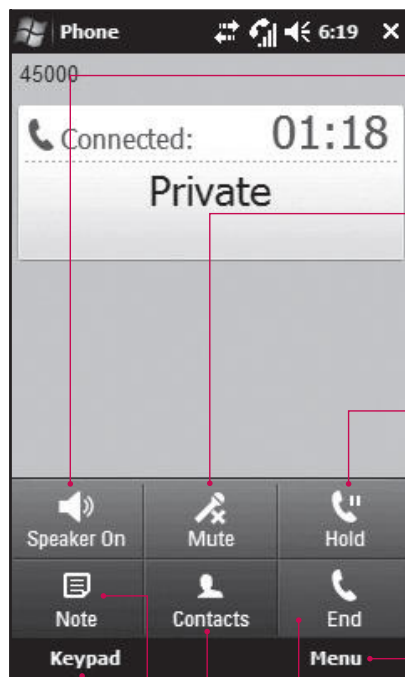

Speaker - Touch  to turn the speaker phone on. Touch again to turn off.

Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Hold - Touch  to put a call on hold.

Menu - Choose from a list of further in-call options

 - You can end the call.

 - Search your contacts during a call.

 - Add a memo during a call.

Keypad - Touch to open a numerical keypad for navigating menus with numbered options, when dialling call centres or other automated telephone services.

Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the Home Screen touch  to open your **LG Contacts**.
- 2 Touch **Menu** and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a speed dial contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the phone number once.

To call a speed dial number, touch  on the Home Screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

Viewing your call logs

From the Home Screen, touch , then touch **Recent history** in the Communication tab.

Or, you can go to this menu by pressing Send Key > Menu > Call History.

View a complete list of all dialled, received and missed calls.

TIP! From any call log touch **Menu** and **Delete all calls** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

LG Contacts

Searching for a contact

From the Home Screen

- 1 From the Home Screen touch  to open your **LG Contacts**. Touch  and enter the contact name using the key pad.
- 2 Touch **Video call** or **Voice call** or the  key to place the call.

TIP! You can filter your contacts by touching the Contacts drop down box at the top of the screen and selecting between Contacts, Groups, Favorites and Recently Viewed.

From the main menu

- 1 Touch , touch **LG Contacts** on the Communication tab.
- 2 Touch **Menu** and **Search**.

Adding a new contact

- 1 From the Home Screen touch  then touch **Add New contact**.
- 2 Choose whether to save the contact to **Handset** or **SIM**.
- 3 If you want to add a picture to each contact, touch **Add picture**.
- 4 Enter the first and last name of your new contact. You do not have to enter both, but you must enter at least one.
- 5 Enter the numbers and assign a type to each of the numbers.
- 6 Add email addresses.
- 7 Assign the contact to one or more groups, choosing between **No group**, **Business**, **Personal**, **Family** or **Seasonal**.

8 You can also add a **Ringtone, Web page, Home address, Company name, Job title, Company address, Memo**, so on, by **Clicking More Button**.

9 Touch **OK** to save the contact.

NOTE: You can add up to 5,000 contacts on your device but recommend to add up to 2,000 contacts for your device performance.

TIP! You can create customised groups for your contacts, see **Creating a group**.

Creating a group

- 1** From the Home Screen then Touch  and then touch **LG Contacts** in the Communication tab.
- 2** Touch **Menu** and select **New Group**.
- 3** Enter a name for the new group.
- 4** Touch **OK** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

TIP! You can edit an existing group by touching the selected group once. Choose **View members, Edit the group, Send message, Send businesscard** or **Delete group**.

Use your contact options

- 1** Touch **LG Contacts** from the Communication tab, then select **Menu** and **Settings**.
- 2** From here, you can adjust the following settings:
Display name - Choose whether to display the first or last name of a contact first.

LG Contacts

Viewing information

- 1 Touch **LG Contacts** from the Communication tab, touch **Menu** and touch **Information**.
- 2 From here you can view **Service dial numbers**, **Own numbers**, your **Memory info**. (memory space remaining) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

Transferring your contacts

To transfer your contacts from your USIM to phone:

- 1 From the Communication tab, touch **LG Contacts** and select **Menu** then select **Change location**.
- 2 Touch **Copy to handset**.
- 3 Select names one by one and touch **OK**.

Messaging

Messaging

Your GM730 combines SMS, MMS into one intuitive, easy to use menu. There are two ways to enter messaging:

- 1 From the Home Screen, touch  or touch , then scroll to **LG Message** from Communication tab.

Sending a message

- 1 Touch  then **Write New Message** to begin composing a new message
- 2 Touch **To** enter the recipient's number, or touch  to open your contacts. After entering the recipient's number, you can go back to message composer screen by touching OK. You can add multiple contacts.

- 3 When you are finished, touch the message box below to start composing the text message.
- 4 Touch  to insert Image, Video, Sound or Others.
- 5 Touch **OK** then press .

TIP! You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is encoded.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

Messaging

Message folders

Your Messaging Folder structure is outlined below.

Inbox - All messages you receive are stored in your inbox. From here you can view and delete them, as well as other functions.

Outbox - This is a temporary storage folder while messages are being sent.

Sent Items - Messages that have been sent are stored in this folder.

Drafts - If you don't finish writing a message, you can save what you've done in this folder.

Threaded Box - You can view the alert message in real time when you send or receive the message like you communicate on messenger.

My Folders - Create folders to store your messages.

Deleted Items - Messages you delete are stored in this folder.

Changing your text message settings

Your GM730 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll through **Message settings** from the Settings tab and touch **Text message**. You can change the following:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered. This feature works only if a set of conditions are met; the sender's network, the receiver's network, and the receiver's Windows Mobile device all support it.

Save sent message - On/ Off

Changing your multimedia message settings

Your GM730 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Touch **Settings** then select **Message settings** and **Multimedia message**. You can make change to the following:

MMS Center - Enter the details of your message centre.

Retrieval mode

- **Retrieve Immediately**
ON: Receive MMS messages immediately.
OFF: Receive notifications only.
Download on Home Network only will be set to **Manual**.
- **Download on home network only** - ON/ OFF

Reject all message - Choose to not receive any MMS messages.

Delivery report - Choose whether to allow and/or request a delivery report.

Read Report - Choose whether to allow and/or send a read reply.

Message class - Choose your message class.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Save sent message - Choose where to save the message after sending.

Delivery time - Choose how long to wait before a message is delivered.

Slide duration - Choose how long slides appear on screen.

Memory in use - Handset memory / External memory

Messaging

Setting up your email

You can keep in touch on the move by using your GM730 for email. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  from the Home Screen, and scroll through **LG E-mail** on the Communication tab.
- 2 To Create a new message, tap **Menu** and select **New**.

NOTE: You need the information from your network provider as follow: Server address, Domain name, User name, Password. You may also need the installation of the certification distributed by network provider on your device.

Setting up your e-mail through Microsoft® Exchange Server

- 1 Tap e-mail icon > Settings > Add account.
- 2 Enter your e-mail address, password, domain name and server address.
- 3 Select "Automatic Search" to get the e-mail settings automatically from the Internet.
- 4 If server settings are not detected, enter them manually, then tap "OK".

Setting up your email on famous email Service Provider

- 1 Tap e-mail icon > Settings > Add account.
- 2 Select e-mail service provider.
- 3 Enter your ID, pass word and name.

- 4** Select **Push enable** if you want to receive email automatically.
- 5** Tap OK to set up email account.

Warning!

- Additional cost may occur when you connect internet.
- The battery will be discharged when you receive a lot of email.
- The time to receive email can be dependent on account.
- If you select Push, GM730 can connect the network regardless of user setting to receive or send email.

Setting up your e-mail on Others

- 1** Tap e-mail icon > Settings > Add account.
- 2** Select the other e-mail service provider.
- 3** Enter your e-mail address, password, domain name and server address.

NOTE: If you do not enter the name, the header of email address will be saved automatically.

Sending e-mail / Write new e-mail

- 1** Tap e-mail icon > Touch e-mail account > Touch "Write E-mail".
- 2** Touch To/Cc/Bcc.
- 3** To enter the title, tap **Subject**.
- 4** You can attach the video, image file when you touch clip icon.
- 5** Tap **Send** to send email.

NOTE: Email cannot be saved in outbox depending on mail account or server policy.

Messaging

Sending e-mail / Replying to an e-mail

You can reply, forward or reply to all email.

- 1 Tap e-mail icon > Touch e-mail account > Tab inbox > Tab reply icon > Touch **Reply/ Reply all/ Forward**.
- 2 Enter the contents you want to send.
- 3 Tap **Send**.

Managing the folder

- 1 Tap e-mail icon. > Touch your account .> Touch folder tab.
- 2 Tap folder tab to view the component of folder.
- 3 Select the folder you want to move.
- 4 You can see the mail list or the sub-folder by touching +.

Changing email setting

Preview Line - Allow you to set the preview line.

Alert Sounds - Set the alert alarm when you receive the email.

Signature - Define the message attaching automatically.

Spam Message - Set to sort spam message.

When Deleting Messages - Define whether email is remained in server or not.

E-mail Download Restriction -

Set the condition to retrieve email from server.

Sync Items - Set the contact, schedule, to-do list, email when you use the account.


Camera

Taking a quick photo

- 1 Press the Camera Hot key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to take a picture of.
- 3 Press the capture button lightly and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the photo subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

Once you've taken the photo


Your captured photo will appear on the screen. The image name is shown with four icons on the right side.

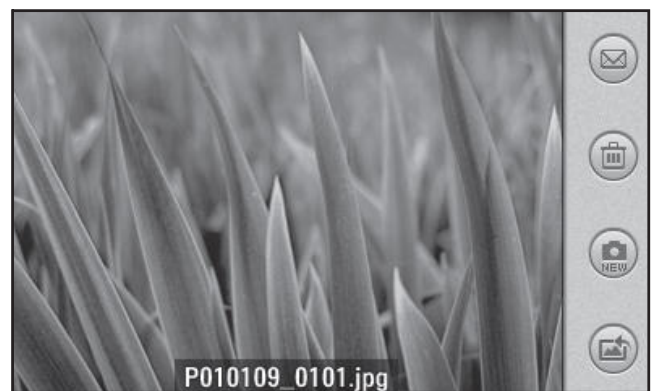

-  Touch to send the photo as a **Message, Email or Bluetooth.**
-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to use the image as wallpaper or Contact Image.

Camera

Getting to know the viewfinder

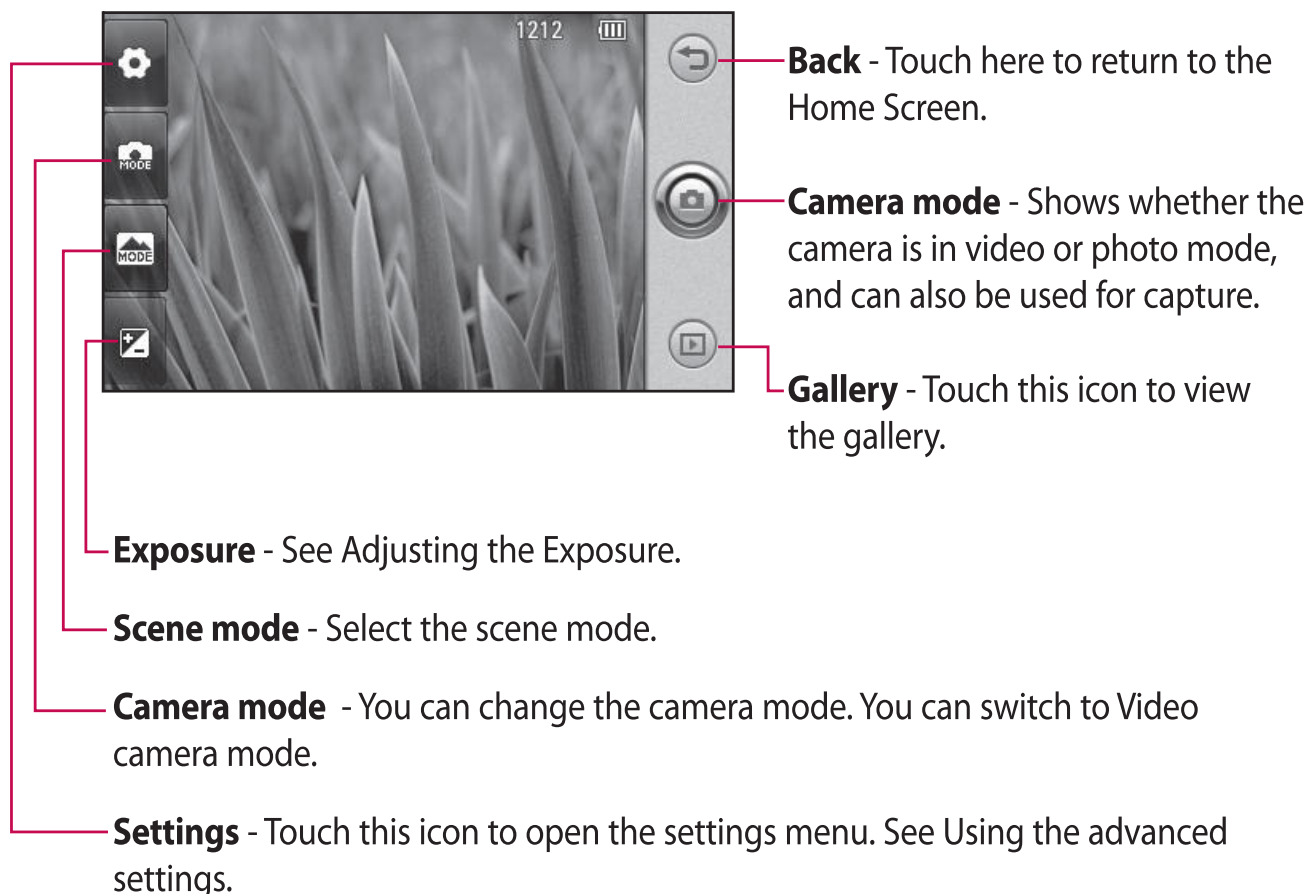

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Adjusting the exposure

The exposure defines and controls of the amount of sunlight entering the image.

A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the camera setting by scrolling the wheel. After selecting the appropriate option, touch the **OK** button.

Image size - Change the photo size to save memory space or to take an appropriate size picture for a contact.

Color Effect - Choose a color tone to use on your new photo. See **Choosing a color effect**.

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Camera

Timer - The self-timer allows you to set a delay after the capture button is pressed. Select **Off**, **3 seconds**, **5 seconds** or **10 seconds**. This is ideal if you want to be included in a photo.

Image quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Memory in use - Choose whether to save your photos to the **Handset memory** or the **External memory**.

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Shutter sound - Select one of the four shutter sounds.

Grid view - Choose between **Off**, **Simple cross**, **Trisection**

TIP! When you exit the camera all your settings will return to default, except image size, Grid view, Shutter sound, Hide Icons and Image quality. Any non-default settings you require will need to be reset, for example color tone. Check them before you shoot your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image color or quality you'll be able to see the image change in preview behind the settings menu.

Changing the image size

The more pixels, the larger the file, which means the files take up more memory space. If you want to store more pictures on your phone, you can alter the number of megapixels to make the files smaller.

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Image size** from the Preview menu.
- 3 Select a pixel value from the six options (**5M: 2560x1920, 3M: 2048x1536, 2M: 1600x1200, 1M: 1280x960, 640x480, 320x240**).

Choosing a color effect

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color Effect** from the Preview menu.
- 3 There are ten color tone options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green, or Solarize**.
- 4 Once you've made your selection the color tone menu can be closed by selecting **OK**. You are then ready to take a picture.

TIP! You can change a picture taken in color to black and white or sepia after it's taken, but you cannot change a picture taken in mono or sepia back to color.

Camera

Using the inner camera

Your LG GM730 has an inner 640x480 camera for both video calls and taking photos.

- 1** To switch to the inner camera touch  then select **Inner camera** from the Preview menu.
- 2** After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.
- 3** After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.
- 4** To return to the main camera touch  and then select **Outer Camera** from the Preview menu.

Viewing your saved photos

- 1** You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on screen.


Video Camera

Shooting a quick video

- 1 Press the Camera Hot key on the right side of the phone.
- 2 Then, touch  and then select **Video camera** to switch to video mode.
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the video subject.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 7 Touch  on the screen or press the capture button again to stop recording.

After taking a video


A still image representing your captured video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with three icons on the right side.

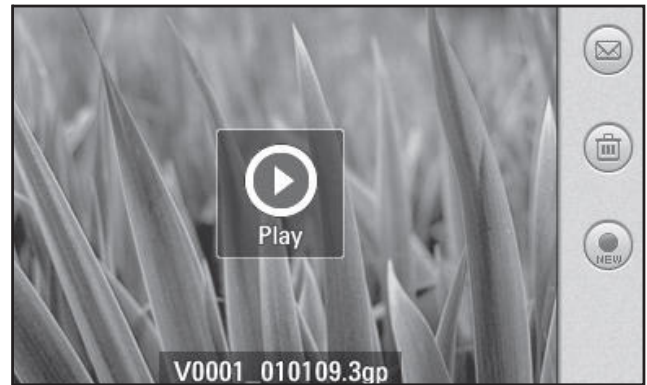

-  Touch to send the photo as a **Message, Email** or **Bluetooth**.
-  Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.

Video Camera

Getting to know the viewfinder

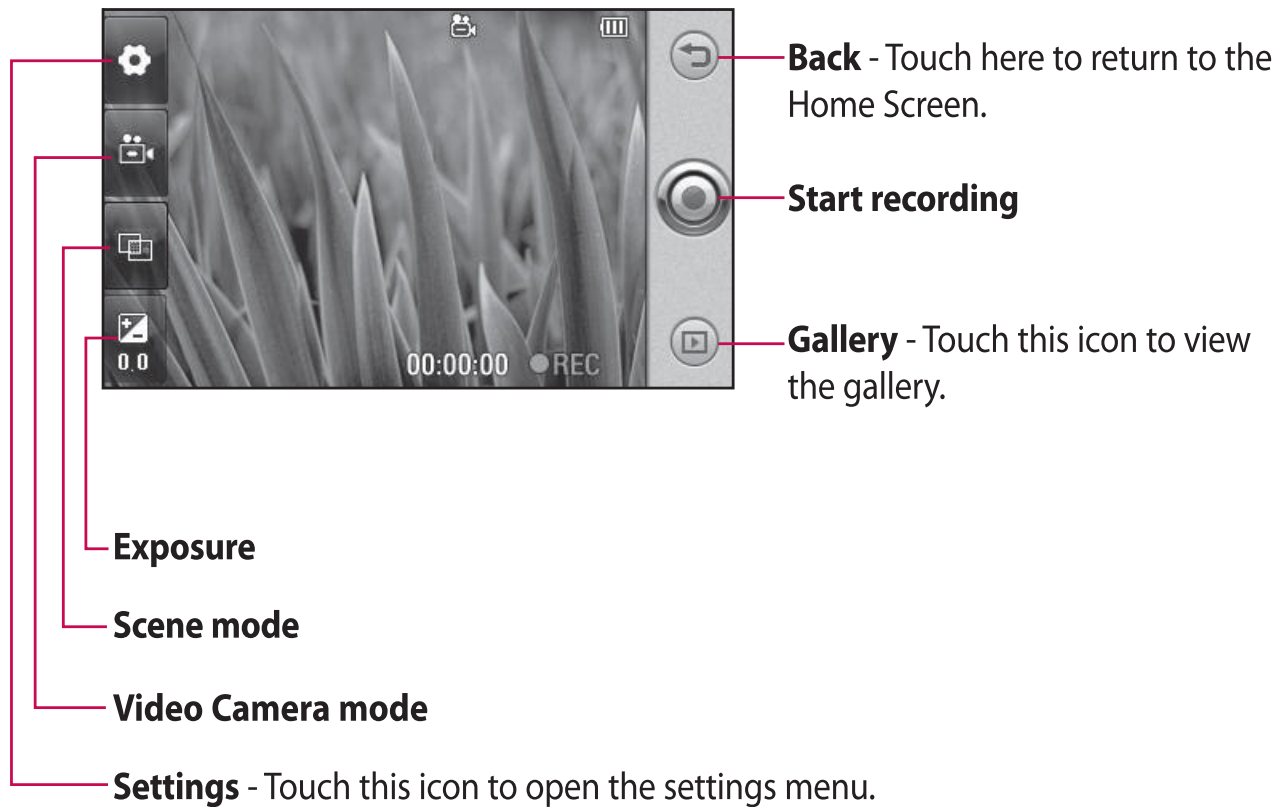

TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, darker image or towards  for a higher exposure, brighter image.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting an option, touch the **OK** Button.

Video size - Change the size of the video to save memory space. See **Changing the video image size**.

Grid view - Choose between Off, Simple cross or Trisection.

Voice - Choose **Mute** to record a video without sound.

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Memory in use - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Video quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

Video Camera

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

White balance - The white balance ensures any white in your video is realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Color Effect - Choose a Color tone to use on your video. Select a Colour tone between **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green** and **Solarize**.

Changing the video image size

The more pixels, the larger the file size, which means the files take up more memory space. If you want to store more videos on your phone, you can alter the number of pixels to make the files smaller.

- 1 Using the viewfinder, touch ⚙️ in the top left corner.
- 2 Select **Video size** from the Preview menu.
- 3 Select a pixel value from the four options:
 1. 400 x 240
 2. 320 x 240
 3. 176 x 144
 4. 128 x 96

Choosing a color tone

- 1 Using the viewfinder, touch  in the top left corner.
- 2 Select **Color Effect** from the Preview menu.
- 3 There are ten color tone options: **Off, Negative, Sepia, Mono, Aqua, Emboss, Sketch, Red, Green, or Solarize.**
- 4 Touch the color tone you want to use.

Using the inner video camera

- 1 To switch to the inner camera, touch  then select **Inner Camera** from the Preview menu.
- 2 After a few seconds you'll see yourself in the viewfinder. To start recording the image press the capture button as normal, and press it again to stop recording.

- 3 After you've shot the video you'll be offered all the options available for a video shot using the main camera.
- 4 To return to the main camera touch  and then **Outer Camera.**

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch the video you want to view.

Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  select **My Stuff** from Multimedia Tab. You can open a list of folders storing all of your multimedia files.

Pictures

My Pictures contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken on your phone's camera.

My Pictures options menu

The options which are available to you in **My Pictures** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera.

Sending a photo

- 1** To send a photo just select the picture you want.
- 2** Touch **Menu** and select **Send**. Choose from **Message**, **E-mail**, **Bluetooth**.
- 3** If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to.

Using a picture

You can choose images to use as a wallpaper, contact, picture, start up or shut down image or your outgoing or incoming call image.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Pictures**.
- 3 Select an image and touch **Menu**.
- 4 Touch **Use as** and choose **Wallpaper** or **Contact Image**.

Moving or copying a picture

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images **from** being lost.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Pictures**.
- 3 Touch **Menu**.
- 4 Select **Move** or **Copy**.

Multimedia

Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Pictures**.
- 3 Touch **Menu** then **Slide show**.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Pictures**.
- 3 Touch **Menu** then **Memory Info**.

Music

The **My Music** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Music**.
- 3 Select a sound.
- 4 You can use the sound by selecting **Use as** menu.
- 5 Choose from **Ringtone** or **Message tone**.

Videos

The **My Video** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch menu key  then select **My Stuff** from Multimedia Tab.
- 2 Touch **My Video**.
- 3 Select a video to play.

Sending a video clip

- 1 Select a video and touch **Menu**.
- 2 Touch **Send** and choose from **Message, E-mail, Bluetooth**.
- 3 If you choose **Message** or **E-mail**, your video clip will be attached to the message. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

Playing a game

- 1 Touch menu key  then select **Games** from Multimedia Tab.
- 2 Windows games (Bubble Breaker, Solitaire) have been added. You can download the games from the internet also. To play, tap the game that you want to enjoy.

Multimedia

Mobile Java

GM730 supports Java and hence you can easily download java games and other java applications from the internet.

Mobile Java has two sub folders : Games and Applications.

Please note that additional costs may be incurred when using online services.

Music

Your GM730 has a built-in music player so you can play all your favorites tracks. To access the music player, touch  then select **Music** from Multimedia Tab. From here you can access a number of folders:

All Tracks - Contains all of the songs you have on your phone.

Favorites - Contains the songs you have saved as favorites.

Artists - Browse your music collection by artist.

Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Playing a song

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Touch **All Tracks**.
- 3 Select the song you want to play and touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.

TIP! To change the volume while listening to music, touch .

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All Tracks** folder.

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Touch **Menu**.
- 3 Touch **New Playlist**, enter the playlist name and touch **OK**.
- 4 The All tracks folder will be displayed. Touch all of the songs that you would like to include in your playlist; a tick will **appear** next to the selected track names.
- 5 Touch **OK**.

To play a playlist, select it and touch .

NOTE: To add a second playlist, touch **Menu** then **New Playlist**.

Playing a playlist

- 1 Touch menu key  then select **Music** from Multimedia Tab.

- 2 Select the playlist you wish to play.

- 3 Touch  to play a song.

Deleting a playlist

- 1 Touch menu key  then select **Music** from Multimedia Tab.
- 2 Select the playlist you wish to delete.
- 3 Touch **Menu**.
- 4 Touch **Remove All** to remove all of the songs in the playlists, your empty playlist will be deleted when you go to all tracks.

Using the radio

Your GM730 has an FM radio feature so you can tune into your favorite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio.

Multimedia

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. You can save stations to specific channel numbers so you don't have to keep re-tuning.

Automatic tuning:

- 1 Touch menu key  then select **FM Radio** from Multimedia Tab.
- 2 Touch **Menu**.
- 3 Touch **Scan**.
- 4 Select Stop to stop the auto scan.
- 5 If you want to save the current channel, then touch **Menu** and select **Save preset**. It can be found in preset list.

Listening to the radio

- 1 Touch  then **Multimedia**.
- 2 Touch **FM Radio**
- 3 Touch  to bring the preset list.
- 4 Touch the channel of the station you would like to listen from the preset list.
- 5 Touch **Menu** and select **Options**, This allows you to enable RDS.

TIP! Enable RDS: Displays the received data message from radio station on the screen.

TIP! To improve radio reception, extend the headset cord, which functions as the radio aerial.

 **WARNING:** If you connect a headset not specifically made for the phone, the radio reception can be affected.

Multimedia contents are stored in different folders by default.
Please refer to the table below.

	No SD card	SD card inserted
Camera Pictures	\ My Documents \ My Pictures	\ Storage Card \ LGCD
Video recording	\ My Documents \ My Video	\ Storage Card \ LGCD
Saved MMS attachment	\ My Documents \ MMS	\ Storage Card \ MMS
Download through browser	\ My Documents	\ My Documents

UTILITIES

Adding an event to your calendar

- 1 From the Home Screen select  then scroll through **LG Calendar** in Utilities tab.
- 2 Select the date to which you want to add an event.
- 3 Touch **Menu** then **New Appointment**.
- 4 If you would like to add a subject to your event, touch **Subject** and type in your note.
- 5 Check the date and time you want your event to begin. Enter the finish date and time also.
- 6 Select **Alarm** to set an alert for the event. If you want to repeat the alarm, select **Repeat**.
- 7 Touch **Categories** then choose between **Business, Holiday, Personal, Seasonal** or create **New category**.
- 8 Touch OK to save the event in the calendar. A coloured square cursor will mark all days that have saved events, and an alarm will sound at the time that the alarm was set to help you stay organised.

Changing your default calendar view

- 1 From the Home Screen select  then scroll through **LG Calendar** in Utilities tab. Select **Settings** in **Menu**.
- 2 Touch **Set default view** and choose **Month, Week, Day, List** or **All Tasks**.

Adding an item to your To Do list

- 1 From the Home Screen select  then scroll through **LG-Calendar** in Utilities tab.
- 2 Select **New Task** in **Menu**.
- 3 Set the date for the task, add notes, then select its priority level: **Low**, **Normal** or **High**.
- 4 Save the task by selecting **OK**.

Setting your alarm

- 1 From the Home Screen select  then scroll through **LG Alarms** in Utilities tab.
- 2 If you want to add a new alarm, touch **New Alarm**.
- 3 If you want to set the alarm to sound again within one hour, touch **Quick Alarm**.
- 4 Set the time you would like the alarm to ring.

- 5 Choose the repeat type you want the alarm to repeat.
The icons indicate the weekday you select.
- 6 Select **Sound/ Vibration** to select the type of alarm you want.
- 7 After touching **More** icon, you can select **Alarm Bell** and control **Volume, Vibration Type**.
- 8 Select snooze interval to **5,10,20,30 minutes** or **Turn it off**. Then select snooze repeat.
- 9 Finally add a memo to the alarm.

UTILITIES

Using Office Mobile

Excel Mobile

Excel Mobile makes it easy for you to open and edit Excel workbooks and templates created on your PC. You can also create new workbooks and templates on your device.

NOTE: Work in full-screen mode to see as much of your workbook as possible.

Tap View > Zoom and select a percentage so that you can easily read the worksheet.

Unsupported features in Excel Mobile

Excel Mobile does not fully support some features such as formulas and cell comments. Some data and formatting may be lost when you save the workbook on your device. Note the following Excel Mobile formatting considerations:

- ▶ Alignment. Horizontal, vertical, and wrap-text attributes remain the same, but vertical text appears horizontal.
- ▶ Borders. Appear as a single line.
- ▶ Cell patterns. Patterns applied to cells are removed.
- ▶ Fonts and font sizes. Fonts not supported by your device are mapped to the closest font available. The original font is listed on your device. When the workbook is opened in Excel on your PC again, the data is displayed in the original font.
- ▶ Number formats. Numbers formatted using the Microsoft Excel 2007 Version 6.1 conditional formatting feature are displayed in Number format.

- ▶ Formulas and functions. If an Excel file contains a function that is not supported by Excel Mobile, the function is removed, and only the returned value of the function appears. The following formulas are also converted to values: formulas entered as an array or containing an array argument, for example, =SUM({1;2;3;4}); formulas containing external link references or an intersection range reference; and formulas containing references past row 16384 are replaced with #REF!
- ▶ Zoom settings. Are not retained. Excel supports a per worksheet zoom setting, while the Excel Mobile zoom setting is applied to the entire workbook.
- ▶ Worksheet names. Names that reference worksheets within the same workbook are displayed accurately, but names that refer to other workbooks, arrays, for example, ={1;2;3;4}, array formulas, or intersection ranges are removed from the name list. If a name is removed from the list, it is left in formulas and functions, causing those formulas to be resolved as “#NAME?” All hidden names are not hidden.
- ▶ AutoFilter settings. Are removed. However, you can use the AutoFilter command in Excel Mobile to perform similar functions. If you have an AutoFilter applied to a worksheet that causes rows to be hidden, the rows remain hidden when the file is opened in Excel Mobile. Use the Unhide command to display the hidden rows.
- ▶ Chart formatting. All charts will be saved the way they are shown in Excel Mobile. Unsupported chart types are changed to one of these supported types: Column, Bar, Line, Pie, Scatter, and Area.

UTILITIES

Background colors, gridlines, data labels, trend lines, shadows, 3D effects, secondary axes, and logarithmic scales are turned off.

- ▶ **Worksheet features.** The following features are not supported in Excel Mobile and are removed or modified when a workbook is opened on the device: hidden sheets are not hidden; VBA modules, macro sheets, and dialog sheets are removed and replaced with a place holder sheet; text boxes, drawing objects, pictures, lists, conditional formats, and controls are removed; pivot table data is converted to values.

PowerPoint Mobile

With PowerPoint Mobile, you can open and view slide show presentations created on your PC in *.ppt and *.pps format with PowerPoint '97 and later.

Many presentation elements built into the slide shows such as slide transitions and animations will play back on the device. If the presentation is set up as a timed slide show, one slide will advance to the next \automatically. Links to URLs are also supported.

PowerPoint features not supported on the device include:

- ▶ **Notes.** Notes written for slides will not be visible.
- ▶ **Rearranging or editing slides.** PowerPoint Mobile is a viewer only.
- ▶ **File formats.** Files created in *.ppt format earlier than PowerPoint '97 and HTML files in *.htm and *.mht formats are not supported.

To start a slide show presentation

- 1 From the Home Screen select  then scroll through **Office Mobile** in Utilities tab and select **PowerPoint Mobile**.
- 2 In the presentation list, tap the slide show you want to view.
- 3 Tap the current slide to advance to the next slide.

If the presentation is set up as a timed slide show, slides will advance automatically.

To stop a slide show

- In a PowerPoint Mobile presentation, tap ▲ and **End Show**.

To navigate between slides

You can advance to the next slide if a presentation is not set up as a timed slide show, return to the previous slide, or go to any slide out of sequence.

- 1 From the Home Screen select  then scroll through **Office Mobile** in Utilities tab and select **PowerPointMobile**.
- 2 Open the presentation you want to view.
- 3 Tap ▲ and **Next** or **Previous**, or tap **Go to Slide** and tap the slide you want to view.

UTILITIES

TIP!

- ▶ Simply tap the current slide to go to the next one.
- ▶ If you have zoomed in to see a slide in more detail, you cannot navigate to another slide until you zoom out. Tapping Next or Previous may play an animation on a slide rather than navigate to another slide.

Word Mobile

Word Mobile is a streamlined version of Microsoft Word. Word documents created on your PC can be opened and edited on your device. You can also create and edit documents and templates in Word Mobile and save them as *.doc, *.rtf, *.txt, and *.dot files.

You can only have one document open at a time. When you open a second document, the first one is saved and closed automatically.

When you close a newly created document, it is automatically named after the first several words in the document and placed in the Word Mobile document list. You can easily rename the document with a more meaningful name and move it to another folder or a storage card.

To create a file

From the Home Screen select  then scroll through **Office Mobile** in Utilities tab and select **World Mobile**.

- 1 In Word Mobile, tap New.
- 2 You'll see either a blank document or template, depending on what you've selected as the default template.
- 3 Enter text as desired.
- 4 When finished, tap OK to save the file.

Word Mobile does not fully support some features of Microsoft Word such as revision marks and password protection. Some data and formatting may be lost when you save the document on your device.

The following features are not supported in Word Mobile.

- Backgrounds
- Shapes and text boxes
- Artistic page borders
- Smart tags
- Metafiles

► **Bi-directional text.** While Word Mobile will open documents containing bi-directional text, the indentations and alignment may be displayed and saved incorrectly.

► **Document protection.** Word Mobile does not support displaying files that have been protected in Word on the PC.

The following features are partially supported in Word Mobile.

► **Picture bullets**

UTILITIES

- ▶ **Revision marks:** When you open a document that has revision marks in Word Mobile, the document appears as if all revision marks were accepted. When you save the document in Word Mobile, revision marks are lost.
- ▶ **Table styles:** When you save a document in Word Mobile, some or all the formatting that is defined in the table style is lost.
- ▶ **Underline styles.** Underline styles not supported by Word Mobile are mapped to one of the four supported styles: regular, dotted, wavy, or thick/bold/wide.
- ▶ **Legacy Pocket Word files.** You can open *.psw files in Word Mobile; however, if you edit a file, you will need to save it in *.doc, *.rtf, *.txt, or *.dot format.

The following features are not supported on the device; however, they are retained in the file so that when a file is opened on the PC again, they appear as expected.

- ▶ **Footnotes, endnotes, headers, footers**
- ▶ **Page breaks:** Word Mobile does not display breaks between pages. However, all page breaks except for breaks at the end of a document are retained in the document.
- ▶ **Lists:** When you open the document on the computer again, indented lists are displayed in the original form.
- ▶ **Fonts and font sizes.** Fonts not supported by the device are mapped to the closest font available, although the original font will be listed on the device.

To get more help about Word Mobile

- When in Word Mobile, tap **Start** > **Help**.

Using your calculator

- 1 From the Home Screen select , then scroll through **Calculator** in Utilities tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, −, x, ÷), followed by =.

Backup your memory

Sprite Backup allows backup to SD Card, Main Memory, PC and FTP. For instructions on using the PC and FTP options, please view these sections.

- 1 From the Home Screen select , then scroll through **Tools** in

Utilities tab.

- 2 Chose **Sprite Backup** and select **Backup**.
- 3 From the **Backup Data Selection** screen you can customize the backup. You can add/remove items by simply enabling the check boxes.
- 4 Press **Next** to continue with the operation and open the **Save As** screen.

UTILITIES

- 5 In the **Save As** screen you can add a name for the backup and also select the location to save the file.
- 6 After entering a name and selecting a location, press **Next** to continue.
- 7 Once the backup index is completed, Sprite Backup will soft reset your device and display the progress screen.
- 8 When the operation is completed, touch **Next. Sprite Backup** will automatically soft reset the device and display the notification message.
- 9 To view the report file, select **View Report or OK** to close the notification message.

NOTE:

- ▶ The report file will display information about the Backup operation. You can also view the operation report from the history option of the application. For more information view the Options-History.
- ▶ Once the operation is started do not start any applications on the device until the operation is completed.

Restore your memory

Sprite Backup allows you to Restore from Internal storage such as SD Card, Main Memory, PC and FTP.

- 1 From the Home Screen select , then scroll through **Tools** in Utilities tab.
- 2 Chose **Sprite Backup** and select **Restore**.
- 3 **Sprite Backup** will search for all available backup files and display them in **Open File** screen.
- 4 From the **Open File** screen, select the location from the drop down list. For PC and FTP locations you must have an Activesync or Network connection active.
- 5 After selecting the **appropriate** location you can select the backup file that you wish to use to restore.
- 6 Once you have selected the backup file, press **Next** to continue with the operation and display the **Restore Data Selection** screen.
- 7 From the **Restore Data Selection** screen you can customize the restore operation. You can add/remove items by simply enabling the check boxes.
- 8 Press Next to continue with the operation. Before initiating the restore operation **Sprite Backup** will perform a soft reset.
- 9 After soft reset the **Restore Progress** screen will be displayed.
- 10 When the operation is completed the device will soft reset and the restore operation notification will be displayed.
- 11 Select **View Report** to view the operation report or **OK** to close the notification message.

UTILITIES

NOTE:

- ▶ Depending on the size of the backup file that you are restoring, the restore operation can take a few minutes. We recommend not using the device while the operation is being performed. When you are performing a restore operation, please be aware that once the operation is completed Sprite Backup will perform a soft reset. If the soft reset occurs while you in a phone call your phone call will be terminated.
- ▶ If a soft reset is performed when programs are running, unsaved work will be lost.
- ▶ Do not open any applications or perform any task on the device while the restore operation is being performed.

Schedule Sprite Backup

Sprite Backup allows you to schedule backup operations to different storage locations such as SD Card, Main Memory, PC and FTP.

- 1** From the Home Screen select , then scroll through **Tools** in Utilities tab.
- 2** Choose **Sprite Backup** and select **Schedule**.
- 3** Press **Next** to open the **Backup Schedule** screen.
- 4** Select a Frequency and enter a valid Date and/or Time for the backup.
 - **Once:** will start a backup at the designated time and date.
 - **Daily:** will start a backup at the designated time each day.
 - **Weekly:** will start at the designated time and day each week, starting with the selected date.

- 5 Press **Next** to continue and to open the **Save As** screen.
- 6 In the **Save As** screen, you will need to enter a file name and select the location for the backup file.
- 7 Optionally enter a description for the backup file.
- 8 Press **Next** to complete the setup.
- 9 Press **Next** to confirm the changes and go back to **Sprite Backup** main screen.

NOTE:

- ▶ If you are using PIN Lock you will have the choice of using the background Mode that causes Sprite Backup to perform the operation without the need to unlock the device to continue.
- ▶ The selected backup location must be available for scheduled backups to proceed. If the location is not accessible, the backup will not proceed.

Using the options menu

Sprite Backup provides a number of options to help you manage your backup requirements.

▶ **Backup**

Provides a number of options to help you manage your backup requirements.

▶ **Restore**

Provides different restore options, these options are used to maximize the restore operation. In most cases you will get the best result by using the default option but depending on how complicated the restore operation is sometimes you will need to change these options to get the best result.

- **General Restore Options:**

Are used for standard restore operations. (Restore operations to the same device or similar device with identical hardware and OS versions.

UTILITIES

- **Upgrade Mode Options:** Are used when restoring between different devices (Hardware types) or devices with different OS versions (AKU and AKU2). We are constantly working on improving our upgrade mode restore operation but due to constant development and changes to the Windows Mobile platform '**Upgrade Mode**' may not always restore your device to a desired state.)

► **Networking**

Supports backup and restore operations between your mobile device and a PC or FTP site. This section outlines how to configure and check these connections.

► **Security**

Allows you to control Encryption, SIM Lock and the General security options.

► **History**

Provides a list of the dates and times of the previous backups, with the most recent at the top of the list. Backup reports occupy very little storage space, but can be manually deleted. Sprite Backup will begin automatically deleting old backup reports after 30 have been created.

► **Help**

Allows you to perform a number of tasks such as registration, authorization, provides version information and access to the help file.

Mobile Zip

Mobile Zip is a comprehensive archiving tool for viewing and extracting a wide range of archiving formats.

Main Features of Mobile Zip

- Multi-tab user interface
- Open and browse a wide range of archive formats
- Extremely easy to use with user friendly interface
- Single-handed operation with extensive softkeys and navigation buttons supports
- Two folder views that enable user to copy, move, extract and add to archive from one to the other in a breeze
- Extract-View-Edit cycle supported. Open an item in the archive, edit it and have it inserted back to the archive
- Open archive as regular folder in the folder views
- Encryption: Mobile Zip includes standard zip 2.0 file encryption which is compatible with other major zip file applications on the desktop, and AES 256 bits advanced encryption Which is available to some of the latest zip utilities on desktop computers.
- Encryption: Mobile Zip includes password manager (PassMan) that make it easy for user to store and retrieve passwords using a single master password
- Encryption: Password-Manager view provides links to password list settings.

UTILITIES

Views

- ▶ **Home** view is used mainly as a startup page where you learn and some basic features of the application and go through setup.
- ▶ **First-Folder** and **Second-Folder** views are double-folder views that have been designed to make copying, moving, extracting and archiving data an extremely easy task
- ▶ **PassMan** view is a password-manager view with some setting links that enable user to organize passwords in a single, master-password encrypted database
- ▶ **Options** view provides you with links to settings dialogs and other informative links

Creating Zip Archive

In the selected folder, select an item or items, tap and hold on the selected item or items, when the shortcut menu appears scroll down to select:

- Add to archive ... command, if you want to add archive with options to set password, name and type.
- Add to 'name.zip' command, if you want to add directly to the named archive without password.
- Compress and Email... command, if you want to compress the selected items into an archive with options to set password, name and type and then send the output archive via email.

- Comp. to 'name.zip' and Email... command, if you want to compress to the named archive and send the output archives via email.

Extracting Archive/Archives

In the selected folder view, tap and hold on the selected archive/archives. On the folder shortcut context menu, select:

- Extract... command to extract the selected archive/archives with option to set destination folder, set password, select extraction behavior etc.
- Extract Here command to simply extract the content of the selected archive/archives in this folder.
- Extract to 'name folder' command to simply extract the content of the selected archive/archives into the named folder.

Password Manager

Password manager is a password-managing module that facilitates easy but secure password management. The password database file is saved in the application directory as an AES-256 encrypted file based on the master password. If you lose your master password, you lose the password list. In that case you need to use the Delete All command to delete the password list and start anew. In the PassMan view you have the following options:

- PassMan Status Switch enables user to switch on and off the password manager. User will be prompted to enter master password to activate password manager. Once activated, in the password dialog, the right softkey will display the PassMan command. Use it to access password list in the password dialog for any

UTILITIES

archive that prompt the user for password. If password list has not been defined, switching on the password manager will create a password database and user will be prompted to input master password for the database.

- Password List is the link to dialog that manage user's password list. In the dialog, use the right softkey to add, edit, delete or save the password. To add new password, select New, fill in the ID, Password and then select Apply.
- Master Password enables user to set new master password for the existing password list.
- Delete All option allows user to delete all password list without prompting user for master password. Use it if you have lost your master password.

ActiveSync

ActiveSync synchronizes information on your device with information on your PC, such as Outlook content. ActiveSync can also synchronize over a cellular network with Microsoft Exchange Server, if your company or service provider is running Microsoft Exchange Server with Exchange ActiveSync. When you synchronize, ActiveSync compares the information on your device with the information on your PC and/or Exchange Server and updates all locations with the most recent information.

With ActiveSync, you can:

- ▶ Synchronize information, such as Outlook E-mail, Contacts, Calendar, or Tasks information on your device with your PC, as well as pictures, video, and music.
- ▶ Synchronize Outlook E-mail, Contacts, Calendar appointments, and Tasks on your device directly with Exchange Server so that you can stay up to date even when your PC is turned off.
- ▶ Exchange files between your device and your PC without synchronizing.
- ▶ Select which types of information are synchronized and specify how much information is synchronized. For example, you can choose how many weeks of past Calendar appointments to synchronize.

Before you can synchronize information with a PC, first, you must install ActiveSync on your PC. And then you create a synchronization relationship between your device and the PC. You can install ActiveSync from the Getting Started disc that comes. Once you have installed ActiveSync

ActiveSync

and set up a synchronization relationship, ActiveSync on the PC recognizes your device when you connect it, and automatically transfers the synchronization settings you specified on your device.

You may be able to synchronize your device with Exchange Server through your company or wireless service provider. If you plan to do so, obtain e-mail address, Exchange Server address, user name, password, and domain name from your administrator before starting the Sync Setup Wizard.

Setting up Windows Vista™

Microsoft Windows Mobile® Device Center is the replacement for Microsoft® ActiveSync® on Windows Vista™.

NOTE: Some versions of Windows Vista that come with Windows Mobile Device Center are already installed. If Windows Mobile Device Center is not available on your Windows Vista computer, you can install it from the Getting Started Disc that came with your device.

Set up synchronization in Windows Mobile Device Center

When you connect your device to your PC and start Windows Mobile Device Center for the first time, you are asked to create a Windows Mobile partnership with your device. Follow the steps below to create a partnership.

- ▶ Connect your device to your PC. Windows Mobile Device Center configures itself and then opens.
- ▶ On the license agreement screen, click **Accept**.

NOTE: Choose **Connect without setting up your device** if you only want to transfer media files, check for updates, and explore your device but not sync Outlook information.

- ▶ Select the items you want to synchronize, then click **Next**.
- ▶ Enter a device name and click **Set Up**. When you finish the setup wizard, Windows Mobile Device Center synchronizes your device automatically. Notice that Outlook e-mails and other information will appear on your device after synchronization.

Use Windows Mobile Device Center

To open Windows Mobile Device Center, click **Start > All Programs > Windows Mobile Device Center** on your Windows Vista computer. On Windows Mobile Device Center, you can do the following:

- ▶ Click **Mobile Device Settings** to change synchronization settings.
- ▶ When you click **Pictures, Music and Video > ___ new pictures/video clips are available for import**, a wizard guides you to tag and transfer photos from your device to the Photo Gallery on your Windows Vista PC.
- ▶ Click **Pictures, Music and Video > Add media to your device from Windows Media Player** to synchronize music and video files using Windows Media™ Player. For more information, see “Windows Media® Player Mobile” in Chapter 11.

ActiveSync

- ▶ Click **File Management** > **Browse the contents of your device** to view documents and files from your device.

Setting up Windows XP

If you are using Windows XP the Getting Started CD that comes with your device contains Microsoft ActiveSync 4.5 or later. Follow the steps below to install and set up ActiveSync on Windows XP.

- ▶ Insert the Getting Started CD into the CD drive of your PC.
- ▶ Select **Setup and Installation** and follow the on-screen instructions to install ActiveSync.
- ▶ After installation is completed, connect your device to your PC using the sync cable.
 - Connect the smaller end of the USB cable to your device.
 - Connect the larger end of the USB cable to the USB port on your computer.
- ▶ The Synchronization Setup Wizard automatically starts and guides you to create a synchronization relationship. Click **Next** to proceed.
- ▶ **Embolden** "Synchronize directly with a server running Microsoft Exchange Server"
- ▶ Select the information types that you want to synchronize, and then click Next. Click Finish.

When you finish the wizard, ActiveSync synchronizes your device automatically.

Synchronizing Information

When you connect your device to the PC using a USB or a Bluetooth connection, ActiveSync will immediately synchronize. While the device is connected, ActiveSync synchronizes every time you make a change on either the PC or the device.

Synchronizing Outlook information

If you have set up a synchronization relationship between your device and the PC, synchronization keeps Outlook information up-to-date on computer and Mobile handset. ActiveSync synchronizes a limited amount of information by default to save storage space on your device. You can change the amount of information synchronized for a given information type in Settings for the information type.

You can set up your device to synchronize with more than one PC or with a combination of one or more PCs and Exchange Server. When synchronizing with multiple computers, the items that you synchronize will appear on all of the computers with which they are synchronized.

For example, if you have set up synchronization with two PCs (PC1 and PC2), which have different items, and you synchronize Contacts and Calendar on the device with both computers, the result is as follows:

ActiveSync

Location	New state
PC1	All Outlook contacts and calendar appointments that were on PC2 are now also on PC1.
PC2	All Outlook contacts and calendar appointments that were on PC1 are now also on PC2.
Device	All Outlook contacts and calendar appointments from both PC1 and PC2 are on the device.

To start and stop synchronization

- ▶ To synchronize Outlook information and other local information on the PC, including media files, connect your device to the PC using Bluetooth or a cable.

- ▶ If you are synchronizing directly with Exchange Server, you can use the PC connection to the network that is "Desktop Pass-through", or you can synchronize without connecting to the PC over a cellular network.

- ▶ In ActiveSync, tap **Sync**. To end synchronization before it completes, tap Stop. To change which information is synchronized

- 1 In ActiveSync on the device, tap **Menu > Options**.

- 2 Do one or both of the following:

- ▶ Select the check box for any items you want to synchronize. If you cannot select a check box, you might have to clear the check box for the same information type elsewhere in the list.
- ▶ Clear the check box for any items you want to stop synchronizing.

- 3 To stop synchronizing with one PC completely, tap the PC and tap Delete.

NOTE: Outlook e-mail can be synchronized with only one computer. To change available synchronization settings, select the type of information and tap Settings.

To synchronize directly with Exchange Server

You can set up synchronization with Exchange Server on your device, if it is available to you through your company or wireless service provider. However, you should first ask your administrator for the following information and then carry on with the steps: e-mail address, Exchange Server address, user name, password, and domain name.

- 1 In ActiveSync on the device, tap **Menu > Configure Server**. If you have not yet set up synchronization with Exchange Server, this will say **Add Server Source**.
- 2 Enter e-mail address, and tap **Next**.
- 3 In Server address, enter the address of the server running Exchange Server, select the check box if this Server requires an encrypted (SSL) connection. And tap **Next**.
- 4 Enter user name, password, and domain, and tap **Next**. To change the rules for resolving synchronization conflicts, tap Advanced.
- 5 Select the check boxes for the types of information items that you want to synchronize with Exchange Server.

ActiveSync

- 6 To change available synchronization settings, select the type of information, and tap **Settings**.
- 7 Tap **Finish**.

Synchronizing via Bluetooth

You can connect your device to the PC to synchronize using Bluetooth.

To synchronize with a PC via Bluetooth

- 1 Firstly, check “Allow connections to one of the following” from the ActiveSync connections Settings menu on your PC. Select the proper COM port. If there is no available connections, then you should first make a Bluetooth pairing.
- 2 Select the ActiveSync item in Programs menu. Then ActiveSync⇅Menu⇅Connect via Bluetooth.

Synchronizing Music, Video, and Pictures

If you want to carry your music or other digital media with you while you travel, ActiveSync works with Windows Media Player to synchronise music, video, and pictures.

Other than selecting the Media information type in ActiveSync to be synchronised, all media synchronization settings must be set in Windows Media Player. Before media can be synchronised, you must do the following:

- ▶ Install Windows Media Player Version 10 on the PC.

- ▶ Connect your device to the PC with a USB cable. If the device is currently connected using Bluetooth, you must end that connection before media can be synchronised.
- ▶ Insert a storage card into your device (32MB or larger is recommended).
- ▶ Set up a sync partnership between the storage card and Windows Media Player.

Change Media synchronization settings

Once you select the Media information type in ActiveSync to be synchronised, any of your favorite music, video, and picture files in Windows Media Player playlists can be synchronised. All you have to do is set up synchronization in Windows Media Player for those media files.

To set up a sync relationship with a storage card

- 1** Open Windows Media Player.
- 2** Click the **Sync** tab.
- 3** Select the storage card.
- 4** Click **Set up Sync**.

The Web

Browser

Browser gives you a fast, full color world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the Home Screen select  then select **Internet Explorer** from the Communication tab.
- 2 The browser homepage will be opened directly.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favorites websites, you can add bookmarks and save web pages.

- 1 From the Home Screen select  then select **Internet Explorer** from the Communication tab.
- 2 Select **Favorites**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Menu** and touch **Add to Favorites**. Enter a name for the bookmark followed by its URL.
- 4 Touch **Add**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark. You will be connected to your bookmark.

Using browser option menus

You can check the following menus by tapping **Menu**.

Favorites - You can check the list of URLs/Pages that you stored.

Add to Favorites - You can store frequently accessed or favorite URLs/Pages.

Go to Web Address - You can access web pages by entering the URL.

Zoom Out - You can see web page as thumbnail. You can go back to normal view by touching the screen.

Home Page - You can access the home page directly.

History - You can view the list of the pages you've already viewed.

Forward - When viewing previously viewed pages, selecting Forward displays the next page of the currently displayed web site.

Refresh - Reload the currently displayed web site.

View

- **Text Size:** Largest/Larger/Medium/Smaller/Smallest

- **Full Screen:** You can view the web site in full screen. You can bring up the option menus by pressing and holding the screen for a while. You can go back to normal view by selecting **Full Screen** again.

- **Mobile:** Dynamically resizes web pages to maximize viewing on handheld devices without requiring a user to scroll across a page.

- **Desktop:** You can view the web page as that displayed on the desktop computer.

The Web

Tools

- **Send Link:** You can send the Link by text message.
- **Properties:** You can view the page's information.
- **Options:** You can check more options.

Copy/Paste - You can copy or paste the text in the web page.

Settings

Within this tab you can adapt your settings to make your GM730 more personal.

Personalising your profiles

You can quickly change your profile on the Home Screen. Simply touch the status summary icon at the top of the LCD display and touch the profile tab.

Using the Settings tab you can personalise each profile setting.

- 1 From the Home Screen select  then scroll through **Profiles** in the Settings tab.
- 2 Choose the profile you want to edit: **Normal**, **Vibrate**, **Silent**, **Outdoor** and **Automatic**.
- 3 You can then change all of the sounds and alert options available in the list.

Changing your Display settings

- 1 From the Home Screen select  then scroll through **Display Settings** in the Settings tab.
- 2 You can choose the option menu from:

Backlight - Set your backlight settings.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Wallpaper - Choose your background.

TIP! ALC(Auto Luminous Control) Sensor LCD backlight brightness is automatically adjusted based on the exterior light.

Settings

Changing your phone settings

Enjoy the freedom of adapting your GM730 to work to your own preferences.

- 1 From the Home Screen select  then scroll through **Phone** in the Settings tab.
- 2 You can choose the tab menu from the list below.

Phone

- **Ring type:** This option determines the incoming call notification mode. You can select from **Ring, Increasing ring, Ring once, Vibrate, Vibrate and ring, Vibrate then ring, None.**
- **Ring tone:** You can select the ringtone for incoming voice calls.
- **Keypad:** You can set the key tone to be played when pressing the keys.(Long tones/Short tones/Off)

Services - To access settings for a service, select it from the following list and tap **Get Settings**.

- Call Barring

Block incoming calls: All calls/
When roaming/Off.

Block outgoing calls: All calls/
International/International except
to home country/Off

To edit mobile call barring settings, you need a password. You obtain the barring password from your service provider upon subscription to this network service.

Call barring affects all voice and data calls, except emergency calls.

- **Caller ID:** Scroll to **Everyone** to display your caller identity to the people you call, **No one** to hide it or **Only to contacts** to display your caller identity when you call from the contacts.

- **Call Forwarding:** Allows you to forward your incoming calls to another phone number.
- **Call Waiting:** To be notified of incoming calls while you have a call in progress, select Notify me.
- **Voice Mail and Text Message:** When you insert the SIM card into your phone, it automatically detects and sets your voicemail and SMS servers by default. However, you can view the settings if you want. You can also view your voicemail numbers by tapping Voice Mail on the Speed Dial screen.

Network - You can select the network type and the manner of selecting networks.

- **Current network:** The current Network is displayed in the Current network field.

- **Network selection:** Define how to choose between different available networks when travelling, for example. If you choose **Manual**, you can select the network yourself. Scroll to the desired network and tap **OK**. To have the network selected automatically choose **Automatic**.

TIP! Manual selection can be useful when you know that one network is less expensive than another or that it provides faster data transmission.

- **Preferred network:** Tap **Set Networks** (retrieving settings may take a few minutes). Select a network and re-prioritise the order for network usage by tapping **Move Up** or **Move Down**.

Settings

Info. Service - Info service messages are text messages sent by the network to GSM phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the service provider. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly.

- **Cell broadcast:** You can set the reception status.
- **Language:** You can select the language you want by tapping the language. The info service message in the selected language will be received.

- **Select channel to edit/delete:**

You can manage the channels to receive information from.

Band - Select the band type that you want to use. If you chose 2G Only, 3G services such as video call are not performed.

Security - When this is set to **Enabled**, you are requested to enter your PIN each time you switch the phone on.

Using flight mode

- 1 From the Home Screen select  then select **Wireless Settings** in the Settings tab.
- 2 Set the **Flight Mode** to **ON** by tapping the icon.
Flight mode will not allow you to make calls, connect to the Internet, or send messages.

Change Date and Time

- 1 From the Home Screen select  then select **Date & Time**.
- 2 Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.

Bluetooth

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Turn on Bluetooth

From the Home Screen select  then select **Wireless Settings**.

Set the Bluetooth to **ON** by tapping the icon.

NOTE: If you use a PC sync via Bluetooth, you can exchange the data only within the phonebook.

NOTE: When you receive data from another Bluetooth device, the phone requests a confirmation. After confirming the transfer, the file will be copied in your phone.

Pairing with another Bluetooth device

By pairing your GM730 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1** Check your Bluetooth is **On**.
See **Turn on Bluetooth** for more information.
You can change your visibility in the **Settings** menu.
- 2** Touch **Add a device**.
- 3** Select a device type to limit the search and touch **Continue**. Your GM730 will search for Bluetooth devices.
- 4** Choose the device you want to pair with.
- 5** Verify the passkey match on both devices and select **Yes**. Your phone will then connect to the other device.

- 6 Your passcode protected Bluetooth connection is now ready.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch **Menu** and choose **Send**. Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your GM730 will not automatically search for other Bluetooth devices. If not, your GM730 will search for other Bluetooth enabled devices within range.

- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be turned **On**.
- 2 A message will prompt you to accept the file from the sender. Touch **Accept** to receive the file.
- 3 You will see the sender for the file, name of the file and where the file has been saved.

Bluetooth

Changing your Bluetooth settings

1 From the Home Screen select  then scroll through **Bluetooth** in Settings tab.

2 Select **Settings** tab.

Add a device - Setup a new Bluetooth device.

Disable Bluetooth - Chose to deactivate the Bluetooth.

Name - Check your device name that other devices see when your device is discoverable.

Discoverable - Make your device visible only when you want other Bluetooth devices to find it.

Advanced - Setup additional options.

About - check your Bluetooth information.

Wi-Fi

Wireless Settings allows you to manage Wi-Fi Internet on your device. It allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

Turn on Wi-Fi

- 1 From the Home Screen select  then select **Wireless Settings**.
- 2 Set the Wi-Fi to **ON** by tapping the icon.

Set up Wi-Fi

- 1 Check Wi-Fi On.
- 2 A bubble window pops up and shows scanned appropriate Access Points near users.
- 3 Select the Access Point that you are permitted to access and tap **OK**.
- 4 Select the internet to have an internet service and tap **Connect**.

NOTE: If your Wi-Fi service provider or network administrator sets WEP encryption for network security, you should fill in WEP key in the pop-up window. If WEP encryption is not set, this pop-up window is not shown. If you don't know the key, you need to ask it to your Wi-Fi service provider or network administrator.

Wi-Fi

Wireless network settings

A wireless network can be added either when the network is detected or manually by entering settings information. Before doing these steps, determine if you need authentication information.

- 1** Tap **Start > Settings > Connections** tab > **Wi-Fi > Wireless** tab.
- 2** Under **Networks to access**, select **All available**, **Only access points** or **Only computer-to-computer** for the list, depending on the type of networks to which you connect.
- 3** Do one of the following
 - If you do not see a desired network, tap **Menu > Add New**.
 - To change network settings for a network you have already configured, tap the network.
- 4** Proceed through the wizard to the **Configure Network Authentication** page.
 - Select the authentication method from the **Authentication** list.
 - To use data encryption, select an encryption method from the **Data encryption** list.
 - To use a network key automatically, tap **The key is automatically provided**. Otherwise, enter the network key.

Configuring Wi-Fi Connection Settings

NOTE: Before you set the WLAN configuration, you need to ask your WLAN service provider or your network administrator for the IP settings.

- 1** Tap **Start** > **Settings** > **Connections** tab > **Wi-Fi**
- 2** Select **Network Adapters** tab.
- 3** Tap **Network Adaptor** tab and select **Broadcom 802.11 DHD Network**.
- 4** If you tap **Use server-assigned IP address**, you can get IP settings assigned automatically. If you tap **Use specific IP address**, you need to set IP address assigned by your WLAN service provider or network administrator.

- 5** Fill in **IP address**, **Subnet mask**, and **Default gateway**.

- 6** Tap **Name Servers**.

- 7** Fill in **DNS** and **Alt DNS**, **WINS** and **Alt WINS**, if necessary.

NOTE: To prevent the possible Loss of data on your phone, WLAN automatically ends when the battery is almost empty or at a level of below five percent.

Clear Storage

Allows you to remove all your data and files from the Internal memory and also External memory (SD Card) and reset your device to factory default settings.

- ▶ Tap **Start** > **Setting** > **System** tab and select **Clear Storage**.
- ▶ After entering your password, press the **Enter**.
- ▶ Select the check boxes for the types of memory that you want to remove.
- ▶ Press the **Clear**.

NOTE:

- ▶ A Hard Reset should only be performed after all other trouble shooting options have been exhausted.
- ▶ After a hard reset, the device is restored to its default settings - the way it was when you first purchased it and turned it on. Any programs you installed, data you entered, and settings you customized on your device will be lost.

GPS

GPS technology uses information from earth-orbiting satellites to find locations.

A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach them, then uses that information to identify its location.

This can take up to several minutes to find your location.

Stand Alone GPS Receiver – The technology that communicates to the GPS Satellites to determine current location.

A-GPS – This is assisted GPS which decreases the time to first fix (your location) using the network. Charges may apply, please contact your service provider for more details.

GPS Mapping Software – Software that accesses the information from the GPS Receiver and uses this to place you on a map. Maps are stored on a Server where all mapping information is streamed to the handset over a data connection (charges may apply). An example of this software is Google Maps. Note that this type of mapping does not provide turn-by-turn voice navigation.

GPS Navigation Software – Software that accesses the information from the GPS Receiver and uses this to provide turn-by-turn voice navigation on a map.

GPS

There are two types of GPS
Navigation Software:

- 1** Maps stored on Handset/Memory Card where no Data connection is required. A third party may provide this solution.
- 2** Maps stored on Server where all mapping information is streamed to the handset over a data connection (charges may apply). This has the benefit of the maps being regularly updated and can contain other useful information such as petrol prices, parking and weather.

DUN

NOTE:

- ▶ Before activating DUN, make sure your device has a GPRS SIM card installed, and you have set up a GPRS modem connections on your device.
Also make sure you have GPRS SIM support DUN, and connected your device to a computer via USB.
- ▶ To use DUN, you have to install the LGUSBWMLModemDriver on your computer. Refer the below site. www.lg.com
- ▶ When you activate DUN, ActiveSync will be disabled automatically.

To Set up your device as an USB modem

- 1 On your device, tap **Start > Programs > DUN**
- 2 Plug in the USB cable adapter between your device and the computer.

3 Tag **Activate.**

To add your device as a USB modem to your Computer

- 1 On your computer, click **Start > Control Panel.**
- 2 Double-click Phone and Modem Options.
- 3 Click the Modems tab. Select the new modem from the Modem list, then double click the new Modem.
- 4 On the Advanced tab, add following AT command to the Extra initialization commands: `AT+CGDCONT=1,"ip",<access point name>"`

NOTE: For example, `at+cgdcont=1,"ip","internet"`

DUN


To dial up and connect to the Internet

- 1** On your computer, click **Start** > **Control Panel**
- 2** Double-click **Network Connections**.
- 3** Click File > **Create a new Connection**.
- 4** In the New Connection Wizard, click **Next**.
- 5** Click **Connect to the Internet** then click **Next**.
- 6** Select Set up my connection manually then click **Next**.
- 7** Select Connect using a dial-up modem then click **Next**.
- 8** Select the modem that you previously installed, then click **Next**.
- 9** Enter a descriptive name for this connection, then click **Next**.
- 10** Enter the telephone number as *99# or Vender support number(ex, *99***1#), then click **Next**.
- 11** Under **Internet Account Information**, you may not need to enter a user name and password when using GPRS. Just click Next to proceed.
- 12** Click Finish to exit the wizard.
- 13** The Connect dialog box then opens, Click Properties to check again whether the LGE WML USB Modem is selected. If it is correct, click OK, and then, return to the connect dialog box.
- 14** Click **Dial** to dial up and connect to the Internet.

Accessories

These accessories are available for purchase for use with your GM730.

Charger

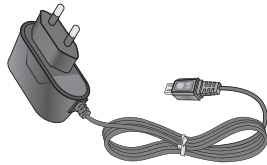

Battery




Stereo headset



Data cable and CD

Connect and synchronise your GM730 and PC.

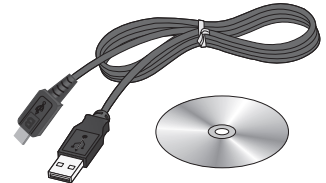

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

LG application store Grand open

Come and experience the newly opened LG Application Store.

You can add more joy to your mobile experience.

lgapplication.com

Network service

The wireless phone described in this guide is approved for use on GSM/ W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : GM730

System : GSM/ W-CDMA

Ambient Temperatures

Max : +55°C (discharging),
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM/ W-CDMA Terminal Equipment

Model Name

GM730

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which
this declaration relates complies with the above
mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director 06.May. 2009

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure the SIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough	Press the On/Off key for at least two seconds.
	Battery empty	Keep charger attached for a longer time.
	Battery contacts dirty	Clean the contacts.

Troubleshooting

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
Phone loses network	Battery defective	Replace battery.
	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

LG Mobile



WARRANTY CARD

This LG handset and charger comes with a 12-month warranty from date of purchase or 15 months from manufacturing date of corresponding IMEI No. Of the unit whichever is earlier, against defect in material or workmanship. In case of a defect, LG Electronics India Pvt. Ltd. undertakes to get the set repaired free of charge through its authorised service centre (ASC) or service dealer subject to following conditions:

Terms and Conditions

1. This warranty is applicable to the first purchase and in no case it can be transferred or extended.
2. Repair of this product will be carried out on a carry in basis to the nearest ASC.
3. While the company will make every effort to carry out repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised ASC/ service dealer reserves the right to retain any parts of the component/s replaced at its discretion. In the event of a defect being noticed in the equipment during the warranty period.
5. This warranty entitles the purchaser to free of cost repairs of the unit within warranty period and does not entitle for replacement or refund of entire unit. Claims, if any, to this warranty shall in no case exceed the purchase price of the unit.
6. In case of any software upgradation of the phone, no warranty is provided on phone memory or phone book.
7. The warranty is void in case the serial no./ IMEI no. is tampered / disfigured or details in the warranty card are not properly filled up at the time of purchase.
8. This warranty is not valid for damages resulting due to negligence, mishandling, improper use, tampering, breakage, soaking, fire, unauthorised repair and failure due to network upgrades.
9. Batteries are covered under warranty for a period of 6 months from date of purchase or 9 months from date of corresponding IMEI no. of the unit whichever is earlier
10. Warranty does not cover accessories external to the equipment supplied by the dealer.
11. The Delhi / New Delhi courts shall have the jurisdiction to try any dispute and /or suits related to or arising out of this agreement.

Customer Information Center/ Call Center Number

For any query related to the after sales service and customer support please contact us at the numbers listed below.

LG SERVICE	
	1800-180-9999*
*MTNL / BSNL **Prefix STD Code	39-01-0909**

BRANCH ADDRESSES

S. No.	Branch	Branch Office Address	STD Code	Phone No.
1	Ahmedabad	LGEIL, 233-234, Platinum Plaza, Judges Bungalow Road, Bodakdev Road, Ahmedabad - 51	079	40040013 / 14
2	Asansol	LGEIL, Block-E, 1st Floor, P C Chattarjee Market, Rambandhu Tala, GT Road (E) Asansol - 713303	0341	3292009 / 3292010
3	Aurangabad	LGEIL, 302 CIDCO No 3, Opp Hotel Ramgiri, Jalna Road, Aurangabad - 431003	0240	2474055 / 32095436 / 32095437 / 32095438
4	Bangalore	LGEIL, No. 914, 2nd Floor, Shri Venkateshwara Complex, Opp. IBP Petrol Bunk, 80ft Road, 6th Block, Koramangala - Bangalore - 560095	080	41145145 / 41144750 / 41144751 / 30910754 / 30910753
5	Bhopal	13 A Vignes Warehousing Corporation, Sector-G Govindpura Industrial Area J K Road Bhopal	0755	4062900 / 3092938 / 3959804
6	Bhubaneshwar	LGEIL, Plot No.02, 1st Flr., Bapuji Nagar, Bhubaneshwar - 751009	0674	2531430 / 2534280 / 3966525 / 3966526
7	Chandigarh	LGEIL, SCO No. 142-143, 3rd Floor, Sector-34A Chandigarh. - 160002	0172	5087389 / 90 / 5089107 / 3256001 / 3256003
8	Chennai	LGEIL, AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai - 600040	044	65510501 ~ 04
9	Cochin	LGEIL, 40/1270, Vasudeva Buildings, T.D. Road, Ernakulam Cochin - 682011	0484	2369743 / 2370744 / 2370484 / 4027444 / 4027555
10	Coimbatore	LGEIL, 250a, Sangarur Main Road, Kannappa Nagar, Coimbatore - 641027	0422	2332197 / 2332195 / 2332506 / 3094613 / 3094573
11	Dehradun	LGEIL, M - 22, Mobbewala, Tata Commercial Compound, Dehradun Saharanpur Road, Dehradun	0135	2644213 / 283
12	Delhi	LGEIL, A-27, Mohan Co-operative, Industrial Estate, New Delhi	011	26991411 / 12 / 13
13	Ghaziabad	LGEIL, J-10, RDC Rajnagar Ghaziabad - 201001	0120	9811354152 / 3 / 64 / 65
14	Goa	LGEIL, Plot No-D-3&D-4, Rego Baug, Alto Santacruz, Bambolim, Goa - 403	0832	3294955 / 3294956 / 3294759
15	Gurgaon	LGEIL, II nd Flr, A Block, Centre Point Bldg, Sushant Lok - PH-I, Gurgaon - 122001	0124	4047461 / 62 / 63 / 4272867 / 4047460
16	Guwahati	LGEIL, Shantineer Bhawan, C K Aggarwal Path, Chenikurthi, Guwahati - 781003	0361	2663895 / 2666958 / 2665983 / 2668984
17	Hubli	LGEIL, 603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli - 580030	0836	4250251 / 52 / 2337251 / 52
18	Hyderabad	LGEIL, 1st Floor, Survey No.54, Pulla Reddy Building, Vikarampuri Main Road Kharkhana, Secunderabad - 500004	040	27811732 / 33 / 34
19	Indore	LGEIL, 3rd flr., 304 Bansi Trade Centre, 581/5 M.G.Road, Indore - 452003	0731	4065523 / 24 / 40822157
20	Jaipur	LGEIL, B-71, Sahakar Marg, Lal Kothi Scheme, Jaipur - 302015	0141	5111118 / 5113028 / 5105392
21	Jalandhar	LGEIL, Village Khajuria, Near Hawali Resturant Jalandhar, Phagwara Highway, G T Road, Jalandhar	01824	502667 / 508025 / 502668
22	Jammu	LGEIL, Plot No.-52, Yard No. 6, Transport Nagar, Nanwal, Jammu - 180006	0191	2477420 / 2477419 / 2474396 / 2474384
23	Jodhpur	LGEIL, 22(1-A)/21(2-B)/2, RIICO Heavy Industrial area, Jodhpur - 342003	0291	2742384 / 392
24	Kolkata	LGEIL, 1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Kolkata - 700071	033	22883250 / 51 / 52
25	Kundli	LGEIL, Sunshine Enterprises, Sunder Cold Storage, Gt Karnal Road, Kundli - Sonipat	0130	2219201 / 02 / 03
26	Lucknow	LGEIL, B-537, Hari Kunj, Keshav Nagar, Sitapur Road Lukhnow - 226020	0522	2757538 / 39 / 2759121
27	Ludhiana	LGEIL, Village Jhande Near Badawal Railway Station, Opp ferozpur Road Ludhiana.	0161	2804413 / 19
28	Mumbai	LGEIL, Trade Star, 4th Floor, A Wing, J.B Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059	022	28352882 - 2887
29	Nagpur	LGEIL, 5a, Road No.13, Behind Msrtc Workshop, MIDC Hinga, Nagpur - 440016	07104	235120 / 235122
30	Patna	LGEIL, 2nd Floor, Ankit Chandra Deep Complex, Bander Bageecha, Near Samrat Hotel, Patna - 800001.	0612	3299156
31	Pune	LGEIL, 105/106, Premium Point, GM Road, Opp Modern High School, IIrd Floor, Shivaji Marg. Pune - 411005	020	66030100 / 732
32	Raipur	LGEIL, Nathani Compound, Shyam Nagar, Katora Talab, Raipur (C.G)	0771	4053171 / 4037470 / 4048745
33	Ranchi	LGEIL, 402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi	0651	3294026 / 2331815 / 3090426
34	Surat	LGEIL, 1001-1004, Ascon Plaza, IInd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat - 395009	0261	2730982 / 83 / 84
35	Thane	LGEIL, Gali Shop No - 206, 207, 2nd Floor, Sai Plaza , Above Vijay Sales Opp. Cine Wonder Mall, Ghodbunder Road, Thane(West) - 400607	022	25472633 / 2637
36	Varanasi	LGEIL, Pama Complex, DLW, Lahartara Road, Shivdaspur, Manduadih, Varanasi UP - 221002	0542	2373432 / 36 / 37
37	Vijaywada	LGEIL, Door No 32-2/1-7, Ratnamamba Street, Prajasakti Nagar, Vijaywada - 520010, Andhra Pradesh	0866	2497283 / 87
38	Warangal	LGEIL, HOUSE NO. 1-8-598/1 FIRST FLOOR, BESIDE HDFC BANK NAKKALGUTTA, HANAMAKONDA-506001 (WARANGAL)	0870	2551453

Dealer name with Stamp **Dealer address**
IMEI No. **Date of sale** **Serial no.**

LG Electronics India Pvt. Ltd., Plot No. 51, Udyog Vihar Surajpur Karna Road, Greater Noida, U.P.



UNITED INDIA INSURANCE CO. LTD.
D.O.-VI, 5th floor Skylark Building, 60 Nehru Palace,
New Delhi-110019

TO

UNITED INDIA INSURANCE CO. LTD.
D.O.-VI, 5th Floor Skylark
Building, 60 Nehru Palace,
New Delhi-110019

DATE...../...../.....

Dear Sir,

RE: Loss of mobile phone no.:
MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name



CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES ☐ NO ☐

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 1st April 2009 to 31st March 2010 under policy No. 040600/46/09/39/00000002. Dt: 01/04/09 to 31/03/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%



CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.



Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of United India Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to United India Insurance Co. Ltd., D.O.-VI, 5th Floor Skylark Building, 60 Nehru Palace, New Delhi -110019. Tel. no. 011-26439984, 26452631. Fax no: 011-26413031.



DISCHARGE VOUCHER

Received from United India Insurance Co. Ltd. under Policy No. in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

SERVICE CENTER LIST


LG

SERVICE



1800-180-9999*
39-01-0909**

*MTNL / BSNL
**Prefix STD Code

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Andhra Pradesh	Adhoni	RS CDMA	21/490, Arts & Science College Road, Near Devi Nursing home, Adhoni-518301	9346490905	Mr.Mohan
Andhra Pradesh	Adilabad	Kiran Mobile World	7-14-78/A, Near Nethaji Chouk, Cinema Road, Adilabad-504001	9346358181	Mr.Kiran Kumar
Andhra Pradesh	Amalapuram	Sandesh Cellular	D.No-4-2-14, Opp: S.K.B.R Collage AMLAPURAM-533201	9346398838	Mr.Ravi Kumar
Andhra Pradesh	Ananthapur	RK LG CDMA	Shop No 3, Cellular, Pallavi Towers, Opp to Canara Bank, Subash Road, Ananthpur-515001	241450,	Mr. Sridhar
Andhra Pradesh	Armoor	Sai Sri Electronics	Shop.no:2, mahalakshmi road, Armoor - 503224	9392622038	Mr.Srinivas
Andhra Pradesh	Bapatla	Vijaya Communications	Opp: Old Indian Gas Company, Sikaram Vari Street, G.B.C.Road, Bapatla	9346206305	Mr.B.Siva
Andhra Pradesh	Bhimavaram	Gopi Krishna Communications	JP Road Near Mohan Service Center Bhimavaram Pin-534202	9394071036	Mr.Siva
Andhra Pradesh	Chirala	Lakshmi Infocomm	Shop No.17&18 Banam Plaza, Munthavari Center, Chirala-523155	326000	Ms.Shakeena
Andhra Pradesh	Chittoor	CMT Computer Services	18-162, High Road Opp.Bishnu Bhavan Hotel, Chittoor	222733	Mr.Gopi
Andhra Pradesh	Cuddapah	Srinivasa Communication	Shop No.4, Siddapriya Complex, Opp. HP Petrol Pumping Point, Cuddapah	9346350224	Mr.Sahadeva Reddy
Andhra Pradesh	Dharmavaram	Siddharta Communications	Opp to Sathya Lodge, NPR Circle, Dharmavaram	9347064101	Mr.Shiva Ramkrishna
Andhra Pradesh	Eluru	S.S.Computers	Door.No:23B-4-8/3, Ayyapa Complex, Beside Kanuri Madhavi Hospital, Subbama Devi School Road, R.R.Pet, Eluru-534002.	329294	Mr.Diwalker
Andhra Pradesh	Gudivada	Kanakadurga-communications	Opp: Alankar Family Restaurant, Eluru Road, Nehru Chowk Center Gudivada	9394220688	Mr.Kumar
Andhra Pradesh	Gudur	Srinivasa Electronics	1st floor, Airtel Building, Kummari Veedhi, Gudur - 524101, Nellore (Dt).	645644	Mr.Suman
Andhra Pradesh	Guntur	Vasavi Associates	Door No.6-7-36, V.S.N.Complex, 8th Line, Arundelpet, Guntur-522 002.	3257789	Mr.Satyam

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Andhra Pradesh	Hazurnagar/ Kodad	Sri Pavan Electronics	Mallika Towers, Besides Reliance Web World, Kodad - 508206	9346901519	Mr Narasimha Rao
Andhra Pradesh	Hindupuram	S.V.A Cellular	Shop.no:3, Vinayaka Lodge, Railway Road, Hindupur - 515201	320777	Mr.D.B.Ravindra Nath
Andhra Pradesh	Huzurabad	Bhargavi Communications	Shp No E-2, DCMs Complex, Near Bus Stand, Main Road, Huzurabad-505122	9391755619	Mr.T.Vishnu Vardhan
Andhra Pradesh	Hyderabad	Bhagya Communications	Shop no:109, Upper Ground Floor, #12-2-825, S.G.M. Mall, Mehdiapatnam, Hyderabad-500028.	32972308 / 32001406	Mr.Suresh
Andhra Pradesh	Hyderabad	JVR Communication	Shop No.8, Vanija Vihar, Nalanda Building, Dilsukh Nagar Main Road, Hyderabad- 500060	66109604	Mr.A.Venket nariyan reddy
Andhra Pradesh	Hyderabad	Primus Infomatic & Software Pvt Ltd	#18/A, Methodist Complex, 5-9-190, Lane Opp to Chermas, Abids, Hyderabad	66755111	Mr.Govind Kabra
Andhra Pradesh	Hyderabad	LG Direct Service Centre	MCH No 6-3-852/3/A Ground floor, Vishwa Central, Nizamia Observatory Road, Ameerpet Hyderabad	40033769 / 70	Mr.Tarun Dandavate
Andhra Pradesh	Hyderabad	Reliable Communication	G-8, 3-6-561, AALTO'S A & M Trade Centre, HIMAYATNAGAR, HYDERABAD - 500029	9346320705	Mr.Sandeep Soni
Andhra Pradesh	Hyderabad	S V Electronics	Shop No. 41, Nilagiri Block, Aditya Enclave, Ameerpet Main Road, Hyderabad-500038	9346449323	Mr.Pradeep
Andhra Pradesh	Hyderabad	Shweta Communications	Shop No.9, Ground Floor, Pavani Ansuya Complex, Opp. Huda Complex, Tarnaka, Hyderabad	32968162	Mr. Sandeep Heda
Andhra Pradesh	Hyderabad	Shweta Computers	# 1-7-69/1 & 2, OPP Aditya Delux Hotel, Near Paradise circle, Sarojini Devi Road, Secunderabad - 500003	27721076 / 32977548	Mr.Sandeep
Andhra Pradesh	Hyderabad	Sreenivasa Technologies	SAI VIKRAM TOWERS, SHOP NO :4, RELIANCE WEB WORLD BUILDING, Balaji Nagar Kukatpally	32961479	Mr.Praveen
Andhra Pradesh	Hyderabad	Sri Surya Communications	#Madhu Enclave, Street no 06, Shyamlal Buildings, Begumpet, Hyderabad	32961127	Mr.Nageswara Rao
Andhra Pradesh	Hyderabad	Sri Varun Electronics	D.No 5-8-344/1, " DHAN BHAGYA ESTATE ", Chirag Ali Lane, Abids, Next to Raghava Ratna Towers, Hyderabad - 500 001	32900909 / 55781999	Mr.Alokh Mohan
Andhra Pradesh	Hyderabad	Sunbeam Technologies	120, Chenoy Trade Centre, Parklane, Near Paradise, Secunderabad -500003	40200193 / 66383193	Mr.Suresh
Andhra Pradesh	Jagityal	SS Communications	Opp Kanti Bhavan Lane, Duwarka Nagar, Jagtial	9391533535	Mr.Hari
Andhra Pradesh	Jangaon	Sky Win Communications	#2-7-134, Beside Bharat Gas, Bus stand Road, Jangoan-506167.	9390102839	Mr. Varun

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Andhra Pradesh	Jangareddygudem	Sri Devi Communication	Near Gangallama Temple, Opp. Andhra Bank, Jangareddygudem	227297	Mr. Prasanna Lakshmi
Andhra Pradesh	Kakinada	Delta Infotech	Door No. 6-1-29, Opp. Swami Vivekananda Park, Jawahar Street, Surya Rao Pet, Kakinada - 533001	5593533	Mr. Shivanand
Andhra Pradesh	Kamareddy	Pager King Communication	Sircilla Road, Kamareddy, Dist. Nizamabad - 503 111.	9397366633	Mr. Moizuddin
Andhra Pradesh	Karimnagar	SS Marketers	2-8-40, Mukampura, Near Circus Grounds, Karimnagar	9391552223	Mr. Cheakradhar
Andhra Pradesh	Kavali	Sree Balaji Infotech	Prasad Complex Trunk Road, Near Ongole Bus Stand, Kavali	6329567	Mr. G. Sri Sai Charan
Andhra Pradesh	Khammam	Striven Technologies	D.No:11-2-37, Shop No.3, D.V.Krishna Complex, Beside Baburao Petrol Bunk, Balaji Nagar, Wyr Road, Khammam-507002	9396698866	Mr. Bhaskar Reddy
Andhra Pradesh	Kothagudem	S.Swathi CDMA Service Center	9-3-3, Above Sindhura Electronics, Near RTC BUS Stand, Kothagudem-507101	9391552228	Mr. Niaz Ahmed
Andhra Pradesh	Kuppam	Sagar Computer Services	14-204, PALACE ROAD, KUPPAM-517425	9391862436	Mr. Sagar
Andhra Pradesh	Kurnool	R K LG CDMA	Shop no:26, 27, First floor, UCON Plaza, Kurnool-518001	220201	Mr. G Rama Krishna
Andhra Pradesh	Machilipatnam	Om Sree Sai Communications	25/276, Kota Vari Tulla Center, Jagannadhapuram, Machilipatnam	9347741777	Mr. Rafee
Andhra Pradesh	Madanapalle	Sri Balaji Computers	Shop No:2, 1st floor, Sri sai Complex, CTM Road, Madanapally - 517325	9390025204	Mr. Manohar
Andhra Pradesh	Mahabubnagar	Sri Chakra Mobile Care Centre	Shop.no:15, Shareef Complex, Near Bus stand, Mahbubnagar - 509002	9396348999	Mr. Anil
Andhra Pradesh	Mancherial	SS CDMA Service Centre	Shop no.7, Mounika Complex, BPL Chourasta, Manchiryal-504208	9394552223	Mr. Rajesh
Andhra Pradesh	Medak	Balaji Communications	Door.no:1-3-77/j, Opp to State bank of Hyderabad, Main Branch, Main road, Medak	9346439961	Mr. Sudhakar
Andhra Pradesh	Medchal	Khan Electronics	Sanjeeva Reddy Complex, Besides RTC Bus Depot, Medchal - 501 401	9347222088	Mr. Jaleel Khan
Andhra Pradesh	Miryalguda	Needs Electronics	Jagannath Complex, Opp Bus Stand, Miryalguda - 508207	9394645696	Mr. Ravi Kumar
Andhra Pradesh	Nalgonda	Quintessence Electronics	Shop No :5, Srinivasa complex, Opp to market office, HYD road, Nalgonda - 508001	9396610220	Mr. Venkateshwar Rao
Andhra Pradesh	Nandyal	Dhanush Systems	D.No:25/165 B, Sanjeev Nagar, Near Ramalayam, Nandyal	9392236699	Mr. Ramesh
Andhra Pradesh	Narasaraopet	Rajendra Infotech	D.No -90-11-10/7, Saradhamba Complex, Arundelpet. Near S.B.I ATM Narasaraopet	224136	Mr. Sasi Bhushan

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Andhra Pradesh	Nellore	Balaji Watch & Electronics	16/249, Trunk Road, Nellore-524001	2339999	Mr.Rajesh
Andhra Pradesh	Nellore	Tirumalaa Electronics	Shop No. 26, 1St Floor, Co-Operative Bank Complex, Near Gandhi Statue, G.N.T . Road, Nellore	3290339	Mr.Pratap
Andhra Pradesh	Nirmal	Om Sai Electronics	Shop.no:1, Kala Nagar road, Beside 2 town Police station, Nirmal - 504106	9390000024	Mr.Mahendar
Andhra Pradesh	Nizamabad	Satya Electronics	# 7-10-65, Shop no 1, 1 st Floor, H.M.H.V Complex, Beside Bus Stand, Nizamabad-503001	326000	Mr.Venu gopal
Andhra Pradesh	Ongole	Tejasri Communications	37-1-107, Opp: Kerala Bakery, Near Mastan Darga Center, Trunk Road, Ongole	9393026115	Mr.Sasi Bhusan
Andhra Pradesh	Peddapalli (Ramagundam)	Abhi Marketers	Shop No:19/8/291, MRK Plaza, Lakshmi Nagar, Godhavari Khani - 505209	9399987773	Mr.Nagaraj
Andhra Pradesh	Peddapuram	Devi Infotech	Opp. Veternary Hospital, Shop No. 1, Santa Market Road, Peddapuram	6593533	Mr.Siva Kumar
Andhra Pradesh	Prodattur	SV Techonoligies	4-625-3, Gandhi Road, Opp Karur Vysya Bank, Produttur	9347251806	Mr.Ravi Kumar
Andhra Pradesh	Rajamundhary	Siri Infotech	Police Welfare Complex, City Hospitals Junction, Danvai Pet Main Road, Rajahmundry	9397925799	Mr Raghvendra
Andhra Pradesh	Raychoti	Raju Computer World	Room No 3 Up Stairs Syeedia complex, bustand road, Rayachoty	9346209881	Mr.Raju
Andhra Pradesh	Repalle	Sri Satya Solutions	D.no- 10.14.125 (UP Staires) Municipal Office Road, Railpet, Repalle-522265	9396222993	Mr.Sridhar
Andhra Pradesh	Sangareddy	Sri Technologies	Srimaan Complex, Beside Inspection Bungalow, Main Road, Sangareddy. 502001, Medak Dist	9391216573	Mr.Ajaz Ahmed
Andhra Pradesh	Sattenapalli	S.S.Communications	Opp.Telephone Exchange, Sattenapalli	9397610550	Mr.Sai
Andhra Pradesh	Shad Nagar	Sri Gana Electronics	Shop No : 2, Khajja Veeresam Complex, College Road, Shadnagar - 509216	9392633111	Mr.Vigneswar
Andhra Pradesh	Siddipet	Gopala Krishana Communications	SHOP NO:13, FIRST FLOOR, MACCA COMPLEX, , OPP:CITIZEN'S CLUB, M.G ROAD, SIDDIPET - 502103. (A.P)	9392511064	Mr. Nagaraj
Andhra Pradesh	Srikakulam	Venkateshwara Infotech	Raja Commercial Complex, Opp.Electrical Office, Ground Floor, Shop No.10 &11, GT Road, Srikakulam	324577	Mr.Kiran Kumar
Andhra Pradesh	Srikalahasti	KSV Computer Services	NNR Buildings, d.no:16-582, Panagal road, Srikalahasti 517644	9390044399	Mr.Sahadeva Reddy
Andhra Pradesh	Sullurpet	Sai Baba Electronics	S.V.T Street, Opp: Reliance Office, Sullurpet	9346920527	Mr. S. Venkata Krishna

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Andhra Pradesh	Tadepalligudem	Sri Haripriya Infotech	Thota Gopi Complex, Police Quarters Lane, Beside Zp High School, Tadepalligudem	9346445720, 08818-210565	Mr.Suresh
Andhra Pradesh	Tanuku	Shivanand Enterprises	Door No. 34-3-3, Main Road, Gamini Compound, Tanuku	9346408640	Mr.Srinivas
Andhra Pradesh	Tenali	Vaishnavi Infotech	D.No:22/11/114, Opp. Kanikacharla Kalyanamandapam, Bose Road, Tenali.	9347651330	Mr.Murali
Andhra Pradesh	Tirupati	CMT Communication	13-7-796/14/3, TUDA OFFICE Road, Tirupathi-517501	3296979	Mr.K Vasu Naidu
Andhra Pradesh	Vijayawada	K L Computer House	39-9-46, Svs Temple Street, Labbipet, Vijayawada	6520461	Mr.Kartik
Andhra Pradesh	Vijayawada	V V Communications	28-23-31/32, Opp.Swarugha Foods, Vijay Talkies Center, Vijayawada	320866-320988	Mr.Rahul
Andhra Pradesh	Vishakapatnam	Jai Bharani Communications	Door No:52-11-7/7, Sapthagiri Plaza, Old Resuvanipallem, Vishakapatnam-13	6634666	Mr.PVenkatapathi Raju
Andhra Pradesh	Vishakapatnam	Sri Sai Ganesh Infotech	G5, Ground Floor, Backside of Sangam-Sarat Theatre, 1st Lane, Dwarka Nagar, Visakhapatnam - 530 016.	3258777	Mr.Chandra Shekar
Andhra Pradesh	Vizayanagaram	S R Technologies	D.No:1-9-1/44, Opp: Z.P Office, Railway Station Road, Vizayanagaram.	9346418791	Mr.Balakrishna
Andhra Pradesh	Vuyyuru	Sugreeva Communications	Behind Datta Automobiles, Katturu Road, Vuyyuru	9393033355	Mr.Phani
Andhra Pradesh	Wanaparthy	Sri Ganesh Electronics	Shop No : 16-63, Opp R R Complex, Wanaparthy - 509103, Dist Mahabubnagar	9396800275	Mr Deva Raj
Andhra Pradesh	Warangal	S S Marketers	6-1-73/1, Sai Bhavan, Sridevi Theatre Road, Hanamkonda, Warrangal-506001	2552223	Mr.L.Srinivas Rao
Andhra Pradesh	Zaheerabad	Renuka Technologies	Shop no:123/1, First Floor, Alipur, Zaheerabad.Pin-502220	316143	Mr.Abhiram Joshi
ASSAM	Gwahati	PRAGATI SERVICES	2nd Floor, Kiranhangsha Commercial Complex, Dr J.C. Das Road, Harisabha, Panbazar, Guwahati, Assam	2733501	Mr. Pradeep Khaitan
Assam	Silchar	IT ONLINE	N.S.Avenue, Rangirkhari, Silchar, Cachar, Assam	221260	Mr.Sharma
Bihar	Arrah	Surya Services	Sushila Bhawan, Suryapuri colony, By pass road, Arrah	9334538845	Mr.Sanjay Kumar
Bihar	Begusarai	Krishna Communication	Eashwari Complex, Dak Bangla Chowk, Bishnupur, Begusarai, Bihar-851101.	9334341700	Mr.Dinkar Kumar
Bihar	Bhagalpur	Printrionx Infosolutions	Ganpati Complex, 1st floor, Patel babu road	9934605864	Mr.Himansu Shekhar
Bihar	Bhagalpur	S.K.Communication	NEAR RAILWAY STATION, Super Market Complex, Patel Babu Road, BHAGALPUR-812002	9334255275	Mr.Kundan Kumar
Bihar	Biharsharif	Shanya Infotech	Magdha Commercial Complex, 1st.Floor, Shop.No.5, MG Road, Bharaopar, Bihar Sharif, Nalanda Dist. Bihar.	9334048037	Mr.Amit Kanchan

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Bihar	Chapra	Ambey Associates	D-23, Hathwa Market, Chapra, Dist: Saran-841413 Bihar.	9334295605	Mr.Jayant Kumar
Bihar	Darbanga	Prime Computer	Hanuman Nagar, Doner Road, Darbanga.	9334934065	Mr.Abhinav Kumar Verma
Bihar	Gaya	Louts Enterprises	Opp.Aviva Life Insurance, Kanya High School Road, Ramna, Gaya.	9334492033	Mr.Pankaj Ranjan
Bihar	Muzafarpur	Krish Enterprises	Nr.Kanhoulinaka.no.2, Kachisarai Road, Muzafarpur.	9304410745	Mr.Sanjeev Kumar
Bihar	Patna	Competent Mobile Service	Shop 1, Hotel Lalitha Complex, East Bowring Canal Road, Patna	9334027706	Mr.Mohit Ahluwalia
Bihar	Patna	Infotek Trading Company	1st floor, City Palace, New Dak Bunglow Road, Patna-800001	9334116145	Mr.Sanjay Choubey
Bihar	Patna	Micro Zone-Patna	A.H Complex, # G26, Near Kotak Mahindra Bank, Exhibition Road, Patna	3294696	Mr.Mithlesh Kumar
Bihar	Patna	Synerzy Trading Company	G-01, Chanakya Plaza Complex, Main Road, Kankarabagh, Patna.8000020	2356900	Mr.Vikas Chandra
Bihar	Purnea	Micro Zone-Purnea	Narottam Hata, Opp.Dr.P.C.JHA, NH-31, Purnea-854326	9304166633	Mr.Amit Kumar
Bihar	Sasaram	Nandika Enterprises	Hari Complex, Panjab National Bank, Sasaram, Rohtas-821115 (Bihar)	4222008	Mr.Abhinav Gupta
Chattisgarh	Ambikapur	Neha Communication	Ramanuj Ganj road, Opp. Kosa Form, Ambikapur, Sarguja, Pin-497001	240427	Mr.Rishi Dubey
Chattisgarh	Bhilai	A B Automation	Shop no. 242, 1st floor Chouhan Plaza, GE Road, Supela Bhilai, Chhatisgarh- 490023	2295989	Mr. Satish Singh
Chattisgarh	Bhilai	Sai Ram Electronics	SHOP-NO-52/90, HIMALAY COMPLEX, AKASH GANGA, SUPELA, BHILAI	4038917	Mr. Balan
Chattisgarh	Bilaspur	Mahamaya Infotech	Shop No 203, Jain Plaza, Ground floor, Link Road, Bilaspur	2413865	Mr. Pawan Kumar
Chattisgarh	Korba	Star Mobile Services	SS PLAZA, FD-13 POWERHOUSE ROAD, KORBA-495678	9300401485	Mr. Anish Menon
Chattisgarh	Raigarh	Blue Chip Computer	Purana Sadar Bazaar, Raigarh, Chhatisgarh.	9977217776	Mr. Ashok Agrawal
Chattisgarh	Raipur	Cybernet Systems	B-2, 1st Floor, Garchaz Complex, Jail Road, Raipur - 492001	406771	Mr Anand Singh
Chattisgarh	Rajnandgaon	Bhavye Services	SHOP NO 5, BELOW SBI, STATE BANK OF INDIA, KAMPTEE LINE, RAJNANDGAON.	324200	Mr. Manish Golcha
Delhi	New Delhi	Aegiss Infotech	UG-25, Ansal Chamber -2, 6, Bhikaji Cama Place, New Delhi-110066	65477740	Mr. Atul Gupta
Delhi	New Delhi	Arham Infotech Services	4737/A 23, Ansari Road, Daryagunj, Delhi-110002	41501124	Mr. Anil Surana

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Delhi	New Delhi	Comhard Systems	D-30, 31, First floor, Near Hotel Shipra, Main Vikas Marg, Lakshmi Nagar	32955887	Mr Ravi Kant Gupta
Delhi	New Delhi	Comhard Systems	B-120, Hardev Puri, 100 Feet Main Road, Near MTNL Office, Nathu Colony Chowk, Shahdra, New Delhi - 110 093.	32575507	Mr. Ravi Kant Gupta
Delhi	New Delhi	Connexions And Communications	183, Avtar Enclave, Opposite Nirula's, Pashchim vihar, New Delhi-110063	32451431	Mr. Bhupinder Agrawal
Delhi	New Delhi	Cube Engineers And Consultants Pvt Ltd	A-65, Naraina Industrial Area, Phase-1, New Delhi	65450272 / 41411620	Mr. Arvinder
Delhi	New Delhi	Elcom Trading Company Pvt. Ltd.	G-1, Goverdhan Building, 53-54 . Nehru Place, New Delhi -110019.	64582709	Mr. Somesh Narang
Delhi	New Delhi	Innovative Telecom	304, GDITL Northex Towers, A-09, 3rd Floor, Northex Tower, Netaji Subhash Place, Pitampura, New Delhi-110 088.	32925753 / 65154340	Mr Manoj Garg
Delhi	New Delhi	Nice Telecom	15/19 & 15/21, DDA Complex, Nangal raya, Near D Block, Janakpuri, Delhi - 110046	9350863630	Mr. Ripul Garg
Delhi	New Delhi	Sukriti Communication	101 Patparganj- Mayur Vihar phase -1 - New Delhi -110091	32498011	Mr.Dipendra kumar chaturvedi
Delhi	New Delhi	Teletalk	C-21, First Floor, Near Bus Stand, Bhajan pura, Delhi-11053	9818400551	Mr.B.C.Vashist
Delhi	New Delhi	Touch Tone Telecom	B-52, First Floor, Kalkaji, New Delhi	32939031	Mr. Ashish Dey
Delhi	New Delhi	Ucom Technologies Pvt Ltd.	45, 1st Flr, Corner Mrkt, Malviya Nagar, New Delhi - 110017	41745469	Mr. Neeraj
Goa	Margoa	SKY LARK	SHOP NO 05.CARVALHO APPTS, NEAR RAILWAY CROSSING, COMBA,	2736100	Mr.CHRIS
Goa	Panjim	Mandovi Mobiles	Mohidin Towers Do. No. AS3 Opp to Hotel Manashanti Dadavaidya rd Panjim-403001	6452949	Mr. Prakash
Gujarat	Ahmedabad	A Com Technologies	Shop No-37, 1st Floor, Shubh Complex, Near Rajasthan Hospital, Camp Road, Shahibaug, Ahmedabad-380004	32940560	Mr. Vijay.S.Gohel
Gujarat	Ahmedabad	Mishree Communication	FF-17, RUDRA SQUARE, OPP. JUDGES BUNGALOW, POLICE STATION, BODAKDEV, AHMEDABAD-54.	32508491	Mr. Mitesh Patel
Gujarat	Ahmedabad	Silicon Valley	9, Gokul Palace, Maninagar Cross Road, Maninagar Ahmedabad-380008	30225430	Mr. Rajesh Patel
Gujarat	Ahmedabad	Vision Communication	33, 1st Floor, Sukh Sagar Complex, Opp. Dinesh Chamber, Bapunagar, Ahmedabad -380024	65122322	Mr Ajay Kachhadiya
Gujarat	Amreli	Precision Telecom	32, 33 Opera House, Station Road, Amreli	230940	Mr. Kamlesh Tank

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Gujarat	Ankaleshwar	Akshar Telecom	C/1 Keval Shopping Center, old National Highway No.8, GIDC, Ankaleshwar-393001	250860	Mrs. Anita Amin
Gujarat	Bharuch	Akshar Telecom	Pramukh Swami Complex, Panch Batti, Bharuch	2241027	Mr. Hanif Patel
Gujarat	Bhavnagar	Shivshruti Services	981/B, Makvana Building, Down Chowk, Bhavnagar .364001	3296222	Mr. P D Jala/ Sandeep patel
Gujarat	Bhuj	Infotech Computer	2nd Floor, NarNarayan Chambers, Opp Indian Airlines Office, Station Road, Bhuj	324295	Mr. Vasant Mepani
Gujarat	Gandhidham	Vansh Electronics	Shop No. 35, Swami Vivekanand Complex, Near Oslo Circle, Gandhidham	232739	Mr. Siddarth Gajjar
Gujarat	Gandhinagar	Creative Communications	Shop No 102, Suman City, Sector 11 , Gandhinagar-382011	23226241	Mr. K.J.Barot
Gujarat	Himmatnagar	Jay Telecommunications	B-F 105, 1st floor, Durga Complex, Near Railway Station, Himmathnagar	329532	Mr. Manibhai Patel / Neeraj patel
Gujarat	Jamnagar	Sudarshan Infosys	"Shraddha", Park Colony, Motor House, Near axis Bank, P.N.Marg, Jamnagar 361008	2552696	Mr. Amit Unadkat
Gujarat	Junagarh	K.J.Traders	29/30, Danapith, Junagadh	2627320	Mr. Paresb Rughani
Gujarat	Kalol	Maitree Communication	B/93, Yogi Complex, opp. Mahendra Mill Road, Kalol	325288	Mr. Jignesh Shah
Gujarat	Mehsana	Prime Computer Consumables	15-B, Vimal Super Market, B K Road, S.T.Workshop Road, Mehsana-384002	2325123	Mr. Suketu Patel
Gujarat	Morvi	Pulse Sales And Services	SHOP NO 6 MADHAV MARKET FIRST FLOOR NEAR NEW S.T.STAND SANADA ROAD Morvi-383641	9428565667	Mr. Natubhai Patel
Gujarat	Navsari	Deep Enterprise	10, Upper Level, Diamond Palace, Sayagi Road Sattapir, Navsari-396445	324095	Mr. Vinod Kasundra
Gujarat	Palanpur	Shree Manibhadra Mobile	21-First Floor, aroma arcade, opp jilla panchayat, near kozi tower, Palanpur-385001	300001	Mr. Panchal Sunil D
Gujarat	Patan	Able Infotech	9, Palika Bazar Complex, Rajmahel Road, Near Santokba Hall, Patan	9924256068	Mr. Rakesh Bhai
Gujarat	Porbandar	Varun Infotech	1ST Floor, Garden Café Building, Opp.New Fountain, Nr.old R.T.O Office, Porbandar - 360575	3290285	Mr. Mitesh Changela
Gujarat	Rajkot	Joshi Telecom	Shop No.8, Kuber Complex, Opp Chandubhai Bhelwala, Dr Yagnik Road, Rajkot	6530707	Mr. Jiten Dave
Gujarat	Rajkot	Roopang Infocare	Vinod Nivas, 4, Sardarnagar(West), Nr Astron Cinema, Rajkot-360001	2464485	Mr. Kishore Patel

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Gujarat	Surat	Excel Solutions	H-3, Ruchi Flats, Near Iqara Building, Adajan Hazira Road. Surat-395009	6544500	Mr. Virender Jain
Gujarat	Surat	Om Sai Services	39, Golden Point, Near Science Laboratory, Ring Road, Surat	3231233	Mr. Dharmesh Patel
Gujarat	Surendranagar	Nihaal Computer Services	94 Old Housing Bord Opp Muni. Scool No.13, Surendranagar.	320375	Mr. Sikandar
Gujarat	Vadodara	Shreeji Telecom	SB-10, Windsor Plaza, R.C.Dutt Road, Alkapuri, Vadodara - 390002	9328093424	Mr. Jignesh Gohel
Gujarat	Valasad	Klassik Stationo Products	10, Jethalal Mulji Market, Halar Road, Valsad -396001	329363	Mr. Darshan Panchal
Gujarat	Vapi	Klassik Stationo Products	116, Bhanudarshan Co-Op Society, Koparli Road, Near Gunjan Cinema, GIDC, Vapi	3292363	Mr. Avishek Suhasaria
Gujrat	Anand	Zainee Mobile	2nd Floor, Limbuwala Complex, Nr. GPO, Opp. Kavita Shopping Centre, Anand	9375960954	Mr. A. J. Raja
Haryana	Ambala	Bee Ess Aar Communication	26 First floor MC Market Behind Negar Cinema Ambala Cantt-133001	4006229	Mr. Rajiv Gupta
Haryana	Bahadurgarh	Unique Telecom	Shop No.5, Rajaram Market, Main Najafgarh Road, Bahadurgarh, Near Bajaj Showroom	9315873676	Mr. Harinder
Haryana	Bhiwani	Sandeep Electronics	10 th Plot, First Floor, Circular road, Mahem Gate Chowk, Near Kajal's Nursing Home, Near Vodafone Office, Bhiwani, Haryana - 127021	252000	Mr.Sukhveer Saini
Haryana	Faridabad	Comsoft Computers	601/1 Gopi Colony Chowk- Sector-19, Near Prem Prakash Ashram, OLD Faridabad-121002	4104252	Mr. Ashwani Jindal
Haryana	Faridabad	VR Infocomm	Shop No.44, Neelam Fly Over, Neelam Chowk, NIT Faridabad.	4031959	Mr. Vinod Kumar Gupta.
Haryana	Fatehabad	Sky Lark Mobile Point	4, G.T.Road, Near Bus Stand, Marla Colony, Fatehabad	989655244	Mr.Pankaj
Haryana	Gurgaon	Signature Communications	B-100 A, South City -1, Opposite - Huda Gymkhana Club Near Signature Tower - Gurgaon 122001	4102709	Mr. Raj Kumar Garg
Haryana	Gurgaon	Lalji Communication	SCO-31, - First Floor, Above MTNL Sanchar Haat, Main Market, Opp. BSNL Exchange, Sector-12A, OLD Gurgaon -122001.	3200900	Mr.Bharat Bhushan
Haryana	Gurgaon	LG Direct Service Centre	B-36, 37 & 38, Industrial Area, Mehrauli Gurgaon Road, Near Bata Chowk, Gurgaon - 122 001.	3027300	Mr.Deepak
Haryana	Hissar	Parnami Communication	32, Red sqaure Market, Near Dena Bank, Hissar, Haryana-125001	9354332000	Mr.Pradeep Garg
Haryana	Jind	Gaurav Telecom	Shop No.19 Near Rani Talab, Near Bharat Electronics, Jind	325400	Mr. Deepak Garg
Haryana	Kaithal	Mahesh Communication	Shop no.22, Bajrang Bali Market, Near Randhir cinema- Kaithal	9315146000	Mr.Mahesh

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Haryana	Karnal	Mass Communication	Shop No.68, Main Market, Ground Floor, Moughal Canal, Karnal - 132001	3290717	Mr.Davender Yadav
Haryana	Kurukshetra	Bharti Communication	3, Krishna Market, Opp.Purohit Sweet House, Pipli Road, Kurukshetra, Haryana-	9354165077	Mr.Vijay
Haryana	Narnaul	Prime Communication	Shop no.8, 1st Floor Taneja complex, near Nirula Hotel, RewariRoad Narnaul	9355375351	Mr.Naveen
Haryana	Palwal	Shree Ganesh Communications	Basant Apts, Shop No.5, Kithwari Chowk, Mathura Road, Near Saraswathi School, Palwal	321028	Mr.Harish Chandra
Haryana	Panipat	INS Telecom	2, Bishan Sarup Colony, Opp Bus Stand, Near Hotel Deep, Panipat	9354917110	Mr.Pankaj kumar
Haryana	Rewari	Mahak Tele Services	53-A, Model Town, Near Shreeji restaurent, Rewari	329222	Mr.Gaurave Yadve
Haryana	Rohtak	Telecentre	13, Apna Bazar, Civil Hospital Road, Near Chhotu Ram Chowk, Rohtak-124001	247242	Mr.Mr.Madaan
Haryana	Sirsa	Sirsa Communication	168, Huda Complex, Old Bus Stand, Sirsa	329591	Mr.Rajindera
Haryana	Sonipat	Teleworld	Shop No 20, 1st Floor, M.C.Market, Subhash Chowk, Sonipat, Haryana-138001	3290889	Mr.Vipin Dua
Haryana	Yamuna Nagar	Krishna Communication	Shop No.-24/75, Thapar Colony, OPPOSITE SWANTANTAR FANCY LADIES SUITS, NEAR FOUNTAIN CHOWK, YAMMUNAGAR HARYANA-135001	200610	Mr. Harsh/Mr. Pradeep
Himachal Pradesh	Dharamshala	Deepsun	Near Sharma Studio, opp Mickey tour and travel, kotwali bazar Dharamshala, 176215	9318679122	Mr.Deepak
Himachal Pradesh	Mandi	V.M.Communication	NEAR PNB MOTI BAZAAR, MANDI-175001	9318666005	Mr.M Mahender Singh Thakur
Himachal Pradesh	Palampur	Electronic Home	Kallu Di Hatti, PO Maranda Thasil, Palampur, Distt-Kangra-176102	238463	Mr.Ravi Kumar
Himachal Pradesh	Poanta Sahib	Singal Marketing	Badri Nagar, Near LIC Office, Poanta Sahib	9318785134	Mr.Rajesh Singal
Himachal Pradesh	Shimla	Hanu Computers	76/ 9, 2nd floor Lower Bazar Shimla	2650560	Mr.Sandeep Patial
Himachal Pradesh	Solan	Vikas Mobile Repair Center	MOHAN COMPLEX, First Floor Upper Bazar-173212	9816271183	Mr.Vikas
Jammu & Kashmir	Jammu	Mobile Care	608-A Gandhi Nagar Behind Laxmi Narayan Mandir	2436814	Mr.Dixit Gupta
Jammu & Kashmir	Srinagar	The Net Surfer	2nd Floor Mohi-ud-Din Building, Poloview, srinagar	2459549	Mr.Wasim
Jammu & Kashmir	Udhampur	Service Solutions	Ward No. 15 Shakti Nagar Opp. Old ITI Udhampur	276724	Mr.Rakesh

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Jharkhand	Bokaro	Digital Equipment Centre	GB-11, City Palace, Opp.Indian Bank, Bokaro.	9334072270	Mr.Dewashish Ojha
Jharkhand	Daltonganj	Maa Mobiles	Jail Road, Jail Hata, Dalton Ganj-822101	9304285663	Mr.Navin Kr. Kashyap
Jharkhand	Deoghar	Kanan Electronics	Hotel Relax Complex, BLC Road, Deogarh-814112	9304059528	Mr.Mahesh Sharma
Jharkhand	Dhanbad	Nirmala Entreprises	Ground Floor, Muskan Complex, Nr.Subhash Chowk, Dhanbad.	9334027583	Mr.Niraj Sinha
Jharkhand	Godda	Karan Mobilink	Maa Kalyani, Katra, Main Market, Godda, Jharkhand-814133	9334449900	Mr.Saroj Kumar Jha
Jharkhand	Hazaribagh	Digital Services	Plaza Mkt, pugmill road, Nr.Kallu Chowk, Hazaribagh.	9334599570	Mr.Shish Alam
Jharkhand	Jamshedpur	Prasad Electronics	Nr.Bus stand, Community Center, Kagal Nagar, Jamshedpur.	2226077	Mr.Raju/ Saritha
Jharkhand	Jamshedpur	Tirupati Teletch	Chakravarti Compound, Near Hotel Castel, Contractors area, Bistupur, Jamshedpur-831001	3293331	Mr.Abhijeet Mukherjee
Jharkhand	Ramgarh	Shreyas Empaire	Bus Stand Complex, Ramgarh-829122	9334085642	Mr.Piyush
Jharkhand	Ranchi	Balaji Infotech	Near Dr.Kashyap Eyeclinic, Purulia Road, Ranchi.	3205400	Mr.Sanjeev, Mr.Sunil Kedia
Jharkhand	Ranchi	Satya Systems & Solutions	158, Opp Hotel Palace, Kadru, Ranchi-834002	3291019	Mr.Amit Rastogi
Karnataka	Anekal	Sri Venkateshwara Communications	# 37, KSRTC COLONY, HOSUR MAIN ROAD, ANEKAL TALUK, BANGALORE - 562106	320078	Mr.R.Jaganath
Karnataka	Bailhongal	3G Communication	Shop No 459\2 Near Inchal Cross Belgaum Road Bailhongal-591102	9343815097	Mr.Vishwanath
Karnataka	Bangalore	Ascent Communication	No:113, St Johns Church road, Bangalore - 560005	32914856	Mr.Kumaresan
Karnataka	Bangalore	CRYSTAL INFOCOM	SRILAKSHMI VENKATESHWARA COMPLEX, SHOP No. B-5, 33RD Cross, 11 th Main, 4th Block Jayanagar, Bangalore-560010	32710202	Mr.Prasad
Karnataka	Bangalore	LG Direct Service Centre	No: 93, TKN Mansion, KH Road (Double Road), Bangalore	41145145 / 9739983435	Mr.Raju Naik
Karnataka	Bangalore	Optima Mobile Services	24/2, Dr.Rajkumar Road, Near Subramanyanagar Police Station, 2nd Block, Rajajinagar, Bangalore - 560 010	23131953 / 65722205	Mr.Unni Krishnan
Karnataka	Belgaum	Hello India Telecom	G-4, Maratha Mandir Complex, Khanapur Road, Near Railway Flyover, Belgaum - 590 001.	4211329 / 2420533	Mr.Mohan
Karnataka	Bellary	MAKAM ELECTRONICS	# 90 C/16 HIMALAYA BUILDING K.C.COLONY BELLARY 583101	655043	Mr.Krishna Murthy Makam

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Karnataka	Bhadravati	Digital Communication	SR Complex 4th cross B H Road Bhadravathi-577301	9341081291	Mr.Nagabushan
Karnataka	Bhatkal	Vijay Communication	Hussian Complex Bunder road Bhatkal - 581320	300027	Mr.Vittal H.Naik
Karnataka	Bidar	Mayuri Infotech	Ravi complex, shop no: 4, Udgir road, Bidar-585401	225544	Mr.Ravi Halhalli
Karnataka	Bijapur	Turning Point Computers	Khed building, opp Vijaya college, Sholapur road, Bijapur-586103	329318 / 300005	Mr.S.M.Hiremath
Karnataka	Channapatna	C&C Technology	"Ramanujam Nilaya" No.2104, 11 th Cross, Kuvempunagar B M Road, Channapatna - 571501	7251716	Mr.Charan
Karnataka	Chikaballpur	Sri Ram Prasad Enterprises	1 st Floor. BB Road, Beside State Bank of Mysore, Chikballapur-562101	325567	Mr.Vardharaj
Karnataka	Chikmagalur	Cell Tec Electronics	Ragavendra complex, NMC circle, Neharu road, Chikmagalur - 577101	9341013183	Mr.Prem Kumar
Karnataka	Chintamani	Amrutha Mobiles	# 5, Venkatadri Complex, M.G. Road, Opp to Adarsha Theater, Chintamani - 563125	9342262811	Mr.Sudarshan Reddy
Karnataka	Davangere	Kruthika Communication	Shop no: 6, Park View Plaza, (Income Tax Office's Ground Floor), 4th Main, Near Vishweshwaraiah Park, P.J. Extension, Davangere-577002	325444	Mr.Sujay
Karnataka	Gokak	Cell World	Banshankri Complex, Basaweshwara circle, opp to court Gokak - 591307	9343441777	Mr.Shivanand / Chougala
Karnataka	Gulbarga	Aishwarya Communication	C-9, Asian Plaza S.V.P.Chowk Main road Gulbarga-585102	329447	Mr.Mallikarjun
Karnataka	Hassan	Sree Digital Solutions	1380 Mission Hospital road opp Hindibed college - 573201	9343566658	Mr.Vidya Shankar
Karnataka	Hosakote	Exposys Communication	Shop no 1, Mahalatha Devi Complex M V Badavane, College Road, Hoskote-562114	7931229	Mr.Raghunandan
Karnataka	Hubli	Shruti Services	A-115, (Lower Ground Floor), IT PARK, Opp. Glass House, Hubli - 580029.	3290671	Mr.Mahendar
Karnataka	Hunsur	Sriram Infocom	No.6, Municipal complex, H.D.Kote road circle - 571105	253699	Mr.H.H.Pradeep
Karnataka	Kadur	Ashwa Tele Mobiles	Opp. Basaweshwara Hospital, T.B Road Kadur	9341033310	Mr.R.Ananda Murthy
Karnataka	Kankapura	Sumukh Communications	Harshitha Complex, Budikere, Bangalore main rd, Near KSTC Bus stand Kanakapura-562117	9342743344	Mr.R.C.Harish
Karnataka	KGF	Global Net Communcations	Opp. King George Hall, Geetha road Robetson pet, KGF - 563122	329559	Mr.Shiva Kumar
Karnataka	Kolar	Seanmatrix	No:384, Suguna complex, Near KSRTC bus stand, Anthargange road, Kolar 560101	2228714	Mr.Nithyanada Shetty
Karnataka	Kumta	Krishna Mobiles	938, College road, NH 17, opp RWW, Kumta - 581343	329607	Mr.D.V.Prabhu

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Karnataka	Madikeri	C.M.Communications	Shop no. 8, First Floor, M A Complex, Kohinoor Road, Madikeri	9343837555	Mr.Mohamad Sharief
Karnataka	Mandya	C & C Technology	2068, First Cross, Subhash Nagar, Krishna Krupa Nilaya, Mandya-571401	402007	Mr.Charan
Karnataka	Mangalore	Innovative Infocom	15-10-537/11, Jayavarma Centre, Mallikatte Circle, Kadri, Mangalore - 575002.	6563244	Mr.Sebastian Fernandes
Karnataka	Moodabidri	Media Guard Technologies	Rajeev Gandhi complex main road Moodabidri - 574227	325909	Mr.Vishwas Kumar
Karnataka	Mysore	K.K.Marketing	1432/9, Tribhuvan Towers, opp Vetenary Hospital, Dewan's Road, Dhanwantri Road Cross, Mysore - 570001	4258613	Mr.Karunakaran.
Karnataka	Nipani	Manusoft Computers	Dumale Complex Chikodi road Nipani - 591237	222005 / 9448148005	Mr. Pavan / Mahesh Dumale
Karnataka	Raichur	Akshay Electronics	Shop No.2 Ground Floor, Hotel UMA Complex, Station Road, Raichur - 584101	225300	Mr.Narasimhlu
Karnataka	Ranibenur	Kruthika Communication	OLD LIC Building, Opp Gupta Petrol Bunk, PB Road, Ranebennur-581115	321444	Mr.Sujay
Karnataka	Shimoga	Chetan Electronics	C-5, Kenchappa complex, Durgigudi main road, Shimoga-577201	401889	Mr.Panduranga Rao
Karnataka	Tiptur	Shree Digital Solutions	Nanjappa complex, opp city union bank, BH road, Tiptur - 572201	9343813731	Mr.Ravi
Karnataka	Tumkur	Durga Communication	No.14 CMI Complex, Near Gayatri Therater, Below Navratna Silks & Sarees, B.H.Road Tumkur - 572101	2256184	Mr.Naveen Kumar
Karnataka	Udupi	Sanman Mobile Services	Shop No: 15, Simaz complex, Diana circule, Court road, Udupi- 576101.	3255770	Mr.Prakash
Kerala	Alappuzha	Getronics	FIRST FLOOR, KARTHIKA BUILDING, OPP SDV BOYS HIGH SCHOOL, COURT ROAD, ALLEPPY.	3290446	Mr.Omprakash
Kerala	Alathur	Marstek	12/950, Ground Floor, AR Complex, Opp. Munsiff's Court, Alathur, Palakkad Dt.- 678 541	321311	Mr. Rajesh. V.
Kerala	Aluva	Sed Infosys	BUILDING NO 12/57 DOOR NO 8, FIRST FLOOR, POOTHULLIL BUILDING, ALUVA - 683 101.	3235599	Mr.Sudheesh
Kerala	Attingal	AM Technologies	Mamam, Near Dreams Theater, Attingal	3290301	Mr.Saji
Kerala	Badagara	Amarkish Communications	1st Floor, Sarala Complex, Near KVR Motors, N.H. Bypass Road, Nut Street, Vadakara-673101.	3255756	Mr.Jeeju / Mr. Baiju
Kerala	Cherthala	Cherukattu Phones	Krishna Building, Opp govt boys high school, AC road, Chertalli	9388910703	Mr.Maresh C D

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Kerala	Ernakulam	Guidelines	CC28/902, Ground Floor, Mundukottackal Estates, S A Road, Kadavanthara, Cochin-682020	4000113	Mr.Manoj G
Kerala	Ernakulam	Teletech Systems	20, First Floor, Penta Estate, above Airtel office, Janatha Junction, Palarivattom, Cochin-25	3207554	Mr.Sony Thomas
Kerala	Ernakulam	Zenicon Infocom(P) Limited	Above Syndicate Bank, Opp Cochin Shipyard, M.G.Road, Cochin-15	2359511	Mr.Jaimon Joseph
Kerala	Irinjalakkuda	Nice Mobiles	NICE BUILDING, ST. JOSEPH'S COLLEGE JUNCTION, IRINJALAKKUDA - 680121	3291515	Mr.Sebastian
Kerala	Kalpetta	Mobi Care	Ground Floor, Rawuthar Building, Opp. Vijaya Bank, Chungam, Kalpetta.	329366	Mr.Thanseer
Kerala	Kanhangad	XN Computers & Datacare	1st Floor, BENGACHERY COMPLEX, OPP.VYAPARA BHAVAN, T B ROAD JN, KANHANGAD.	3259755	Mr.Sandeep
Kerala	Kannur	Sahar Communications	SB-666-C & D, PRESTIGE CENTRE, GROUND FLOOR, SUB REGISTER OFFICE ROAD, KANNUR.	3258585	Mr.Ajai Abhiram
Kerala	Karunagapally	Supreme Enterprises	Opp to KSRTC Bus stand, Karunagapally-690518	2620282	Mr.Ratish / Premkumar
Kerala	Kasargode	XN Computers & Datacare	BENDICHAL COMMERCIAL COMPLEX, PRESS CLUB JN, MG ROAD, KASARGOD.	324755	Mr.Mr.Sandeep
Kerala	Kollam	Digital Infosystems	MC-3087, New Block, Bishop Jeromi Nagar, Chinnakada, Kollem-691001	2760647	Mr.Johnson Lawrence
Kerala	Kottarakkara	Sivashakthi Communications	KP-II/1574, Valiyavila Building, Near Marthoma Girls High School, Pulamon P.O, Kottarakkara	3298191	Mr.Suresh
Kerala	Kottayam	Svm Technologies	M.PM COMPLEX, Near Popular Maruti Show Room, M.C ROAD, S.H MOUNT, KOTTAYAM, KERALA- 686 006	2565303	Mr.Rajesh K S
Kerala	Kozhikode	Domain Systems & Services	17/1178E, 1st floor AL FAHAD, SABA school cross road, Putiyara, Kozhikkode	2722222 / 3243745	Mr.Mukundan
Kerala	Kunnamkulam	V Star Mobiles	ROOM NO 4/289/B2 2nd floor, City complex, Opp Tempo Park, Town Hall road, Kunnamkulam.	320009	Mr.Vijumon.K.V.
Kerala	Manjeri	Integrated Computer Systems	Royal Tower, TB Road, Manjeri - 676121	3299686	Mr.Thomason Chacko
Kerala	Mavelikara	Ettutharayil Agencies	GROUND FLOOR, KOIPPALLIL ROYAL ARCADE, PUTHIYAKAVU, MAVELIKARA-690101	3293340	Mr.Biji
Kerala	Palai	Cyriac TV Plaza	Vypana Building, Petta Road, Palai.	329746	Mr.Tom Cyriac
Kerala	Palakkad	Orion Techno Solutions	12/310/15, FIRST FLOOR, METRO COMPLEX, HEAD POST OFFICE ROAD, PALAKAD-678001	3200255	Mr.Khaja Hussain

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Kerala	Pathanamthitta	Melamparambil Agencies	10/264, Main Road, Town, Pathanamthitta - 689645	2223132	Mr.M.V.Francis Oommen
Kerala	Thalassery	Sahar Communication	44-1929, 1st Floor, MACKSON MONOR, OPP PARIS RESIDENCY, LOGANS ROAD, THALASSERY	3208585	Mr.Ajai
Kerala	Thiruvalla	Sangeetha Electronics	524/17, Central Tower, Cross Junction, Thiruvalla	3203000	Mr.Ranjeev Kumar
Kerala	Thiruvananthapuram	Appolo Systems	Thelungu Chetty Complex, Shop No 23-24, Kalpalayam JN Karamana, Thiruvananthapuram 695 002.	2340523	Mr.Santosh
Kerala	Thiruvananthapuram	Smart Mobile	TC 2/3554(5), First Floor, Opp. Petrol Pump, Kesavadasapuram, Trivandrum-695004	3200105	Mr.Krishnakumar P B
Kerala	Thodupuzha	National Electronics	Shop No 5, Aswathy Shopping Complex, Temple Junction, Thodupuzha	220320	Mr.Aneesh M A
Kerala	Thriprayar	Nice Mobiles	382J, 1st Floor, Century Plaza, N.H.17, Near Bus Stand, Thriprayar	3240400	Mr.T.PSebastian
Kerala	Tirur	Telit Telecom Shop	GROUND FLOOR, AL AMAL COMPLEX, PAN BAZAR, TIRUR	3295623	Mr.Vasan.K.Nair
Kerala	Trichur	Cell Tech	Shop No 5/2, TC23/326, N.P.Tower Guruvayoor Road, Near Bindu Theatre, West Fort, Thrissur.	2387386	Mr.Santom Kalloor
Kerala	Vaikom	Vaikundam Electronics	II/ 214C, Mannamkeriel Complex, Bus stand Road, Valiyakavala, Vaikom	326616	Mr.Sreekumar.G
Madhya Pradesh	Balaghat	Shri Computers	Keshar Plaza Complex, Hanuman Chowk, Balaghat	9300632132	Mr.Deepak Bajaj
Madhya Pradesh	Betul	Shivam Electronics	Jiaprakash Chowk, Kothi Bazar, Auto Stand, Betul - 460001	9329099071	Mr.Vikram Motwani
Madhya Pradesh	Bhopal	Akansa Enterprises	25-26, CENTRAL MARKET, ROSHANPURA SQUARE, BHOPAL MP	7553201626	Mr. Dinesh Asija
Madhya Pradesh	Bhopal	GSM Solution	M-2 CHETAK COMPLEX, ZONE -2 M.P NAGAR	4229213	Mr.Neeraj
Madhya Pradesh	Bhopal	Music Mahal Bhopal	SHOPNO.1 NEW MARKET NEAR HANUMAN MANDIR, BHOPAL	5220725 / 2579178	Mr.Shinu
Madhya Pradesh	Chindwara	Bunty Photoelectronics	Shop No.33, Jiji Bai Complex, Parasia Road, Chindwara	230358	Mr.Ritesh Shukla
Madhya Pradesh	Dewas	New Taj Electronics	4, New Market, Moti Bunglow Main Road, Dewas	220005	Mr.Shabbir Shaikh
Madhya Pradesh	Guna	Mobile Junction	Jai Stambh Chauraha, Nr.Central Bank, Guna-473001	329277	Mr.Deepak Arya
Madhya Pradesh	Gwalior	Galav Computers	Ground floor, Ganpati Plaza, City Centre, Gwalior	4013311	Mr.Pradeep Dixit
Madhya Pradesh	Gwalior	Versha Sales & Service-Asp	GROUND FLOOR SARAFI BAZAR LASHKAR, GWALIOR	4060444	Mr.Ajit Kumar
Madhya Pradesh	Indore	Ayushi Electronics	UG-10, Ratnamani Complex, 7/1, New Palasia, Indore-452001	3251284	Mr.Santosh Dwivedi

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Madhya Pradesh	Indore	IT Customer Care	UG- 11, B. M TOWER, OPP. LOTUS, SAPNA SANGITA ROAD, INDORE	3207283	Mr. Sanjay Dhankar
Madhya Pradesh	Indore	Pioneer Marketing	Prem Trade center Opp.Gujarati Girls collage, Indore	4006503	Mr.Ritesh
Madhya Pradesh	Itarsi	S.S. Telecommunications	Vijayshree Complex 5, Line Sarafa Bazar, Itarsi - 461111	9300272505	Mr.Akilesh Saxena
Madhya Pradesh	Jabalpur	Sri Sai Communication	C/O MUSKAN CARD GALLERY, 766, SHAHID SMARK MARG, NEAR RANITAL SQUARE, JABALPUR-482001	4046831	Mr.Mohit Sareen
Madhya Pradesh	Jabalpur	I T Solution	Opp Dr.Grover Hospital, Gate No-3, Wright Town, Jabalpur	4014064 / 4064370	Mr.Sanjeev Choubey
Madhya Pradesh	Katni	Excellent Infosys	20/306, Gurunanak Road, Katni	406047	Mr.Prafful Agrawal
Madhya Pradesh	Khandwa	Naman Refrigeration	TAPAL CHALL, KHANDWA	2230089	Mr.Yashwant Mali
Madhya Pradesh	Mandsaur	Sky Link Mobile Services	Payas Ice Cream Parlour, 16, Opium Godown Road, Nai Abadi, Mandsaur 458001 (M.P.)	243978	Mr.Gaurav B. Mittal
Madhya Pradesh	Morena	Mobile Plaza	M S ROAD, JIWAJI GUNJ, OPP BANK OF INDIA, MORENA	400886	Mr.T C Shivhare
Madhya Pradesh	Neemuch	Shree Balaji Mobiles	Jain Bhavan Road, Near Ganganagar Off., NEEMUCH (M.P.)	320033	Mr.Savesh Goyal
Madhya Pradesh	Ratlam	Kirti Telecom	124 Station road Opp.Raj Tower, Ratlam - 457001	239346	Mr.Kirti Jain
Madhya Pradesh	Sagar	Neeta Computers	Hanuman Mandir Gali 5, Civil Lines, Sagar -470001	329951	Mr.Ramesh Gupta
Madhya Pradesh	Satna	Akashwani Agencies	OPPCMA SCHOOL, SHOP NO.2, ANNAM CHHAYA, REWA ROAD	416455	Mr.Ajay Sukhramani
Madhya Pradesh	Satna	Maa Shaarda Communication	Gali No1, C/o Shri Gopal Sharan Singh, Pushp Raj Colony, Satna	7672320797	Mr.Prashant Singh
Madhya Pradesh	Shivpuri	Ocean Computer Corporation	1st Floor, Vishnu Mandir Market, Near Panipat Handloom, Shivpuri	225505	Mr.Sameer Saxena
Madhya Pradesh	Ujjain	Galaxy Computers & Communication	43/2, Varruchi Marg, Opp Madhav Nagar Police Staion, Freeganj, Ujjain	2515995 / 253999	Mr.Anurag Chhajhlani
Maharashtra	Ahmednagar	T V Spot	B-3, ADARSH SAMRUDHI, NR. CHOUPATI, KARANJA-414001	2326267	Mr Anil Apte
Maharashtra	Akola	Supra Computers	Ushakiran Complex, Shastri Nagar, Opp. Hotel Surya, Akola.	9326866469	Mr.Prashant
Maharashtra	Amravati	Scorpio Services	Shop No. 84, Ground Floor, Gulshan Towers, Nr. Panchasheel Cinema, Amravati, Pin-444601	2567302	Mr. Pramod
Maharashtra	Aurangabad	Electronics World	Sahyadri Building, opp. To Shivaji School, Khokadpura, Aurangabad-431001	6454532	Mr. Rauf

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Maharashtra	Aurangabad	Unique Telematics	SHOP NO. 108A, FIRST FLOOR, 'TAPADIYA SUPAR' MARKET, NIRALA BAZAR, AURANGABAD -	2356447	Mr.Mahesh
Maharashtra	Beed	Shree Enterprises	Behind Raj Hotel, A H Wadia vachnalay rd, Beed	9373701010	Mr. Rajiv Joshi
Maharashtra	Chalisgaon	Mobile Point	SHOP-22, MOMAYA COMPLEX, NEAR BUS STAND, CHALISGAON	9372712777	Mr. Dashrath Vaishnav
Maharashtra	Chandrapur	Shiv Communications	Ramnagar, Near Durga Mata Mandir, Sindhi Colony, Chandrapur-442 401	329546	Mr.Mahesh
Maharashtra	Chinchwad (Pimpri)	Ritz Communication	Shop No 10, "A" wing, Jai Ganesh Vision, Next to Hotel Neelkanth, Near Fam Multiplex, Akurdi, Pune-411033	27485613 / 32661900	Ms Nikita
Maharashtra	Dhule	Pearl Communications	Shop no 3, CKB arcade, Near Devpur Bus stand, Agra rd, Dhule	324666	Mrs. Sonu Atul Bang
Maharashtra	Gondia	M/S V2 Care	Opp. Cofee house, Railtoli, Gondia 441614	329322	Mr. Krishna Sargam
Maharashtra	Hatkangale (Ichalkaranji)	Sai Vision Services	11/236 MOHAN ARCADE SHOP NO B14, STATION ROAD, TAL-HATKANGALE, CITY-ICHALKARANJI-416115	2439989	Mr. Sameer Bhonsale
Maharashtra	Islampur	Solar Shoppy	Kachare Lane Islampur, Distt Sangli	9326777603	Mr. D.H.Patil
Maharashtra	Jalgaon	TelUs Associates	Shop No 16, 'G' Wing 1st Floor, Near Tarun Bharat Office, Golani Market, Jalgaon Maharashtra.	9370164545	Me. Shaikh
Maharashtra	Jalna	Megha Multi Serices	Shop no 04, A wing, Udhan complex, Jalna	9326201408	Mr. Narendra Kulkarni
Maharashtra	Kolhapur	Sms Services	S5, Diwan Tower, Opp. Nutan Marathi School, Near Mirajkar Tikky, Kolhapur, Pin -416005.	2541120	Mr. Prakash Patil
Maharashtra	Kopergaon	Om Sai Mobile	Opp. ST Bus Stand, Daharnaon Road, Kopergaon, Dist Ahmednagar.	9373295009	Mr.Mahendra Devkar
Maharashtra	Latur	Hindustan Mobiles Services	Side no, 111, Shop 59, 49 Gandhi Market, Near Bhalchandra Blood Bank, Latur-413512	641111 / 982345500	Mr. Sandeep Parande
Maharashtra	Malegaon	Cell Care	Shop no 59, SR no 57, New Islampur, Malegaon	9326211996	Mr Ansari Mohd Israfil
Maharashtra	Mumbai	Cyber-Gyan Convergence & Services (India) Pvt. Ltd.	43/44, Gold Filled Plaza, Sion Bandra Link Road, Sion, Mumbai-400017	24075939	Mr. Jatin Parekh
Maharashtra	Mumbai	G.P.Electronic	Shop No 6 Ambika Cooperative Housing Society, Jawahar Nagar Road No 2, Near Railway Crossing, Goregaon West, Mumbai 400062	2232633960	Mr.Mayur

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Maharashtra	Mumbai	Grace Tele Services	Shop no 3, C/1, Manik Nagar Soc, Punjabi lane, Borivali (W), Mumbai 400092	32455033	Mr. Daniel
Maharashtra	Mumbai	Komplex Telecom Corporation	Shop no.A/19, Nootan Nagar Premises Co. Op. Hsg. Society, Near Bandra Rly. Stn., Towards Bandra Talav, Turner Road, Bandra (West) Mumbai 400050	64147153	Mr. Sutar
Maharashtra	Mumbai	LG Service Centre	Shop No.1, 2, 3 Ground Floor, Rajakamal Bldg, Opp.Ram Mandir, Subhash Road, Vile Parle(E) Mumbai 400 057	26134917	Mr. Rakesh / Omkar
Maharashtra	Mumbai	Paras Telecom	2nd floor, Rear Side Capital Cinema Building, Wauddy Road, Opp. Mumbai CST Railway Station, Mumbai	65279042	Mr. Ravindra
Maharashtra	Mumbai	Sai Tele Services	A-110, Satyam Commercial Complex, M.G.Road, Chhatkoper (E), Mumbai - 400 077.	40111264	Ms. Isha
Maharashtra	Mumbai	Sierra Mobiles	Opp Prabhu Darshan, L.J.Road, Shivaji Park, Near Shiv Sena Bhavan, Mumbai 400016	24382200	Mr. Anurag
Maharashtra	Mumbai	Trident Communications	8-A, Vasant Smruti, Dadasaheb Phalke Road, Beside "BharatKhsetra Building", Near Dadar station(E), Dadar -East, Mumbai - 400 014.	65047270	Mr. Kalpesh
Maharashtra	Mumbai	Yash Telecom	Dadarkar Tower, Shop no.1, Opp.Film Centre, Near Crossroads, Tardeo, Mumbai - 400 034	23522702	Mr.Girish
Maharashtra	Mumbai	KBs Communications	Shop No.2A, Maharashtra Seva Sangh, Near Apna Bazar, Nehru Road, Mulund (West). Mumbai-400080.	32107410	Ms. Harsha
Maharashtra	Nagpur	Epoch Services	Shope No. UG-9, Bhakati Vihar Complex, Chapru Nagar Square, Lakadganj, Nagpur -440008	3246777	Mr. Girish
Maharashtra	Nagpur	Shivatronics	B-31 Sai Regency Complex Ravi Nagar Square Nagpur Maharashtra 440044	9300892579	Mr. Ravi Gupta
Maharashtra	Nagpur	Spectrum Marketing	Shop No.2, Dharampeth Towers, West High Court (WHC) Road, Dharampeth, Nagpur - 440010	22527823	Ms. Sonali
Maharashtra	Nanded	Devansh Microtronics	Beside Forest office Nr. Ranbidkar Resi.Nanded	249789	Mr. Prashant Palnate
Maharashtra	Nasik	Mobs Associates	SHOP NO. 8A, FIRST FLOOR, 'KAPOTE-MEHER' MARKET, RENUKA NAGAR, WADALA NAKA, DAWRKA, NASIK	6523613	Mr. Alim Kazi
Maharashtra	New Mumbai	Beekeyen Enterprises	Block No 1, Shop No. 17, Mahaveer Milan, Sector 28, Near Blue Diamond, Hotel, Vashi, New Mumbai	65114304	Mr. Shailesh
Maharashtra	New Mumbai	LG Service Centre- Dakc	H Block, Ground Floor, Dhirubhai Ambani Knowledge City, Navi Mumbai-400709	30386032	Mr. Sachin

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Maharashtra	Panvel	Oceanic Tele System	Shop No. 3, Sai Arcade, Sector 15, New Panvel (E), Dist. Raigad.	9322217221	Mr. Chetan
Maharashtra	Pen	Skyphone Enterprises	SHOP NO 3, SHREE COMPLEX, OPP UNIQUE BAZAR, PEN KHOPOLI ROAD, PEN, DIST RAIGAD-402107	9373435000	Mr Kuldeep
Maharashtra	Pune	Horizon	32A, Lotus Court, Near Hotel Panchami, Pune Satara Road, Pune.	32501222	Mr. Nilesh Pundye
Maharashtra	Pune	Microchip Solutions	Akshay Chambers 216 Naryan Peth, Near Bhide Bridge, N C Kelkar Rd, Pune-411030	24471155	Mr Mahyesh Bhosale
Maharashtra	Pune	Mobile World	G-25, AKSHAY COMPLEX, DHOLE PATIL ROAD, PUNE-411 001	30942268	Mr.Pawan Mantri
Maharashtra	Pune	Viki Info Technologies	Shop No4, Amit Complex, 474, Sadashiv Peth, Opp New English School, Tilak Road Pune Maharashtra	24434134 / 9322206000	Mr.Vivek Surve
Maharashtra	Ratnagiri	S P Electronics-Pune	shop no-19, Parasmani Complex, K C Jain Nagar, Nr Maruthi Mandir, Ratnagiri-415612	329556 / 221982	Mr.Santosh Prabhu
Maharashtra	Sangamner	Rajpal Telecom	Yashodhan complex, New Nagar Rd, Near hotel Chaitali, Sangamner	320888	Mr Harish Rajpal
Maharashtra	Sangli	Ramesh Electronics	Dr. G. S. Joshi Banglow. Opp. B.Ed Collage, Rajwada, Sangli., Tq. Miraj, Dist:- Sangli.	2327601 / 09372107601	Mr. Suresh Shegane
Maharashtra	Satara	Shivkal Mobilink	173/6/7 Raviwarpath shop no-11, Vithal Lila Complex, Powai Naka, opp Janta Bank, Satara-415002	325212	Mr. Mahesh Shinde
Maharashtra	Shrirampur	Siddharth Infocom	Shop No 1, Hotel Sidhartha Building, Sidhartha Stop, Sagamaner Road, Shrirampur-413709	9326611445	Mr. Kedar Fargade
Maharashtra	Solapur	Atharva Electronics Pun	940/2 NORTH SADAR BAZAR, GARUD BUNGLOW, SOLAPUR-413003	2317595	Mr. Umesh Kamalapurkar
Maharashtra	Solapur	Jawaharlal Radio Service	184, Gold Finch Peth, nr Hotel Ritesh, Solapur - 413007.	2725030	Mr. Prasanna J Chavan
Maharashtra	Thane	Ekadant Corporation	Shop No1, Ground Floor, Laxmi Smruti CHS, Opp Bal Ganesh Temple, Near Makhmali Talao, Edulji Road, Charai, Thane (W) 400602.	32130222	Mr. Paresh
Maharashtra	Thane	E-Link Solutions	Shop No.5, Type C, Bldg no.5/6, Shanti Vihar, Mira Road -E	9322839386	Mr.Omkar
Maharashtra	Kalyan	Sky Lark Associates	Shop:1, 'A' Wing, Suresh Tower Co-op. Hsg. Soc, Opp. Municipal Vegetable Market, Santoshi Mata Road, Kalyan (W)	3209899	Mr. Pravin
Maharashtra	Bhiwandi	Varad Electronics	SHOP NO2, PRABHU CHAYA BLDG, PRABHU ALI, NEAR OLD GOVT. HOSPITAL, MANDAI, BHIWANDI, DIST THANE	222653	Ms. Swati
Maharashtra	Vashi	Beekeyen Enterprises	Block No 1, Shop No. 17, Mahaveer Milan, Sector 28, Near Blue Diamond, Hotel, Vashi, New Mumbai	65114304	Mrs. Kartiki

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Maharashtra	Virar	Siddhivinayak Tele Services	Shop no 5&6, Vishnu Prasad Complex, Opp Utkarsha School, Near S.T. Bus stand, P.P. Marg., Virar (West)	3258111	Mrs. Vaishali
Maharashtra	Wardha	Libra Electronics	C/o Anand Opticals, Soshalist Chowk, Main Road Wardha Maharashtra-442001	2242109	Ms.Manjusha
Maharashtra	Yavatmal	Combine Electronics & Services	Shop No 13, 1st floor, Old Indira Gandhi Market, Azad Maidan Road, Yavatmal-445001	9822200166	Mr. Ajay Shukla
Maharashtra	Yavatmal	I T Services	Nr datey college, C/o Yahoo cyber cafe, Yavatmal 445001	9372610121	Mr.Umeh Gadwe
Maharashtra	Yavatmal	Star Electronics	Near Shyam Talkies Ram Mandir Road Yavatmal Maharashtra 445001	2324106	Mr.Snajay Chabda
Meghalaya	Shillong	Rhapsody Care	E N COMPLEX, G.S. ROAD, Below Town Pharmacy	2547946	Mr.R.R Wazi
Orissa	Anugul	Creative Solution	Hanuman Bazar, Near gundicha mandir, Angul-759122	329207	Mr. Tapas Sahu
Orissa	Balasore	Raghunath It Solutions	Azimabad, Proof Road, Balasore.-756001	329267	Mr.Sujit Kr Sen
Orissa	Berhampur	Rashmi Electronics & Computers	Shop No.19, Sai Complex, Main Road, Gandhi Nagar, Berhampur, Orissa	3290409	Mrs. Rashmi Ranjan Sharma
Orissa	Bhadrak	A B Associates	Nr.Rliance Web World Express, Bypass Road, BHADRAK-756100	9337040450	Mr. Kartik Chandra Rout
Orissa	Bhubaneswar	Miracle Services It Extn.	Plot No. 136, Fr. Lane of Vigilance Office, Beh. Passport Office, Surya Nagar, BBSR.	2532383	Mr.Chaco/ Suprava
Orissa	Bhubaneswar	S.A.Infosys	291.Bomikhal, Opp.Akamra cinema hall, Bhubaneswar-751010	2573114	Mr. Ashwini K Sahoo
Orissa	Cuttack	O.A.Infotech	Behind Govt Bus Stand, Badambadi, Cuttack -753012	9338912613	Mr. Arabind Rout Ray
Orissa	Puri	Bajjnath Infocomm	At Muncipal Mkt, Grand Road, Puri-752001	9337032005	Mr.Ajay/ Sandeep Agrawal
Orissa	Rourkela	Infosys	13, Bisra Road, subhadra complex Opp.Choudhary Petrol Pump, Rourkela	9337403999	Mr. Arun Ghosh
Orissa	Sambalpur	A.N.Communication	Inf. Of Zilla School, Pensionpara, Sambalpur-768001	9337660919	Mr. Md. Abdul Aziz
Punjab	Amritsar	Bajaj Telecommunication	87, G Floor, Nehru Complex, Lawrence Road, Amritsar-143001	3258599	Mrs.Suman Bajaj
Punjab	Barnala	Unique Infotech	Mittal Street, Near M C Office, Barnala-148101	238007	Mr.Pankaj Goyal

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Punjab	Batala	Dream Services	Shop No 111 Opp Improvement trust office, Dharamsingh Market, Batala.	9316676018	Savdeep Singh
Punjab	Bhatinda	Lalli's Electronic Gallery	1139-A, First Floor, Amrik Singh Road, Nr Gole Digg, Bhatinda-151005	2239500	Mr.Ashok Kakria
Punjab	Chandigarh	New Tech	SCO 495/496 SEC 35C First floor	9814244862	Mr.Pawan
Punjab	Chandigarh	Vignesh Services	S.C.O- 189-90, Sec- 34, Chandigarh	3018028	Mr.Mukesh Arya
Punjab	Hoshiarpur	Kuldip's Mobile Care	Dhobian Wali Gali, Phagwara Road, Hoshiarpur-146001	226906/ 2232906	Mr.Kuldip
Punjab	Jalandhar	Mobile Center	233/1, Saheed Udham Singh Nagar, Backside Hotel Preet, Nakodar Road, Jalandhar-144001.	3292666	Mr.Vikas Sangar
Punjab	Kapurthala	Arun Electronics	217, C Block, Jama Masjid, Shoping Complex-144601	329254	Mr.Arun Khosla
Punjab	Kotkapura	Om Mobile Service Centre	1ST FLOOR DHANU RAM PANSARI, Railway Road-151204	223069 / 9815759239	Mr.Rohit Mittal
Punjab	Ludhiana	Anant Shree Comp	19K Opp PAU Gate no 1 Ferozpur Road	3245386	Ms Monia chaudhary
Punjab	Ludhiana	Shahi Communication	Shop No.5, Revolving Restaurent 4X International, 583 L, Model Town, Ludhiana	3244190	Mr.Amit Shahi and mrvimal
Punjab	Malaut	Khurana Mobile Solution	SHOP NO 7 OPP, NEW TELEPHONE EXCHANGE G T ROAD MALUAT PIN NO = 152107	9316940003	Mr.Ramesh Khurana
Punjab	Malerkotla	Prime Infocomm	Opp. Main gate, Govt College, MalerKotla-148023	253899	Mr.Rohit Bansal/ Raj Verma
Punjab	Mandi Gobindgarh	Aditya Infocom	Main Iron Market, custom and exise office Mandi Gobindgarh	326896	Mr.Naresh Aggarwal
Punjab	Mansa	Sharma Telecom	Cinema Road NAGINA MARKET OPPPARKASH BOOK DEPOT, Mansa	9316173009	Mr.Udesh Kumar Sharma
Punjab	Moga	Rashpal Telecom	6, Red Cross Road, Court Road, Near Old Court, Moga-142001	222468	Mr. Rashpal Singh
Punjab	Nabha	Echo Telecom	Opp. Milan Palace Circualr Road. NABHA 147201	504501	Mr.Girish Garg
Punjab	Nawashar	Kapoor Electronics	Kothi Road, Opp Kumar Hotel, Nawashahr-144514	508085	Mr.Narender Pal
Punjab	Pathankot	Leo Comp	Near Tourist hotel, military ground, Pathankot	9814586406	Mr.Mr Kamal
Punjab	Pathankot	Touch Infosys	189 Opp. Guru Nanak Park, Model Town, Pathankot.	3290300	Mr.Navdeep Singh Bedi

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Punjab	Patiala	Image Services	Shop No.84, First Floor, Leela Bhawan Opp Punjab National Bank, Patiala-147001	2222796 / 9872281524	Mr.Rohit Bansal
Punjab	Phagwara	Bansal Telecom	G T Road, Railway Road Chowk Near Connect Office, Phagwara-144401	461321 / 9888005339	Mr.Mangalesh
Punjab	Rajpura	M K Enterprises	Shop no.6, Gurudwara Singh Sabha Market, Rajpura Town-140401	2652569	Mr.Johny
Punjab	Ropar	Arora Communication	Shop No.1, Lehari Shah Mandir Road, Ropar	9872363032	Mr.Amit Arora
Punjab	Samana	Sangam Mobile Care	Tehsile Road, Near Garg Laboutry	505648	Mr.Vaneet Kumar
Punjab	Sangrur	National Computers	SUNAMI GATE, Near Guru Nanak School, SANGRUR PIN NO = 148001	233335 / 9814586196	Mr.Sarabjit Singh
Punjab	Sarhind	A.S. Infocom	Grain Market, Cinema Road Sirhind City-140406	500726	Mr.Jaspreet Singh
Rajasthan	Ajmer	Nehal Infotech	F-3, FIRST FLOOR, AMAR PLAZA, Opp. DAULAT BAGH, AJMER-305001	3291404	Mr.Suresh Sharma
Rajasthan	Ajmer	Prangan	112/10, Civil lines, Ajmer	9828503092	Mr.Pareek
Rajasthan	Alwar	R.K.Telecom	SHOP NO.112, FIRST FLOOR, GANPATI TOWER NEAR NANGLI CIRCLE, Alwar	9351390057	Umesh sharma
Rajasthan	Beawar	Srikrishna Infocom	Chaoni Road, Bhagat Chauraha, Near Roadways Bus Terminus, Beawar	329675	Mr. Dheerendra Agrawal
Rajasthan	Bhilwara	Ajanta Communications	No3, Bapna Complex, Pur Road, Bhilwara	329549	Rafiq
Rajasthan	Bikaner	Tech Solutions	1st Floor, 222 & 223, Ganpati Plaza, KEM Road, Bikaner	3292423	Mr.Aziz/Vika
Rajasthan	Chittorgarh	Arihant Infotech	A46, Meera Market, Near Rajasthan Patrika Office, Chittorgarg-312001	325933	Mr.Abhishek
Rajasthan	Chomu	Tambi Telelink	Kotwali chabutra, dhan ji ki gali, Sadar Bazar Chomu-303702	9314090400	Mr.Anup Tambi/ Dp Saini
Rajasthan	Dholpur	Tirupati Telecom	14, Bhagwati Market, Near Jagan Cinema hall, Jagan Tiraha, Dhoulpur	9314014093	Mr.Moshin/ Devender
Rajasthan	Jaipur	Alpha Infotech Systems	F-1, First Floor, Krishna Mall, Lakshmi Mandir Crossing, Tonk Road, Jaipur-302015	3299724	Shatrugan mangal
Rajasthan	Jaipur	Alliance Communication	G6, City plaza, Space Cinema Hall, Jhotwara Road, Jaipur-16	9351371549	Amit/Bhushan
Rajasthan	Jaipur	Solution Computers	Plot No.4 Krishna Nagar StationJanpath Near Hotel Paradise Jaipur	5106388	Mr.Dhreej Mathur
Rajasthan	Jhunjunu	M S Mobile Point	Kaswan Complex, Opp Roadways Bus Stand, Jhunjunu	9314011951	Mr.Abhshek / Mr.Sunil
Rajasthan	Jodhpur	Omega Electronics	Plot No.196 SS Tower, AkhaliyaChowraha Jodhpur-342003	3291214	Mr.Pratap Singh

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Rajasthan	Kishangarh	Capital Enterprises	5, Radha Krishan market, Opp. Sardul school, Kishangarh-305801	326550	Mr.Shatrughan
Rajasthan	Kota	Cyber Infosystems	26, Ground floor, Kalawati Paliwal market, Gumanpura, Kota-324007	2392153	Mr Rajnish
Rajasthan	Kota	Saya Electronics	1-TA-16, Vigyan Nagar, Kota	9828503246	Mr.Lalit
Rajasthan	Kotputli	Isha Communications	11, ground floor, Govardhan plaza, Nehru Bazar, Kotputli	9314140001	Mr.Vijender
Rajasthan	Nagaur	Jam Appex	Shop num.7, Opp. Old power house Ram Poll, Station road, Nagaur	329595	Mr.Amit
Rajasthan	Nathdwara	Geniune Infotech	Shop num.10, Suriya apartments, Opp.Vandana talkies, Bus stand, Nathdwara.	329208	Mr.Gajender/Mr Ashwini Purohit
Rajasthan	Pali	Mansi Mobile	9, Vasant Vihar, Opp. Bangur college, Pali-306401	9352766555	Mr.Abhishek
Rajasthan	ShrigangaNagar	Telecare Servcies	33, J Block, Near Birbal Circle, SriGanga nagar	3207687	Abhishek
Rajasthan	Sikar	Rita Computers	Shop No.4, Kabra Market, Shramdan Marg, Sikar-332001	329320	Mr.Saurav Chakravarthy
Rajasthan	Udaipur	Shree Telelink	31, First floor, Indra prasth complex, Delhi gate, Udaipur-313001	3261777	Tanujay Jain
Tamilnadu	Ambasamudram	A to Z Communications	63-D, KNV Complex, Santhai Bazaar, Ambasamudram -627401	251143	Mr Raja Selvakumar
Tamilnadu	Arkonam	G.M. Marketing	NO.3/4, SUBURAYAN STREET, ARAKKONAM-631001	231395	Mr.Mr.PGajapathi
Tamilnadu	Arni	Digitech Computers	Shop No. 201/82- B1, SM Road, Arani - 623101	223929	Mr.D.Mohan Ram
Tamilnadu	Aruppukottai	The Mercury Computers	607, MADURAI ROAD, NEAR NEW BUS STAND, ARUPPUKOTTAI-626101	222552	Mr. R. Boominathan
Tamilnadu	Attur	V.R. Net	V.R.Net, Dr.Arumugam complex, salem main road, ATTUR	243585	Mr.Senthil Kumar
Tamilnadu	Batlagundu	Karthik Communications	No 221, Main Road, Batlagundu- 624202	9360019090	Mr Lakshmanan
Tamilnadu	Bhavani	Sri Abirami Electronics	2E, Pavadi Street, Anthiyur Corner, Bhavani-638301	230919	Mr Balamurugan
Tamilnadu	Chegalapatu	SKB Electronics	No-42 Devarajanar pillai Street, Vedachalam Nagar, Chengalpet	37406080	Mr.Balaji
Tamilnadu	Chennai	Genesis Communication	63/3, First main road, Gandhi Nagar, Adyar, Chennai-600020	24401188	Mr Suresh
Tamilnadu	Chennai	GS Systems	547/352, F M Towers, Mount Road, Nandanam, Chennai-600035	24330889	Mr.Nicholus
Tamilnadu	Chennai	Sabisu	B2, Golden Enclave, New 275, Old 184, Poonamallee High Road, Kilpauk, CHENNAI 600 010.	26612347	Mr.Palani
Tamilnadu	Chennai	Unicare Infocomm Services	No.293, Arcot Road, Next to Indian Overseas Bank, Kodambakkam Chennai - 24	24724666 / 52047059	Mr.Kartik
Tamilnadu	Chennai	Garage De Telecom	OLD No:30: NEW No:10, KMBF BUILDING, 1ST FLOOR, DURAISAMY ROAD, NEAR POTHYS, T.NACAR, CHENNAI 600017	28143454	

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Tamilnadu	Chidambaram	Future Tech	Hasan Towers, 1st Floor, No. 14, V.G.P.Street, Near Hotel Ritz, Chidambaram	222150	Mr.Shaker
Tamilnadu	Coimbatore	Classic Electronics	No 1/1, Alagappa Road, 6th St, Tatabad, Coimbatore - 640012	4374875	Mr Arivazhagan
Tamilnadu	Coimbatore	Fast Track	138-C, TV Swamy Road (West), RS Puram, Coimbatore - 641002	2551155	Mr Anand
Tamilnadu	Coimbatore	Nucom Services	3/61, Master Building, Kattoor Road, Pappa Naicken, Palayam, Coimbatore - 641037.	4351569	Mr.Uthaman
Tamilnadu	Cuddlore	Kasturi Cellular Service	NO: 37 (2C) BHARATHI ROAD, CUDDALORE. 607 001, CUDDALORE DISTRICT, TAMIL NADU.	220183	Mr Raghupati
Tamilnadu	Cumbum	LG Mobile Service Gallery	No 52, Gandhiji Street, CUMBUM-625516	320800	Mr.Senthil Kumar
Tamilnadu	Dharapuram	IT Zone	40-A-1, Bye Pass Corner, Dharapuram-624202	329293	Mr Ramakrishnan
Tamilnadu	Dharmapuri	Calrity Digital Photo&Audio	98/29C KANDASAMY VADIYAR STREET, DHARMAPURI, 636701	329707	Mr.Raj Murughesan
Tamilnadu	Dindigul	Padma Electronics	15, Dudley high School, Dindigul	9367927080	Mr. Murali Chandra
Tamilnadu	Erode	Jans Electronics	29, Sathy Road, Near Hotel Oasis, Erode - 638004	3258526	Mr Kannan
Tamilnadu	Gobichettipalayam	Best Electronics	47a/1, kms complex kacherry medu, gobichettipalam	225598	Mr.G.A.Jayakumar
Tamilnadu	Hosur	Suryas Will Of People	R S Towers, Opp Traffic Police Station, Bangalore By Pass Road, Hosur-635109	246687	Mr.Shanmugam
Tamilnadu	Kallukuruchi	New Magestic Cell Sales&Service	OPP TO TELEPHONE EXCHANGE, GANDHI ROAD KALLAKURICHI	228270	Mr. Murugesan
Tamilnadu	Kanchipuram	Classic Mobile Care Centre	Door No.67-A, (Shop No.5), P.S.K. Street, Kancheepuram-631 501	9345636900	Mr.Damodaran
Tamilnadu	Karaikal	Shree Harini Cellulor Service	OPP. TO NEW BUS STAND, BHARATHI MAIN ROAD, KARAİKAL-609602	320544	Mr. K. Selvaganapathy
Tamilnadu	Karaikudi	Sitiyes Electronics	10 A / 3, Muthulakshmi Complex, Opp to Income Tax Office, Sekkalai, Karaikudi - 630002	9362611455	Mr. S. Veerapandiyan
Tamilnadu	Karur	Aswathi Electronics	No 90 / 102, Old Bye pass Road, Karur-639001	9843045555	Mr Satish Kumar
Tamilnadu	Kovilpatti	St.Marys Cellphones	No.6, Rajakumari Towers, AKS Theater Road, Kovilpatti	9360533649	Mr.Iyyappan
Tamilnadu	Krishnagiri	Madura Care Centre	No 361, Crown Complex, Bangalore Main Road, Krishnagiri-635001	9364258223	Mr Suresh Kumar
Tamilnadu	Kumbakonam	Fargan Electronics	NO.5 VRS COMPLEX, HAJIAR STREET, KUMBAKONAM- 612001,	2401123 / 3290303	Mr. Surbudeen

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Tamilnadu	Kuzhithurai	Mobile Care	Shop no 211 , SM Arcade, Main Road, Marthandam, Kuzhithurai - 629165	270587	Mr Surendra Kumar
Tamilnadu	Madurai	Devaa Electronics	No.4, Thirumakulam North Street, Near Ayyappan koil, Thhallakulam, Madurai-625002	4360995	Mr. Guna
Tamilnadu	Mayiladuthurai	Nrs Mobile City	NO-28 - C/14, R.R.COMPLEX, MAILADUTHURAI	223277	Mr Abdul Rahim
Tamilnadu	Nagercoil	Redeemer Electronics	Shop no 2, Pillars Gate, Balamore Road, Nagercoil-629001	327788	Mr.Dinkar
Tamilnadu	Namakkal	V.R Care	77/2, Veera Vilas, Trichy Main Road, Namakkal - 637001	329304	Mr. R. Vijayalakshmi
Tamilnadu	Ooty	Mountain Cell Com	NO:302, Band lane, Commercial road, Near Liberty Theatre, Ooty-643001.	2443787	Mr.Sujith & Miss Geetha
Tamilnadu	Palani	Hi-Tech Electronics	No.76, New Dharapuram Road, Opp. ICICI Bank, Palani - 624601	320264	Mr. R. Ramachandran
Tamilnadu	Paramathy Velur	Vishwak Mobiles	No 5, KK High School Building, 98, High school Road, Paramathy Velur - 638182	224348	Mr Mohan
Tamilnadu	Pattukottai	Mobile Care	127, BIG STREET, PATTUKOTTAI	9842653921	Mr.Arul Alagan
Tamilnadu	Perambalur	The Best	Vivkanand st., M.P. office opp., Perambalur	275717	Mr.PKumar
Tamilnadu	Perundurai	Sree Baby Electronic	483 mainroad, perundurai	221800	Mr.Shiva Balan
Tamilnadu	Pollachi	Star Mobiles	SHOP NO. 5 Ground Floor, Vasanth Complex, Immamkan Street, POLLACHI.	222230	Mr.Senthil Kumar
Tamilnadu	Pondicherry	Digital Logistics	126/2, Perumal Koil Street (Bharathi Street Cutting), Pondicherry-605001	4210148 / 9843093348	Mr.G Singaravelu
Tamilnadu	Pondicherry	Balaji Electronics	No:21, 3rd CROSS STREET, Annanager, PONDICHERRY,	3090414	
Tamilnadu	Ponneri	Sri Balaji Mobile Care Center	NO, 26, THALUKKA OFFICE ROAD, PONNERI, THIRUVALLUR DIST-601204	27973381	Mr.Balaji
Tamilnadu	Port Blair	Universal Service Care	R.G.T. ROAD, PORT BLAIR, ANDAMAN-744101	329588	Mr.Naveen
Tamilnadu	Pudukottai	Yem Kay Electronics	2, Subabharathi complex, 5378, 79, Alangudi Road, Pudukottai-622001.	9344038441	Mr.Rajesh Kannan
Tamilnadu	Rajapalayam	Sri Vignesh Mobiles	292\1, TENKASI ROAD, OPP BOMBAY LODGE, RAJAPALAYAM-626117	220398	Mr.Ku.G.Mutthiah
Tamilnadu	Ramanathapuram	Zeenath Telecom	13-B/23, PAL LUCKY PLAZA, RAMANATHAPURAM-623501	226750	Mr.M.S.Jahir Hussain

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Tamilnadu	Ranipet	Unicare Infocom Services	No.36, opp.Gangadhara Muddaliar Middle School, MBT Road, Novelpur, ranipet, Vellore Dist.	270806	Mr.Basker/ Mr.Karthik
Tamilnadu	Rasipuram	Sms Care Service	No 179 / 1, Anna Salai, Ground Floor, Rasipuram-637208	9345052553	Mr Manikavasagam
Tamilnadu	Salem	Vishwesh Mobiles	Sixer Complex, 121/19A, Sarada College Road, Next to Abi Medical Centre, Salem - 636007	3290535	Mr.Vasudev Nayak
Tamilnadu	Sivakasi	Tele World	78, PARSN PLAZA, OPP.TO.WATER TANK, SIVAKASI-626123	223283	Mr.B.Mathan Kumar
Tamilnadu	Tambaram	Saravanas Infocom Services Pvt Ltd	New No-43, Old No:3A, Mudichur road, Tambaram west, chennai 600045	32915599	Mr.Palani/ Mr.Ranjith
Tamilnadu	Tenkasi	Airtone	1/ 17, KMSS complex, west masi street, Tenkasi. 627811	227980	Mr.M.Nagaraja Sankar
Tamilnadu	Thanjavur	Z M Electronics	1006/1007, South East Rampart, Opp to Municipal Higher Sec School Tanjore - 613001	272595 / 329554	Mr.Ziauddin
Tamilnadu	Tindivanam	Reva Communications	Old No. 117/1, New No. 205/1, Nehru Street, Tindivanam - 604001	225250	Mr.Lakshmi Narayanan
Tamilnadu	Tiruchendur	Ark Mobile Solutions	ARK DTP centre, No. 1 a 7 North car street, Rayan Complex, Tiruchendur. 628215	329380	Mr.Mahesh
Tamilnadu	Tiruchengode	Balaji Electronics	108 s s d road, near lorry stand thiruchengode	325430	Mr.Sekar
Tamilnadu	Tirunelveli	Classic Electronic	39, Trivendrum Road, Opposite Kalimark, Welcome Complex, Palayamkottai, Tirunilveli-627002	2575801 / 3290339	Mr.Erkins
Tamilnadu	Tirupattur	Acal Computer Systems	52/1, kkc complex, krishnagiri road, tirupattur	325385	Mr.Sunder
Tamilnadu	Tirupur	Shri Vasavi Electronics	# 155-303, Mangalam Road, Karuvam palayam, Tirupur -641604	4244009	Mr.U.B. Bala Murali
Tamilnadu	Tiruvarur	Softel Teleservices	No 21, Municipal Complex, Ground Floor, Panagal Road, Tiruvarur-610001.	22110	Mr Ravi
Tamilnadu	Tiruvellore	Yamkarna Computer	38/186 JAWAHARLAL NEHRU ROAD, OPP TO SBI MAIN BRANCH, THIRUVALLUR - 602 001	37600329	Mr. Saravana
Tamilnadu	Trichy	S K Electronics	Raj Complex, 9/A EVR Road, Puthur, Trichy- 620017	277194	Mr.Krishnan
Tamilnadu	Tuticorin	Snows Cell Care	Kala Complex, No 20, B-1, W G C Road, Tuticorin-628002	2334043	Mr.Kennedy
Tamilnadu	Udumalpet	Allwa Electronics	5 Thuluva vellar shopping complex, V.O.C. street, .UDUMALPET.642126	223047	Mr Sentamarai Kannan

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Tamilnadu	Vaniambadi	Reva Communications	No.848/3, CL Road, Vaniambadi - 635 751	395023	Mr.Lakshmi Narayanan
Tamilnadu	Vellore	Matha Communication	4, S.L.N Plaza, Opposite Odai Pilliar Koil, Gandhinagar, Vellor - 632006	2240800	Mr.Gunaa Shekhar
Tamilnadu	Villupuram	Broad Band	No 642, Nehruji Road, VILLUPURAM	222936	Mr.Pragasam
Tamilnadu	Virudhunagar	RBG Electronics	76/9, Lakshmi Complex, Pullalakkottai Road, (Opposite Uzhavar sandhai), Virudhunagar-626001.	420160	Mr Karrupuswamy
Tripura	Agartala	VIDEO S R	7Melarmath, H.G .Basak Road, Agartala, West Tripura, Pin:799001	2328539	Arunabha Saha
Uttar Pradesh	Agra	Ankur Care Centre	27-G/111, Hotel Panchratna Building, Opp. Income Tax Building, Sanjay Place, Agra-282002	9412254152	Mr.Ankur Goyal
Uttar Pradesh	Aligarh	A.V.Computer Services	City Enclave opp. Kumar Nursing Home Ramghat Road	3200900	Mr.Vaibhav Gupta
Uttar Pradesh	Aligarh	Infocare	17, Vikram Arcade, Railway Road, Aligarh -202001	3258080	Mr. Prabal Bansal
Uttar Pradesh	Allahabad	Micronet Solution	B 38/1, SHOP NO. FF3 VASHITSTHA VINAYAK TOWER, TASHKAND MARG, CIVIL LINES, ALLAHABAD	9335395183, 3250231	Mr. Hashmi
Uttar Pradesh	Allahabad	Radio Centre	SHOP NO-3 1ST FLOOR MEENA BAZAR, Allahabad	3292488	Mr. Manish Khanna
Uttar Pradesh	Amroha	Shree Jee Traders	Bazar Zatt, Near Tehsil Mor, J.P.Nagar AMROHA-244221	9319075289	Mr.Arun bhargav
Uttar Pradesh	Azamgarh	Rajasthali	ASIF GANJ, CHOWK, AZAMGARH-276001	223644	Mr.Triloki Nath Jalaan
Uttar Pradesh	Badyun	Customer Care Services	Plaza Market 1st Floor Near Ghantaghar sixroad Badyun.	9319697938	Mr. Nazim
Uttar Pradesh	Baila	Sankatha Communications	Mall Godam road Dr.S. N.pandey Clinic Chowk Balia-277001 . UP	9307637850	Mr. Manish
Uttar Pradesh	Barabanki	Yash Enterprises	Rashid Enclave, Mugal Darbar, First Floor, Nagar Palika Road, Barabanki	9336323714	Mr. Ajay Srivastava
Uttar Pradesh	Bareilly	Jai Infotech	SA-24 DEENDAYAL PURAM BAREILLY	3208484	Mr Rohit Tandon
Uttar Pradesh	Bareilly	Sapan Infotech	G - 64 A Kunwar Complex, Near Gupta Watch Co, 116 Civil Lines, Bareilly	3297933	Mr. Dharendra Negi
Uttar Pradesh	Basti	Royal Enterprises	near ses agency, janta hotal, gandhi nagar, basti	9336784054	Mr. Deepak shrivastav
Uttar Pradesh	Bhadoi	Kislay Communication	Station Road, Near Narmada Girls Inter College, Bhadohi-221401	9235506029	Mr.Kislay
Uttar Pradesh	Bijnor	Konark Service Centre	Shop No.7, 1st Floor, Near Ajaz Ali Hall, Nagar Palika Complex, Bijnor-246701	9358364067	Mr.Pratyush Gupta

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Uttar Pradesh	Bulandshahr	MN Telecom	Shop No-1 BHARAMAPUTRA COMPLEX, KALA AAM, Bulandshar	9358011688	Mr Taukir Khan
Uttar Pradesh	Chandousi	Om Technologies	697, SITA ROAD, NEAR GANESH MANDIR, CHANDOUSI - 202412	9359986766	Mr.Sachin Gupta
Uttar Pradesh	Deoria	Atharav Communication	SHOP NO 5, SHANTI COMPLEX, HANUMAN MANDIR ROAD	9335226799	Mr.K.N.Gupta
Uttar Pradesh	Etah	Triveni Computer Service	688/1 Vijay Nagar, Infront of Shraddha Cinema, Thandi Sadak, Etah-207001	9719398761	Mr.Vinod Kumar
Uttar Pradesh	Etawah	Frontline Computer	132, Sivil lines, Pakka Talab X-ing, Opp. HeroHonda Showroom, Etawah-206001	9219404194	Mr.Puneet Kaushik
Uttar Pradesh	Faizabad	Microworld Computer Hardware Lab	1st floor, Baldev Plaza, Rekhabganj, Faizabad	395744	Mr.Kapil/Sunil
Uttar Pradesh	Farrukhabad	Wave Technologies	2 B /122 AVAS VIKAS, LOHIA PURAM, FARRUKHABAD-209625	9335921175	Mr.Dharamveer
Uttar Pradesh	Fatehpur	Trimurti Telecom Services	230, SHADIPUR CHAURAHA, NASEPEER ROAD, FATEHPUR-212601	9336223093	Mr.Sanjay Sachan
Uttar Pradesh	Ghaziabad	Azure Systems	F-28 Konark Building, RDC, Raj nagar GZB	2700717	Mr.Aseem Saraswat
Uttar Pradesh	Ghaziabad	Concessionair Documentation India Pvt Ltd (Cdil)	C-83, Rajnagar District Center (RDC), Ghaziabad	3292011	Mr.Anil Tiwari
Uttar Pradesh	Gonda	Digitech Services	Suraj Complex Malviya Nagar, Ground Floor, In front of Distt. Mahila Hospital, Gonda	9336695719	Mr.Atul Singh Chauhan
Uttar Pradesh	Gorakhpur	Eternal Electronics	Shop No.11, Pandey Complex, 33, Kasya Road, Opp DIG Bunglow, Gorakhpur -273001	9336410222	Mr. Ajith
Uttar Pradesh	Gorakhpur	MM Communication	Udai Trade Centre, Opp Dr H.N.Singh Medical College road, Basharatpur, Gorakhpur	3250395	Mr.Ashwani
Uttar Pradesh	Hapur	Smart Solutions	10, 1st Floor, City Plaza, Hapur, Ghaziabad - 388001	9219659957	Mr.Rajkumar Kanaojia
Uttar Pradesh	Hardoi	Shipra Electricals & Appliances	SHOP No.7 RD PLAZA, INFRONT OF VADIK VIDHYA MANDIR, NEAR AGARWAL DHRAMSALA & HOTEL UTSAV, CIRCULAR ROAD, HARDOI-241001	222384	Mr.Gaurav
Uttar Pradesh	Hathras	Arya Electricals	Bldg No.2206, Near Mayfair Hotel, Kamla Bazar, Hathras-204101	9319338655	Mr.Suneet Arya
Uttar Pradesh	Jaunpur	Shubham Pustakalya	Mandi Naseeb Khan, Near Siya College, Jaunpur	9336510130	Mr.Sudhir/Sanjay
Uttar Pradesh	Jaunpur	Supreme Communication	J.P. Complex, Oland Ganj, Jaunpur	9235407278	Mr.Mahatab Raja Beg
Uttar Pradesh	Jhansi	Krishna Enterprises	372/A CIVIL LINES, GWALIAR ROAD, JHANSI-284001	9335090997	Mr.Sujeet

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Uttar Pradesh	Kannoj	Dixit Mobile Lab	SHOP NO. A1 WARSI COMPLEX, LAKHAN TIRAHA, KANNOJ	9335042373	Mr.Sunil Dixit
Uttar Pradesh	Kanpur	Aakash Electronics	63/2 C(9)BALAJI COMPLEX, THE MALL, KANPUR	9335360303	Mr.Raman
Uttar Pradesh	Kanpur	LB Infotech	111A/409 1st floor, 80-ft road, ashok nagar, kanpur	3207303	Mr.Deepak Bhatia
Uttar Pradesh	Kasganj	Prem Computer Services	Roop Complex, Nadrai Gate, Kasganj-207123	9837403904	Mr.Vinay Agrawal
Uttar Pradesh	Khatauli	Sigma Systems	A-6, Shivlok Market, Near Indra Murti, G.T.Road, Khatauli-388001	9319666000	Mr.Alok Kumar
Uttar Pradesh	Lakhimpur	S S Electronics	GURDARSHAN BUILDING, KACHEHRI ROAD, LAKIMPUR KHERI, LAKHIMPUR -262701	9335038258	Mr.Saurabh Sinha
Uttar Pradesh	Lucknow	Alfa Electronics	Shop No.GF20 ABC Complex, Kanpur Road, Lucknow	3248730	Mr.Harjinder Singh
Uttar Pradesh	Lucknow	Hitech Communication	SS 205, Cross road Plaza, Badshah Nagar Crossing, Lucknow.	9335088061	Mr.Ravi Prakash
Uttar Pradesh	Lucknow	Mobile Dot Com	shop no. 111, 1st floor, Shri Ram Towers, Ashok Marg, Lucknow	9335819202	Mr Anand Jhourri/ Archana
Uttar Pradesh	Lucknow	Net Com	3 way road, City Point, Opp Krishi Bhawan, Lucknow-226024	3294222	Mr.Vinod Sharma
Uttar Pradesh	Lucknow	RR Enterprises	Shop No.3, first floor, Deewan Chand Complex, 292/11 Chowk, Lucknow	3262263	Mr.Rohan/Yogesh
Uttar Pradesh	Mainpuri	Raj Communication	1002, Sadar Bazar, Near PNB, Mainpuri-205001 (U.P)	9358090251	Mr.Rishabh Khirbat
Uttar Pradesh	Mathura	R K Infocare	G-1, Atithya Palace, Sonkh Adda, Junction Road, Mathura-281001	3292274	Mr.Alok Gupta
Uttar Pradesh	Meerut	Care Centre	G-19, Vardaman Plaza, Garh Road, Meerut-250005	3258427 / 4005019	Mr.Ajay Mittal
Uttar Pradesh	Meerut	Coincap Services	Labour Compound, Above Allahabad Bank, Near Akash Ganga Jewellers, Begum Bridge, Meerut	2667942	Mr.Atul Mittal
Uttar Pradesh	Meerut	Essar Services	F-132-1333, 1st Floor, Ganga Plaza, Begum Bridge Road, Meerut-250001.	4025863 / 9837067894	Mr.Rajiv Gupta
Uttar Pradesh	MIRZAPUR	Singh Cyber	IMARTI ROAD, OPP- LIC OFFICE, MIRJAPUR-231001	9335205600	MR.Anup Singh
Uttar Pradesh	Modinagar	Ananya Communications	24, K.N.MODI COMPLEX, Modinagar-201204	325424	Mr.Nitin
Uttar Pradesh	Moradabad	Bhavya Technologies	A12, 1st Floor, Rampur Road, Gandhi Nagar, Moradabad	3292318	Mr.Vivek Kumar Singh
Uttar Pradesh	Mugalsarai	Sky Mobile World	SUPER MARKET, MUGALSARAI	9335251754	Mr.Vibhuti Jaiswal
Uttar Pradesh	Muzaffarnagar	Advance Series	Shop No-15 prakash chowk Muzffarnagar-251001	9412210142	Mr. Rajiv

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
Uttar Pradesh	Muzaffarnagar	Jai Computers	Shop No. 4, 1st Floor, Roorkee road, Near Shiv Chowk, Central Bank Mkt, Muzaffarnagar-251001	3294447	Mr.Manohar Singh
Uttar Pradesh	Noida	M R Telecom	D-329, Sector 10, Noida, (Corner Building, Noida Stadium - Jhundpura Main Road)	4312715	Mr.Kailash Aggarwal
Uttar Pradesh	Pilibhit	Kamal Electronics	Station Road, Pilibhit	9319911226	Mr. M A Jillani
Uttar Pradesh	Pratapgarh	Chandra Pratap Veer & Co	KATCHERY ROAD, CHOWK BAZAR, PRATAPGARH -230001	9335050301	Mr.Rajesh Agarwal
Uttar Pradesh	Rai Bareilly	Karuna Enterprises	Shop No.6 & 7, City Complex, Kachary Road, Raeberilly	9336005741	Mr.Vikas
Uttar Pradesh	Rampur	Mamta Technologies	3Fs Shopping Complex, Rahe Murtaza Road, Civil Lines, Rampur-244901	3294923	Mr.Rajeev Yadav
Uttar Pradesh	Saharanpur	Maharaj Communications	1st Floor, Pradeep Hotel Compound, Court Road, Near Indiam bankSaharanpur-247001	3250239	Mr.Pankaj Malhotra
Uttar Pradesh	Shahjahanpur	Sunny Mobile Point	258 B TARIN BAHADURGANI, SHAHJANPUR	9335019616	Mr.Rajaram Maurya
Uttar Pradesh	Sitapur	Higrade Computers	7, Muncipal Market, Sitapur	9936819899	Mr.Sanjeew Goel
Uttar Pradesh	Sultanpur	S S Infocom	SHOP NO. 14&15 NANDINI COMPLEX NEAR SUPER MARKET SULTANPUR-228001	9335055217	Mr.Sachin Dwivedi/Abhinav
Uttar Pradesh	Unnao	Avijit Infocom	251 Opp Collector Ganj, Unnao-209801	6820020	Mr.Vishnu Pandey
Uttar Pradesh	Varanasi	Jaiswal Electronics	SIDDHARTH COPMPLEX, C-2/10-A, Ramkatora, Near Petrol Pump Lahurabir, Varanasi-221001	9335407000	Mr.Sujeet
Uttar Pradesh	Varanasi	Shivam Mobile Distributers	Shop No.5, B37/115-B-1 Baradari Complex, Rathyatra Crossing, Varansi Pin 221010	9335418998	Mr.Rakesh kumar singh
Uttaranchal	Almora	Kumar Telecommunications	Paltan Bazaar, Almora	9411525789	Mr. S Kumar
Uttaranchal	Dehradun	Krishna Communication	Shop No 15A, Meedo Plaza, Rajpur Road, Dehradun, Uttaranchal-248001	09358112922 / 09358119696	Mr.Vinod
Uttaranchal	Haldwani	Fairdeal Agencies	1st Floor, Nainital Road, Uttaranchal Trade Centre, Tikonía Chouraha, Tikonía, Haldwani	282116	Mr.Ajay Gupta
Uttaranchal	Haridwar	Maharaj Computer Services	B-7, Royal Plaza, Ranipur Mod, Haridwar	9359209901	Mr. Kamal Sachdeva
Uttaranchal	Kashipur	Tirpti Communications	Station Road, Main Market, Udamsingh Nagar	935900000	Mr.Ajay Gupta
Uttaranchal	Roorkee	Geetanjali Telecom	Shop No.6, Shyam Market, BSM Tiraha, NehruNagar, Dehradun Road, Roorkee-247667.	326510	Mr. Manish Kumar

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
West Bengal	Asansol	Sky Computer & Telecom	Islam Market, Nuruddin Road, Assansol-713301	2207719	Mr.Syed Arshad Ali
West Bengal	Behrampur	Chaitannya Enterprise	152, B B Sen Road, Sadar bazar, PO Behrampur, Distt Murshidabad, pin-742101	9333310161	Mr.Subhas Chandra Basak
West Bengal	Bolpur	Cyber World	59, SUPER MARKET, SANTINIKETAN ROAD, BOLPUR - 731204	252542	Mr.Kishor Kumar Mukherjee
West Bengal	Burdwan	San Infosys	27/1 G.T Road, East End, Burdwan -713103.	3290265	Mr.Sanjit Debnath
West Bengal	Durgapur	Digitech Service	Ashok Bhavan J.K.Pal Lane .Benachity , Durgapur -713213	3293600	Mr.Pintu Chatterjee
West Bengal	Haldia	Digitronix	Holding no -25, PO Khanjanchak, PS Durgachak, Haldia, Dist- East Medinapur-721602	277277 / 9332987527	Mr.Suman Jana
West Bengal	Howrah	Joyram Infotech	51, Jessore Road, Habra Bazar, Das Market, Dist- 24th Pargana(North), PIN-743263	302399 / 329677	Mr. Malay Das
West Bengal	Katwa	Devarshi Mobile Communication	Bhutnath Tala, Besides Ram Bhavan, Post - Katwa, Burdwan - 713130	9333611904	Mr. Devananda Dutta
West Bengal	Kharagpur	S. J .Commnication	Inda Main Road, Khudiram Ram Market, Kharagpur .Shop No-53. Pin -721305	324056	Mr.Mr.Suman Jana
West Bengal	Kolkata	Benma Infosol Pvt Ltd.	P-168/1 CIT Road, Scheme VIIM, KOLKATA 700 067	32943176	Mr.Arun Surana
West Bengal	Kolkata	Friends Communication	32(8) Barasat Road, N/L 15 no railgate, PO-nonachandanpukur, PS- Titagarh, Barrackpore, Dist- North 24PGS, PIN-743102	25921263	Mr.Arup Sarkar & Tarasankar Mukherjee
West Bengal	Kolkata	Jaksom Engineering Pvt Ltd	Block-A, Shop-1, Ambika Vihar, 1/1 Harduttrai Chamaria Road, Howrah- 711001	32950383	Mr.PMukherjee
West Bengal	Kolkata	JP Computers	5B Ekdalia Place, Kolkata - 700019	24401923	Mr.Somim Kabir
West Bengal	Kolkata	Skylink	8/1A, Little Russel Street, Calcutta-700071	32903814	Mr.H R Molla
West Bengal	Kolkata	Sun Mobile Service	15 B.T. Road, N/L Peikpara Bus Stop, Kolkata -700002	32505444	Mr.Vivek Kumar Gupta
West Bengal	Krishnanagar	Addya Electronics	Rajani mukharjee Lane, krishna Nagar, Nadia-741101	2329355	Mr Arijit Sen
West Bengal	Malda	Deb Infotech	PIROJPUR, WOMENS COLLEGE ROAD, MALDA-732101	9434345486	Mr.UTPAL DEY(DEBASIS)

STATE	CITY	ASC NAME	ASC ADDRESS	CONTACT NO.	CONTACT PERSON
West Bengal	Midnapore	Zerobit	Vill- Parbatipur, P.O.-Tamluk, Dist- Purba Midnapur, PIN-721636	267476 / 9434110802	Mr.Chanakya Sengupta
West Bengal	Nadia	Prayash	30 SWAMI VIVAKNANDA SARANI, RANAGHAT, DIST-NADIA,	9333515949	Mr .Amar Nath Malick
West Bengal	North 24 Parganas	M/s Teelink	Bashirhat Old Market(Bowbazar) .Bashirhat Dist, North 24pgs, Pin-743411	325499	Mr. Sukanta Debnath.
West Bengal	North 24 Parganas	Molina Traders	Jessore Road, Bongoan, Dist- North 24 th Pargana, PIN-743235	325433	Mr. Subir Dutta
West Bengal	Purulia	IT POINT	N.C DAS GUPTA ROAD, 2ND FLOOR, SONARTARI APPT (NAMO PARA), PURULIA -723101	9333441065	Mr.Pinaki Roy Choudhary
West Bengal	Serampore	Sri Guru Mobile Service	87 B/15 G.T.Road (West), Hooghly Pin-712203	32528581	Mr.Shyamal Kumar Das
West Bengal	Siliguri	Care	sumantra bhawan.S.B.I hakim para building, 160/1030 Haren Mukharejee Road, sili guri-734001	6450515	Mr.Snjoy Dutta


LG

SERVICE



1800-180-9999*
39-01-0909**

*MTNL / BSNL
**Prefix STD Code

MEMO

MEMO