

User's Guide for Nokia 7280

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product RM-14 is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found from
http://www.nokia.com/phones/declaration_of_conformity/.

CE 168

Copyright © 2004 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on, Pop-Port and Navi are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. All rights reserved.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Issue 1

Contents

FOR YOUR SAFETY.....	iv	3. Call functions.....	8
General information	vi	Making a call	8
Stickers in the sales package	vi	Answering or rejecting	
About your device.....	vi	an incoming call	8
Shared memory	vi	Options during a call	9
Access codes	vii	Writing text.....	9
Network services.....	vii	Tips for writing text	10
Configuration settings		4. Using the menu.....	11
service	viii	Accessing a menu function	11
Downloading content and		List of menu functions.....	12
applications.....	viii	5. Menu functions.....	14
Nokia support on the Web.....	viii	Messages.....	14
1. Your phone	1	Text messages (SMS)	14
Keys and connectors.....	1	Multimedia messages (MMS)	16
Using the spinner.....	1	Voice messages.....	19
Standby mode.....	2	Info messages	19
Wallpaper and Screen saver	3	Service commands.....	19
Power saving	3	Deleting all messages from	
Essential indicators	3	a folder.....	19
Keypad lock (Keyguard).....	4	Message settings.....	20
2. Getting started	5	Contacts.....	21
Installing the SIM card.....	5	Selecting settings for contacts	22
Charging the battery	5	Searching for a contact	22
Switching the phone on		Saving names and phone numbers	
and off	6	(Add contact)	22
Normal operating position.....	6	Saving multiple numbers, text	
Putting on a wrist strap.....	6	items or an image per name.....	22
Removing and replacing		Editing or deleting details.....	23
the Quick slide.....	7	Copying contacts	23
		Sending and receiving a business	
		card	23
		Voice dialling.....	23

Call register	25	Disconnecting from a service	43
Counters and timers for calls, data and GPRS	25	Appearance settings of the browser	43
Positioning information	25	Cookies	43
Settings	25	Bookmarks	44
Profiles	25	Downloading	44
Themes	26	Service inbox	44
Tone settings	26	Browser security	45
Light settings	26	SIM services	48
Display settings	26	Number entry	48
Time and date settings	27	6. PC Connectivity	49
Personal shortcuts	27	PC Suite	49
Connectivity	27	(E)GPRS, HSCSD and CSD	50
Call settings	31	Using data communication applications	50
Phone settings	31	7. Battery information	51
Enhancement settings	32	Charging and Discharging	51
Configuration settings	32	8. Genuine Enhancements	53
Security settings	33	Battery	53
Restore factory settings	34	Indoor	53
Gallery	34	Nokia Retractable Charger (AC-1)	53
Media	35	Travel Charger (ACP-12)	54
Camera	35	9. Care and maintenance	55
Media player	35	10. Additional safety information	56
Radio	36	Index	60
Voice recorder	37		
Organiser	37		
Alarm clock	37		
Calendar	38		
To-do list	39		
Notes	39		
Synchronisation	39		
Web	41		
Setting up the phone for a service	41		
Making a connection to a service	41		
Browsing the pages of a service	42		
The cache memory	42		

FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Don't use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure that the phone is switched on and in service.

Press the **End** key as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Press and hold the middle selection key and enter the emergency number, then press the **Call** key.

If the keypad is locked, unlock the keypad first. Give your location. Do not end the call until given permission to do so.

General information

■ Stickers in the sales package

The stickers contain important information for service and customer support purposes. Keep these stickers in a safe place.

Attach the  sticker to the Your Details section supplied in the sales package.

■ About your device

The wireless device described in this guide is approved for use on the EGSM 900, GSM 1800 and GSM 1900 networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect the privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Shared memory

The following features in this phone may share memory: contacts, text and multimedia messages, e-mails, voice tags and SMS distribution lists, calendar and to-do notes. Using any such features may reduce the memory available for any features sharing memory. This is especially true with heavy use of any of the features (although some of the features may have a certain amount of memory specially allotted to them in addition to the amount of memory shared with other features). For example, saving many multimedia messages, may take all of the shared memory and your phone may display a message that the memory is full. In this case, delete some of the information or entries stored in the shared memory features before continuing.

Note that gallery files share a different memory; for further information see "[Gallery](#)" on page 34.

■ Access codes

- **Security code (5 to 10 digits):**
The security code helps to protect your phone against unauthorised use. The code is supplied with your phone. The preset code is 12345. To change the code and to set the phone to request it, see "[Security settings](#)" on page 33.
- **PIN code (4 to 8 digits):** The PIN (Personal Identification Number) code helps to protect the SIM card against unauthorised use. It may be supplied with the SIM card. If you activate the *PIN code request* function in the *Security settings* menu, the code is requested each time the phone is switched on.
- **PIN2 code (4 to 8 digits):** This code may be supplied with the SIM card and is required to access some functions, such as call counters.
- **PUK and PUK2 codes (8 digits):**
The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.

- **Barring password (4 digits):** This code is required when using the *Call barring service* function in the *Security settings* menu.
- **Module PIN and signing PIN:**
The module PIN is required to access the information in the security module (see page 45).
The signing PIN is required for the digital signature (see page 47).

■ Network services

To use the phone you must have a service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilise network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

■ Configuration settings service

To use some of the network services, such as mobile Internet services, MMS, or Synchronisation, your phone needs the correct configuration settings. You may receive the settings directly as a configuration message and you need to save the settings on your phone. The service provider may provide a PIN that is needed to save the settings. For more information on the availability of the settings, contact your network operator, service provider, nearest authorised Nokia dealer or visit the support area on the Nokia website, <www.nokia-asia.com/support>.

When you have received a configuration message *Configuration settings received* is displayed. To view the received settings, press **Show**.

- To save the received settings, press **Save**. If the phone asks *Enter settings' PIN*;, enter the PIN code for the settings and press **OK**. Select whether or not to have these settings as the default. For availability of the PIN code, contact the service provider that supplies the settings.
- To discard the received settings, press **Discard**.

To view and edit the settings see "[Configuration settings](#)" on page 32.

■ Downloading content and applications

You may be able to download new content (for example themes, tones and video clips) to the phone (network service). Select the download function for example in the *Gallery* menu. To access the download function, see the respective menu descriptions. For the availability of different services, pricing and tariffs, contact your service provider.


Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

■ Nokia support on the Web

Check <www.nokia-asia.com/support> or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

1. Your phone

■ Keys and connectors

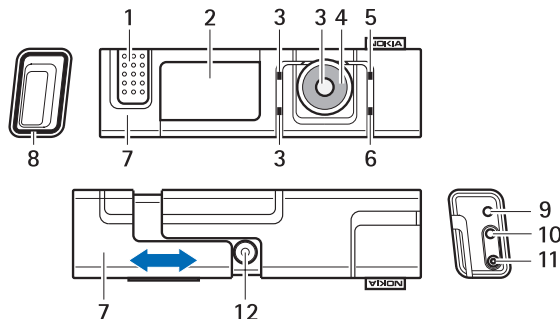

1. Earpiece
2. Display and mirror
3. Upper selection key, lower selection key, middle selection key

The functions of these keys depend on the guiding text shown on the display beside the keys. See ["Standby mode"](#) on page 2.

4. Navi™ spinner

The spinner is used for scrolling through the character bar when entering text and numbers, scrolling through different lists, and browsing messages. See also ["Using the spinner"](#) on page 1.

5. End key ends an active call. Exits from any function. Press and hold the End key to switch the phone on and off.

6. Call key dials a phone number, and answers a call. In standby mode, it shows the list of the most recently called numbers.
7. Quick slide, sliding out accepts an incoming call, switches on the display light, opens the camera lens; sliding in ends a call.


8. Pulsating light indicator

9. Microphone

10. Accessory connector used, for example, to connect a headset

11. Charger connector

12. Camera lens

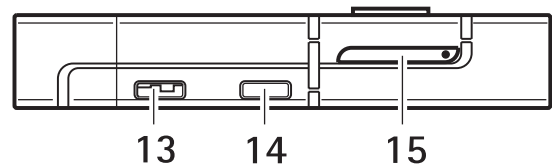


13. Loudspeaker

14. Infrared (IR) port

15. SIM drawer

■ Using the spinner

You can use the spinner, for example, to enter characters, scroll through different lists, and browse messages.

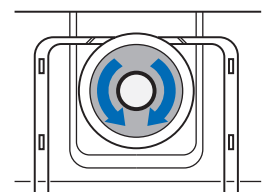

To use the spinner, rotate it clockwise or counter-clockwise.

The middle selection key is located in the centre of the spinner.

For example, in standby mode you can use the spinner as follows:

- Press and hold the middle selection key to enter a phone number.

Rotate the spinner to scroll to a digit of the phone number in the character bar that is shown at the bottom of the display, and press **Select**. Repeat this for each digit of the phone number.


To call the phone number, press the **Call** key, or press **Options** and select **Call**.

To save the phone number with a name, press **Options**, select **Save**, select the letters of the name one by one from the character bar, press **Options**, and select **Accept**.

■ Standby mode

When the phone is ready for use, and you have not keyed in any characters, the phone is in standby mode.

1. Shows the signal strength of the cellular network at your current location.

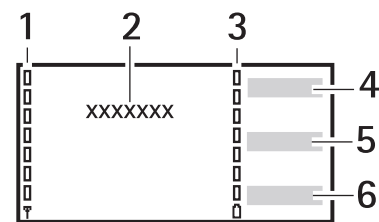

2. Shows the name of the network or the operator logo to indicate in which cellular network the phone is currently being used.
3. Shows the battery charge level.
4. The upper selection key in standby mode is **Go to**.
Press **Go to** to select a function from your personal shortcut list. Select **Volume** and set the basic volume of your phone.
Press **Options** and select **Select options** to mark or unmark a function from a list of available functions. Select **Organise** to rearrange the functions on your personal shortcut list.
5. The middle selection key in standby mode is **Menu**.

6. The lower selection key in standby mode may be **Names** to access the **Contacts** menu, an operator-specific key to access an operator's homepage, or a specific function that you have selected in the "Lower selection key" menu. See "[Lower selection key](#)" on page 27.

See also "[Essential indicators](#)" on page 3.

Wallpaper and Screen saver

You can set your phone to display a background picture, wallpaper and a screen saver when the phone is in standby mode. See "[Display settings](#)" on page 26.

Power saving

For power saving, the light of the display and the keys is switched off after a certain period of time. The pulsating light indicator shows that the phone is switched on. The first key press switches the display light on.

Deactivating the pulsating light indicator (**Light effects**) saves power in addition. See "[Profiles](#)" on page 25.

Essential indicators



You have received one or several text or multimedia messages. See "[Reading and replying to an SMS message or an SMS e-mail](#)" on page 15 or "[Reading and replying to a multimedia message](#)" on page 18.



The phone's keypad is locked. See "[Keypad lock \(Keyguard\)](#)" on page 4.



The phone does not ring for an incoming call or text message when **Incoming call alert** is set to **Off** and **Message alert tone** is set to **Off**. See "[Tone settings](#)" on page 26.



The alarm clock is set to **On**. See "[Alarm clock](#)" on page 37.



When the (E)GPRS connection mode **Always online** is selected and the (E)GPRS service is available, the indicator is shown on the top left of the display. Refer to "[\(E\)GPRS connection](#)" on page 30.

 When the (E)GPRS connection is established, the indicator is shown on the top left of the display. Refer to "(E)GPRS connection" on page 30 and "Browsing the pages of a service" on page 42.

 The (E)GPRS connection is suspended (on hold), for example if there is an incoming or outgoing call during the (E)GPRS connection. The indicator is shown on the top right of the display.

 "Bluetooth wireless technology" indicator. See "Bluetooth wireless technology" on page 27.

 Infrared connection indicator, see "Infrared" on page 29.

 The loudspeaker has been activated, see "Options during a call" on page 9.

 Calls are limited to a closed user group. See "Security settings" on page 33.



A headset, handsfree or loopset or similar enhancement is connected to the phone.

■ Keypad lock (Keyguard)

You can lock the keypad to help to prevent the keys being accidentally pressed.

Press **Menu** or **Unlock** and then the **Call** key within 1.5 seconds to lock or unlock the keypad. If the *Security keyguard* is set to *On*, press **Unlock** and enter the security code.

An incoming call can be operated normally. When you end or reject the call, the keypad will automatically be locked.

For *Automatic keyguard* and *Security keyguard*, see "Phone settings" on page 31.




Note: When the Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or another official emergency number). For more details, see "Emergency calls" on page 58.

2. Getting started

■ Installing the SIM card

Keep all SIM cards and the SIM release tool out of the reach of small children. For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

To open the SIM drawer, use the SIM release tool provided with the phone or use a paper-clip with a maximum diameter of 0.9 mm. To release the SIM drawer, stick the tool or paper-clip into the release hole as shown (1). Insert the SIM card into its holder so that the golden contacts on the card are facing downwards. Insert the SIM drawer (2).

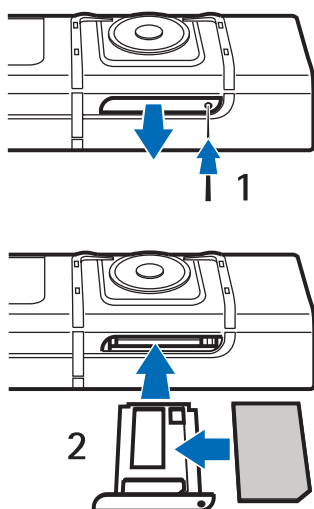

■ Charging the battery




Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

This device has an internal, non-removable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device. Nokia recommends taking it to the nearest authorised service facility for replacement of the battery.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from AC-1, ACP-7, ACP-8, ACP-12, LCH-8, LCH-9 or LCH-12 chargers.

1. Connect the lead from the charger to the socket on the bottom of your phone.

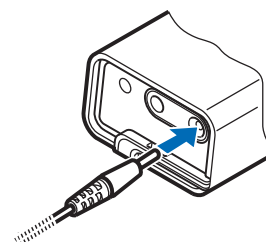

2. Connect the charger to an AC wall socket. The text **Charging** is displayed briefly if the phone is switched on. If the battery is completely empty, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.


The charging time depends on the charger used. For example, charging a battery with the AC-1 charger takes up to 1 hour and 30 minutes while the phone is in standby mode.

■ Switching the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the **End** key until the phone switches on or off.

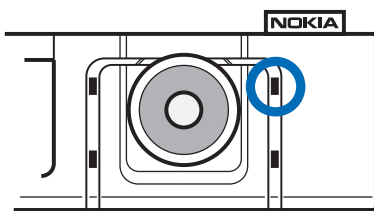


If the phone asks for a PIN code or the security code, scroll to the desired digit in the character bar, and press **Select**. Repeat this for each digit of the code. If you enter an incorrect character, press **Clear** to

delete it. Press **Options** and select **Accept**.

See also **PIN code request** in "**Security settings**" on page 33 and "**Access codes**" on page vii.

■ Normal operating position


Your phone has an internal antenna. Use the phone only in its normal operating position.

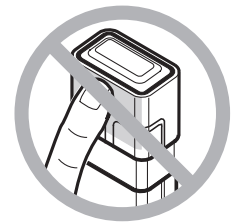

Note: As with any other radio-transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimises the antenna performance and the battery life.

■ Putting on a wrist strap


Thread the strap as shown in the picture and tighten it.

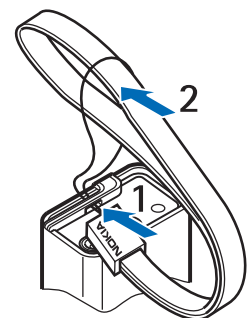


■ Removing and replacing the Quick slide

The Quick slide only has to be removed to see the type label of the phone or to clean the phone.

- To remove the Quick slide, lift the edge of the slide with the help of your finger nails as shown (1) until the slide is released. Slide it as shown to remove the slide (2). Avoid touching the camera lens

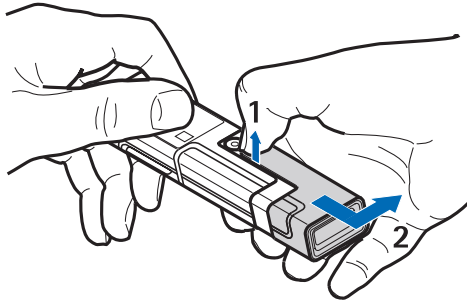

- To replace the Quick slide, bring the phone and the slide into the position as shown (3) and slide it to the left until it snaps into position (4).

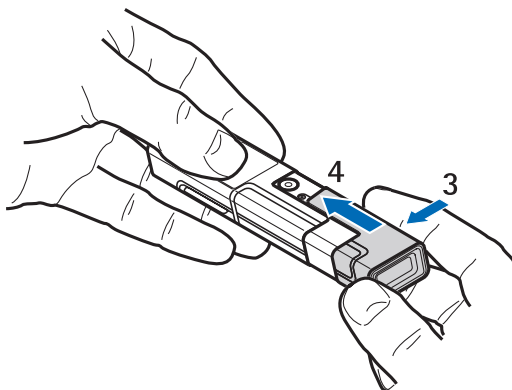

3. Call functions

■ Making a call

1. Press and hold the middle selection key in standby mode, and enter the phone number, including the area code. To enter the phone number, scroll to the desired digit in the character bar, and press **Select**. Repeat this for each digit of the phone number. If you enter an incorrect character, press **Clear** to delete it. For international calls, enter the + character for the international access code and then enter the country code, the area code without the leading 0, if necessary, and the phone number.
2. Press the **Call** key to call the number.
3. Press the **End** key to end the call or to cancel the call attempt.

Making a call using the contacts

To search for a name/phone number that you have saved in **Contacts**, see ["Searching for a contact"](#) on page 22. Press the **Call** key to call the number.

Calling a recently dialled number

In standby mode, press the **Call** key once to access the list of up to 20 numbers that you last called or attempted to call. Scroll to the number or name that you want, and press the **Call** key to call the number.

Calling your voice mailbox

In standby mode, press and hold the middle selection key, select 1, and press the **Call** key. See also ["Voice messages"](#) on page 19.

Making another call during a call (network service)

During a call, press **Options** and select **New call**. Enter the phone number, or press **Options** and select **Search** to search for the phone number in the contacts. Press **Call** or the **Call** key. The first call is put on hold. To switch between the two calls, press the **Call** key.

■ Answering or rejecting an incoming call

Use the slider or press the **Call** key to answer the call. If you want to mute the ringing tone, press **Silence**.

To reject the call, press the **End** key. The rejected call will be diverted if you have activated the *Divert if busy* function. See "Call settings" on page 31.

Call waiting

You can answer a call while you have another call in progress if you have activated the *Call waiting* function in the *Call settings* menu (network service). To answer the waiting call, press **Answer** or the **Call** key. The first call is put on hold.

■ Options during a call

Many of the options that you can use during a call are network services. For availability, contact your network operator.

Press **Options** during a call for some of the following options:

Volume, *Mute* or *Unmute*, *Number entry*, *Contacts*, *Menu*, *Record*, *Lock keypad*, *Audio enhancing*, *Loudspeaker* or *Handset*, and the network services *Answer* and *Reject*, *Hold* or *Unhold*, *New call*, *Send DTMF* (to send tone strings), *Swap* (to switch between the active call and the call on hold), *Transfer* (to connect a call on hold to an active call and disconnect yourself), *Conference* (to set up a conference call), *Private call* (to discuss privately

in a conference call), *End call*, *End all calls*.

For more information, see the user's guide for your phone model in the support area on the Nokia's Web site,

<www.nokia-asia.com/support>.



Note: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

■ Writing text

When writing, for example, a message, you can enter letters, numbers, and special characters by selecting them from the character bar shown at the bottom of the display. Scroll to the desired character and press **Select**.

To speed up the selection, you can use a method called character prediction in which the most commonly needed characters are placed at the start of the character list. The characters suggested by character prediction depend on the previously selected characters. If you do not use character prediction, the characters are shown in alphabetical order.

The characters available depend on the language selected in the *Phone language* menu, see "*Phone settings*" on page 31.

In addition to the characters, you may be able to use the character bar for the following:

- To set the character prediction on, select . To set the prediction off, select .
- When the character prediction is active,  is shown at the top of the display and the predicted characters are shown in blue.
- To move the cursor in the written text or number select  and rotate the spinner. To continue writing, press **Continue**.
- To enter a space, select the space in the character bar.
- To enter capital letters, select .
- To enter lower-case letters, select .
- To enter accented characters, select .
- To enter numbers, select .
- To enter special characters, select .

Some of these functions can also be used by pressing **Options** and selecting the desired option.

If necessary, to accept a written text or number, press **Options**, and select *Accept*.

Tips for writing text

The following functions may also be available for writing text:

- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly.
To delete all the characters at once when writing a message, press **Options** and select *Clear text*.
- To set the character selector to move to the first character of the character bar if you rotate the spinner to the right at the end of the bar (or if you rotate to the left to the last character at the start of the bar), press **Options**, and select *Looping on*.
- To change the input language to a language other than that selected in *Language settings* (see page 31), press **Options**, and select *Writing language* and the language.

4. Using the menu

Your phone offers a wide range of functions that are grouped in menus.

Most of the menu functions are provided with a brief help text. To view the help text, scroll to the desired menu function and wait for about 15 seconds.

The help text can be set to on or off using the *Help text activation* function in the *Phone settings* menu, see page 31.

■ Accessing a menu function

1. Press **Menu** in standby mode.
2. Scroll with the spinner to the desired main menu, for example *Settings*, and press **Select** to open it.
3. If the menu contains submenus, select the one that you want, for example *Call settings*.
If the selected submenu contains further submenus, for example, *Automatic redial*, repeat this step.
4. Select the setting that you want.

Press **Back** to return to the previous menu level, or press **Exit** or the End key to exit the menu.

■ List of menu functions

1. Messages



1. Create message
2. Inbox
3. Outbox
4. Sent items
5. Saved items
6. Voice messages
7. Info messages
8. Service commands
9. Delete messages
10. Message settings
11. Message counter

2. Contacts



1. Search
2. Add new contact
3. Delete
4. Copy
5. Settings
6. Voice tags
7. Info numbers¹
8. Service numbers¹
9. My numbers¹
10. Caller groups¹

3. Call register



1. Missed calls
2. Received calls
3. Dialed numbers
4. Delete recent call lists
5. Call duration
6. GPRS data counter
7. GPRS connection timer
8. Positioning

4. Settings



1. Profiles
2. Themes
3. Tone settings
4. Light settings
5. Display settings
6. Time and date settings
7. Personal shortcuts
8. Connectivity
9. Call settings
10. Phone settings
11. Enhancement settings²
12. Configuration settings
13. Security settings
14. Restore factory settings

1. Shown if supported by your SIM card. For availability, contact your network operator or service provider. If one of the items is not supported the number of the following menu items changes accordingly.

2. This menu is shown only if the phone is or has been connected to a compatible enhancement available for the phone.

5. Gallery

1. Images
2. Video clips
3. Themes
4. Graphics
5. Tones
6. Recordings



8. Web

1. Home
2. Bookmarks
3. Download links
4. Last web address
5. Service inbox
6. Settings
7. Go to address
8. Clear the cache



6. Media

1. Camera
2. Media player
3. Radio
4. Voice recorder



9. SIM services¹



10. Number entry



7. Organiser

1. Alarm clock
2. Calendar
3. To-do list
4. Notes
5. Synchronisation



1. Only shown if supported by your SIM card. The name and contents vary depending on the SIM card.

5. Menu functions

■ Messages



The message services can only be used if they are supported by your network or by your service provider (network services).



Note: When sending messages, your phone may display the words *Message sent*. This is an indication that the message has been sent by your device to the message centre number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

Text messages (SMS)

Your device supports the sending and receiving of text messages beyond the normal 160-character limit. If your message, which also can contain pictures, exceeds 160 characters, it will be sent as a series of two or more messages (multipart message). Invoicing may be based on the number of ordinary messages

that are required for a multi-part message.

On the top of the display, you can see the message length indicator counting backwards from 160. For example, 10/2 means that you can still add 10 characters for the text to be sent as two messages. Note that special (Unicode) characters such as ã, â, á, ì take up more space.

Before you can send a message, you need to save some message settings. See "[Settings for text and SMS e-mail messages](#)" on page 20.



Note: Only phones that offer picture message features can receive and display picture messages.

The text messages function uses shared memory, see "[Shared memory](#)" on page vi.

Writing and sending messages

Press **Menu**, and select *Messages*, *Create message* and *Text message*. Enter a message. To send the message, press the **Call** key or **Options** and select *Send*. Enter the recipient's phone number or press **Options** and select *Search* to search for the phone number in *Contacts*. Press **Options** and select *Accept* to send the message.

Options for sending a message

After you have written a message, press **Options** and select *Sending options*. With *Send to many* you can send the message to several recipients and to send a message as an SMS e-mail (network service), select *Send as e-mail*. With *Sending profile* you can use a predefined message profile to send the message. To define a message profile, see "[Settings for text and SMS e-mail messages](#)" on page 20.

Reading and replying to an SMS message or an SMS e-mail

When you have received a message or an SMS e-mail, the indicator  and the number of new messages followed by *messages received* are shown. The blinking  indicates that the message memory is full. Before you can receive new messages, delete old messages.

1. Press **Show** to view the new message, or press **Exit** to view it later. If more than one message has been received, select the one that you want to read. An unread text message or SMS e-mail is indicated by .

2. While viewing the message, press **Options** and view the available options.
3. Select **Reply** and the message type to reply to a message. When replying to an SMS e-mail, confirm or edit the e-mail address and subject. Then write your reply message.
4. To send the message, press the **Call** key, or press **Options** and select *Send*. Press **Options** and select *Accept* to send the message to the displayed number.

Inbox and sent items folders

The phone saves incoming text and multimedia messages in the *Inbox* folder and sent text and multimedia messages in the *Sent items* folder. Text messages are indicated with .

Text messages that you wish to send later can be saved in the *Saved text msgs.*, *My folders* or *Templates* folder.

Templates

Your phone includes text templates, indicated by , and picture templates, indicated by .

To access the template list, press **Menu**, and select *Messages*, *Saved items*, *Text messages* and *Templates*.

Saved items folder and My folders

To organise your messages, you can move some of them to the *Saved items* folder, or add new folders for your messages. While reading a message, press **Options**. Select *Move*, scroll to the folder that you want to move the message to and press **Select**.

To add or delete a folder, press **Menu**, and select *Messages*, *Saved items*, *Text messages* and *My folders*. To add a folder if you have not saved any folder, press **Add**. Otherwise, press **Options** and select *Add folder*. To delete a folder, scroll to the folder that you want to delete, press **Options** and select *Delete folder*.

Multimedia messages (MMS)



Note: Only devices that offer compatible multimedia message features can receive and display multimedia messages.

A multimedia message can contain text, sound and a picture or a video clip. The phone supports multimedia messages that are up to 100 kB in size. If the message contains a picture in compatible format, the

phone may scale it down to fit the display area.

The multimedia message function uses shared memory, see "[Shared memory](#)" on page [vi](#).

If *Allow multim. receipt* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on. See "[Settings for multimedia messages](#)" on page [20](#).

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, WBMP, BMP and PNG.
- Sound: Scalable Polyphonic MIDI (SP-MIDI), AMR audio and monophonic ringing tones.
- Video clips in 3gp format with SubQCIF and QCIF resolution and AMR audio.

The phone does not necessarily support all variations of the aforementioned file formats. If a received message contains any unsupported elements, they may be replaced with the file name and the text *Object format not supported*.

Note that you are not able to receive any multimedia messages if you have a call in progress. Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.

Writing and sending a multimedia message

To set the settings for multimedia messaging, see "[Settings for multimedia messages](#)" on page 20.

To check availability and to subscribe to the multimedia messaging service, contact your network operator or service provider.

Copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.

1. Press **Menu**, and select *Messages*, *Create message* and *Multimedia message*.
2. Enter a message. See "[Writing text](#)" on page 9.
 - To insert a file in the message, press **Options**, select *Insert* and select the desired option from *Gallery*, or select *Calendar note* or *Business card*.

To move the text component to the top or bottom of the message, press **Options** and select *Place text first* or *Place text last*.

- Your phone supports the sending and receiving of multimedia messages that contain several pages (slides). To insert a slide in the message, press **Options**, and select *Insert* and *Slide*. Each slide can contain text, one image and one sound clip. If the message contains several slides, you can open the desired one by pressing **Options** and selecting *Previous slide*, *Next slide* or *Slide list*. To set the interval between the slides, press **Options** and select *Slide timing*.
- The following options may also be available: *Delete* to delete an image, slide or sound clip from the message, *Preview* or *Save message*. In *More options* the following options may be available: *Insert contact*, *Insert number*, *Message details* and *Edit subject*.

3. To send the message, press the **Call** key, or press **Options** and select *Send to* to select one of the sending options.
4. Enter the recipient's phone number (or e-mail address) or press **Options** and select *Search* to search for it in *Contacts*. Press **Options** and select *Accept*. The message is moved to the *Outbox* folder for sending. While the multimedia message is being sent, the animated indicator  is displayed and you can use other functions on the phone. If sending fails, the message will remain in the *Outbox* folder and you can try to resend it later.

Reading and replying to a multimedia message



Important: Exercise caution opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

When your phone is receiving a multimedia message, the animated indicator  is displayed. When the message has been received, the indicator  and the text *Multimedia message received* are shown.

The blinking  indicates that the memory for multimedia messages is full, see "[Multimedia messages memory full](#)" on page 19.

The appearance of a multimedia message may vary depending on the receiving device.

1. Press **Show** to view the message, or press **Exit** to view it later.

Reading the message later: Press **Menu**, and select *Messages* and *Inbox*. An unread multimedia message is indicated by .

2. Scroll to view the message. Press **Options** and, for example, some of the following options may be available: *Play presentation*, *View text*, *Open image*, *Open sound clip*, *Open video clip*, *Save image*, *Save sound clip*, *Save video clip*, *Details*, *Delete message*, *Reply*, *Reply to all*, *Forward to number*, *Forward to e-mail*, *Forward to many*, *Edit*, *Message details*.

Inbox, Outbox, Saved and Sent items folders

The phone saves the multimedia messages that have been received in the *Inbox* folder. Multimedia messages that have not yet been sent are moved to the *Outbox* folder. The multimedia messages that you wish to send later can be saved in the *Saved items* folder. The multimedia messages that have

been sent are saved in the *Sent items* folder of the *Multimedia messages* submenu if the setting *Save sent messages* is set to *Yes*. See "[Settings for multimedia messages](#)" on page 20. Multimedia messages are indicated with .

Multimedia messages memory full

When you have a new multimedia message waiting and the memory for the messages is full, the indicator  blinks and *Multimedia memory full, view waiting message* is shown. To view the waiting message, press **Show**. To save the message, press **Options**, select *Save message* and delete old messages by first selecting the folder and then the old message to be deleted. To discard the waiting message, press **Exit** and **Yes**. If you press **No**, you can view the message.

Voice messages

The voice mailbox is a network service and you may need to subscribe to it. For more information and for the voice mailbox number, contact your service provider. Press **Menu**, and select *Messages* and *Voice messages*. Select *Listen to voice messages* to call your voice mailbox at the phone number that you have saved in the *Voice mailbox*

number menu. Select *Voice mailbox number* to enter, search for or edit your voice mailbox number.

If supported by the network, the indicator  will show new voice messages. Press **Listen** to call your voice mailbox number.

Info messages

With the info message network service you may be able to receive messages on various topics from your service provider. These messages may include, for example, weather or traffic conditions. For availability, topics and the relevant topic numbers, contact your service provider.

Service commands

Press **Menu**, and select *Messages* and *Service commands*. Enter and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

Deleting all messages from a folder

To delete all messages from a folder, press **Menu**, and select *Messages* and *Delete messages*. Select the folder from which you want to delete the messages and press **Yes** to confirm the action. If the folder

contains unread messages, the phone will ask whether you want to delete them also.

Message settings

The message settings affect the sending, receiving and viewing of messages.

Settings for text and SMS e-mail messages

Press **Menu**, and select *Messages*, *Message settings* and *Text messages*.

- Select *Sending profile*. If more than one message profile set is supported by your SIM card, select the set that you want to change. Each set has the following settings: *Message centre no.* (delivered by your service provider), *Messages sent via*, *Message validity*, *Default recipient no.* (text messages) or *E-mail server* (e-mail), *Delivery reports*, *Use GPRS*, *Rep. via same centre* (network service) and *Rename sending profile*.
- Select *Save sent messages* and *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder.

Settings for multimedia messages

If *Allow multim. receipt.* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on.

Press **Menu**, and select *Messages*, *Message settings* and *Multimedia messages*.

Select

- *Save sent messages*. Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder.
- *Delivery reports* to ask the network to send delivery reports about your messages (network service).
- *Scale image down* to define the image size when you insert the image into the multimedia message.
- *Default slide timing* to define the default time for slides in multimedia messages.

- *Allow multimed. recept.*. Choose *No*, *Yes* or *In home network* to use the multimedia service. If *Allow multimed. recept.* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on.
- *Incoming multi. msgs.*. Select *Retrieve* to set the phone to automatically fetch newly received multimedia messages, or select *Reject* if you do not wish to receive multimedia messages. This setting is not shown if *Allow multimed. recept.* is set to *No*.
- *Configuration settings*. Select *Configuration* and select the default service provider for retrieving multimedia messages. Select *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one that you want to use. You may receive the settings as a configuration message from the service provider. To receive the settings as a configuration message, see "Configuration settings service" on page viii. To enter the settings manually see "Configuration settings" on page 32.

- *Allow adverts* to choose if you allow the reception of messages defined as advertisements. This setting is not shown if *Allow multimed. recept.* is set to *No*.

Font size settings

To select the font size for reading and writing messages, press **Menu** and select *Messages*, *Message settings*, *Other settings* and *Font size*.

Message counter

To view how many messages you have sent and received, press **Menu** and select *Messages* and *Message counter*. Select *Sent messages* or *Received messages* or select *Clear counters* to clear the counters.

■ Contacts



You can save names and phone numbers (Contacts) in the phone's memory and in the SIM card's memory. The phone's memory can save names and numbers. Different details (text notes) can be associated with each name. You can also attach an image to a limited number of names. *Contacts* use shared memory, see "Shared memory" on page vi.

Names and numbers saved in the SIM card's memory, are indicated by  .

Selecting settings for contacts

Press **Menu** and select *Contacts* and *Settings*. Select *Memory in use*, *Contacts view*, or *Memory status*.

Searching for a contact

Press **Menu** and select *Contacts* and *Search*.

In addition, the following options may also be available: *Add new contact*, *Delete*, *Copy*, *Info numbers*, *Service numbers*, *My numbers*, *Caller groups*.

Saving names and phone numbers (Add contact)

Press **Menu** and select *Contacts* and *Add new contact*. Enter the name and the phone number. When the name and number are saved, press **Done**.

Saving multiple numbers, text items or an image per name

You can save different types of phone numbers and short text items per name in the phone's internal memory for contacts.

The first number saved is automatically set as the default number and it is indicated with a frame around the number type indicator, for example . When you select a name from contacts, for example to make a call, the default number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*.
2. Scroll to the name saved in the phone's internal memory for the contact to which you want to add a new number or text item, and press **Details**.
3. Press **Options** and select *Add number*, *Add detail* or *Add image*.
4. To add a number or detail, select one of the number types or text types, respectively, or select an image from the *Gallery*.

To change the number or text type, select *Change type* in the options list.

To set the selected number as the default number, select *Set as default*.

5. Enter the number or text item and press **Options** and *Accept* to save it.

Editing or deleting details

Search for the contact that you want to edit or delete and press **Details**.

Scroll to the name, number, text item or image that you want to edit or delete and press **Options**.

- To edit a name, number or text item or to change image, select *Edit name*, *Edit number*, *Edit detail* or *Change image*, respectively.
- To delete a number, text item or image, select *Delete number*, *Delete detail* or *Delete image*, respectively.

Copying contacts

You can copy names and phone numbers from the phone's memory to your SIM card's memory and vice versa. Note that any text items saved in the phone's internal memory, such as e-mail addresses, will not be copied to the SIM card.

1. Press **Menu** and select *Contacts* and *Copy*.
2. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.
3. Select *One by one*, *All* or *Default numbers*. If you select *One by one*, scroll to the name that you want to copy and press **Copy**. *Default numbers* is shown if you

copy from the phone to the SIM card. Only the default numbers will be copied.

4. To choose whether you want to keep or delete the original names and numbers, select *Keep original* or *Move original*. If you select *All* or *Default numbers*, press **Yes** when *Copy contacts?* or *Move contacts?* is displayed.

Sending and receiving a business card

When you have received a business card, press **Show** and **Save** to save the business card in the phone's memory. To discard the business card, press **Exit** and then **Yes**.

To send a business card, search for the name and phone number that you want to send from *Contacts*, press **Details** and **Options** and select *Send business card*. Select *Via infrared*, *Via text message* (network service), *Via Bluetooth* or *Via multimedia* (network service) and *Default number* or *All details*.

Voice dialling

You can make a phone call by saying a voice tag that has been added to a phone number. Any spoken word(s), such as a person's name(s), can be a voice tag. You can add up to ten voice tags.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

Adding and managing voice tags

Save or copy in the phone's memory the contacts to which you want to add a voice tag. You can also add voice tags to the names in the SIM card. Voice tags use shared memory, see "[Shared memory](#)" on page [vi](#).

1. Scroll to the contact to which you want to add a voice tag and press **Details**. Scroll to the phone number you want and press **Options**.

2. Select **Add voice tag**.

3. Press **Start**, and say clearly the word(s) you want to record as a voice tag. After recording, the phone plays the recorded tag.

When the voice tag has been successfully saved, **Voice tag saved** is displayed, a beep sounds and a symbol  appears after the phone number with a voice tag.

To check the voice tags, press **Menu** and select **Contacts** and **Voice tags**. Scroll to the contact with the voice tag that you want, and press **Select** to see the options to listen to, change or delete the recorded voice tag.

Making a call by using a voice tag

In standby mode, press and hold the lower softkey. A short tone is heard and **Speak now** is displayed. Say the voice tag clearly. The phone plays the recognised voice tag and then dials the phone number of the voice tag after 1.5 seconds. If you are using a compatible headset with the headset key, press and hold the headset key to start the voice dialling.

■ Call register



The phone registers the phone numbers of missed, received and dialled calls, and the approximate length of your calls. The phone registers the calls only if the network supports these functions, and the phone is switched on and within the network's service area.

When you press **Options** in the *Missed calls*, *Received calls* and *Dialled numbers* menus, you can, for example, view the date and the time of the call, edit or delete the phone number from the list, save the number in *Contacts*, or send a message to the number.

Counters and timers for calls, data and GPRS



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding off for billing, taxes and so forth.

Press **Menu**, and select *Call register* and then select *Call duration*, *GPRS data counter* or *GPRS connection timer* for approximate information on your recent communications.

Positioning information

Some networks allow to request the position of the phone (network service). This menu allows you to view the received position requests from the network operator. Contact your network operator or service provider to subscribe and to agree upon the delivery of location information.

■ Settings



Profiles

Your phone has various setting groups, profiles, for which you can customise the phone tones for different events and environments.

Press **Menu**, and select *Settings*, *Profiles* and a profile.

- To activate the selected profile, select *Activate*.
- To personalise the profile, select *Personalise* and select the setting that you want to change. For the tone settings, see "[Tone settings](#)" on page 26. Select *Light effects* to activate the pulsating light indicator if the phone is switched on and the display light is switched off. To rename a profile, select *Profile name*. The *General* profile cannot be renamed.

- To set the profile to be active until a certain time up to 24 hours ahead, select *Timed* and set the time for the profile setting to end.

Themes

A theme is a package that may include a screen saver, a wallpaper image, a ringing tone and a colour scheme to customise your phone for different events and environments.

Press **Menu**, and select *Settings* and *Themes*. To activate a theme, select *Select theme* to view the *Themes* folder in *Gallery*. Open the folder and scroll to a theme. Press **Options** and select *Apply theme*. To download new themes, select *Theme downloads*.

Tone settings

You can change the settings of the selected active profile.

Press **Menu**, and select *Settings* and *Tone settings*. Select and change *Incoming call alert*, *Ringing tone*, *Ringing volume*, *Vibrating alert*, *Message alert tone*, *Keypad tones* and *Warning tones*. You can find the same settings in the *Profiles* menu, see "Profiles" on page 25. Select *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group.

Scroll to the caller group that you want to select or choose *All calls* and press **Mark**.

Light settings

You can change the setting of the selected active profile.

Press **Menu**, and select *Settings*, *Light settings* and *Light effects* to activate the pulsating light indicator if the phone is switched on and the display light is switched off.

Display settings

Press **Menu**, and select *Settings* and *Display settings*.

- Select *Wallpaper* to set your phone to display a background image, when the phone is in standby mode.
- Select *Colour schemes* to change the colour in some display components.
- Select *Operator logo* to set your phone to display the operator logo.
- Select *Screen saver* and *Select screen saver* to choose an animation or a still image as screen saver from *Graphics*. Select in *Time-out* the time after which the screen saver will be activated. Select *On* to activate the screen saver.

Time and date settings

Press **Menu**, and select *Settings* and *Time and date settings*.

- Select *Clock* to set the phone to show the clock in standby mode, adjust the clock and select time zone and the time format.
- Select *Date* to set the phone to show the date in standby mode, set the date, and select the date format and date separator.
- Select *Auto-update of time* (network service) to set the phone to automatically update the time and date according to the current time zone.

Personal shortcuts

With personal shortcuts you get quick access to frequently used phone functions.

Lower selection key

Press **Menu**, and select *Settings*, *Personal shortcuts* and *Lower selection key* to allocate one phone function from a predefined list to the lower selection key. Refer also to "[Standby mode](#)" on page 2. This menu is not shown in some operator variants.

Voice commands

You can have phone functions which can be activated by saying a voice tag. Up to five functions can be selected for voice tagging.

Press **Menu**, and select *Settings*, *Personal shortcuts* and *Voice commands*. Select the function folder that you want and scroll to the function to which you want to add a voice tag and press **Add**. A voice tag is indicated with . Refer to the instructions in "[Adding and managing voice tags](#)" on page 24.

To activate a voice command, refer to the instructions in "[Making a call by using a voice tag](#)" on page 24.

Connectivity


You can connect the phone to a compatible device via an infrared or a Bluetooth connection. You can also define the settings for (E)GPRS dial-up connections.

Bluetooth wireless technology

This device is compliant with Bluetooth wireless technology

Specification 1.1

supporting the following profiles: Headset Profile, Handsfree Profile,

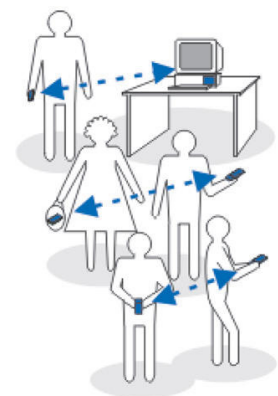

Object Push Profile, File Transfer Profile, Dial Up Networking Profile. To ensure interoperability between other devices supporting Bluetooth wireless technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features using Bluetooth wireless technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduces the battery's life.

Bluetooth technology enables wireless connections between electronic devices within a maximum range of 10 metres. A Bluetooth connection can be used to send images, videos, texts, business cards, calendar notes, or to connect wirelessly to compatible devices using Bluetooth technology, such as computers. Please note that not all computers using Bluetooth technology are necessarily compatible.

Setting up a Bluetooth connection

1. Press **Menu**, and select *Settings*, *Connectivity* and *Bluetooth*.
2. To activate the Bluetooth function, select *Bluetooth* and *On*.
3. Select *Search for audio enhancements* to search for compatible Bluetooth audio devices and select the device that you want to connect to the phone or select *Paired devices* to search for any Bluetooth device in range. If the list is empty, press **New** to list any Bluetooth device in range. Scroll to a device and press **Pair**.
4. Enter the Bluetooth passcode of the device to associate ('pair') and connect the device to your phone and start using the device. You only need to give this passcode when you connect to the device for the first time.

Bluetooth connection

Press **Menu**, and select *Settings*, *Connectivity* and *Bluetooth*. Select

- *Active device* to check which Bluetooth connection is currently active. If you want to close the connection to the selected device, press **Disconnect**.

- *Paired devices* to view a list of Bluetooth devices that are currently paired with the phone. Scroll to the desired device.

Press **Connect** to connect to the selected device or press **Options** to access some of the following functions depending on the status of the device and the Bluetooth connection. Select *Assign short name* to give a nickname (visible only to you) to the selected device. Select *Auto-conn., no conf.* and select *Yes* if you want the phone to connect to the selected device automatically, or select *No* if you want the phone to ask for your permission first. An active Bluetooth connection is indicated by (●) at the top of the display. If you want to delete the pairing to the device, press *Delete pairing*. To pair a new device, select *Pair new device*.

Bluetooth settings

Press **Menu**, and select *Settings, Connectivity, Bluetooth*, and *Bluetooth settings* to define how your phone is shown to other Bluetooth devices. Select *Myphone's visibility* and *Shown to all* to show the phone to all other Bluetooth devices or *Hidden* to show the phone only to the paired devices. We recommend that you use the hidden mode, if possible. Select *Myphone's*

name to change your phone's Bluetooth device name.

Infrared

You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.

Sending and receiving data via IR

- Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices in an infrared connection is 1 metre at most.
- To activate the IR port of your phone to receive data via IR, press **Menu**, and select *Settings, Connectivity* and *Infrared*.
- The user of the sending phone selects the desired IR function to start data transfer.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is cancelled and has to be started again.

IR connection indicator

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data via its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

(E)GPRS

GPRS (General Packet Radio Service) is a network service that allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP) -based network. EGPRS (Enhanced GPRS) is similar to GPRS but enables faster connections. For more information on availability of (E)GPRS and data transfer speed, for subscription and pricing, contact your service provider. Save the (E)GPRS settings for each of the applications used over (E)GPRS.

(E)GPRS connection

Press **Menu**, and select *Settings, Connectivity, GPRS* and *GPRS connection*.

- Select *When needed* and the (E)GPRS registration and connection are established when an application using (E)GPRS

needs it and closed when you end the application.

- Select *Always online* to set the phone to automatically register to a (E)GPRS network when you switch the phone on.

Note that GPRS and EGPRS are not indicated separately, the indicators for GPRS and EGPRS are the same.

(E)GPRS modem settings

You can connect the phone via Bluetooth wireless technology and infrared to a compatible PC and use the phone as a modem to enable (E)GPRS connectivity from the PC.

To define the settings for (E)GPRS connections from your PC, press **Menu**, and select *Settings, Connectivity, GPRS* and *GPRS modem settings*.

- Select *Active access point* and activate the access point you want to use.
- Select *Edit active access point* to change the access point settings. Select *Alias for access point* to enter the name you would like for the activated access point. Select *GPRS access point* to enter the Access Point Name (APN) to establish a connection to a (E)GPRS network. Contact your service provider for the APN.

You can also set the (E)GPRS service settings (Access Point Name) on your PC using the Nokia Modem Options software, see "[PC Suite](#)" on page 49. If you have set the settings both on your PC and on your phone, note that the PC's settings will be used.

Call settings

Press **Menu**, and select *Settings* and *Call settings*. Select

- *Call divert* (network service). For details, contact your service provider.
- *Automatic redial* and *On* and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.
- *Audio enhancing* to modify the voice so that it can be easily heard in a noisy environment.
- *Call waiting* and *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See "[Call waiting](#)" on page 9.
- *Summary after call* and *On* and the phone will briefly display the approximate duration and cost (network service) of the call after each call.
- *Send my caller ID* (network service) and select *Yes* or *Set by network*.
- *Outgoing call line* (network service) to select phone line 1 or 2 for making calls. Only shown if supported by your SIM card.

Phone settings

Press **Menu**, and select *Settings*, *Phone settings*. Select

- *Language settings* and *Phone language* to set the display language of your phone or *Writing language* to select the language the phone will use when you are writing a text.
- Select *Memory status* to view the free and used memory.
- *Automatic keyguard* to set the keypad of your phone to lock automatically after a pre-set time delay when the phone is in standby mode and no function of the phone has been used.
- Select *Security keyguard*, enter the security code and select *On* to set the phone to ask for the security code when you unlock the keyguard.

When the keyguard is on, calls still may be possible to the official emergency number. Refer also to "[Keypad lock \(Keyguard\)](#)" on page 4.

- *Cell info display* and *On* to receive information from the network depending on the network cell used (network service).
- *Welcome note* and enter the note that you would like to be shown briefly when the phone is switched on. To save the note, press *Options* and select *Save*.
- *Operator selection* and *Automatic* and the phone automatically selects one of the cellular networks available in your area. With *Manual*, you can select a network that has a roaming agreement with your home network operator.
- *Confirm SIM actions*. See "[SIM services](#)" on page 48.
- *Help text activation* to set the phone to show or not to show the help texts.
- *Start-up tone* to set the phone to play or not to play a start-up tone when it is switched on.

Enhancement settings

The enhancement settings menu is shown only if the phone is or has been connected to a compatible mobile enhancement, charger and handsfree unit, for example.

Press *Menu*, and select *Settings* and *Enhancement settings*. You can select an enhancement menu if the corresponding enhancement is or has been connected to the phone. Depending on the enhancement, you may be able to select some of the following options: *Default profile*, *Automatic answer*.

Configuration settings

Some of the network services need to have the correct configuration settings on your phone. Get the settings from a service provider as a configuration message or enter your personal settings manually. You can also edit the settings with PC Suite. Configuration settings from up to ten different service providers can be stored in the phone and can be managed within this menu.

To save the configuration settings received by a configuration message sent by a service provider, see "[Configuration settings service](#)" on page viii.

The settings can be viewed and partly edited also in the different applications.

Press **Menu**, and select *Settings, Configuration settings*. Select

- *Default config.* to view the list of service providers stored on the phone (the default service provider is highlighted) and to select another service provider as default. Scroll to a provider and press **Details** to view the list with supported applications. To delete a service provider from the list, press **Options** and select *Delete*.
- *Activate default in all applications* to set the applications to use the settings from the default service provider.
- *Preferred access point* to select another access point. Normally the access point from your preferred network operator is to be used.

Keying in the settings manually

To enter, view and edit the settings manually, press **Menu**, and select *Settings, Configuration settings* and *Personal config. settings*.

To add a new configuration, press **Add new** or press **Options** and select *Add new*. Choose one of the application types from the list and enter all the necessary settings. To

activate the settings, press **Back** and **Options** and select *Activate*.

To view or to edit the user-defined settings select the application that you want to view and select the setting to edit.

Security settings

When security features that restrict calls are in use (such as call barring, closed user group and fixed dialling) calls may still be possible to the official emergency number programmed into your device.

Press **Menu**, and select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to request your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.
- *Fixed dialling* to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card.
- *Closed user group* (network service) to specify a group of people whom you can call and who can call you.

- **Security level.** Select **Phone** and the phone will request the security code whenever a new SIM card is inserted into the phone.
Select **Memory** and the phone will request the security code when the SIM card's memory is selected and you want to change the memory in use.
- **Access codes** to change the security code, PIN code, PIN2 code or barring password.

Restore factory settings

To reset some of the menu settings to their original values, press **Menu**, and select **Settings** and **Restore factory settings**.

■ Gallery

In this menu, you can manage graphics, images, video clips, recordings and tones. These files are arranged in folders.



Your phone supports a Digital Rights Management (DRM) system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred or forwarded.

1. Press **Menu** and select **Gallery**. A list of folders is shown. **Images**, **Video clips**, **Themes**, **Graphics**, **Tones** and **Recordings** are the original folders on the phone.
2. Scroll to the desired folder and press **Open** to view a list of files in the folder or press **Options** and one of the following options may be available:
Downloads, Delete folder, Move, Rename folder, Details, Type of view, Sort, Add folder, Memory status, Activation key list.
3. If you have opened a folder, select the file that you want to view and press **Open**. If **Themes** was selected before, scroll to a theme and press **View** to open the theme package. Select and open a file, or press **Options** and use one of the following functions that may be available for the selected file:

Delete, Send, Edit image, Move, Rename, Set as wallpaper, Set as ring tone, Apply theme, Details, Type of view, Sort, Delete all, Open in sequence, Mute audio (Unmute audio), Set contrast, Add folder and Memory status, Activate content, Activation key list.

■ Media



Camera

You can take photos with the phone's built-in camera. The camera lens is on the back of the phone, and the display of the phone works as a viewfinder. The camera produces pictures in JPEG format.

The Nokia 7280 device supports an image capture resolution of 640 x 480 pixels. The image resolution in these materials may appear different.

Taking a photo

Open the camera lens, press **Menu**, and select *Media*, *Camera*. The live image appears on the display, and you can use the display as a viewfinder. To take a photo, press **Capture**. A shutter sound is heard. The phone saves the photo in the *Images* folder of the *Gallery* menu.

If you want to send the photo as a multimedia message, press **Send**.

Or select **Back** to take another photo, or press **Options** and select, for example, an option to zoom, delete or rename the saved photo, to open the *Gallery*, or to set the contrast, to set the photo as wallpaper, to see the details, or to send the photo as a multimedia message, via infrared or Bluetooth technology.

Camera options

Press **Menu**, and select *Media*, *Camera*. Press **Options** and depending on the active camera mode the following options may appear: *Change mode*, *Zoom*, *Self-timer*, *View previous*, *Open gallery*, or *Settings* to adjust the camera settings: *Default mode*, *Image quality*, *Camera sounds*, *Default title*.

Media player

With the media player you can view, play and download files, for example images, audio, video and animated images from different kinds of sources. Further the media player allows you to see compatible streaming videos from a network server (network service). Check the availability of these services, pricing and tariffs with your service provider whose service you wish to use.

Press **Menu**, and select *Media* and *Media player*. Select *Open gallery*, *Bookmarks*, *Go to address* or *Media downloads*.

Setting up the phone for a streaming service

You may receive the streaming settings as a configuration message from the service provider that offers the service that you want to use. To receive the service settings as a configuration message, see "Configuration settings service" on page viii. See also "Configuration settings" on page 32.

Press **Menu**, and select *Media*, *Media player* and *Streaming settings*.

- Select *Configuration* and select the default service provider for the streaming service.
- Select *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one that you want to use.

Radio

To listen to the radio on your phone connect the compatible headset to the headset connector on the bottom of the phone. The lead of the headset functions as the radio antenna, so let it hang freely. The

quality of the radio broadcast depends on the radio station's coverage in that particular area. To turn on the radio, press **Menu** and select *Media* and *Radio*. The channel location number and the name of the radio channel (if you have saved the channel) and the frequency of the radio channel are displayed. If you have already saved radio channels, scroll and select a radio channel location 1 to 20.

Tuning and saving radio channels

When the radio is on, select  or  and press **Select** to change the radio frequency in 0.05 MHz steps or press and hold **Select** to start the channel search. Searching stops when a channel is found. To save a channel, press **Options**, and select *Save channel*. Enter the name of the channel, press **Options**, and select *Accept*.

Using the radio

When the radio is on, select  or  to scroll to the previous or next saved channel or press **Options**, and select

- *Switch off* to turn off the radio.
- *Volume* to set the volume of the radio.

- *Channels* to view the channel list. Press **Options** to rename or to delete the channel.
- *Loudspeaker* (or *Headset*) to listen to the radio using the loudspeaker (or headset). Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.
- *Set frequency*. Enter the frequency of the radio channel that you would like to listen to. You can key in a frequency between 87.5 MHz and 108.0 MHz. To set the frequency, press **Options** and select *Accept*.

Voice recorder

You can record pieces of speech, sound or an active call for up to 3 minutes. This is useful, for example, when recording a name and phone number for writing down later.

The recorder cannot be used when a data call or GPRS connection is active.

Recording

1. Press **Menu**, select *Media* and *Voice recorder*.
2. To start the recording, select *Record*. To start the recording during a call, press **Options**, and select *Record*. While recording a


call, all parties to the call will hear a faint beeping sound every 5 seconds approximately.

3. To end the recording, press **Stop**. The recording will be saved in the *Recordings* folder of the *Gallery* menu.
4. To listen to the latest recording, select *Play last recorded*.
5. To send the latest recording, select *Send last recorded*.

List of recordings

Press **Menu**, and select *Media*, *Voice recorder* and *Recordings list*. The list of folders in the *Gallery* is shown. Open *Recordings* to see the list with recordings. Press **Options** and you can select some of the options for files in the *Gallery*. See "Gallery" on page 34.

■ Organiser



Alarm clock

You can set the phone to alarm at a desired time. Press **Menu**, and select *Organiser* and *Alarm clock*.

To set the alarm, select *Alarm time*, and enter the alarm time. To change the alarm time when the alarm time is set, select *On*. Select *Repeat alarm* to set the phone to alert you on selected days of the week.

Select *Alarm tone* and select the default alarm tone, personalise the alarm tone by selecting one from the ringing tone list or from Gallery.

When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display, even if the phone was switched off. Press **Stop** to stop the alarm. If you let the phone continue to sound the alarm for a minute or press **Snooze**, the alarm stops for about 10 minutes and then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you press **Stop**, the device asks whether you want to activate the device for calls. Press **No** to switch off the device or **Yes** to make and receive calls. Do not press **Yes** when wireless phone use may cause interference or danger.

Calendar

The calendar uses shared memory, see "*Shared memory*" on page vi.

Press **Menu**, and select *Organiser* and *Calendar*.

The current day is indicated by a frame. If there are any notes set for the day, the day is shown in bold type. To view the day notes, press **View**. To view a week, press **Options** and select *Week view*. To view a single note, press **View**.

Other options for the calendar view may be options for creating a note, for deleting, editing, moving and repeating a note and for copying a note to another day, or for sending a note as a note directly to another compatible phone's calendar or as a text message or a multimedia message. In *Settings* you can set the date, time, time zone, date or time format, or the first day of the week. In the *Auto-delete notes* option you can set the phone to delete old notes automatically after a specified time.

To delete all notes in the calendar, select the month or week view, press **Options** and select *Delete all notes*.

Making a calendar note

Press **Menu**, and select *Organiser* and *Calendar*. Scroll to the date that you want, press **Options** and select *Make a note*. Select one of the following note types:  *Meeting*,  *Call*,  *Birthday*,  *Memo* or  *Reminder*.

When the phone sounds an alarm for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing the **Call** key. To stop the alarm and to view the note, press **View**. Press **Snooze** and the phone sounds an alarm again after 10 minutes. To stop the alarm without viewing the note, press **Exit**.

To-do list

You can save a note for a task that you have to do, select a priority level for the note and mark it as done when you have completed it. You can sort the notes by priority or by date. The to-do list uses shared memory, see "[Shared memory](#)" on page [vi](#).

Press **Menu**, and select *Organiser* and *To-do list*.

To make a note press **Add note** or press **Options** and select **Add**. Enter the note and press **Options** and select **Save**. Select the priority for the note. The phone automatically sets the deadline without an alarm for the note. To change the deadline, view the note and select the deadline option.

Or scroll to a note and press **View** or press **Options** to see the available options.

Notes

You can use this application for writing and sending notes to compatible devices via IR, Bluetooth wireless technology, SMS or MMS. The Notes application uses shared memory, see "[Shared memory](#)" on page [vi](#).

Press **Menu** and select *Organiser* and *Notes*.

To add a note, press **Add note** or press **Options** and select *Make a note*. Enter the note and press **Options** and select **Save**.

Or scroll to a note press **View** or press **Options** to see the available options for notes.

Synchronisation

Synchronisation allows you to save your calendar and contacts data on a remote Internet server (network service) or on a compatible PC. If you have saved data on the remote Internet server, you can synchronise your phone by starting the synchronisation from your phone. You can also synchronise the data in your phone's contacts, calendar and notes to correspond to the data of your compatible PC by starting the synchronisation from your PC. The contact data in your SIM card will not be synchronised.

Synchronising from your phone

Before synchronising from your phone, you need to subscribe to a synchronisation service and get the configuration settings from your provider. For more information on availability and the synchronisation service settings, contact your service provider.

To start the synchronisation from your phone:

1. Activate the connection settings you need for the synchronisation. See ["Settings for synchronisation from your phone"](#) on page 40.
2. Press **Menu**, select *Organiser*, *Synchronisation*, *Server sync* and *Data to be synchron..* Mark the data to be synchronised and press **Done**.
3. Press **Menu**, and select *Organiser*, *Synchronisation*, *Server sync* and *Synchronise*. The marked data of the active set will be synchronised after confirmation.

Settings for synchronisation from your phone

You may receive the synchronisation settings as a configuration message. For more information on availability and the synchronisation service settings, contact your service provider. For receiving the settings

as a configuration message, see ["Configuration settings service"](#) on page viii. To enter the settings manually, see ["Configuration settings"](#) on page 32.

Press **Menu**, select *Organiser*, *Synchronisation* and *Server sync* and *Sync settings*. Select *Configuration* and scroll to the service provider whose settings you would like to activate and press **Select**. Select *Account* to see the accounts provided by the service provider. If more than one account is displayed choose the one that you want to use.

Synchronising from your compatible PC

To synchronise contacts, the calendar and the notes from your compatible PC, use either an IR or a Bluetooth connection. You also need the PC Suite software of your phone installed on the PC. Start the synchronisation from the PC using PC suite. Ensure that the phone is in standby mode and that the time and date are set.

■ Web

You can access various mobile Internet services with your phone's browser.



Check the availability of these services, pricing and tariffs with the service provider whose service you wish to use.

With your phone's browser you can view the services that use Wireless Mark-Up Language (WML) or extensible HyperText Mark-up Language (xHTML) on their pages. Appearance may vary due to screen size. Note that you may not be able to view all the details of the Internet pages.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Setting up the phone for a service

Your phone may have stored some service settings. Additional settings may be received as a configuration message from the network operator or service provider that offers the service that you want to use.

To receive the service settings as a configuration message, see "[Configuration settings service](#)" on page [viii](#) and "[Configuration settings](#)" on page [32](#).

For more information and for the appropriate settings, contact the service provider that offers the service that you want to use.

Making a connection to a service

Make sure that the Web settings of the service that you want to use are activated. To activate the settings, press **Menu**, and select *Web*, *Settings* and *Configuration settings*. Select *Configuration* and select the configuration set you want to activate.

To make a connection to the Web, use one of the following means:

- Open the start page, for example, the homepage of the service provider: Press **Menu**, and select *Web* and *Home*.
- Select a bookmark of the service: Press **Menu**, and select *Web*, *Bookmarks*, and select a bookmark. If the bookmark does not work with the current active service settings, activate another set of service settings and try again.

- Select the last URL: Press **Menu**, and select *Web, Last web address*.
- Enter the address of the service: Press **Menu**, and select *Web* and then *Go to address*. Enter the address of the service and press **Options** and select *Accept*.

Browsing the pages of a service

After you have made a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone's display. For more information, contact your service provider.

Note that if GPRS is selected as the data bearer, the indicator  is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during an (E)GPRS connection, the indicator  will be shown on the top left of the display to indicate that the (E)GPRS connection is suspended (on hold). After a call, for example, the phone tries to reconnect the (E)GPRS connection.

Using the phone keys while browsing

- Use the spinner to browse through the page.

- To select a highlighted item, press the **Call** key, or press **Options** to select the option for opening the link.
- To enter letters, numbers, or special characters, press the middle selection key and select the characters one by one from the bar.

Options while browsing

Press **Options** and the following options may be available. The service provider may also offer other options. Select *Scroll right-left* or *Scroll up-down*, *Shortcuts*, *Home*, *Add bookmark*, *Bookmarks*, *Page options*, *History*, *Download links*, *Save to folder*, *Other options*, *Reload*, *Quit*.

Direct calling

The browser supports functions that you can access while browsing. You can make a voice call, send DTMF tones while a voice call is in progress, and save a name and a phone number from a page.

The cache memory

The information or services that you have accessed are stored in the cache of your phone. To empty the cache:

- while browsing, press **Options** and select *Other options* and *Clear the cache*, or
- in standby mode, press **Menu**, and select *Web*, and *Clear the cache*.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

Disconnecting from a service

To quit browsing and to end the connection, press **Options** and select *Quit*. Alternatively, press the End key twice, or press and hold the End key.

Appearance settings of the browser

While browsing, press **Options** and select *Other options* and *Appearance settings*, or in standby mode, press **Menu**, and select *Web*, *Settings* and *Appearance settings*. Select

- *Text wrapping*. Select *On* and the text continues on the next line. If you select *Off*, the text will be abbreviated.

- *Show images*. Select *No* and any pictures appearing on the page are not shown.
- *Alerts* and select *Alert for unsec. conn.* and *Yes* to set the phone to alert when a secure connection changes to an insecure one during browsing. Select *Alert for unsec. items* and *Yes* to set the phone to alert when a secure page contains an insecure item. Note that these alerts do not guarantee a secure connection. For more information, see ["Browser security"](#) on page 45.
- *Character encoding* to select the character set that the phone uses for showing browser pages that do not include that information or to select whether to always use UTF-8 encoding when sending a Web address to a compatible phone.

Cookies

A cookie is data that a site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see ["The cache memory"](#) on page 42.

While browsing, press **Options** and select *Other options*, *Security* and *Cookie settings*, or in standby mode, press **Menu**, and select *Web*, *Settings*, *Security settings* and *Cookies*, *Allow* or *Reject*.

Bookmarks

While browsing, press **Options** and select *Bookmarks*, or in standby mode, press **Menu**, and select *Web* and *Bookmarks*. Scroll to the bookmark that you want to use and press **Select** to make a connection to the page associated with the bookmark. Or select **Options** to view the title and the address of the selected bookmark, edit or delete the selected bookmark, or send it directly to another phone as a bookmark, or as a text message, or create a new bookmark.

Your device may have some bookmarks loaded for sites not affiliated to Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receiving a bookmark

When you have received a bookmark (sent as a bookmark) *1 bookmark received* is displayed. Press **Show** to view the bookmark. To save the

bookmark, press **Save**, or press **Options** and select *View* to see the details or *Delete* to discard it.

Downloading

To download more tones, graphics, videos or themes to your phone (network service), press **Menu**, and select *Web* and *Download links*.

Select *Tone downloads*, *Graphic downloads*, *Video downloads* or *Theme downloads*.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

For the availability of different services, pricing and tariffs, contact your service provider.

Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider (network service). Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a service.

To access the *Service inbox* in standby mode, when you have received a service message, press **Show**. If you press **Exit** the message is moved to the *Service inbox*. To access the *Service inbox* later, press **Menu**, and select *Web* and *Service inbox*.

To access the *Service inbox* while browsing, press **Options** and select *Other options* and *Service inbox*. Scroll to the message that you want, press **Retrieve** to activate the browser and download the marked content, or press **Options** and select *Details* to display detailed information on the service notification, or select *Delete* to delete it.

Service inbox settings

Press **Menu**, and select *Web*, *Settings* and *Service inbox settings*.

- Select *Service messages* and *On* (or *Off*) to set the phone to receive (or not to receive) service messages.
- Select *Message filter* and *On* to set the phone to receive service messages only from content authors approved by the service provider. To view the list of the approved content authors, select *Trusted channels*.

- Select *Automatic conn..* If you have set the phone to receive service messages and select *On*, the phone will automatically activate the browser from standby mode when the phone has received a service message.

Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module can contain certificates as well as private and public keys. The purpose of the security module is to improve security services for applications requiring browser connection, and it allows you to use a digital signature. The certificates are saved in the security module by the service provider.

Press **Menu** and select *Web*, *Settings*, *Security settings* and *Security module settings*. Select

- *Security module details* to show the security module title, its status, manufacturer and serial number.
- *Module PIN request* to set the phone to request the module PIN when using services provided by the security module.
- *Change module PIN* to change the module PIN, if allowed by the security module.
- *Change signing PIN* to change the signing PIN.

See also "[Access codes](#)" on page [vii](#).

Certificates

There are three kinds of certificates: server certificates, authority certificates and user certificates.

- The phone uses a server certificate to create a connection with improved security to the content server. The phone receives the server certificate from the service provider before the connection is established and its validity is checked using the authority certificates saved in the phone. Server certificates are not saved.

The security indicator  is displayed during a connection if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

- Authority certificates are used by some services, such as banking services, for checking the validity of other certificates. Authority certificates can either be saved in the security module by the service provider, or they can be downloaded from the network, if the service supports the use of authority certificates.
- User certificates are issued to users by a Certifying Authority. User certificates are required, for example, to create a digital signature and they associate the user with a specific private key in a security module.



Important: Note that even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.

Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct. Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

Digital signature

You can make digital signatures with your phone if your SIM card has a security module. The signature can be traced back to you via the private key on the security module and the user certificate that was used to

perform the signature. Using the digital signature can be the same as signing your name to a paper bill, contract or other document.

To make a digital signature, select a link on a page, for example, the title of the book that you want to buy and its price. The text to sign (possibly including amount, date, etc.) will be shown.

Check that the header text is *Read* and that the digital signature icon  is shown.




Note: If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first and then you can select *Sign*.

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate that you want to use. Enter the signing PIN (see "[Access codes](#)" on page [viii](#)).

■ SIM services



In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu which is shown only if it is supported by your SIM card. The name and contents of the menu depend on the SIM card.

For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

Depending on the operator, you can set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option *Yes* within the menu *Confirm SIM actions*, in *Phone settings*.

Note that accessing these services may involve sending messages or making a phone call for which you may be charged.

■ Number entry



This function allows you to access the number entry state, where you can make a call or perform other tasks to the phone number you have entered.

Press **Menu** and select *Number entry* and enter the number you want.

Press **Options** and select

- *Save* to add the number to your contacts.
- *Move cursor* to change to cursor mode.
- *Add to contact* to add the number to a contact, that is already stored in your phonebook.
- *Send message* to create a message and send it to this number.
- *Call* to make a call to this number.

6. PC Connectivity

You can send and receive e-mails, and access the Internet when your phone is connected to a compatible PC via an IR or Bluetooth wireless connection. You can use your phone with a variety of PC connectivity and data communications applications. With PC Suite you can, for example, synchronise contacts, calendar and notes between your phone and the compatible PC or a remote Internet server (network service).

You may find more information and downloadable files, for example PC suite, in the support area on the Nokia website, www.nokia-asia.com/support.

■ PC Suite

PC Suite contains the following applications (in alphabetical order):

- **HTML Help** to support the application usage.
- **Nokia Connection Manager** to select the connection type between the PC and the phone.
- **Nokia Contacts Editor** to edit contacts in your phone.
- **Nokia Content Copier** to back-up and restore personal data between your phone and a compatible PC. This application also supports content transfer to another compatible Nokia phone.
- **Nokia Image Converter** to make images in supported formats usable for multimedia messages or wallpaper and to transfer them to your phone.
- **Nokia Modem Options** contains settings for HSCSD and GPRS connections.
- **Nokia Multimedia Player** to play sounds, images, videos and multimedia messages on the PC. Multimedia Player allows you to view multimedia content received on your phone or via e-mail.
- **Nokia PC Sync** to synchronise contacts, calendar and to-do notes between your phone and a compatible PC.

- **Nokia Phone Browser** to view the contents of the Gallery folder of your phone on a compatible PC. You can browse picture and audio files and also modify files in the phone's memory and transfer files between your phone and the PC.
- **Nokia Sound Converter** to optimise polyphonic ringing tones in supported formats to be compatible with your phone and to transfer them to your phone.
- **Nokia Text Editor** to send text messages.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred or forwarded.

(E)GPRS, HSCSD and CSD

With your phone you can use the (E)GPRS (Enhanced GPRS), GPRS (General Packet Radio Service), HSCSD (High Speed Circuit Switched Data) and CSD (Circuit Switched Data, *GSM data*) data services.

For availability and subscription to data services, contact your network operator or service provider.

Note that the use of HSCSD services consumes the phone's battery faster than normal voice or data calls. You may need to connect the phone to a

charger for the duration of the data transfer.

See "[\(E\)GPRS modem settings](#)" on page 30.

■ Using data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Note that making or answering phone calls during a computer connection is not recommended as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

7. Battery information

■ Charging and Discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Contact the authorised service facility for replacement battery. Do not attempt to do it yourself. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

A few practical rules on enhancement operation

- Recharge your battery only with Nokia approved chargers designated for this device.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

B a t t e r y i n f o r m a t i o n

- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

8. Genuine Enhancements

A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs.



Some of the enhancements are described in detail below.

For availability of the enhancements, please check with your local dealer. A few practical rules for enhancements operation:

- Keep the enhancements out of small children's reach.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that all mobile phone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

■ Battery

Type	Tech	Talk-time*	Standby*
BL-8N	Li-ion	up to 3 hours	up to 240 hours

* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.


■ Indoor

Nokia Retractable Charger (AC-1)

Small and light travel charger with convenient cable management.

Travel Charger (ACP-12)

Small, lightweight travel charger with multivoltage (100 - 240V) switcher technology. Provides easy and convenient way to charge the phone.

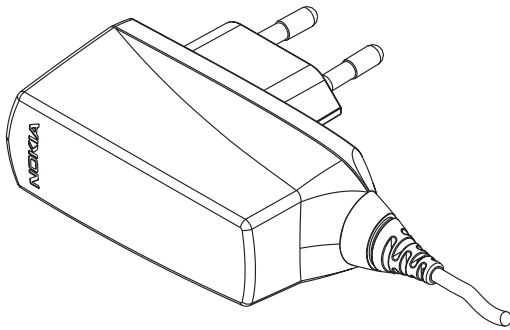

Note: The plug types vary according to different markets.

9. Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.

10. Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. To maintain compliance with radio frequency exposure guidelines only use enhancements approved by Nokia for use with this device. When the device is on and being worn on the body, always use an approved holder or carrying case.

Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with a hearing aid should not hold the device to the ear with the hearing aid. Always secure the device in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the device, because

information stored on them may be erased.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 in. (15.3 cm) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should:

- always keep the device more than 6 in. (15.3 cm) from their pacemaker when the device is switched on;
- not carry the device in a breast pocket; and

- hold the device to the ear opposite the pacemaker to minimise the potential for interference.

If you have any reason to suspect that interference is taking place, switch off your device immediately.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place

objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

■ Emergency calls



Important:

Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the phone.
2. Press the **End** key as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
If the keypad is locked, unlock the keypad first by pressing the middle selection key and the **Call** key within 1.5 seconds.



Note: Note that calls to emergency numbers programmed to your phone may also be possible when the keypad is locked, depending on the region and network service provider. Press the **Call** key for 1.5 seconds. Then press **Yes** and the **Call** key within 4 seconds to attempt an emergency call.

3. Press and hold the middle selection key and select the digits of the emergency number for your present location (e.g. 112, 911 or other official emergency number) one by one from the character bar. Emergency numbers vary by location.

4. Press the **Call** key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. If the device is in offline or flight mode you must change the profile to activate the phone function before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

THIS MODEL PHONE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for this model phone when tested for use at the ear is 0.83 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

This product meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.50 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.50 cm away from your body.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia-asia.com.

Index

SYMBOLS

(E)GPRS, HSCSD and CSD 50

A

About your device vi
 Shared memory vi
Access codes vii
Accessing a menu function 11
Additional safety information 56
Answering or rejecting an incoming call 8

B

Battery 53
Battery information 51
 type 53
Bookmarks 44
Browser security 45
browser security
 security module for WAP
 applications 45

C

Call functions 8
Call register 25
 Counters and timers for calls, data
 and GPRS 25
Care and maintenance 55
Certificates 46
Certification information (SAR) 59
Charging and Discharging 51
Charging the battery 5
Configuration settings service viii
Connectivity 27
Contacts 21
 Saving multiple numbers, text items
 or an image per name 22
 Saving names and phone numbers
 (Add contact) 22
 Searching for a contact 22
 Selecting settings for contacts 22
Contents ii
Cookies 43
Copying contacts 23

D

Deleting all messages from a folder 19
Digital signature 47
Downloading 44
Downloading content and
applications viii

E

Editing or deleting details 23
Emergency calls 58
 To make an emergency call 58

F

FOR YOUR SAFETY iv

G

Gallery 34
General information vi
Genuine Enhancements 53
Getting started 5

I

Installing the SIM card 5

K

Keypad lock (Keyguard) 4
Keys and connectors 1

M

Making a call 8
Media 35
 Camera 35
 Media player 35
 Radio 36
 Voice recorder 37
Medical devices 56
 Hearing aids 57
 Pacemakers 56
menu
 list of functions 12

- Menu functions 14
- Message settings 20
- Messages 14
 - Info messages 19
 - Multimedia messages (MMS) 16
 - Text messages (SMS) 14
 - Voice messages 19

N

- Network services vii
- Nokia support on the Web viii
- Normal operating position 6

O

- Operating environment 56
- Options during a call 9
- Organiser 37
 - Alarm clock 37
 - Calendar 38
 - Notes 39
 - Synchronisation 39
 - To-do list 39

P

- PC Connectivity 49
- PC Suite 49
- Personal shortcuts 27
- Potentially explosive environments 57
- Putting on a wrist strap 6

R

- Removing and replacing the Quick slide 7

S

- SAR value 59
- Sending and receiving a business card 23
- Service commands 19
- Service inbox 44
- Setting
 - Configuration settings 32
 - Enhancement settings 32
 - Phone settings 31
 - Restore factory settings 34
 - Security settings 33

- Settings 25
 - Call settings 31
 - Display settings 26
 - Profiles 25
 - Themes 26
 - Time and date settings 27
 - Tone settings 26
- SIM services 48
- Standby mode 2
 - Essential indicators 3
 - Power saving 3
 - Wallpaper and Screen saver 3
- Stickers in the sales package vi
- Switching the phone on and off 6

T

- The cache memory 42
- Traffic Safety 56

U

- Using data communication applications 50
- Using the menu 11
- Using the spinner 1

V

- Vehicles 57
- Voice dialling 23

W

- WAP services
 - security module in SIM 45
- Web 41
 - Appearance settings of the browser 43
 - Browsing the pages of a service 42
 - Disconnecting from a service 43
 - Making a connection to a service 41
 - Setting up the phone for a service 41
- Writing text 9
 - Tips for writing text 10

Y

- Your phone 1