

KYOCERA Hydro

User Guide



© 2012 Kyocera Corporation. All Rights Reserved. BOOST and BOOSTMOBILE and Logo, and the Logo are trademarks of Boost. Other marks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

Table of Contents

Get Started	1
Your Device at a Glance.....	1
Set Up Your Device	2
Complete the Setup Application.....	3
Set Up Visual Voicemail	4
Mobile ID	5
Installing Additional ID Pack.....	5
Switching ID Packs	6
Getting Help	6
Managing Your Account.....	6
411.....	7
Operator Services	7
Device Basics	8
Your Device's Layout.....	9
Key Functions	9
Turn Your Device On and Off	10
Turn Your Device On	11
Turn Your Device Off	11
Turn Your Screen On and Off.....	11
Turn the Screen Off When Not in Use.....	11
Turn the Screen On and Unlock It.....	11
Touchscreen Navigation	12
Touch.....	12
Touch and Hold.....	12
Drag.....	12
Slide or Flick	12
Pinch and Spread	12
Rotate	13
Your Home Screens	13
Customize the Home Screens.....	14

Status Bar	15
Status Icons	15
Notification Icons.....	16
Enter Text.....	17
Touchscreen keyboard.....	17
Entering Text Using Swype	17
Entering Text Using the Android Keyboard	22
Copying and Pasting Text	26
Google Account.....	27
Create a Google Account.....	27
Sign In to Your Google Account	28
Add Account	29
General Sync Settings	29
Phone	30
Make Phone Calls	30
Call Using the Phone Dialpad	30
Call From Recent Calls	31
Call From People	31
Call a Number in a Text Message	32
Call Emergency Numbers	32
Call Numbers with Pauses	33
Call Using Plus (+) Code Dialing	33
Call Using the Internet Calling.....	33
Receive Phone Calls	34
Answer an Incoming Call	35
Mute the Ringtone.....	35
Reject an Incoming Call	35
Reject a Call and Send a Text Message	35
Visual Voicemail	35
Set Up Visual Voicemail.....	36
Review Visual Voicemail	36
Listen to Multiple Voicemail Messages.....	37
Configure Visual Voicemail Options	37

Configure Visual Voicemail Settings.....	38
Automatically Enable the Speakerphone.....	39
Change Your Main Greeting via the Voicemail Menu	39
Edit the From Name via the Voicemail Menu	40
Voicemail (Traditional).....	40
Set Up Voicemail	40
Retrieve Your Voicemail Messages.....	41
Phone Call Options.....	41
Caller ID.....	42
Call Waiting.....	42
3-Way Calling	42
Call Forwarding.....	43
Other Call Settings.....	43
In-Call Options	45
Call Log	46
View Recent Calls.....	46
Call Log Options	46
Clear Call Logs	47
Device Settings	48
WIRELESS & NETWORKS Settings	48
Wi-Fi	48
Bluetooth.....	48
Data Usage.....	48
Airplane Mode.....	49
Mobile Networks	50
DEVICE Settings	50
Sound	50
Display.....	53
Storage	54
Battery	54
PC Connection.....	55
Apps	55
PERSONAL Settings.....	55

Accounts & Sync.....	56
Location Services.....	56
Security.....	56
Language & Input.....	60
Backup & Reset	60
SYSTEM Settings.....	61
Date & Time.....	62
Accessibility	62
Developer Options	63
Activate This Device	63
About Phone	63
System Update	64
People	66
Get Started with People.....	66
Access People	66
People List Options.....	67
Add a New People Entry	67
Save a Phone Number	69
Edit a People Entry.....	69
Add or Edit Information for a People Entry	70
Assign a Stored Picture to a People Entry.....	70
Assign a New Picture to a People Entry.....	70
Assign a Ringtone to a People Entry.....	71
Assign a Vibration to a People Entry	71
Add an Entry to Favorites.....	71
Send an Entry's call to Voicemail	72
Delete a People Entry	72
Select People List.....	72
Customize People List	72
Synchronize People Entries.....	72
Display Options	73
Share a People Entry	73
Messaging	75

Gmail.....	75
Access Gmail.....	75
Send a Gmail Message.....	76
Read and Reply to Gmail Messages	77
Email	77
Add an Email Account (POP3 or IMAP)	78
Add a Corporate Account.....	78
Create Another Email Account.....	79
Compose and Send Email	79
View and Reply to Email	80
Manage Your Email Inbox.....	80
Email General Settings	81
Email Account Settings	81
Delete an Email Account.....	83
Text Messaging and MMS	83
Compose Text Messages	83
Send a Multimedia Message (MMS)	84
Save and Resume a Draft Message.....	85
New Messages Notification	86
Managing Message Conversations	86
Text and MMS Options	88
Social Networking Accounts	89
YouTube	89
Google Talk.....	90
Signing In and Chatting.....	90
Managing Your Friends.....	92
Mobile Indicators.....	92
Signing Out.....	93
Google Talk Settings.....	93
Applications and Entertainment.....	95
Google Play.....	95
Find and Install an Application	96
Create a Google Wallet Account	97

Request a Refund for a Paid Application.....	97
Open an Installed Application.....	97
Uninstall an Application.....	98
Get Help with Google Play	98
Navigation	98
Google Maps	99
TeleNav GPS Navigator.....	101
Google Navigation	101
Google Latitude.....	102
Music Player.....	105
Opening the Music Library	105
Playing Music.....	105
Search for Music in the Music Library	108
Using Playlists	108
Backing Up Your Downloaded Music Files.....	109
BoostZone.....	109
Web and Data.....	110
Wi-Fi.....	110
Turn Wi-Fi On and Connect to a Wireless Network	110
Check the Wireless Network Status	111
Connect to a Different Wi-Fi Network	111
Data Services	112
Your User Name	112
Launch a Web Connection.....	112
Data Connection Status and Indicators	113
Browser	113
Learn to Navigate the Browser.....	114
Browser Menu.....	115
Select Text on a Web Page	116
Adjust Browser Settings.....	116
Adjust Browser Privacy and Security Settings.....	117
Adjust Browser Accessibility Settings.....	117
Adjust Browser Advanced Settings	118

Adjust Browser Bandwidth Management Settings	119
Adjust Browser Labs Settings	119
Set Search Engine	119
Create Website Settings	119
Reset the Browser to Default	120
Set the Browser Home Page.....	120
Read Web Page Offline	120
Manage Bookmarks	120
Camera and Video	122
Take Pictures	122
Open the Camera	122
Camera Viewfinder Screen	122
Review Screen.....	124
Take a Picture.....	124
Close the Camera	125
Record Videos.....	125
Video Viewfinder Screen.....	125
Record a Video	126
Camera/Video Settings.....	126
View Pictures and Videos Using Gallery	127
Open Gallery.....	127
View Photos and Videos	128
Zoom In or Out on a Photo.....	129
Watch a Video	129
Close Gallery	130
Working with Photos.....	130
Photo Options Menu	130
Edit a Photo	130
Rotate and Save a Photo	131
Crop a Photo.....	131
Share Photos and Videos	132
Send Photos or Videos by Email/Gmail.....	133
Send Photos or Videos by Multimedia Message	133

Send Photos or Videos Using Bluetooth	133
Share Photos or Videos on Google+	134
Share Photos on Picasa.....	134
Share Videos on YouTube	134
Tools and Calendar.....	136
Calendar.....	136
Add an Event to the Calendar	136
Invite Guests to Your Event.....	137
Event Alerts	138
View Events	139
Erase Events	141
Show or Hide Calendars	141
Synchronize Calendars with Your Device.....	141
Clock & Alarm.....	142
Opening Clock	142
Setting an Alarm	142
Changing Alarm Settings	144
Calculator	144
Voice Service	144
Automatic Speech Recognition (ASR).....	145
Text-to-speech Settings	145
Voice Search	146
Eco Mode	146
Bluetooth.....	148
Turn Bluetooth On or Off	148
The Bluetooth Menu	148
Change the Device Name	149
Connect a Bluetooth Headset or Car Kit.....	149
Reconnect a Headset or Car Kit	150
Disconnect or Unpair From a Bluetooth Device	150
Send and Receive Information Using Bluetooth.....	151
Send Information From Your Device to Another Device	151
Receive Information From Another Device	152

microSD Card	154
Remove the microSD Card	154
Install a microSD Card	155
View the microSD Card Memory	156
Format the microSD Card	156
Use the Device's microSD Card as a USB Drive	156
Use the Device's microSD Card as a Media Device	157
Important Safety Information	158
General Precautions	158
Maintaining Safe Use of and Access to Your Phone	158
Do Not Rely on Your Phone for Emergency Calls	158
Using Your Phone While Driving	158
Following Safety Guidelines	159
Using Your Phone Near Other Electronic Devices	159
Personal Implantable Medical Devices	159
Turning Off Your Phone Before Flying	159
Turning Off Your Phone in Dangerous Areas	159
Restricting Children's Access to Your Phone	160
Water Resistance	160
Using Your Phone With a Hearing Aid Device	160
Getting the Best Hearing Device Experience With Your Phone	162
Caring for the Battery	162
Protecting Your Battery	162
Charging	162
Storing	163
Radio Frequency (RF) Energy	163
Specific Absorption Rates (SAR) for Wireless Phones	164
FCC Notice	165
Owner's Record	165
Manufacturer's Warranty	166
Manufacturer's Warranty	166
End Users License Agreement	168
Kyocera Communications, Inc. ("Kyocera") End User License Agreement	168

Notes	171
Copyrights.....	172
Index.....	173

Get Started

This section gives you all the information you need to set up your device and the service the first time.

[Your Device at a Glance](#)

[Set Up Your Device](#)

[Complete the Setup Application](#)

[Set Up Visual Voicemail](#)

[Mobile ID](#)

[Getting Help](#)

Your Device at a Glance




Set Up Your Device


You must first install and charge the battery to begin setting up your device.

1. Install the battery.


- Turn the battery cover lock counter-clockwise to the unlocked position (①).

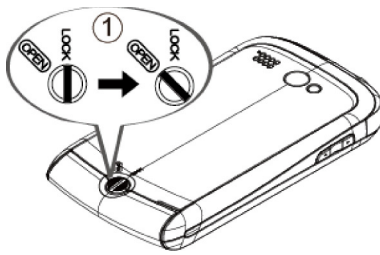


- Insert your thumb- or fingernail into the slit (②) and then pull out the battery cover (③).

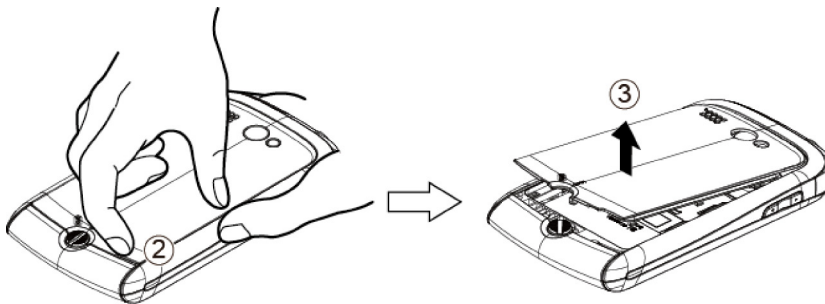


- Insert the battery, contacts end first, and gently press into place (④).

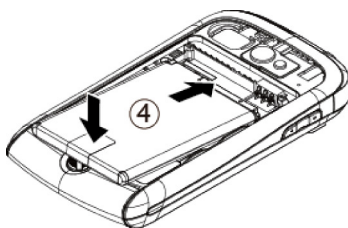

- Replace the cover, making sure all the locking tabs of the cover are seated and there are no gaps. (⑤).

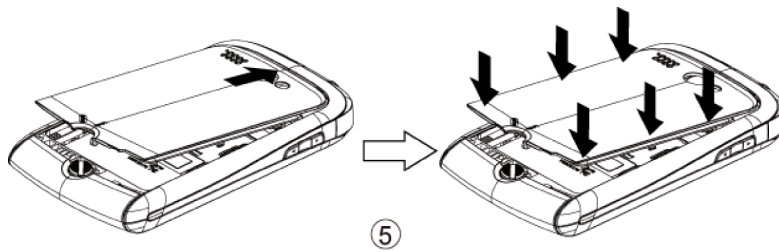


- Turn the battery cover lock clockwise to the locked position (6).

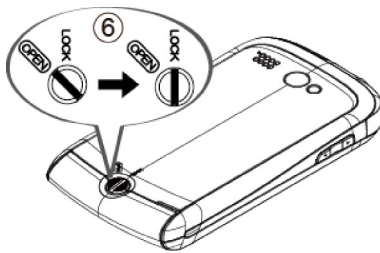

2. Charge your battery.

- Open the cover of the charger/accessory jack.
- Plug the smaller end of the micro-USB cable into the device's charger/accessory jack.

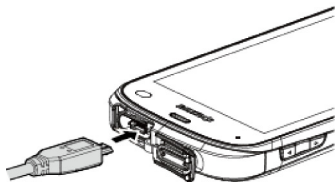

- Plug the other end of the USB cable into the charger, and then plug the charger into an electrical outlet.

Note: Your device's battery should have enough charge for the device to turn on and find a signal, run the setup application, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

3. Press and hold the **Power** button to turn your device on.

- If your device is activated, it will turn on and search for service.
- If your device is not yet activated, see the Activation section of your Get Started Guide for more information.

Complete the Setup Application

Once your device has been turned on and activated, you will see a Welcome message. You can then complete the Setup application.

1. Touch the Android icon to get started. To skip any section, touch **Next** or **Skip**.
2. Set up your Google™ options. Follow the instructions to complete each step.
 - **View a tutorial:** Touch **Begin** to see a brief tutorial on getting started.
 - **Set up your Google Account:** Complete the steps to create or sign in to your Google account.
 - **Use Google Location:** Touch the check marks to select your Google location options.
 - **Back up data:** Choose whether or not to back up data with your Google account.
3. Touch **Finish** setup to complete the Google setup process. You will see a **Setup accounts** page.
4. Touch any of the services listed and follow the prompts to set up additional accounts. These may include: **Email**, **Picasa**, and **YouTube**.
 - For each account you set up, you will need your account sign-in information and passwords.
 - When you're finished adding accounts, touch **Done** adding accounts.
5. Touch **OK** to view a **video tutorial**, or touch **Skip** to finish setup and go to the home screen.

Note: You do not need to sign up for a Google account to use your device. However, to download applications from Google Play or to use Gmail, you must link your device to a Google account.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.


Note: To set up your traditional voicemail box, see [Voicemail \(Traditional\)](#).

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.

3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.

Important: **Voicemail Password** – Boost Mobile strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Touch the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.

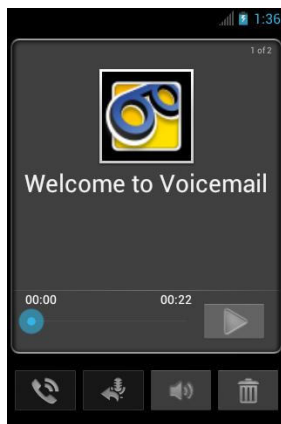

Mobile ID

Once your device is activated, you will be prompted to install the Mobile ID pack. ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Mobile ID.

You can install as many as five ID Packs at any one time in addition to the default My ID Pack. You can easily switch from one ID Pack to another without losing any applications already installed.

Installing Additional ID Pack

Switching ID Packs

Installing Additional ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. Press **Home** , and touch . (If your screen is locked, press the **Power** button to turn on the display and then flick  to unlock the screen.).

2. Touch **Get New ID Packs** on the **Choose your ID** screen.
3. Touch an ID Pack on the **Get New ID Packs** screen.
4. Read the information screen for a description of the ID Pack and touch **Install**.
5. Read the **Terms & Conditions** and touch **Agree** to begin the download.
6. Wait for the download to finish and the ID Pack will then begin installation automatically.

- or -

Touch **Continue** to continue using your device. When the notification icon appears, slide the status bar down, and touch ID ready to install to complete the installation.

Switching ID Packs

1. Press **Home** , and touch .
2. Touch an ID Pack to replace your current pack.

- or -

Touch **Get New ID Packs** to install a new ID Pack and follow steps 3–6 of [Installing Additional ID Pack](#).

Note: Certain features of Mobile ID are subject to change. For the most up-to-date information about using Mobile ID, please visit boostmobile.com.

Getting Help

Managing Your Account

You can go to 'My Account' on boostmobile.com to view your account information, recharge your account, or to make account changes. To log into 'My Account', you will need your 7-digit phone number and the Account PIN number you set up at activation. Or from your phone, simply press **Home**  > , and touch **BoostZone** to access various self-service tools.

From Your Phone

- Dial **#225 (#BAL)** to check account balance.
- Dial **#233 (#ADD)** to make a payment.
- Dial **#611** to launch BoostZone or call Boost Customer Care (depending on your Settings) to get answers to other questions.

From Any Other Phone

- Boost Customer Care: **1-888-BOOST-4U (1-888-266-7848)**.

411

You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge. Press **Home**  and touch , and then touch    .

Operator Services

Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party. Press **Home** , and touch , and then touch  .

Device Basics

Your device is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The topics in this section will introduce the basic functions and features of your phone.

[Your Device's Layout](#)

[Turn Your Device On and Off](#)

[Turn Your Screen On and Off](#)

[Touchscreen Navigation](#)

[Your Home Screens](#)

[Status Bar](#)

[Enter Text](#)

[Google Account](#)

Your Device's Layout

The illustrations and descriptions below outline your device's basic layout.



Key Functions

- **LED Indicator** shows your device's battery status. It also flashes for incoming calls or pending notifications.
- **Back Key** (↶) returns you to the previous screen or closes the dialog box.
- **Home Key** (🏠) returns you to the Home screen.
- **Recent App Key** (📄) allows you to show the Recent App screen.
- **Menu Key** (☰) lets you open the menus of the current screen or application.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.

- **Display Screen** displays all the information needed to operate your device. Use finger gestures to navigate and interact with items on the screen.
- **Proximity Sensor/Light Sensor** automatically deactivates the touchscreen when you hold the device near your face. This prevents you from unintentionally activating device functions during a call. It also automatically turns off the backlight and brightens the display when you are in sunlight or a bright room, and dims the display in darker places.
- **Earpiece** lets you hear the caller and automated prompts.
- **Power Button** lets you turn the device on or off, or turn the screen backlight on or off. This button can be configured to end a call.
- **Charger/Accessory Jack** allows you to connect the micro-USB cable (included) to charge the battery or to transfer files to and from a computer.

CAUTION! Inserting an accessory into the incorrect jack may damage the device.

- **Speaker** lets you hear the different ringtones and sounds. It also lets you hear the caller's voice in speakerphone mode.
- **microSD Card Slot** (internal) allows you to insert a microSD card to support external memory.

Note: Your device comes with the microSD card preinstalled under the device's battery.

- **Internal Antennas** facilitate reception and transmission. To maximize performance, do not obstruct while using the device.
- **Battery Cover Lock** locks the battery cover.
- **Camera Lens**, as part of the built-in camera, lets you take pictures and videos.
- **Camera Flash** allows you to take pictures and videos in low light conditions.
- **Headphone Jack** allows you to plug in an optional headset for convenient, hands-free conversations.

CAUTION! Inserting an accessory into the incorrect jack may damage the device.

- **Volume Button** allows you to adjust the ringtone and media volumes when you are not on a call, or the voice volume during a call.

Turn Your Device On and Off

The instructions below explain how to turn your device on and off.


[Turn Your Device On](#)

[Turn Your Device Off](#)

Turn Your Device On

To turn your device on, follow the step below.

- ▶ Press and hold the **Power** button.

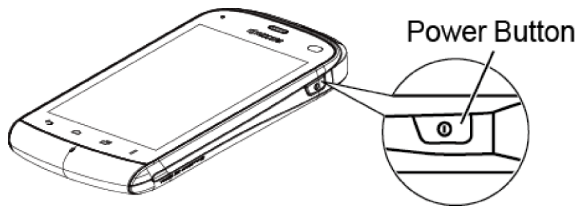

Turn Your Device Off

To turn your device off, follow the steps below.

- ▶ Press and hold the **Power** button to open the phone options menu. Touch **Power off** to turn the device off.

Your screen remains blank while your device is off.

Turn Your Screen On and Off

Your device allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

Turn the Screen On and Unlock It

Turn the Screen Off When Not in Use

To turn your screen off, follow the step below.

- ▶ To quickly turn the screen off, press the **Power** button. Pressing the **Power** button again will turn on your device screen and show the lock screen.

To save battery power, the device automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the device's screen is off.

Note: For information on how to adjust the time before the screen turns off, see **Sleep** within [Display](#) section.

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power** button.
2. Flick  until it turns to  (with a blue frame) to unlock the screen.

- You can disable the screen lock or add a more secure one from the Settings menu. See **Screen lock** within [Security](#) section.

Touchscreen Navigation

Your device's touchscreen lets you control actions through a variety of touch gestures.

[Touch](#)

[Touch and Hold](#)

[Drag](#)

[Slide or Flick](#)

[Pinch and Spread](#)

[Rotate](#)

Touch

Touch once with your finger to select or launch a menu, option, or application. A light touch works best.

Warning: Do not touch with a pen or stylus. It may damage the touch screen.

Touch and Hold

To open the available options for an item (for example, a link in a Web page), simply touch and hold the item.

Drag

Touch and hold your finger before you start to move it. Do not release your finger until you have reached the target position.

Slide or Flick

To slide, quickly move your finger vertically or horizontally across the screen. To flick, move your finger in lighter, quicker strokes than sliding. This finger gesture is always used in a vertical motion, such as when scrolling through People entries or a message list.

Pinch and Spread

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Rotate


For most screens, you can automatically change the screen orientation from portrait to landscape by turning the device sideways. When entering text, you can turn the device sideways to bring up a bigger keyboard. See [Touchscreen keyboard](#) for more details.

Note: The **Auto-rotate screen** check box in **Home**  > **Menu**  > **System settings** > **Display** needs to be selected for the screen orientation to automatically change.

Your Home Screens

The Home screen is the starting point for your device's applications, functions, and menus. You can customize your home screen by adding shortcuts, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

Customize the Home Screens

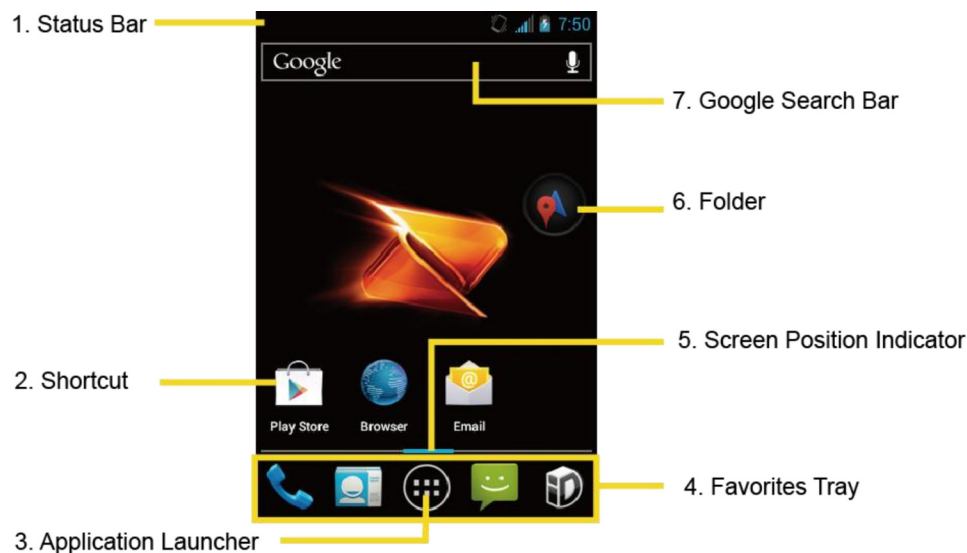

1. **Status Bar:** Displays the time, notification, and device status icons. Slide down to display the Notifications panel.
2. **Shortcut:** Allows users to quickly launch applications.
3. **Application Launcher:** Touch to display available applications and widgets on the device.
4. **Favorites Tray:** Keeps icons of your favorite application. The icons in the tray remain visible on every Home screen. You can change icons except the Application launcher icon (center).
5. **Screen Position Indicator:** Allows users to know where you are among five home screens.

6. **Folder:** Allows users to store multiple application icons as a group.
7. **Google Search Bar:** Allows users to enter text or spoken keywords for a quick search on the device or on the Internet. Touch to enter text or touch  to speak your keyword.

Customize the Home Screens

Learn how to add, move, or remove items from the home screen.

Add Application Icons or Widget to the Home Screens

1. Touch  on the Favorites tray.
2. Slide the **APPS** and **WIDGETS** screens to find the item you want to add to the Home screens.
3. Touch and hold an application or widget icon. The initial Home screen appears.
4. Pressing the application or widget icon, move your finger left or right to find the place to add the icon. The blue frame means each of five home screens.
5. Release your finger.

Move or Remove Items on the Home Screens

- Touch and hold the item you want to move or remove from the screen.
 - To move the item, drag it to a new area and release it.
 - To remove the item, touch and hold the item until you see “X Remove” at the top of the home screen, and then drag the item until it turns red, and then release your finger.

Change Wallpaper

1. Touch and hold the empty area of the Home screens.
2. Select one of the following options.
 - **Carrier wallpaper:** Select to use Boost wallpapers. Select the wallpaper and touch **Set wallpaper**.
 - **Gallery:** Select to use saved or captured pictures on your device. Touch to select a picture, and crop it before setting it as wallpaper.
 - **ID wallpapers:** Select to use ID wallpapers. Select the wallpaper and touch **Set wallpaper**.
 - **Live Wallpapers:** Select to use Live wallpapers. Select the wallpaper and touch **Set wallpaper**.

- **Wallpapers:** Select to use preset wallpapers. Select the wallpaper and touch **Set wallpaper**.

Favorites Tray

Favorites Tray keeps five icons you usually use. The icons in the tray remain visible on every Home screen. You can change icons except the Application launcher icon located in the center of the tray.

To add a new icon on the Favorites Tray:

1. Remove the current icon on the tray. See [Move or Remove Items on the Home Screens](#).
2. Touch and hold the application icon and drag it to the Favorites Tray.
3. Release your finger.

Use folders

You can combine several app icons in a folder. Drop one app icon over another on a Home screen, and the two icons will be combined.

1. Drag one application icon over another icon.
2. Release your finger. You can see two icons piled within a folder (a black circle).
3. Tap a circle. You can see application icons within the folder.
4. Touch **Unnamed Folder**. The keyboard opens and you can name this folder. To rename it, tap the name.

Status Bar

The status bar at the top of the screen provides device and service status information on the right side and notification alerts on the left. To view notification alerts, slide the status bar down.

Status Icons

Notification Icons

Status Icons



Icon	Description
	Bluetooth® enabled
	Wi-Fi® active (full signal)

	Vibrate
	Silent
	Network (full signal)
	Network (no signal)
	3G (data service)
	Airplane mode
	Alarm set
	Battery (charging)
	Battery (full charge)
	Battery (discharged)

Notification Icons



Icon	Description
	Missed call
	New email
	New Gmail
	New SMS message
	New MMS message
	Event
	Music application is running background
	USB connection
	Alarm
	When animating, GPS is active
	Downloading

Enter Text

You can type on your device using one of the available touchscreen keyboards.

[Touchscreen keyboard](#)

[Entering Text Using Swype](#)

[Entering Text Using the Android Keyboard](#)

[Copying and Pasting Text](#)

Touchscreen keyboard

Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text. To manually display the touchscreen keyboard, simply touch a text field where you want to enter text. There are two ways of entering text on your device: **Swype** and **Android keyboard**.

Note: Swype is selected as a default keyboard.


To switch the touchscreen keyboard:

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Default** under **KEYBOARD & INPUT METHODS**.
3. Choose **Swype** or **Android keyboard**.

Entering Text Using Swype

Swype® allows you to enter text by sliding your finger from letter to letter rather than touching each key individually. To enter text, slide your finger from one letter to the next.


Swype Keyboard Overview

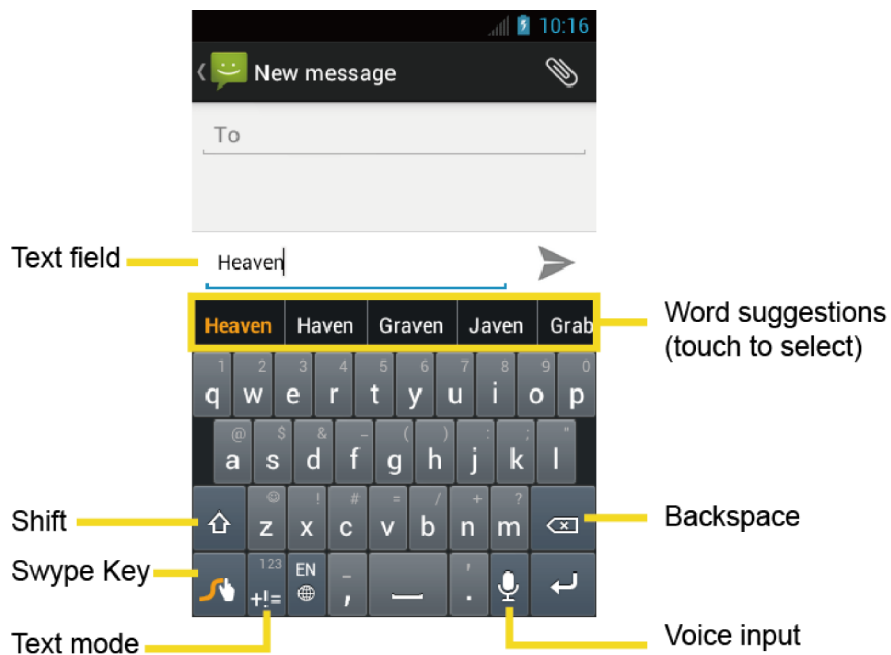

Note: Key appearance may vary depending on the selected application.



Example: dog
Place your finger on the key with the first letter of the word and glide to the following letters. Lift your finger after the last letter.

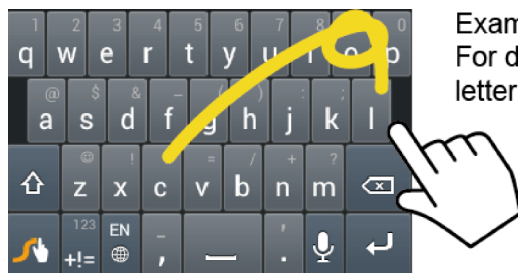

Example: cool
For double letters, circle the letter.



Example: You
To capitalize the letter, slide
up over the keyboard.

Tip: For tips on using Swype, touch and hold the Swype key  and then select **How to Swype**.

You can do the following with the Swype keyboard:

	Text mode: Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	Swype Key: Touch and hold to access the tips or the settings of Swype.
	Voice input mode: Touch to enter text using your voice.
	Backspace: Touch to delete a character. Touch and hold to delete multiple characters.
	Smiley: Touch to insert a smiley. Touch and hold to view and select other smileys.
	Space: Touch to insert a space.
	Enter: Touch to confirm your entry.
	Shift: Touch to toggle between the uppercase, lowercase and caps lock text input.

ABC Mode

In ABC mode, you can enter letters from the onscreen keyboard by sliding your finger. While in this mode, the text mode key displays .

1. Select the ABC mode by touching . Capitalization in ABC mode can be altered by touching .

 (Unshifted) to make all letters in a word lowercase.

 (One-character-shifted) to capitalize only the first letter of a word.

 (Caps Lock) to make all letters in a word uppercase.

2. Enter text using the keyboard.

- If you make a mistake, touch  to erase a single character. Touch and hold  to erase an entire word.

Numbers & Symbol Mode

In Number & Symbol mode, you can enter numbers and symbols from the onscreen keyboard by sliding your finger. While in this mode, the text mode key displays .

To enter numbers and symbols in Swype mode:

1. Select the Number & Symbol mode by touching .
2. Enter numbers or symbols using the keyboard.
 - Touch the key for the number or symbol you want to enter.
 - Touch and hold to enter the number or symbol located at the upper right corner of the key (for example, # or *). Confirm the number or symbol you want to enter is displayed and release your finger.
 - Touch and long-hold to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.

Tip: Touch  to show the keyboard with keys located at the upper right corner of the key.

Entering Text by Speaking

You can use voice input to enter text by speaking anywhere that you can enter text with the touchscreen keyboard.

1. Touch  on the keyboard.
2. Say the text you wish to enter into the microphone.

Adding a Word to the User Dictionary

You can use the user dictionary option to add new words into the dictionary.

1. Press **Home**  > **Menu** , and touch **System settings > Language & input**.

2. Scroll to **Swype** under **KEYBOARD & INPUT METHODS** and touch .
3. Touch **Personal dictionary**.
4. Touch  and type the word you want to add, and then touch . (A list of words you have added to the dictionary is displayed.)
 - To edit a word, touch a word to edit it.
 - To delete a word, touch  and touch a word to check it and then touch  > **OK**.
 - Touch  to select all the words in the dictionary.
 - Touch  to cancel deleting and back to the previous screen.

Swype Settings

You can customize the Swype settings as you like.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Scroll to **Swype** under **KEYBOARD & INPUT METHODS** and touch .

Tip: You can open the Swype settings from the Swype keyboard. Touch and hold  on the keyboard.

3. Choose from the following options.
 - **Select Input Method:** Touch to select Swype or Android keyboard.
 - **How to Swype:** Touch to learn Swype in quick steps.
 - **Personal dictionary:** Touch to make your personal dictionary for Swype.
 - **Preferences:** Touch to show the following settings menu for Swype.
 - **Audio feedback:** Touch to turn on sounds from Swype.
 - **Vibrate on keypress:** Check to activate vibration when a key is touched.
 - **Show tips:** Check to turn on a flashing indicator for quick help.
 - **Auto-spacing:** Check to automatically insert spaces between words.
 - **Auto-capitalization:** Check to automatically capitalize the first letter of sentence-initial words within the specific text entry field.

- **Show complete trace:** Check to display the complete Swype path.
 - **Word suggestion:** Touch to activate word prediction when typing in Swype.
 - **Speed vs. accuracy:** Touch to set how quickly Swype responds to input.
 - **Reset Swype's dictionary:** Touch to delete all the words you have added to Swype's dictionary.
 - **Version:** Displays the current Swype version.
- **Language Options:** Touch to select the language to use on Swype.


Entering Text Using the Android Keyboard

When entering text, you can choose to use the Android keyboard.

To select the Android keyboard:

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Default** under **KEYBOARD & INPUT METHODS**.
3. Touch **Android keyboard**.

Android Keyboard Overview

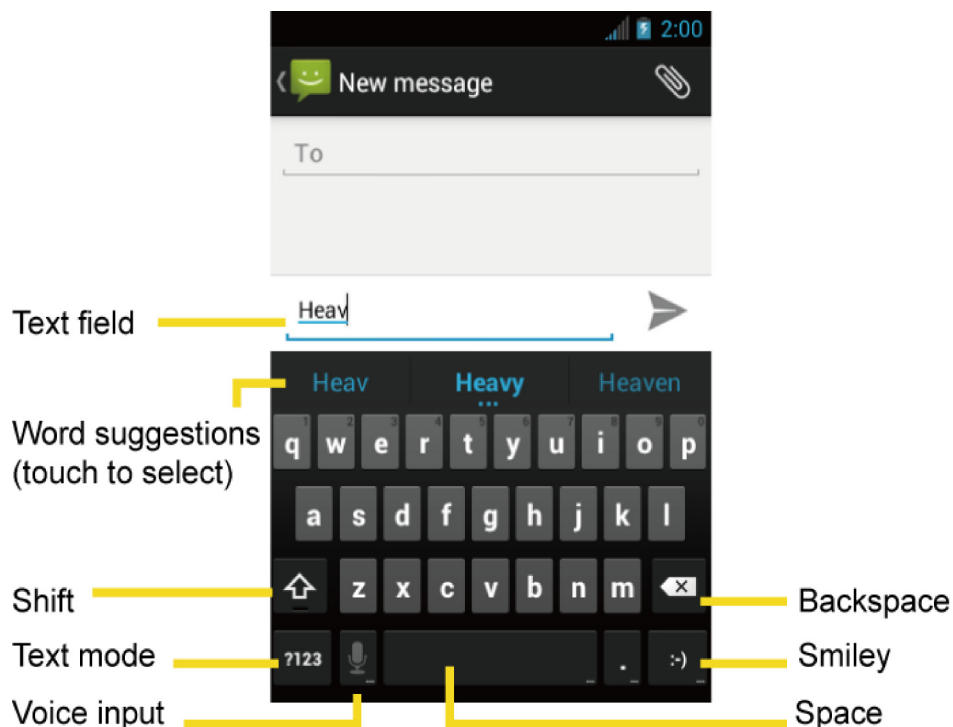

You can do the following with the Android keyboard:

 	Shift: Touch to toggle between lower case or upper case.
	Capslock: Double-touch the lower case or upper case shift key.
	Text mode: Touch to toggle between the Alphabet keyboard and Number & Symbol keyboard.
	Smiley: Touch to insert a smiley. Touch and hold to view and select other smileys.
	Next: Touch to go to the next text entry field.
	Alternate: Touch to toggle between the keyboard more symbols . Touch again to return to Number & Symbol keyboard.
	Go: Touch to go to a Web address.
	Space: Touch to insert a space. Touch and hold to select the input method.

ABC Mode

In ABC mode, you can enter letters from the onscreen keyboard. While in this mode, the text mode key displays .

- Select the ABC mode by touching .
 - You can switch the capitalization style in ABC mode by touching the shift key
 -  .
 -  (Unshifted) to make all letters in a word lowercase.
 -  (One-character-shifted) to capitalize only the first letter of a word.

- You can select the caps lock by double-touching  or  to make all letters in a word uppercase.

2. Touch the corresponding alphabet keys to enter the word.

Tip: Some keys have alternate characters. Touch and hold a key to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.

Numbers and Symbols Mode

In Number & Symbol mode, you can enter numbers and symbols only from the onscreen keyboard. While in this mode, the text mode key displays .

To enter numbers:

1. Select the Number & Symbol mode by touching .
2. Touch the appropriate numeric key.

To enter symbols:

1. Select the Number & Symbol mode by touching .
2. Touch the appropriate symbol key.

- or -

Touch  to select from additional symbol characters.

Tip: Some keys have alternate characters. Touch and hold a key to bring up a list of all the characters available on that key. Touch the character you want to enter from the list.

Entering Text by Speaking

Voice input is an experimental feature that uses Google's speech-recognition service, so you must have a data or Wi-Fi connection to use it.

If the touchscreen keyboard does not display , voice input is not turned on.

To turn on voice input:

1. Press **Home**  > **Menu** , and touch **System settings > Language & input**.
2. Scroll to **Android keyboard** under **KEYBOARD & INPUT METHODS** and touch .

3. Touch **Voice input key** and select **On main keyboard** or **On symbols keyboard**.

To enter text by speaking:

1. Touch  on the keyboard.
2. Say the text you wish to enter into the microphone and touch **Done**.

Adding a Word to the User Dictionary

You can use the user dictionary option to add new words into the dictionary.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input** > **Personal dictionary**.
2. Touch .
3. Type the word you want to add, and touch **OK**. (A list of words you have added to the dictionary is displayed.)
 - Touch a word to edit it.
 - Touch  to delete it.

Android Keyboard Settings

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Scroll to **Android keyboard** under **KEYBOARD & INPUT METHODS** and touch .
3. Choose from the following options.
 - **Input languages:** Touch to select the input language. The dictionary for the selected language will be enabled.
 - **Auto-capitalization:** Check to automatically set the first letter of a sentence to upper case.
 - **Vibrate on keypress:** Check to activate vibration when a key is touched.
 - **Sound on keypress:** Check to activate a clicking sound when a key is touched.
 - **Popup on keypress:** Check to display a larger image of the key above it when you touch it.
 - **Show settings key:** Check to display the keyboard settings key on the keyboard.


- **Voice input key:** Touch to select where the Voice Input key is displayed from **On main keyboard**, **On symbols keyboard**, or **Off**.
- **Add-on dictionaries:** Touch to select the dictionary you want to use.
- **Auto correction:** Touch to allow the space bar and punctuation to automatically correct mistyped words.
- **Show correction suggestions:** Touch to select when correction suggestions are displayed.
- **Advanced settings:** Touch to open the settings for expert users.

Copying and Pasting Text

In applications that require text entry, such as Messaging, use the copy and paste functions to copy and paste text from one application to another.

To copy and paste the text:

1. Open the application or received message that you want to copy text from.
2. Touch and hold the text body. Selection tabs appear, and currently selected words or characters are highlighted. Drag tabs to expand or reduce the range of selected text.

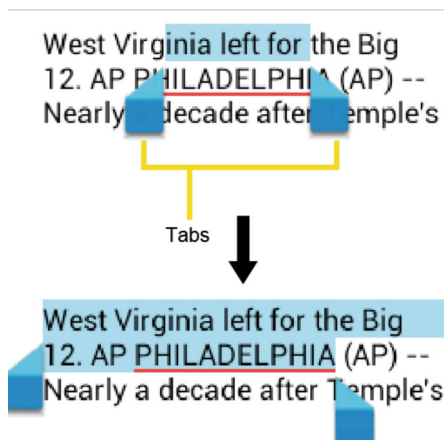

Tip: Touch  or , or **SELECT ALL** to select all the text on the Web page.

3. Touch  or  (Copy).
4. Open the application that you want to paste the text to.
5. Touch and hold the text box where you want to paste the text.
6. If you want to add the selected text to the current text, drag a selection tab to the position where you want to insert selected words or characters.

7. Touch and hold the text box, and touch **PASTE**.

To copy text from a Web page:

1. Scroll to the area of the Web page containing the text you want to select.
2. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text. Any selected text will appear highlighted.

Tip: Touch **SELECT ALL** to select all the text on the Web page.

3. Touch  > **Copy**.
4. Open the application that you want to paste into.
5. Touch and hold the text box where you want to paste the text, and touch **PASTE**.

To copy a URL:

1. To copy a URL, touch and hold the URL to display the options menu.
2. Touch **Copy link URL** or .
3. Open the application that you want to paste into.
4. Touch and hold the text box where you want to paste the URL, and touch **PASTE**.

Google Account

You will need a Google account to access several device features such as Gmail™, Google Maps™, Google Talk™, and Google Play™ applications. Before you can access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

[Create a Google Account](#)

[Sign In to Your Google Account](#)

[Add Account](#)

[General Sync Settings](#)

Create a Google Account

If you do not already have a Google account, you can create one online or by using your device.

Note: You can also create and sign into your Google/Gmail account through your device's Setup application.

Note: Although you need a Gmail account to use certain features of your device, such as Google Play™, you do not need to use Gmail as the default account for your device.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign-in > Create an account for free**.
3. Follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Create a Google Account Using Your Device

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch **ADD ACCOUNT**, and then touch **Google**.
3. Touch **New**.
4. Enter your First name, Last name, and touch **Next**.
5. Enter your email address and touch **Next**.
6. When prompted, enter and reenter a password and touch **Next**.
7. Create a security question and answer, enter a secondary email address to help you recover your password if you ever lose it, and then touch **Next**.

Note: When setting up a new Google account, either on your device or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your device.

8. Select if you join **Google+** or not.
9. Read and accept the Google Terms of Service, and then touch **I accept**.
10. Enter the characters shown, and then touch **Next**.
11. Select if you want to set a PIN code in the Google Play.
12. Select items you want to sync with Google servers and touch **Next**.

Sign In to Your Google Account

If you already have a Google account, sign in with the account.

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.

2. Touch **ADD ACCOUNT**, and then touch **Google**.
3. Touch **Existing**.
4. Enter your Gmail username and password, and then touch **Sign in**.
5. Select if you want to join **Google+** or not.
6. Select if you want to set a PIN code in the Google Play if requested.
7. Select items you want to sync with Google servers and touch **Next**.

Add Account

You can add additional account to your device.

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. Touch **ADD ACCOUNT**.
3. Touch an account type.
 - Corporate, Google, etc.
4. Follow the instructions on the screen to add your additional account.
 - Depending on the account type, you may need to enter an email address or user address, password, domain name, or other information. For Corporate accounts, contact your server administrator to determine what information you will need.

General Sync Settings

Let applications synchronize data in the background, whether or not you are actively working in them.

As default your Google accounts are automatically synced.

1. Press **Home**  > **Menu** , and touch **System settings > Accounts & sync**.
2. If you see  at the upper right corner, your accounts will automatically sync. Touch the account with data you want to sync.
3. Touch the types of data you wish to synchronize automatically. (A check mark indicates the feature is enabled.)

Note: If you do not want to sync your Google account automatically, touch  at the upper right corner and confirm  is displayed.

Note: If you want to remove the account, press **Menu**  > **Remove account**.

Phone

With the Sprint Nationwide Network and your device's calling feature, you can enjoy clear calling across the country.

[Make Phone Calls](#)

[Receive Phone Calls](#)

[Visual Voicemail](#)

[Voicemail \(Traditional\)](#)

[Phone Call Options](#)

[Call Log](#)

Make Phone Calls

There are several convenient ways to place calls from your device.

[Call Using the Phone Dialpad](#)

[Call From Recent Calls](#)

[Call From People](#)

[Call a Number in a Text Message](#)

[Call Emergency Numbers](#)

[Call Numbers with Pauses](#)


[Call Using Plus \(+\) Code Dialing](#)

[Call Using the Internet Calling](#)

Call Using the Phone Dialpad

The most "traditional" way to place a call is by using the phone's dialpad.

1. Press **Home** , and touch  to display the phone screen.
2. Touch the number keys on the dialpad to enter the phone number.

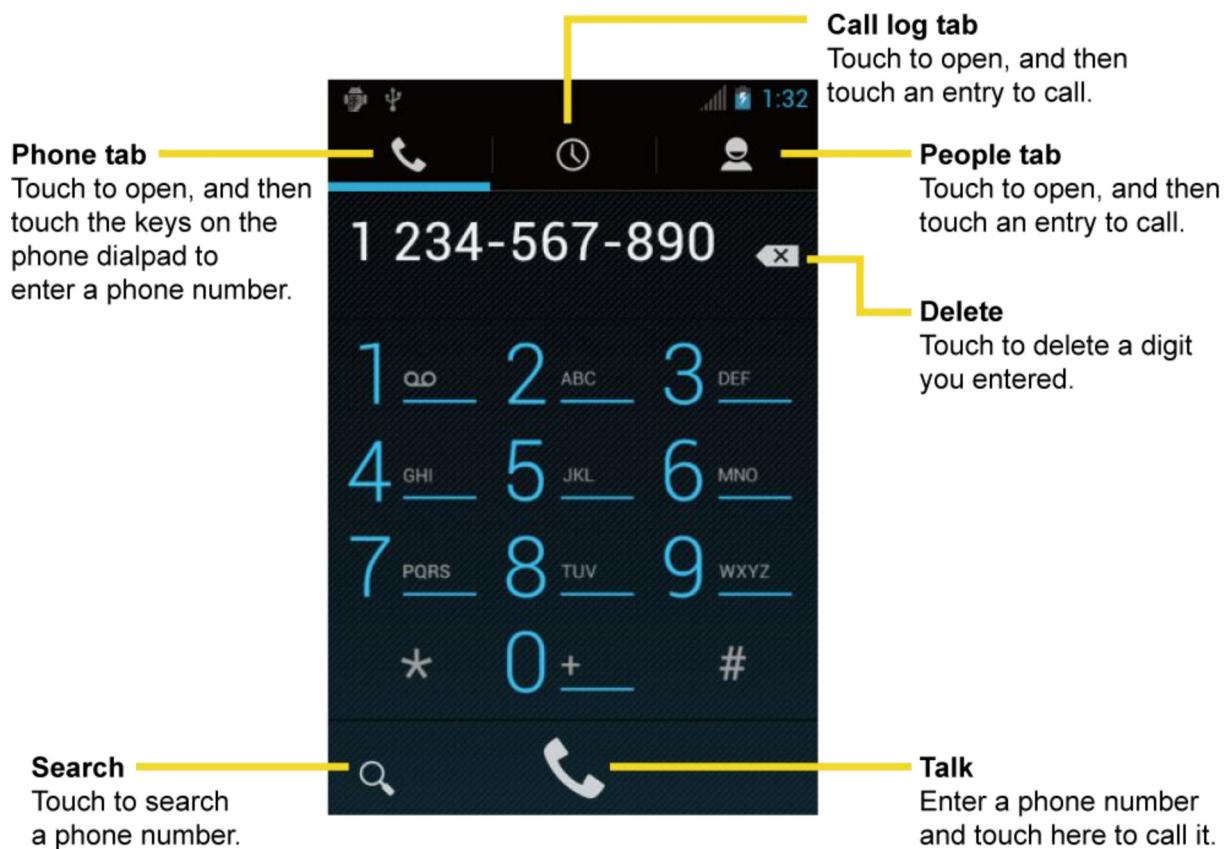

3. Touch  to call the number.
4. To end the call, touch .

Call From Recent Calls

The Recent Calls list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Touch the phone icon  next to a number or a People entry to place a call.
4. For additional options, touch the name or number.

Call From People

You can place phone calls directly from entries in your People list.

1. Press **Home** , and touch  to display the phone screen.

2. Touch  to display the People list. Your frequent People entries are displayed at the top of the list.
3. Touch the entry you want to call.
 - Touch  to search your People entry.
 - Press **Menu**  > **Contacts to display** to select People list of which account will be displayed.

Call a Number in a Text Message

While viewing a message, you can place a call to a number that is in the body of the message.

1. Press **Home** , and touch  > **Messaging**.
2. Touch the message with the phone number.
3. The Phone screen then opens, with the phone number automatically filled in and ready to be dialed. To place the call, touch .

Call Emergency Numbers

You can place calls to 911 even if the device's screen is locked or your account is restricted.

1. Unlock the screen if necessary. For more information, see [Turn Your Screen On and Off](#).
2. Touch  on the Home screen.
3. Touch    .

To call the 911 emergency number when the device's screen is locked with a pattern, PIN, or password:

1. Touch **Emergency call** on the screen.
2. Touch    .

Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your device.

Call Numbers with Pauses

You can dial phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your device:

- **Add 2-sec pause:** Automatically sends the next set of numbers after two seconds.
- **Add wait:** Sends the next set of numbers when you touch **Yes** in the pop-up window.

1. Press **Home** , and touch  and enter all or part of a number.
2. Press **Menu** , and touch **Add 2-sec pause** or **Add wait**.
3. Enter additional numbers.
4. Touch  to dial the number.

Call Using Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.).

1. Press **Home** , and touch  to display the phone screen.
2. Touch and hold  until you see a “+” on the display screen.
3. Enter the country code and phone number, and then touch . The device automatically prepends the access code for international dialing, followed by the country code and phone number.

Call Using the Internet Calling

When Wi-Fi network is available, you can make and receive calls through an Internet calling account.

Important: Calling a phone number using Internet calling may incur additional charges.

Adding an Internet Calling Account

1. Press **Home** , and touch  to display the phone screen.

2. Press **Menu** , and touch **Settings**.
3. Touch **Accounts** under **INTERNET CALL SETTINGS**.
4. Touch **ADD ACCOUNT**.
5. Enter your account details and touch **SAVE**.
6. To set your phone to receive Internet calls on your added account, touch the **Receive incoming calls** check box.

Note: This requires the phone to maintain a connection with a Wi-Fi data network, which reduces the life of your phone's battery.

Making an Internet Calling

1. Press **Home** , and touch  > **People**.
2. Touch a entry, and then touch **Internet call**.

Making an Internet Calling Setting

1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Touch **Use Internet calling** under **INTERNET CALL SETTINGS**.
4. Select an option from the following:
 - **For all calls when data network is available** to use Internet calling for all calls when Wi-Fi network is available.
 - **Only for Internet calls** to use Internet calling only for calls to Internet calling addresses.
 - **Ask for each call** to ask each time you make a call.

Receive Phone Calls

The following information lets you know how to answer incoming calls, mute the ringtone on incoming calls, reject incoming calls, and more.

When you receive a phone call from an entry stored in People, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

Answer an Incoming Call

[Mute the Ringtone](#)

[Reject an Incoming Call](#)

[Reject a Call and Send a Text Message](#)

Note: If your device is turned off, all calls automatically go to voicemail.

Answer an Incoming Call

- ▶ On the Incoming call screen, flick the Answer icon .

Mute the Ringtone

To mute the ringtone without rejecting the call:

- ▶ Press the volume button up or down.

Reject an Incoming Call

- ▶ Flick the Ignore icon  to send the call to your voicemail inbox.

Reject a Call and Send a Text Message

You can automatically send a text message to a caller and reject the incoming voice call.

- ▶ Flick the Ignore & Text icon  to ignore the call and send a message to the caller.

Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

[Set Up Visual Voicemail](#)

[Review Visual Voicemail](#)

[Listen to Multiple Voicemail Messages](#)

[Configure Visual Voicemail Options](#)

[Configure Visual Voicemail Settings](#)

[Automatically Enable the Speakerphone](#)

[Change Your Main Greeting via the Voicemail Menu](#)

Edit the From Name via the Voicemail Menu

Set Up Visual Voicemail


Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your device is activated. Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off.

Note: To set up your traditional voicemail box, see [Voicemail \(Traditional\)](#).

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
3. When prompted to enter information, touch **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.

Important: **Voicemail Password** – Boost Mobile strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Touch the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.

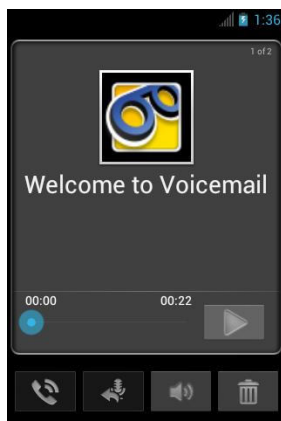

Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch a message to review it. The following is a description of the features available while reviewing a voicemail message.

Note: Touch **Menu**  > **Lock** to prevent the message from accidentally being deleted.

- **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
 - Touch  to pause the playback, touch  to resume.
- **Call** to call the person who left the voicemail message.
- **Reply** to reply to the message. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time. You can tag the reply message for both Urgency and Privacy.
 - Touch **Send** to deliver the new message.
- **Speaker Off/On** to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback.
- **Delete** to delete the current voicemail message. Touch **OK** to confirm the deletion.

Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message (It will begin playing automatically).

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

Configure Visual Voicemail Options

Use the Menu button to access and configure your Visual Voicemail options.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Menu**  and select from the following:
 - **Compose** to compose a new voicemail message.

- **Move to SD** to move a voicemail message to the installed microSD card.
- **Play all new** to listen to all new messages.
- **Undelivered** to list all undelivered voicemail messages.
- **Delete** to delete selected messages from your current list of available voicemail messages.
- **Search** to search through voicemail messages for keywords.
- **Settings** to configure your voicemail application settings.

To access a voicemail message's options:

1. Press **Home** , and touch  > **Voicemail**.
2. Touch a voicemail message and touch **Menu**  and select from the following:
 - **Lock/Unlock** to prevent deletion of the selected voicemail message.
 - **Text message** to create and deliver a new text message to the sender's phone number.
 - **Reply** to reply to the voicemail with a text message or your voice.
 - **Forward** to forward the voicemail to another recipient.
 - **Add to contacts** to add the sender's phone number to your People list.

Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Menu**  > **Settings**. From this menu, you can:
 - Touch **Voicemail-to-Text** to verify the Voicemail-to-text account information.
 - Touch **Personalize voicemail** to adjust your voicemail greeting and updated password. See [Change Your Main Greeting via the Voicemail Menu](#).
 - Touch **Notifications** to determine how you are notified of new voicemails. Choose from: **Select sound** or **Vibrate**.
 - Touch **Inbox sort order** to change default sort order from **Newest first**.
 - Touch **Pictures** to replace the default Visual Voicemail message icon with a specific People entry's image. This image is pulled from the entry's People details.

- Touch **Playback screen** to customize the look of the message playback screen.
- Touch **Speakerphone** to automatically activate the speakerphone when you review your Visual Voicemail. See [Automatically Enable the Speakerphone](#).
- Touch **Display name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string. See [Edit the From Name via the Voicemail Menu](#).
- Touch **Auto forward to email** to send a copy of new messages to an email address of your choice.
- Touch **Check for update** to search for an upgrade to your Visual Voicemail application.
- Touch **Help** to open the help of the Visual Voicemail.
- Touch **About Voicemail** to view build information about the current Visual Voicemail application.

Automatically Enable the Speakerphone

Every time you access a selected message from your Visual Voicemail list, you can configure the phone to automatically launch the built-in speakerphone so that you can clearly hear the message.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Menu**  > **Settings** to make your alterations.
3. Touch **Speakerphone** to activate the feature. You will see a blue checkmark on the right.
 - Touch **Speakerphone** again to deactivate the speakerphone. The checkmark will disappear.

Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Menu**  > **Settings** > **Personalize voicemail**.
3. Touch **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

Edit the From Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. Press **Home** , and touch  > **Voicemail**.
2. Touch **Menu**  > **Settings** > **Display name**.
3. Touch the field and enter an identifying name or number (used to identify you to recipients of your voice messages).
4. Touch **OK** to save your information.

Voicemail (Traditional)

In addition to Visual Voicemail, your device and Boost Mobile service always offer traditional voicemail service accessed through the device application.

Set Up Voicemail

Retrieve Your Voicemail Messages

Set Up Voicemail

You should set up your Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Press **Home** , and touch .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Important: **Voicemail Password** – Boost Mobile strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

There are several ways your device alerts you to a new voicemail message.

- By sounding the assigned notification sound.

- By vibrating the device.
- By displaying  in the notifications area of the status bar when new unheard voicemail message (s) is received. The figure is the number of new messages. This icon means you have 10 unheard new messages.

Note: Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in the service area.

Retrieve Your Voicemail Messages

You can review your messages directly from your device (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

Use Traditional Voicemail to Access Your Messages

1. Press **Home** , and touch .
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

Use Visual Voicemail to Access Your Messages

1. Press **Home** , and touch  > **Voicemail**.
2. Touch an entry to listen to the message.

Note: Depending on your plan, you may be charged when you are accessing your voicemail from your wireless device.

Use Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk key (*) on the phone.
3. Enter your password.

Use Visual Voicemail to Delete Your Messages

1. Press **Home** , and touch  > **Voicemail**.
2. Open a message and touch  > **OK** to delete it.

Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

Caller ID

Call Waiting

3-Way Calling

Call Forwarding

In-Call Options

Caller ID

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press **Home** , and touch .
2. Touch   .
3. Enter a phone number.
4. Touch .

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Flick .

To switch back to the first caller:

- ▶ Touch **Switch calls**.

Note: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

3-Way Calling

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the Phone screen, enter a number and touch .

2. Once you have established the connection, touch **Add call**, and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, touch **Merge calls**.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

- To end the 3-way call, touch .

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your device when you have activated Call Forwarding.

Note: You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

1. Press **Home** , and touch .
2. Touch   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Touch . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **Home** , and touch .
2. Touch    .
3. Touch . (You will see a message and hear a tone to confirm the deactivation.)

Other Call Settings

North American Dialing

1. Press **Home** , and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Check **North American dialing** under **OTHER CALL SETTINGS** when placing international calls while in the United States or Canada. See [Call Using Plus \(+\) Code Dialing](#).

International Dialing

1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Uncheck **North American dialing** and touch **International dialing** to set the international dialing code when placing international calls from outside the United States or Canada.

TTY Mode

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your device and TTY device will connect using a special cable that plugs into your device's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY mode on or off:

1. Press **Home**  and touch  to display the phone screen.
2. Press **Menu** , and touch **Settings**.
3. Touch **TTY mode**.
4. Touch **TTY Full**, **TTY HCO**, or **TTY VCO** to turn TTY mode on.

- or -

Touch **TTY Off** to turn TTY mode off.

Note: When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.


Warning: 911 Emergency Calling

Boost Mobile recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the

attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

In-Call Options

While you're on a call, you will see a number of onscreen options. Touch an option to select it.

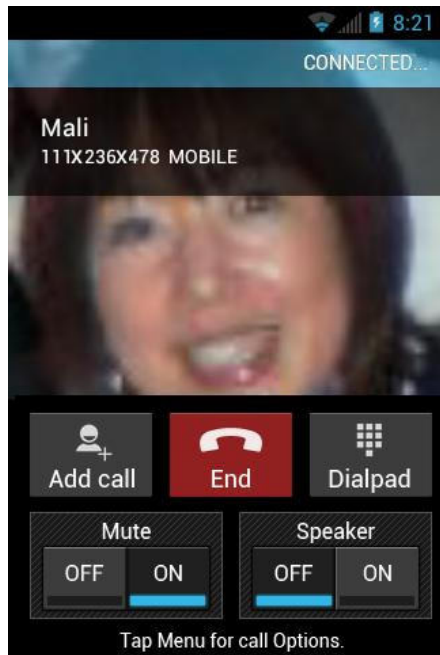

- **Add call:** Touch to initiate a 3-way call.
- **End:** End the current call.
- **Dialpad/Hide:** Toggle the appearance of the onscreen dialpad to enter additional numbers, for example, an extension or access code.
 - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Mute:** Mute the microphone (**On**) during an active call, or unmute the microphone (**Off**).
- **Speaker:** Route the device's audio through the speaker (**On**) or through the earpiece (**Off**).

Warning: Because of higher volume levels, do not place the device near your ear during speakerphone use.

Press **Menu** (☰) during a call to display a list of additional in-call features. Touch an option to select it.

- **Contacts:** Display your contacts list.

- **Bluetooth:** Route the device's audio through a connected Bluetooth headset (checked) or through the speaker (not checked).

Call Log

The Call log tab of the Phone application lists max. 500 recent incoming, outgoing, and missed calls.

[View Recent Calls](#)

[Call Log Options](#)

[Clear Call Logs](#)

View Recent Calls

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
 - You can determine if an entry was an incoming, outgoing, or a missed call from the icons shown below.
 -  = Incoming Call
 -  = Outgoing Call
 -  = Missed Call

Call Log Options

- To make a call from Call log, see [Call From Recent Calls](#).

For additional options:

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Touch the name to display the options list.
 - Touch  to send a text message.
 - Touch  to view a People entry.
 - Touch  to add the number to People.
 - Press **Menu**  > **Remove from call log** to remove the log.
 - Press **Menu**  > **Edit number before call** to edit the number before calling.

Clear Call Logs

Use the menu option to clear the Call log list.

1. Press **Home** , and touch  to display the phone screen.
2. Touch  to display the Call log list.
3. Press **Menu** , and touch **Clear call log > OK**.

Device Settings

This section provides an overview of items you can change using your device's **Settings** menus.

WIRELESS & NETWORKS Settings

DEVICE Settings

PERSONAL Settings

SYSTEM Settings

WIRELESS & NETWORKS Settings

This group of settings lets you control your device's wireless network settings, Wi-Fi settings, Bluetooth, and more.

Wi-Fi

Bluetooth

Data

Airplane Mode

Mobile Networks

Wi-Fi

Your device lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your device's Wi-Fi features and settings, see [Wi-Fi](#).

Bluetooth

Your device's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your device's Bluetooth settings, see [Bluetooth](#).

Data Usage

Your device provides a new data usage chart feature which shows current usage as well as usages in a specific period of time.

View Data Usage by Application

You can view the amount of the data usage for the specific period of time.

1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Confirm **Mobile data** is set to .

3. Touch  of **Data usage cycle** to change the period of time for which the chart will display the data usage.
4. Drag the bottom of the white line to set the short period of time you want to see the data usage within that cycle.
 - The usage amount will be displayed just below the chart.

Set Data Usage Limit

You can also set the limit for mobile data in case you don't have unlimited data plan which cuts off data at a specified thresholds.

Warning: The usage displayed is measured by your phone. Your carrier's data usage accounting may differ and the usage in excess of your data limit plan can result in charges. Data usage limit set in this menu is not guaranteed to prevent additional charges.

1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Touch to check **Set mobile data limit**. Read the message and touch **OK**.
3. Drag the right side of the red line at the top of the chart to set the limit you want.
 - When your data usage reaches the limit, mobile data will be turned off automatically.
4. Drag the right side of the orange line under the red line to set the level where you receive the warning.
 - When your data usage reaches the level set with the orange line, you will see the message.

Restrict Data Usage by Application

You can restrict the background data usage.

1. Press **Home**  > **Menu** , and touch **System settings** > **Data usage**.
2. Press **Menu**  > **Restrict background data** to check it.
3. Read the message and touch **OK**.

Tip: You can see the Wi-Fi usage. Press **Menu**  > **Show Wi-Fi usage** to check it.

Airplane Mode

Airplane mode allows you to use many of your device's features, such as Gallery, Camera, and Music, when you are on an airplane or in any other area where making or receiving calls or data

is prohibited. When you set your device to Airplane mode, it cannot send or receive any calls or access online information.

To quickly turn Airplane mode on or off:

- ▶ Press and hold the **Power** button, and then touch **Airplane mode** under Phone options. While in Airplane mode, the status bar will display .

To turn Airplane mode on or off in Settings:

1. Press **Home**  > **Menu** , and touch **System settings** > **More...** under **WIRELESS & NETWORKS**.
2. Touch the **Airplane mode** check box. While in Airplane Mode, the status bar will display .

Mobile Networks

Mobile networks menu lets you enjoy the data connection.

Enable Data

Enable data access to enjoy the data connection.

1. Press **Home**  > **Menu** , and touch **System settings** > **More...** under **WIRELESS & NETWORKS**.
2. Touch **Mobile networks** and confirm **Data enabled** is checked.

DEVICE Settings

The DEVICE settings menu lets you control your device's feature.

Sound

Display

Storage

Battery

PC Connection

Apps

Sound

Use the following settings for such features as silent mode, vibrate, and overall device volume.

Volumes

Adjust your device's volume settings to suit your needs and your environment.

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Volumes**.
2. Drag the onscreen slider to adjust the volume level of **Music, video, games, & other media, Ringtone & notifications, or Alarms**.
3. Touch **OK**.

Tip: You can adjust the ringtone volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

Silent Mode

The Silent mode option allows you to mute all sounds or vibrate (except for media and alarm sounds).

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Silent mode**.
2. Select your option.
 - **Off** to disable the silent mode.
 - **Vibrate** to mute all sounds but vibrate. You can select the vibrate pattern. See [Vibrate Pattern](#).
 - **Mute** to mute all sounds.

Tip: Press the volume button down in standby mode until you see  or  on the screen.

Phone Ringtone

You can select and assign ringtones for your incoming calls.

1. Press **Home**  > **Menu** , and touch **System settings** > **Sound** > **Phone ringtone**.
2. Touch a ringtone from the available list. The ringtone briefly plays when selected.
3. Touch **OK** to assign a ringtone.

Tip: You can assign individual ringtones to your People entries. See [Assign a Ringtone to a People Entry](#).

Vibrate Pattern

You can select the vibrate pattern.

1. Press **Home**  > **Menu** , and touch **System settings > Sound > Vibrate Pattern**.
2. Touch a vibrate pattern from the available list. Your phone briefly vibrates when selected.
3. Touch **OK** to assign a vibrate pattern.

Default Notification

Use the settings menus to assign specific ringtones for notifications.

1. Press **Home**  > **Menu** , and touch **System settings > Sound > Default notification**.
2. Touch a notification sound from the available list. The sound briefly plays when selected.
3. Touch **OK** to assign a notification sound.

Vibrate and Ring

Check this option to let your device ring and vibrate simultaneously.

Persistent Alerts

This menu lets you set alerts, such as beep, vibration, or LED blinking for notification.

1. Press **Home**  > **Menu** , and touch **System settings > Sound > Persistent alerts**.
2. Check the following.
 - **Audible tone** to beep when notification is on the notification bar.
 - **Vibrate** to vibrate when notification is on the notification bar.
 - **Blink LED** to blink the LED indicator when notification is on the notification bar.

SYSTEM

The SYSTEM settings menu lets you select whether you hear tones when touching numbers on the dialpad, selecting onscreen options, and more.

- **Dial pad touch tones:** Check to play tones when using the dialpad.
- **Touch sounds:** Check to play sounds when making an onscreen selection.
- **Screen lock sound:** Check to play sounds when locking or unlocking the screen.

- **Vibrate on touch:** Check to vibrate when touching softkeys and during certain other instances.
- **Hearing aid:** Check to use your hearing aid device effectively.

Display

Adjusting your device's display settings not only helps you see what you want, it can also help increase battery life.

Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Brightness**.
2. Drag the Brightness slider left or right to adjust the screen brightness.

- or -

Check **Automatic brightness** to set the brightness automatically.

3. Touch **OK**.

Wallpaper

Select wallpaper using this menu.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Wallpaper**.
2. Select the wallpaper you want to display on the screen.

Auto-rotate Screen

Your device is capable of automatically changing the orientation of some onscreen content. With this feature, you can view the screen in either portrait or landscape orientation by turning the device sideways. By default, the screen orientation automatically changes when the device is rotated.

To deactivate the Auto-rotate feature:

1. Press **Home**  > **Menu** , and touch **System settings** > **Display**.
2. Touch **Auto-rotate screen** check box to uncheck it.

Sleep

Select the delay time before the screen automatically turns off.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Sleep**.
2. Touch a delay time to select it.

Font Size

Choose the font size of the screen as you like.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Font size**.
2. Select your favorite size.

Key Backlight

Select the delay time before the key backlight automatically turns off.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Key backlight**.
2. Touch a time delay to select it.

Screen Proximity Safety

Set the distance between your device and your face that triggers your device's proximity sensor to work.

Note: If you disable the proximity sensor, it may cause accidental key presses during a call.

1. Press **Home**  > **Menu** , and touch **System settings** > **Display** > **Screen proximity safety**.
2. Drag the slider left or right to adjust the distance from your face and touch **OK**.

Storage

The Storage settings menu lets you see the available space of the internal storage and the SD card on your device and provides options for your microSD card. For SD card options, see [microSD Card](#).

Battery

The battery menu lets you see the current battery status and which applications have been using the battery.

1. Press **Home**  > **Menu** , and touch **System settings** > **Battery**.
2. Touch "... on battery" to see the history details of the battery usage.

PC Connection

Set your device's default connection mode when connected to the USB port of a computer.

1. Press **Home**  > **Menu** , and touch **System settings** > **PC connection**.
2. Touch **Default connection type** and select one of the following options.
 - **Charge only:** Let your PC charge your device only.
 - **Mass Storage:** Let your device function as a removable disk when connected to the USB port of a computer.
 - **Media Transfer:** Let your device function as a media device when connected to the USB port of a computer.
3. Check **Ask me** if you want to display the selection screen whenever you connect your device to a computer.

If **Ask me** is checked, the selection screen is displayed whenever you connect your device to a computer. If you want this selection set as default, check **Remember this choice** > **Done** on the selection screen.

Apps

This menu lets you view applications on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Apps**.
2. Touch one of the following tabs to select the applications to be displayed.
 - **DOWNLOADED:** Select to display downloaded application. You can also see the storage status on your device at the bottom of the screen.
 - **ON SD CARD:** Select to display applications stored on the microSD card. You can also see the storage status on your SD card at the bottom of the screen.
 - **RUNNING:** Select to display currently running applications. You can also see the RAM status on your device at the bottom of the screen. Touch **SHOW CACHED PROCESSES** to see the cached process of the application.
 - **ALL:** Select to display all applications stored on your device and SD card.

PERSONAL Settings

The PERSONAL settings menu lets you manage your personal settings of your device.

[Accounts & Sync](#)

[Location](#)

Security

Language & Input

Backup & Reset

Accounts & Sync

The Accounts & sync settings menu lets you add and manage your accounts and synchronizes the calendar or People entries on your device. See [General Sync Settings](#).

Location Services

Your device is equipped with a Location feature for use in connection with location-based services. The Location services menu allows the network to detect your position. Turning Location off will hide your location from everyone except **911**.

Google's Location Service

This service uses Wi-Fi and/or mobile networks to detect your location.

1. Press **Home**  > **Menu** , and touch **System settings** > **Location services**.
2. Touch **Google's location service**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and touch **Agree**.

GPS Satellites

This service uses available GPS to pinpoint your location within certain applications such as Google Maps.

1. Press **Home**  > **Menu** , and touch **System settings** > **Location services**.
2. Touch **GPS satellites**. (A check mark indicates this feature is enabled.)

Location & Google Search

This service lets Google use your location to improve search results and other services.

1. Press **Home**  > **Menu** , and touch **System settings** > **Location services**.
2. Touch **Location & Google search**. (A check mark indicates this feature is enabled.)
3. Read the disclaimer and touch **Agree**.

Security

The Security settings menus let you set device security, lock codes, passwords, administrator settings, and more.

Screen Lock


You can choose the way how your device acts when the device's display screen is turned on. As default, you must flick the lock button on the screen. See [Turn the Screen On and Unlock It](#).

The security of your device can be increased by drawing the correct pattern on the screen, entering the correct PIN, or entering the correct password to unlock the device's control keys, buttons, and touchscreen.

If you fail to enter the correct pattern, PIN or password after five attempts, you will have to wait for 30 seconds before you can try again.

Use a Pattern:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **Pattern**.

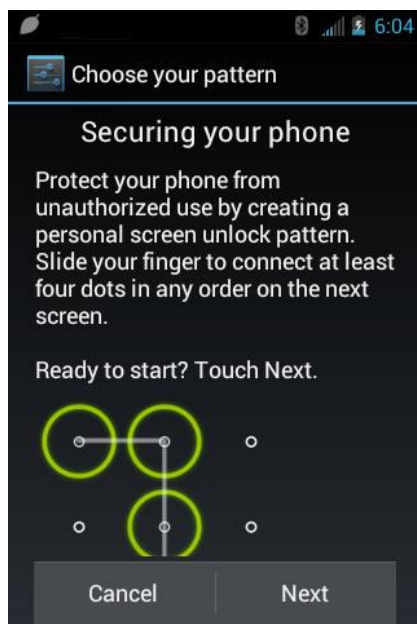

3. Read the information and study the example pattern on the screen and touch **Next**.
4. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
5. The device records the pattern. Touch **Continue**.
6. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

Note: Clear the **Make pattern visible** check box if you do not want the pattern to be displayed on the screen when you draw it.

Use a PIN:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **PIN**.
3. Enter a PIN and touch **Continue**.
4. Enter your PIN again and touch **OK** to confirm it.

Use a Password:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Touch **Password**.
3. Enter a password and touch **Continue**.
4. Enter your password again and touch **OK** to confirm it.

Note: Check the **Vibrate on touch** check box if you do want the device vibrate when you draw the pattern or enter the PIN.

Note: Touch **Automatically lock** to select the time duration before the screen lock feature activates.

Note: Touch **Power button instantly lock** to if you want the screen lock feature activate by pressing the power button.

Note: Touch **Owner info** to enter your information to be displayed on the lock screen.

Change or Disable the Screen Lock:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Screen lock**.
2. Draw your unlock screen pattern, or enter your PIN or password and touch **Next**.
3. Touch **None** to disable the screen lock or change the unlock mode. Touch **Slide** to return to the default lock pattern.

Encrypt Data

You can encrypt your device and the SD card installed in your device.

Warning: To decrypt your device, you need to reset your device to the original factory settings, which erases all data from the device's application storage.

Warning: To decrypt your SD card, you need to format the card, which permanently removes all files stored on the card.

Note: Charge the battery enough and connect the device to an electrical outlet.

Note: You cannot use other features including making or receiving phone calls during encryption.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Encrypt data**.
2. Select the following options.
 - **Phone & SD card** to encrypt your device and the SD card installed in your device.
 - **Phone** to encrypt your device only.
 - **SD card** to encrypt the installed SD card only.
3. Read the message and touch **Next**.
4. If you use the security lock with a PIN or password, enter it and touch **Next**.
5. Read the message and touch **Encrypt**.

Warning: Do not remove the SD card during the encryption of the SD card, otherwise you will lose some or all of your data.

Warning: If you interrupt the encryption process, you will lose some or all of your data.

Passwords

You can hide your password or PIN number as you type it.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security**.
2. Clear the **Make passwords visible** check box.

Device Administration

You can disable the authority to be a device administrator of certain applications. If disabled, you will typically lose some functionality in those applications, such as the ability to sync new email or calendar events to your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Device administrators**.
2. Touch an application you want to disable the authority to be a device administrator.

Unknown Sources

Follow the steps below to install non-Google Play store applications:

1. Press **Home**  > **Menu** , and touch **System settings** > **Security**.

2. Touch **Unknown sources** > **OK**. (A check mark indicates this feature is enabled.)

Credential Storage

You can see the trusted credentials on your device's system.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Trusted credentials**.
2. Touch to read the information.

You can install encrypted certificates from the SD card.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Install from SD card**.
2. Touch an available certificate.
3. Follow the onscreen instructions.

You can remove all the credentials on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Security** > **Clear credentials**.
2. Touch **OK**.

Language & Input

Your device's Language & input settings let you select a language for the devices screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more. For details, see [Enter Text](#).

This menu also provides the settings when using voice function. See [Text-to-speech Settings](#) and [Voice Search](#).

Backup & Reset

This menu helps you to back up and restore you data.

Back up My Data

You can back up your settings to a Google server.

1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset**.
2. Touch **Back up my data**. (A check mark indicates this feature is enabled.)

Automatic Restore

Check this option to restore your settings and other data when you install an application.

1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset**.
2. Touch **Automatic restore**. (A check mark indicates this feature is enabled.)

Factory Data Reset

Your device's Backup & reset menu includes the **Factory data reset** option. This option lets you reset your device to the original factory settings, which erases all data from the device's application storage, including the following options.

- Your Google account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

To reset your device:

1. Press **Home**  > **Menu** , and touch **System settings** > **Backup & reset** > **Factory data reset**. Read the Factory data reset information.
2. Touch **Reset phone**.
3. Touch **Erase everything**. Your device will power down and reset itself, which may take up to 10 minutes.

Once the device has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Application](#) to start over.

SYSTEM Settings

The SYSTEM settings menu lets you manage the system settings of your device.

[Date & Time](#)

[Accessibility](#)

[Developer Options](#)

[Activate This Device](#)

[About Phone](#)

System Update

Date & Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be changed manually.

1. Press **Home**  > **Menu** , and touch **System settings** > **Date & time**.
2. Clear the **Automatic date & time** check box if necessary.
3. Clear the **Automatic time zone** check box if necessary.
4. Touch **Set date**. Adjust the date, month, and year by touching  or . Touch **Set** when finished.
5. Touch **Set time**. Adjust the hour and minute, and select **AM** or **PM** by touching  or . Touch **Set** when finished.
6. Touch **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
7. Touch **Use 24-hour format** to toggle between 12-hour or 24-hour format.
8. Touch **Select date format** to select how the date information is displayed on your device.

Accessibility

You can download and manage accessibility-related applications or configure the accessibility setting of your device.

Note: You can also enable your TTY (teletypewriter, also known as a TDD or Text Telephone) settings. See **TTY mode** within [Other Call Settings](#) section.

SERVICES

This menu provides you the list of accessibility-related applications. Touch the application and configure its settings.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.
2. Touch the application to configure its settings.

TalkBack

TalkBack is the application to help blind and vision-impaired users use their devices more easily. It adds spoken, audible, and vibration functionality services to your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.

2. Touch **TalkBack**.
3. If **OFF** is displayed at the right of **TalkBack**, touch it to turn **TalkBack** on.
4. Read the message and touch **OK**. **ON** is displayed.
5. Touch **SETTINGS** and configure TalkBack settings.

SYSTEM

This menu configures the accessibility settings of the system in your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accessibility**.
2. Configure the following system accessibility settings.
 - **Large text** to use large fonts on the screen.
 - **Power button ends call** to use the **Power** button to end a call.
 - **Auto-rotate screen** to automatically change the orientation of some onscreen content when the device is rotated.
 - **Speak passwords** to let your device speak the password you enter.
 - **Explore by touch** to let your device speak or write the descriptions of what's under your finger (when TalkBack is turned on).
 - **Touch & hold delay** to set the delay time when the screen recognizes the touch and hold operation.
 - **Install web scripts** to install web scripts that make the web content more accessible.

Developer Options

These menus are specific for application development. Unless you have a specific reason for changing these settings, you should leave them at the default settings.

Activate This Device

You may need to activate your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Activate this device**.
2. Follow the onscreen instructions.

About Phone

The About phone menu lets you access important phone information including your phone number, and view legal information.

System Update

From time to time, updates may become available for your device. You can download and apply updates through the System update menu.

Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press **Home**  > **Menu** , and touch **System settings** > **System update** > **Update PRL**.
2. Follow the onscreen instructions.

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **System update** > **Update profile**.
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your Device Firmware

This option allows you to update the Android Operating System (OS) and the device software on your device via an over-the-air connection.

Before Updating Your Firmware:

Updating your device firmware may erase all user data from your device. You must back up all critical information before updating your device firmware.

To back up your account information:

1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch the account containing data you want to back up now.
3. Press **Menu** , and touch **Sync now**.

As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process.

Update Your Device Firmware:

1. Press **Home**  > **Menu** , and touch **System settings** > **System update**.
2. Touch **Update firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)

Confirm Your Current Device Firmware:

1. Press **Home**  > **Menu** , and touch **System settings** > **About phone**.
2. Scroll to the bottom of the page for the version number.

Reinstall Your Google Application:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied.

1. Log into your Google account via the device.
2. Press **Home** , and touch  > **Play Store**.
3. Press **Menu** , and touch **My Apps**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

Update Kyocera Software

This option provides you the latest Android Operating System (OS) and the device firmware on your device via an over-the-air connection.

1. Press **Home**  > **Menu**  and touch **System settings** > **System update** > **Update Kyocera software**.
2. Follow the onscreen instructions.

People

The People application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your device as well as contacts synchronized with your Google account or compatible email programs.

[Get Started with People](#)

[Add a New People Entry](#)

[Save a Phone Number](#)

[Edit a People Entry](#)

[Select People List](#)

[Synchronize People Entries](#)

[Display Options](#)

[Share a People Entry](#)

Get Started with People

Before using People, it's best to learn a few basics.

Access People

Follow the steps below to access People.

► Press **Home** , and touch  > **People**.

There are four tabs on People:



Groups to display the Group of entries.




All to display all entries.



Favorite to display your favorite entries.



ICE to display your ICE (in case of emergency) entries.

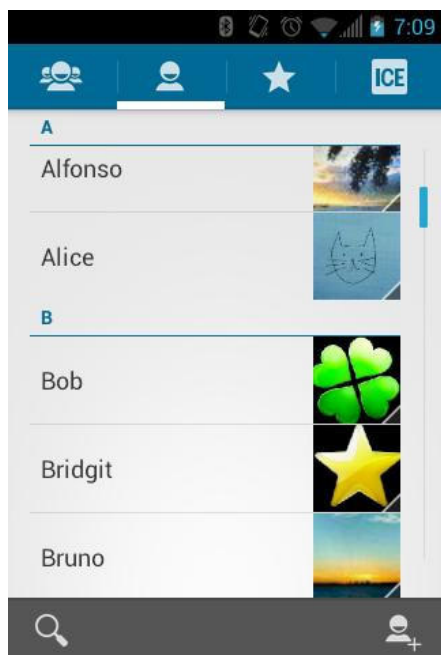

Scroll through the list to view all your entries. To see a specific entry, scroll to it and touch it.

People List Options

You can manage your entries from the People list.

- Touch  to add an entry. See [Add a New People Entry](#).
- Touch  to search an entry.

You can also press **Menu**  to display the People list options.

- **Contacts to display:** Selects the People list to be displayed. See [Select People List](#).
- **Import/export:** Imports/exports entries from/to the microSD card.
- **Accounts:** Opens the Accounts & sync settings screen. See [Accounts & Sync](#).
- **Settings:** Opens the Display options page. You can select how your entries are displayed. See [Display Options](#).

Add a New People Entry

Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Press **Home** , and touch  > **People**.
2. Touch .

- You may be prompted to select a type of the entry.
 - Select your Google account to save an entry to.
 - Select **Add new account** to save an entry to your new account. Select **Google** or **Corporate**.
 - They will be synced automatically with your Google account online.
- 3. Use the keyboard to enter as much information as you want.

-  (People icon): Touch to assign a photo to the entry. See [Assign a Stored Picture to a People Entry](#) or [Assign a New Picture to a People Entry](#).
- Name
- Add organization
- PHONE
- EMAIL
- ADDRESS
- EVENTS
- GROUPS
- Add another field: Touch to include additional information such as IM (address), Notes, Nickname, Website, Internet call, etc.

Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type to the right of the field.

Note: To add more phone numbers, email addresses, etc., touch **Add new** under the current numbers or addresses.

- 4. When you have finished adding information, touch **DONE**.

✓ DONE

Google contact
tonyloverde47@gmail.com

Name

Add organization

PHONE

Phone MOBILE

EMAIL

Email HOME

ADDRESS

Address HOME

Save a Phone Number

You can save a phone number to People directly from the phone dialpad.

1. Press **Home** , and touch  > .
2. Enter a phone number and press **Menu** , and touch **Add to contacts**.
3. To add the number to an existing entry, scroll through the list and touch the entry or touch **Find contacts** to find the entry. To add a new entry, touch **CREATE NEW CONTACT**.
4. For an existing entry, select a number type for the new number, and then touch **OK**.
5. For a new entry, enter the name and any additional information, and then touch **DONE**.
See [Add a New People Entry](#).

Edit a People Entry

Once you've added an entry, you can add or edit any of the information in the entry, assign a caller ID picture, customize it with a unique ringtone, and more.

[Add or Edit Information for a People Entry](#)

[Assign a Stored Picture to a People Entry](#)

[Assign a New Picture to a People Entry](#)

[Assign a Ringtone to a People Entry](#)

[Assign a Vibration to a People Entry](#)

[Add an Entry to Favorites](#)

[Send an Entry's call to Voicemail](#)

[Delete a People Entry](#)

Add or Edit Information for a People Entry

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.
3. Touch any field you want to change or add. See [Add a New People Entry](#).
4. Add or edit the information, and then touch **DONE**.

Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), touch the type at the right of the field.

Assign a Stored Picture to a People Entry

The **Edit** menu lets you assign a picture stored in your device's memory or SD card to an entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.
3. Touch the entry icon at the right of the name.
4. Touch **Choose photo from Gallery** and select a location.
5. Touch a picture to select it.
 - You may be prompted to size the picture for use with entries. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square and touch **CROP**.
6. Touch **DONE** to save the entry.

Assign a New Picture to a People Entry

Follow the instructions to take a new picture and assign it directly to an existing entry.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Edit**.

3. Touch the entry icon at the right of the name.
4. Touch **Take photo**.
5. Touch  to take the photo. If you're satisfied with the picture, touch  to continue.
 - You may be prompted to size the picture for use with entries. Touch and drag the square to frame the portion of the picture to use. Touch and drag the side of the square to resize the square and touch **CROP**.
6. Touch **DONE** to save the entry.

Assign a Ringtone to a People Entry

Know who's calling without looking at your device by assigning a specific ringtone to an entry.

1. Press **Home** , and touch  > **People**.
2. Touch a contact to display it, and then press **Menu**  > **Set ringtone**.
3. Touch an available ringtone.
 - When you touch a ringtone, you will hear a sample.
4. Touch **OK** to assign the ringtone.

Assign a Vibration to a People Entry

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu**  > **Set vibrate**.
3. Touch an available vibration.
 - When you touch a vibration, you will feel a vibration.
4. Touch **OK** to assign the vibration.

Add an Entry to Favorites

The Favorites tab of the Phone menu is a listing that can help you quickly access your most used or preferred People entries.

1. Press **Home** , and touch  > **People**.
2. Touch an entry.
3. Touch the star at the upper right corner. The star turns to white.

Send an Entry's call to Voicemail

You can transfer your entry's voice call to voicemail anytime you receive it.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** .
3. Check **All calls to voicemail**.

Delete a People Entry

You can delete an entry from the entry's details page.

1. Press **Home** , and touch  > **People**.
2. Touch a contact to display it, and then press **Menu**  > **Delete**.
3. Touch **OK**.

Select People List

Display the People List you like.

1. Press **Home** , and touch  > **People**.
2. Press **Menu**  > **Contacts to display**.
3. Select the account. People entries saved in the account will be displayed.
 - If you select **All contacts**, all the entries you save will be displayed.

Customize People List

You can customize the People list of the account.

1. Press **Home** , and touch  > **People**.
2. Press **Menu**  > **Contacts to display**.
3. Touch **Customize** and touch the account.
4. Check the types of entries to be displayed or uncheck those types you don't wish to display.
5. Touch **OK**.

Synchronize People Entries

Syncing data from your managed accounts allows you to add and manage a new or existing entry from your online or remote accounts to your device. Prior to syncing, you must first have

an active Google or Corporate account with current People entries, and be signed into your account via the device.

With syncing, any entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your device.

For more information about syncing existing managed accounts, see [General Sync Settings](#).

1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**,
2. Touch the account you want to sync your People with.
3. Touch the **Sync Contacts** check box to select the feature. (A check mark indicates this feature is enabled.)

Note: The process of updating your People can take several minutes. If after 10-20 minutes, your list has not been updated, repeat steps 2 and 3.

Your **People** then reflects any updated entry information.

- This update process works both ways. For example, any changes on the device are updated to your Gmail contacts list after sync.

Display Options

Select how the People list to be displayed.

1. Press **Home** , and touch  > **People**.
2. Press **Menu**  > **Settings**.
3. Set the following options.
 - **Sort list by** to choose how your entries are sorted.
 - **View contact names as** to choose how your entries name is displayed.

Share a People Entry

You can quickly share People entries using Bluetooth, Email, or Gmail.

1. Press **Home** , and touch  > **People**.
2. Touch an entry to display it, and then press **Menu** , and touch **Share**.
3. In the **Share contact via** menu, select a method:
 - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.

- **Email** to send the information as an email attachment. If prompted, select an email account. Address the message, add a subject and a message, and then touch ➤. See [Compose and Send Email](#) for details on sending email.
- **Gmail** to send the information as a Gmail attachment. Address the message, add a subject and a message, and then touch ➤. See [Send a Gmail Message](#) for details.

Messaging

With the data service and your device's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

[Gmail](#)

[Email](#)

[Text Messaging and MMS](#)

[Social Networking Accounts](#)

[Google Talk](#)

Gmail

Gmail is Google's web-based email service. You need to setup your [Google Account](#) in advance.

[Access Gmail](#)


[Send a Gmail Message](#)

[Read and Reply to Gmail Messages](#)

Access Gmail

Your device allows you to access, read, and reply to all your Gmail messages.

1. Press **Home** , and touch  > **Gmail**.

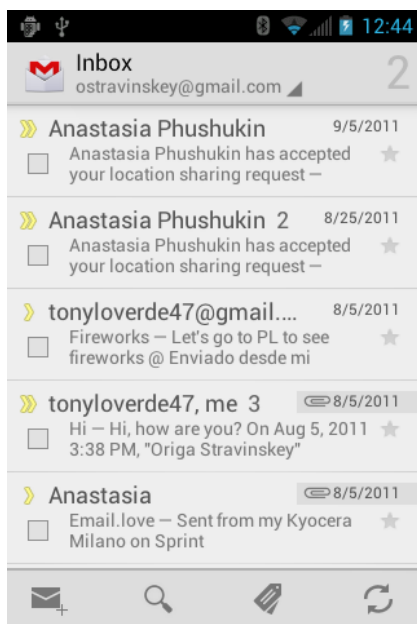

2. Do any of the following.

- View more email messages: If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
- Read a new email message: Touch the unread message or the conversation with an unread message (just-arrived items display in bold).
- Select messages and conversations: Touch the box before the email or conversation.
- View the Inbox of your other Gmail account. Touch **Inbox** at the top of the screen and select the account you want to view its inbox.
- Refresh the Inbox: Touch .

Send a Gmail Message

1. Press **Home** , and touch  > **Gmail**.
2. Touch .
3. Enter the message recipient's email address in the **To** field. If you are sending the email message to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your contacts list are displayed. Touch a match to enter that address directly.

Tip: If you want to send a CC or a BCC of the email to other recipients, press **Menu** , and touch **Add Cc/Bcc**.

4. Enter the subject, and then compose your message.

Note: If you want to attach a picture, press **Menu** , and then touch **Attach file**. Locate and then touch the picture you want to attach.

5. After composing your message, touch .

Note: While composing the message, press **Menu**  > **Save draft** if you want to send it later. To open a draft email, in the email account Inbox, touch **Inbox** (top of the Gmail screen), and then touch **Drafts**.

Note: To view your sent messages in the Inbox, touch **Inbox**, and then touch **Sent**.

Read and Reply to Gmail Messages

1. Press **Home** , and touch  > **Gmail**.
2. Touch a message to display it.

Tip: You can also access new messages through the status bar. When a new Gmail message arrives, you'll see the  icon in the status bar. Slide the bar down to display notifications. Touch a message to display it.

3. To reply to or forward a message:
 - Touch  to reply to the message.
 - Touch  > **Reply all** to reply to all recipients.
 - Touch  > **Forward** to forward the message.
4. After composing your message, touch .

Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP. You can also access your corporate email and other features on your device.

[Add an Email Account \(POP3 or IMAP\)](#)

[Add a Corporate Account](#)

[Create Another Email Account](#)

[Compose and Send Email](#)

[View and Reply to Email](#)

[Manage Your Email Inbox](#)

[Email General Settings](#)

Delete an Email Account

Add an Email Account (POP3 or IMAP)

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your device.

1. Press **Home** , and touch  > **Email**.
2. Enter the Email address and Password for the email account and then touch **Next**.

Important: If the account type you want to set up is not in the device database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

3. Confirm the Email settings and touch **Next**.
4. Touch **Next**. The inbox of the account is displayed.

Add a Corporate Account

If you synchronize your device with your corporate account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

1. Press **Home**  > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch **ADD ACCOUNT**, and then touch **Corporate**.
3. Enter your Email address and Password information, and then touch **Next**. Consult your network administrator for further details.
 - **Email address:** your corporate email address.
 - **Password:** typically your network access password (case-sensitive).
4. Enter a **Domain\Username**, **Password**, and **Server information** and touch **Next**.
 - **Domain\Username:** enter your network domain\login username.
 - **Password:** typically your network access password (case-sensitive).
 - **Server:** your exchange server remote email address. Typically it is in the form mail.XXX.com. Obtain this information from your company's network administrator.
5. If your network requires SSL encryption, touch the **Use secure connection (SSL)** box to place a check mark and activate this additional level of security. If your exchange server requires this feature, leaving this field unchecked can prevent connection.
6. If the onscreen activation disclaimer is displayed, touch **Next**.

7. Configure your Inbox checking frequency, Days to sync (days to synchronize between your device and server), and activate any other email settings, then touch **Next**.

Note: Signal interruptions or incorrect user name or password information can cause completion issues.

8. Identify your new account with a unique name and provide the outgoing name, then touch **Done**.

Note: You can have multiple corporate email accounts active on your device.

Note: Your corporate Exchange Server must support auto-detect for the device to automatically set up the Exchange ActiveSync account. If your corporate Exchange Server does not support auto-detect, you will need to enter your Exchange Server settings after you touch **Next**. Ask your Exchange Server administrator for details.

Create Another Email Account

While you are viewing one email account, you can access the tool to create another email account.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu** , and touch **Settings**.
3. Touch **ADD ACCOUNT**.
4. Enter the Email address and Password for the email account and then touch **Next**.
5. Confirm the Email settings and touch **Next**.
6. Touch **Next**. The inbox of the account is displayed.

Compose and Send Email

Compose and send email using any account you have set up on your device. Increase your productivity by attaching files such as pictures or videos to your email messages.

1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, touch .

Tip: Touch displayed email address to select a different email account.

3. Enter email addresses directly in the **To** field. If you're sending the email to several recipients, separate the email addresses with a comma. As you enter email addresses, any matching addresses from your contacts list are displayed. Touch a match to enter the address directly.

Tip: If you want to send a CC or a BCC of the email to other recipients, press **Menu** , and touch **Add Cc/Bcc**.

4. Enter the subject, and then compose your message.
5. To add an attachment, press **Menu** , and touch **Attach file**, and choose from the following options:
 - **Pictures:** Select photos from Gallery.
 - **Videos:** Select videos from Gallery.
 - **Audio:** Select sound files.
6. Touch  to send the message immediately, or press **Menu**  > **Save draft** as draft if you want to send it later.

Note: To open a draft email, in the email account Inbox, touch **Inbox** (top of the Email screen), and then touch **Drafts**.

View and Reply to Email

Reading and replying to email on your device is as simple as it is on your computer.

1. Press **Home** , and touch  > **Email**.
2. On the email account Inbox, touch the message you want to view.
3. Touch  or  > **Reply all** to reply to the message.

Manage Your Email Inbox

View Your Email Inbox

1. Press **Home** , and touch  > **Email**.
2. Touch the account whose mails you want to view.
 - Touch  to search an email.
 - Touch  to display folders.
 - Touch  to refresh your email box.
 - Press **Menu**  > **Settings** to display the Email settings. See [Email General Settings](#) and [Email Account Settings](#).

Refresh an Email Account

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

- ▶ While in the account you want to synchronize, touch .

Delete an Email Message

1. On the email account Inbox, touch the message you want to delete (the message is checked).
2. Touch .

Delete Multiple Email Messages

1. On the email account Inbox, touch the check box of the messages you want to delete.
2. Touch .

Email General Settings

You can edit the general settings of your email.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  > **Settings** > **General**.
 - **Auto-advance**: Choose which screen to show after you delete a message.
 - **Message text size**: Select the message text size.
 - **Reply all**: Check if you want to display “Reply all” option as default.
 - **Ask to show pictures**: Touch if you want to be asked before pictures in messages to be displayed.

Email Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  > **Settings**.
3. Select the account you want to edit settings.
4. Set the following options.

- **Account name:** Edit your account name.
- **Your name:** Edit your name displayed on your emails.
- **Signature:** Allows you to create an email signature for your outgoing emails.
- **Quick responses:** Allows you to edit text you frequently insert when composing emails.
- **Default account:** Assign this account as the default email used for outgoing messages.
- **Inbox check frequency:** Touch to select the time interval used by your device to check your new emails from **Automatic (Push)** (corporate only) **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, and **Every hour**.
- **Days to sync:** Sets a period of time to synchronize your account (corporate only).
- **Sync email:** Check to synchronize your email (corporate account only).
- **Sync contacts:** Check to synchronize your contacts (corporate account only).
- **Sync calendar:** Check to synchronize your calendar (corporate account only).
- **Download attachments:** Check if you want to automatically download attachments via Wi-Fi.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the status bar when a new mail is received.
 - **Choose ringtone:** Plays a selected ringtone once a new email message is received.
 - **Vibrate:** Activates a vibration once a new email message is received.
- **Incoming settings:** Adjusts the incoming email parameters, such as username, password, and other incoming connection parameters (ex: IMAP server).
- **Outgoing settings:** Adjusts the outgoing parameters, such as username, password, and other incoming connection parameters (ex: SMTP server, not for a corporate account).
- **Out of office settings:** Sets your current status and your message to reply automatically when you leave your office (corporate account only).
- **Remove account:** Touch to remove the account.

Delete an Email Account

If you no longer want an email account on your device, you can delete it through the mail settings menu.

1. Press **Home** , and touch  > **Email**.
2. Press **Menu**  > **Settings**.
3. Select the account you want to delete settings.
4. Touch **Remove account** > **OK**.

Text Messaging and MMS

With Text Messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, or picture slideshows.

See your service plan for applicable charges for messaging.

[Compose Text Messages](#)

[Send a Multimedia Message \(MMS\)](#)

[Save and Resume a Draft Message](#)

[New Messages Notification](#)


[Managing Message Conversations](#)

[Text and MMS Options](#)

Compose Text Messages

Quickly compose and send text messages on your device.

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch . The compose screen opens.
3. Fill in one or more recipients.
 - Enter phone numbers or email addresses in the **To** field. If you're sending the message to several recipients, separate the phone numbers or email addresses with commas. As you enter information, any matching phone numbers or addresses from your contacts list are displayed. Touch a match to enter that number or address.

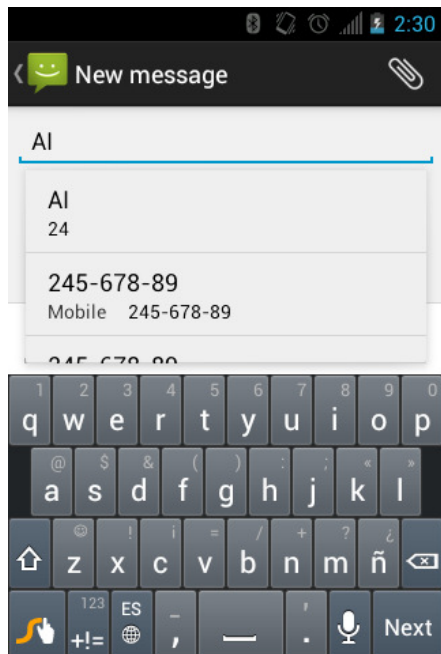

4. Touch **Type message** and then start composing your message.

Tip: You can add a subject line by pressing **Menu** , and then touching **Add subject**.

5. When done, touch  to send the text message.

Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, recorded voices, or audio or video files, or slideshows.

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch . The compose screen opens.
3. Fill in one or more recipients.
 - Enter phone numbers or email addresses in the **To** field. If you're sending the message to several recipients, separate the phone numbers or email addresses with commas. As you enter information, any matching phone numbers or addresses from your contacts list are displayed. Touch a match to enter that number or address.
4. Touch **Type message** and then start composing your message.

Note: You can add a subject line by pressing **Menu** , and then touching **Add subject**.

5. Touch  and select from the following file attachments.
 - **Pictures:** Open Gallery to attach a photo from your storage card.

- **Capture picture:** Run the camera application to take a photo and attach it.
 - **Videos:** Open Gallery to attach a video from your storage card.
 - **Capture video:** Run the camcorder application to take a video and attach it.
 - **Audio:** Select a ringtone and attach it.
 - **Record audio:** Run the voice recorder application to create a recording and attach it.
 - **Slideshow:** See [Create a Slideshow](#) for details.
6. To make changes to your attachment, touch **Replace** or **Remove**.
7. Touch  to send the MMS message.

Create a Slideshow

In a multimedia message, you can add slides, each containing a photo, video, or audio.

1. In the multimedia message you're composing, Touch  > **Slideshow**.
2. To compose your slideshow, do any of the following.
 - Touch **Add slide** to create a new slide. (This is a placeholder for new images to be added, similar to a playlist.)
 - Touch the created slide (example, Slide 1), touch **Add picture**, and then select the picture you want to add to the slide.
 - Touch the text field below the image to enter a caption for the picture.
 - Touch **Preview** (to preview the slide), **Replace picture** (to delete the currently selected picture), **Remove slide**, press **Menu** , and touch **Add music**, **Add slide**, **Duration**, or **Layout**.
 - When finished, touch **Done** to attach the slideshow to your message.
3. When you have finished composing the multimedia message, touch .

Save and Resume a Draft Message

While composing a text or multimedia message, press **Back**  > **Yes** to save your message as a draft.

To resume composing the message:

1. On the Messaging screen, touch the message to resume editing it. "Draft" in red appears at the right of the message in the list.

2. When you finish editing the message, touch  or if you add attachments to your message, touch  .

New Messages Notification

Depending on your notification settings, the device will play a ringtone, vibrate, or display the message briefly in the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see [Text and MMS Options](#) for details.

A new message icon  or  also appears in the notifications area of the status bar to notify you of a new text or multimedia message.

To open the message, slide the status bar down to open the Notifications panel. Touch the new message to open and read it. For information on reading and replying to messages see [Managing Message Conversations](#).

Managing Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. Threaded text or multimedia messages let you see exchanged messages (similar to a chat program) with a contact on the screen.

To read a text message:

- ▶ Do one of the following:
 - On the Messaging screen, touch the text message or message thread to open and read it.
 - If you have a new message notification, slide the status bar down to open the Notifications panel. Touch the new message to open and read it.

To return to the Messaging screen from a text message thread, press **Back** .

Note: To view the details of a particular message, in the message thread, press the message to open the options menu, and then touch **View message details**.

Note: If a message contains a link to a Web page, touch the message and then touch the link to open it in the Web browser.

Note: If a message contains a phone number, touch the message to dial the number or add it to your contacts.

To view a multimedia message (MMS):

1. Press **Home** , and touch  > **Messaging**.

2. On the Messaging screen, touch a multimedia message or message thread to open it.
3. Touch the attachment to open it.

Tip: To save the attachment, touch and hold the attachment icon, and then touch **Save attachment** on the options menu.

Note: When **Auto-retrieve** in MMS settings is disabled, only the message header is downloaded. To download the entire message, touch the **Download** button at the right side of the message. For details, see [Text and MMS Options](#).

Note: If you are concerned about the size of your data downloads, check the multimedia message size before you download it.

To reply with a multimedia message (MMS):

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch a text or multimedia message thread to open it.
3. Touch the text box at the bottom of the screen, enter your reply message, attach files and then touch  .

To delete a message thread:

1. Press **Home** , and touch  > **Messaging**.
2. On the Messaging screen, touch the message thread that you want to delete.
3. Press **Menu** , and then touch **Delete thread**.
4. When prompted to confirm, touch **Delete**.

To delete a single message:

1. While viewing a message thread, touch and hold the message that you want to delete.
2. From the options menu, touch **Delete**.
3. When prompted to confirm, touch **Delete**.

When you have received a message from someone stored in your People, you can touch the entry's photo or icon in the message thread to open a menu of options. Depending on the stored entry information, you can view the entry details, phone or send an email message to the entry, and more.

Text and MMS Options

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Press **Home** , and touch  > **Messaging**.
2. Press **Menu** , and then touch **Settings**. You can set the following options.

STORAGE Settings

- **Delete old messages:** Automatically delete older messages, when the set limits are reached.
- **Text message limit:** Choose the maximum number of text messages to store in each conversation thread.
- **Multimedia message limit:** Choose the maximum number of MMS messages to store in each conversation thread.

TEXT (SMS) MESSAGES Settings

- **Emergency Alerts:** Sets the federally supervised cell phone alert services to send out broadcast SMS messages for public warning.
 - **Presidential:** Receives an emergency presidential alert. (Presidential is always grayed out [not selectable] and cannot be excluded.)
 - **Imminent Threat - Extreme:** Select this option if you want to receive emergency alerts in an extreme emergency situation (an extraordinary threat to life or property).
 - **Imminent Threat - Severe:** Select this option if you want to receive emergency alerts in a severe emergency situation (a significant threat to life or property).
 - **Amber:** Select this option if you want to receive alerts related to missing or endangered children.
 - **Emergency Alerts Test:** Select this option if you want to receive a test message to make sure that the alert messages can be successfully received.
 - **Help:** Displays the help information for Emergency Alerts.

MULTIMEDIA (MMS) MESSAGES Settings

- **Auto-retrieve:** Select this option to automatically retrieve all your multimedia messages completely. When selected, the multimedia message header plus the message body and attachments will automatically download to your device. If you clear this check box, only the multimedia message header will be retrieved and shown in your Messaging screen.

NOTIFICATIONS Settings

- **Notifications:** Select this option if you want to receive a notification in the status bar when a new text or multimedia message arrives.
 - **Choose ringtones:** Select a ringtone that is specific to new text and multimedia messages. Note that the ringtone briefly plays when selected.
 - **Vibrate:** Select when your device to vibrate when a new text or multimedia message arrives.

Social Networking Accounts

Stay in touch on the go with all your social networking accounts.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Opening YouTube

- Press **Home** , and touch  > **YouTube**. The library screen appears.

Note: If **Terms of Service** appears, touch **Accept** if you agree to the Terms of Service.

Watching YouTube Videos

1. On the YouTube screen, touch a video.
2. Touch the screen to show the progress bar at the bottom. Touch the screen while the bar is displayed to pause/play the video. Move the slider on the bar to the left or right to rewind or fast-forward the video.

Searching for Videos

1. On the YouTube screen, touch  at the upper right of the screen to open the search box.
2. Enter the keyword to search. Search results appear below the status bar.
3. Touch one of the results, or touch  or .
4. Scroll through the results and touch a video to watch it.

Google Talk

Google Talk is the instant messaging program provided by Google. Google Talk lets you chat with other people that also have a Google account. Your Google Talk account is based on the Google account set on your device.

[Signing In and Chatting](#)

[Managing Your Friends](#)

[Mobile Indicators](#)


[Signing Out](#)

[Google Talk Settings](#)

Signing In and Chatting

You need to sign in the Google Talk before starting chatting.

- Press **Home** , and touch  > **Talk** to open Google Talk.

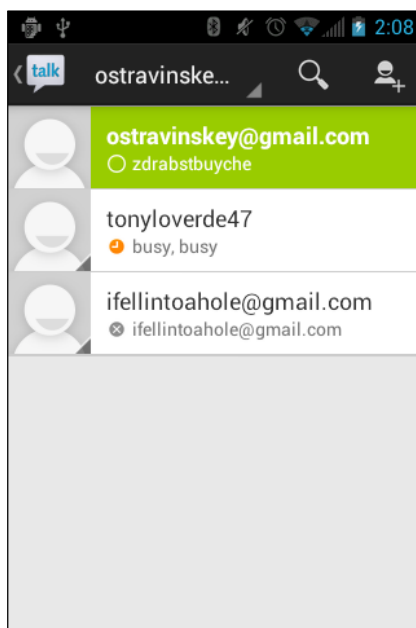

Adding New Friends

You can add only people who have a Google account.

1. On the friends list screen, touch .
2. Enter the Google Talk ID or the Gmail address of the person you want to add.

3. Touch **DONE**.

Viewing Your Invitations

On the friends list screen, the friends you invited appear offline in your Friends list until they accept your invitation.

Accepting and Canceling Invitations

On the friends list screen, touch **Chat invitation**. When an invitation pop-up window appears, touch **Accept** or **Cancel**.

Changing Your Online Status Message

1. On the friends list screen, touch your email address at the top of the list.
2. Touch the status and select the status you want from the menu.
3. Touch the text box below the online status, and then type your status message.
4. Press **Back** .

Starting a Chat

1. Touch a friend on the friends list.
2. Touch the text box, and then type your message.
3. Touch .

Switching Between Active Chats

You can conduct multiple chats at the same time and switch between active chats.

- ▶ On the friends list, touch the friend you want to chat with.

Closing a Chat

To close the chat, do one of the followings.

- ▶ On a chat screen, press **Menu**  > **End chat**.

- or -

On the friends list screen, press **Menu**  > **End all chats**. All the chats will be closed.

Managing Your Friends

Friends on the friends list screen are sorted according to their online status and are listed alphabetically.

Viewing the Friends List

You can sort your friends as you like.

- ▶ On the friends list screen, press **Menu** , and touch **Display option**.
 - **Availability** to show the friends that you frequently chat with first and now available first.
 - **Name** to sort all your friends by name.
 - **Recency** to show the friends that you frequently chat with first.

Blocking Friends

You can block friends from sending you messages.

1. On the friends list screen, touch the name of the friend you want to block.
2. Press **Menu**  > **Friend info** > **Block**. That friend is removed from your friends list and is added to the blocked friends list.

Unblocking Friends

1. On the friends list screen, press **Menu**  > **Settings** and touch your account.
2. Touch **Blocked friends**.
3. On the blocked friends list, touch the name of the friend you want to unblock.
4. Touch **OK** to confirm.

Mobile Indicators

Mobile indicators allow you to check your friend's device.

Checking Friends' Devices

You can see which devices your friends are using to chat in Google Talk.

- If "on Mobile Device" appears below your friend's name, it indicates that your friend is using an Android phone.
- If an email address is displayed, it indicates that your friend is using a computer.

Displaying a Mobile Indicator

You can choose to show a mobile indicator along with your name to let your friends know the type of wireless device you are using.

1. On the friends list screen, press **Menu** , and touch **Settings**.
2. Touch your account name and check **Mobile indicator**.

Signing Out

Follow the steps to sign out from the Google Talk.

- On the friends list screen, press **Menu** , and touch **Sign out** to sign out from Google Talk.

Google Talk Settings

You can manage the Google Talk settings as you like.

1. On the friends list screen, press **Menu** , and touch **Settings**.
2. Touch your account name and touch any of the following to change the settings.
 - **Mobile indicator:** Select to allow your friends to see the type of wireless device you are using. See [Mobile Indicators](#).
 - **Away when screen off:** Select to show your status as away when the screen is turned off.
 - **Invitation notifications:** Select to show a notification in the status bar when someone invites you to become a friend.
 - **IM notifications:** Select to show a new instant message icon on the status bar when a new instant message is received.
 - **Notification ringtone:** Select if you want the device to ring when a new instant message is received. On the ringtone menu, touch a ringtone to play the tone briefly, and then touch **OK** to confirm selection. Select **Silent** if you do not want the device to ring when a new instant message is received.
 - **Vibrate:** Select if you want the device to vibrate when a new instant message is received.
 - **Video chat notifications:** Select if you want the device open a dialog or only to show notification when a voice or video chat invitation arrives.
 - **Video chat ringtone:** Select if you want the device to ring when a new video chat notification arrives. On the ringtone menu, touch a ringtone to play the tone briefly,

and then touch **OK** to confirm selection. Select **Silent** if you do not want the device to ring when a new video chat notification arrives.

- **Vibrate:** Select if you want the device to vibrate when a new video chat notification arrives.
- **Blocked friends:** Select to show your blocked friends list.
- **Clear search history:** Select to delete the Google Talk search history.
- **Manage account:** Select to open the Accounts & sync settings menu.
- **Terms & privacy:** Select to show the Google legal information.

Applications and Entertainment

All of your device's features are accessible through the Applications list. Touch the applications launcher icon  on the Home screen.

[Google Play](#)

[Navigation](#)

[Music Player](#)

[BoostZone](#)

Google Play

Google Play™ is the place to go to find new apps for your device. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your device.

To access Google Play, you must first connect to the Internet using your device's Wi-Fi, or data connection and sign in to your Google account. See [Web and Data](#) and [Sign In to Your Google Account](#) for details.

Important: Boost Mobile's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Boost Mobile to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

[Find and Install an Application](#)

[Create a Google Wallet Account](#)

[Request a Refund for a Paid Application](#)

[Open an Installed Application](#)

[Uninstall an Application](#)

[Get Help with Google Play](#)

Find and Install an Application

When you install apps from Google Play and use them on your device, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your device. Download and install only apps that you trust.

1. Press **Home** , and touch  > **Play Store**.
2. When you open Google Play for the first time, the **Terms of Service** window will appear. Touch **Accept** to continue if you agree to the Terms of Service.
3. Find an application you want and touch it to open its details screen.



Note: Google Play screen shots and options may vary depending on the version installed on your device. Your Google Play application will update automatically when available.

4. Touch an app to read a description about the app and user reviews.
5. Touch **Download** (for free applications) or the price icon (for paid applications).

Note: You need a Google Wallet account to purchase items on Google Play. See [Create a Google Wallet Account](#) to set up a Google Wallet account if you do not have one.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your device. If you agree to the conditions, touch **Accept & download** (for free applications) or **Accept & buy** (for paid application) to begin downloading and installing the app.

If you selected a paid application, after touching **Accept & buy**, you're redirected to the Google Wallet screen to pay for the application before it's downloaded to your device.

Warning: **Read the notification carefully!** Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your device.

Create a Google Wallet Account

You must have a Google Wallet account associated with your Google account to purchase items from Google Play.

Do one of the following:

- ▶ On your computer, go to wallet.google.com to create a Google Wallet account.
- or -
- ▶ The first time you use your device to buy an item from Google Play, you're prompted to enter your billing information to set up a Google Wallet account.

Warning: When you've used Google Wallet once to purchase an application from Google Play, the device remembers your password, so you don't need to enter it the next time. For this reason, you should secure your device to prevent others from using it without your permission. (For more information, see [Security](#).)

Request a Refund for a Paid Application

If you are not satisfied with an application, you must ask for a refund within 15 minutes of purchase, unless otherwise stated by the app developer. Your credit card is not charged and the application is uninstalled from your device.

If you change your mind, you can install the application again, but you can't request a refund a second time.

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. Touch the application to uninstall for a refund. The details screen for the application opens.
4. Touch **Refund**. Your application is uninstalled and the charge is cancelled.
5. Choose the reason for removing the application, and then touch **OK**.

Open an Installed Application

There are several options for opening an installed application.

- ▶ On the status bar, check if you see the  icon. If you see the  icon, open the Notifications panel, and then touch the app to open it.

- or -

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps** and then touch the new app icon.

Uninstall an Application

You can uninstall any application that you have downloaded and installed from Google Play.

1. Press **Home** , and touch  > **Play Store**.
2. Press **Menu** , and touch **My Apps**.
3. On the Downloads screen, touch the application you want to uninstall, and then touch **Uninstall**.
4. When prompted, touch **OK** to remove the application on your device.
 - Choose the reason for removing the application, and then touch **OK**.

- or -

1. Press **Home**  > **Menu** , and touch **System settings** > **Apps**.
2. Touch the **DOWNLOADED** tab and touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application on your device.
4. Touch **OK**.

Get Help with Google Play

If you ever need help or have questions about Google Play, press **Menu** , and then touch **Help**. The Web browser will take you to the Google Play Help Web page.

Navigation

Your device offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

[Google Maps](#)

[TeleNav GPS Navigator](#)

[Google Navigation](#)


[Google Latitude](#)

Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your device. Determine your current location with or without GPS, get driving and transit directions, get phone numbers and addresses for local businesses.

Opening Google Maps

- Press **Home** , and touch  > **Maps**.

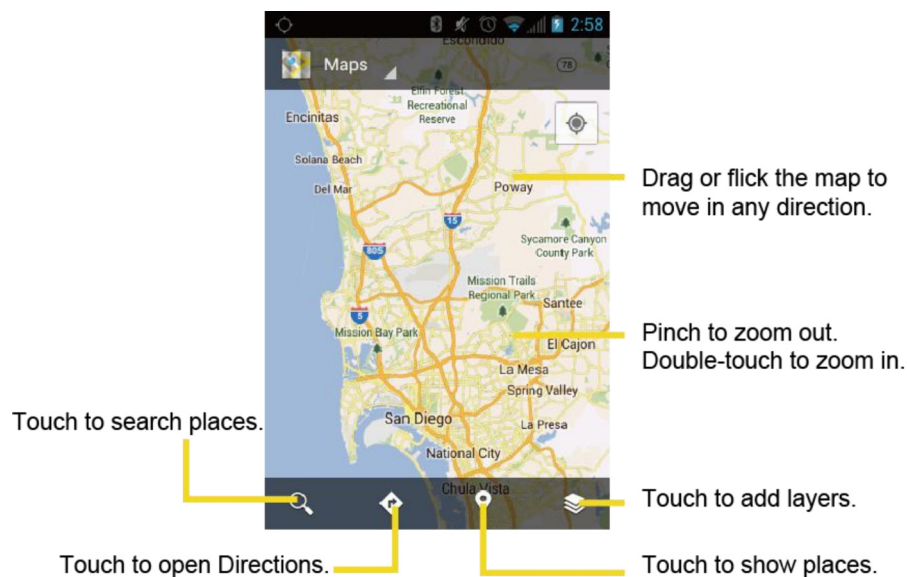

Finding Your Current Location

Note: Don't forget to set your location sources.

On the Google Maps screen, touch . A blinking blue arrow indicates your current location on the map. This feature is available when **Google's location service** or **GPS satellites** is enabled. See [Location](#).

Searching Maps

1. On the Google Maps screen, touch .
2. Type the place that you want to search. You can enter an address, a city, or type of establishment.

Tip: Touch  to search by speaking the location you are searching.

3. Touch  or . A callout label appears on the map to indicate the location.
4. Touch the callout to open the menu for the location.

Adding Map Layers

Layers allow you to view locations and additional info overlaid on the map.

On the Google Maps, touch  and then touch one or more of the following options:

- **Traffic:** Add this layer to view real-time traffic conditions with roads marked in color-coded lines that indicate the traffic condition. This mode is available in selected areas only.
- **Satellite:** Add this layer to use the same satellite data as Google Earth. The images are not real-time and are approximately one to three years old.
- **Terrain:** Add this layer for a shaded relief view of topographic features.
- **Transit Lines:** Add this layer to provide geographic representations of transit lines. This mode is available in selected areas only.
- **Latitude:** Add this layer to see your friends' locations and share yours with them. You may sign in with your Google account to use this feature.
- **My Maps:** Adds this layer to display the Google My Maps on the Google Maps of your device.
- **Bicycling:** Adds this layer to provide the road map suitable for bicycling.
- **Wikipedia:** Adds this layer to provide a list of Wikipedia articles that are geo-referenced. An extract of the Wikipedia article can be accessed by clicking on the icon, a link to the full version of the Wikipedia article is also available.

Getting Directions

1. On the Google Maps screen, touch .
2. Do one of the following:
 - The starting point is set to your current location as default. Touch  to change your starting point place.
 - Touch **End point:** and type your destination or touch  to select the destination from the list.
3. Select the way to get to the destination (by car, by train, or by foot).
4. Touch **GET DIRECTIONS**. The directions to your destination appear in a list or on the map. Touch **NAVIGATION** to open Google Navigation to navigate you to your destination.

Clearing the Map

When you have reached your destination, press **Menu**  > **Clear Map** to reset the map.

TeleNav GPS Navigator

TeleNav GPS Navigator gives you turn-by-turn directions onscreen and over speakerphone.

Note: Depending on your service plan, TeleNav GPS Navigator may require a monthly subscription. Contact Boost Mobile for information and pricing.

Note: If TeleNav GPS Navigator isn't already installed on your device, you can download it from BoostZone: Press **Home** , and touch  > **BoostZone** > **Boost Applications**.

Registering TeleNav GPS Navigator

Before you can use TeleNav GPS Navigator, your device and service must be registered.

1. Press **Home** , and touch  > **TeleNav GPS Navigator**.
2. Follow the onscreen instructions to enter and submit the required information.

Using TeleNav GPS Navigator

1. Press **Home** , and touch  > **TeleNav GPS Navigator**.
2. Select an option and follow the onscreen instructions to get directions or view maps.
 - **Drive To** lets you enter an address (by speaking it or by using the keypad) or select from categories such as My Favorites, Recent Places, Address, Contacts, Places, or Airport to search for turn-by-turn directions.
 - **Places** provides a categorized list of locations such as Gas Stations, Grocery Stores, and Hospitals to help find local businesses and services.
 - **Maps & Traffic** lets you view maps and get traffic information for your current location or for any other location (same categories as **Drive To**).
 - **Local Apps** provides access to additional features such as Movies, Weather, and more.

Note: For more information about TeleNav GPS Navigator, visit Boostmobile.com.

Google Navigation

Another Google Maps navigation application is available on your device. It provides turn-by-turn voice guided navigation using your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press **Home** , and touch  > **Navigation**.
2. If you see the onscreen disclaimer, read it and touch **Accept** if you agree.
3. Choose from the following onscreen options:
 - **SHORTCUTS** tab
 - **Speak destination** to use the voice recognition feature to search for matching locations in your area.
 - **Type destination** to manually enter a destination address.
 - **Go home** to show the route guidance to your home.
 - **Map** to open the Map application .
 - **STARRED** tab to obtain directions to locations that have been starred within Google maps (maps.google.com).
 - **CONTACTS** tab to receive turn-by-turn directions to the address stored for a selected People entry.

Google Latitude

Google Latitude™ user location service lets you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.

Your location is not shared automatically. You must join Latitude, and then invite your friends to view your location or accept their invitations.

Opening Latitude

To join Latitude:

1. Press **Home** , and touch  > **Latitude**.
2. If you see the privacy policy, read it and touch **Agree** If you agree with it.

After you join Latitude, you can start sharing your locations with your friends. Only friends that you have explicitly invited or accepted can see your location.

To open Latitude after joining:

1. Press **Home** , and touch  > **Latitude**.
2. Select the following options.
 - Touch **MAP VIEW** to see you friend on the Google Map.

- Touch  to invite your friend to the Latitude.
- Touch  to check in the Latitude.
- Touch  to refresh the friend list.
- Press **Menu**  > **Location settings** to configure your location reporting and sharing.

Inviting Friends

To share your location with friends and request to see their locations:

1. In Latitude, touch .
2. Choose how to add friends:
 - **Select from Contacts:** Select any number of friends from People.
 - **Add via email address:** Enter an email address and touch **Add friends**.
3. Confirm your friend is checked and touch **Yes**.

If your friends already use Latitude, they receive an email request and a notification on Latitude. If they have not yet joined Latitude, they receive an email request that tells them to sign in to Latitude with their Google account.

Accepting an Invitation

When you get a sharing request from a friend, you see "... new sharing requests" message. Touch it and you can:

- **Accept and share back:** You can see your friends' locations, and they can see yours.
- **Accept, but hide my location:** You can see your friends' locations, but they can't see yours.
- **Don't accept:** No location information is shared between you and your friends.

You can change how your location is shared with each friend at any time. See [Connecting with Your Friends](#) for details.

Showing Your Friends

You can show your friends using the map view or the list view.

Map View:

Touch **MAP VIEW** on the Latitude screen. Google Maps™ shows your friends' locations. Each friend is represented by a photo icon with an arrow pointing at his or her approximate location. If a friend has opted to enable city-level sharing, his or her icon will not have an arrow and it appears in the middle of the city. See [Connecting with Your Friends](#) for more details.

To see your friend's profile and connect with him or her, touch the photo. This will display your friend's name, and then touch the balloon right above his or her icon.

List View:

To show a list of your friends, in Google Maps, press **FRIENDS LIST**.

To see a friend's profile and connect with him or her, select your friend's name from the list.

Connecting with Your Friends

Touch a friend's contact details balloon in map view or touch a friend in list view to open the friend's profile. In the profile screen, you can communicate with your friend and set privacy options.

- **Map:** Find a friend's location on the map.
- **Directions:** Get directions to the friend's location.
- **Ping for check in:** Send this friend a notification asking them to check in.
- **Manage sharing:** Select from the following:
 - **Share best available location:** Share your precise location information.
 - **Share only city level location:** Share only the city you are in, not the street-level location. Your friend can see your photo icon in the middle of the city you are in. To share more precise location again, touch **Share best available location**.
 - **Hide from this friend:** Stop sharing your location with this friend, both in list view and in map view.
- **Remove this friend:** Remove the friend from your list and stop sharing locations with him or her altogether.

Changing Location Settings

You have control over how and when you can be found by your friends. Only the last location sent to Latitude is stored with your Google account. If you turn off Latitude or are hiding, no location is stored.

To change your public profile:

1. Press **Home** , and touch  > **Latitude**.

2. Touch your own name, and then touch **Location settings**.
3. Set the following options to your preferences.
 - **Location reporting:** Let Latitude detect and update your location as you move. The update frequency is determined by several factors, such as how recently your location has changed.
 - **Enable location history:** Store your past location and visualize them on the Latitude website.
 - **Manage your friends:** Add or remove friends who can see your location.
 - **Sign out of Latitude:** Disable Latitude and stop sharing your location or status. You can always join Latitude again.
 - **Automatic check-ins:** Check you into places you have designated.
 - **Check-in notifications:** Enable notifications that suggest places to check in.
 - **Manage your places:** View and modify your automatic check-ins and muted places.

Music Player

Play Music plays digital audio files saved on the storage card. You need to copy music files to your storage card first to use the Music application. See [Use the Device's microSD Card as a USB Drive](#) for more details on copying files.

Note: If you have signed up for Google Music™, the first time you open the Music application you will be prompted to select the account whose online music library you want to access from the Android Music application. Follow the onscreen instructions to continue.

[Opening the Music Library](#)

[Playing Music](#)

[Search for Music in the Music Library](#)

[Backing Up Your Downloaded Music Files](#)

Opening the Music Library

- Press **Home** , and touch  > **Play Music**. The Music library screen appears.

Playing Music


1. On the Music library screen, touch a category name to view its contents. Available categories are:
 - **RECENT** to show the albums you have listened to recently.

- **ARTISTS** to show your music library sorted by artist.
- **ALBUMS** to show your music library sorted by album.
- **SONGS** to list all of your songs in alphabetical order.
- **PLAYLISTS** to select a customized playlist you've created.
- **GENRES** to show your music library sorted by genre.


2. Touch a song in your library to play it. The Now playing screen opens.

- or -

Touch the triangular menu button  next to an item and touch **Play**.

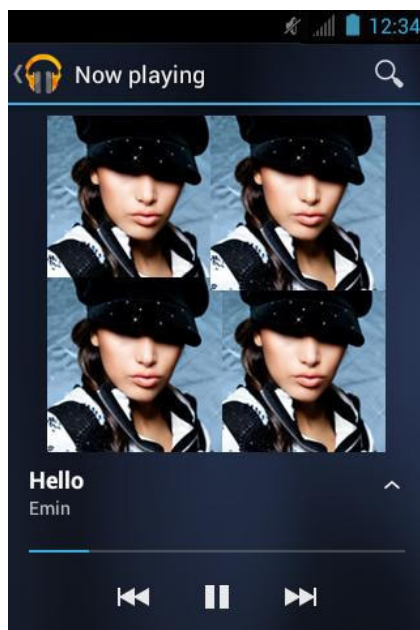

3. Touch  to show options. The following options are available for the control:

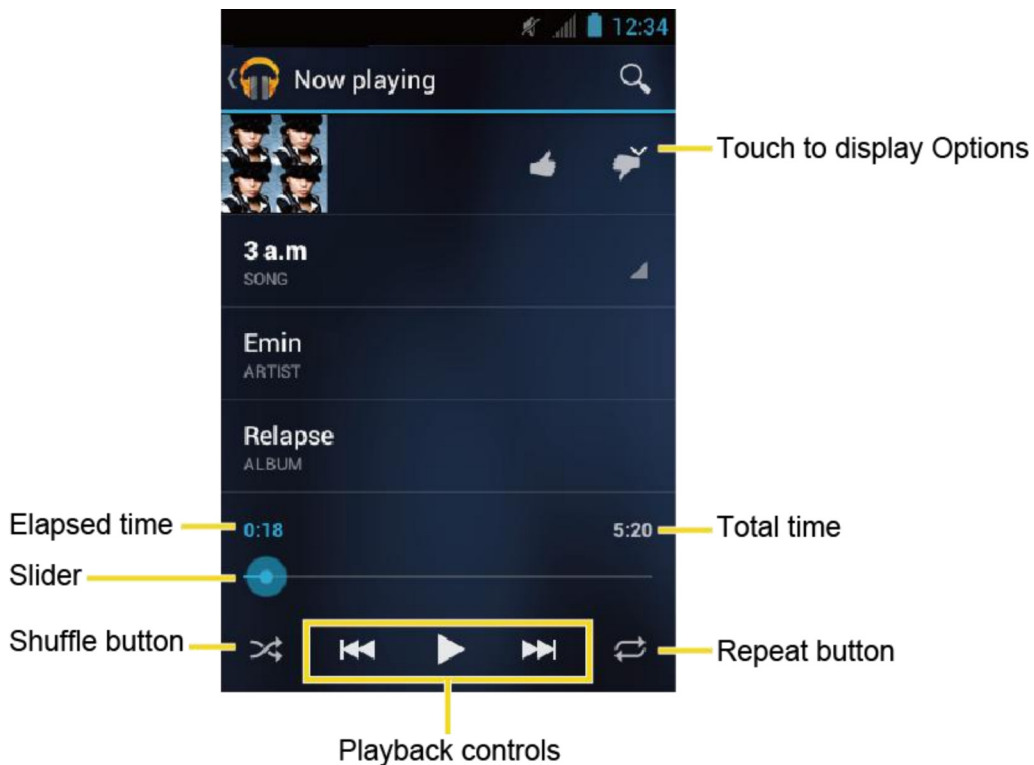

- Touch the playback controls to rewind , pause  /play , and forward .
- Touch the Shuffle button  to toggle shuffle on or off.
- Touch the Repeat button  to cycle through the repeat modes: **Repeating all songs**, **Repeating current song**, or **Repeat is off**.

Displaying Additional Options

While using the Music application you can touch the triangular menu button  next to any song, album, artist, or playlist to view additional options.

- **Play** to play the song.
- **Add to playlist** to add the song to the playlist.
- **More by artist** to show another album of the selected artist.
- **Shop for artist** to open the Play Store and find items related to the artist.
- **Search** to conduct a search using the application that you select.
- **Delete** to delete the song.

Tip: To change the settings in the Android Play Music application, press **Menu**  from the Music library screen, and then touch **Settings**.

Search for Music in the Music Library

Follow the instructions to find music in your Music library.

1. Open the Music library and touch the Search button .
2. Start typing the name of the artist, album, song, or playlist you're looking for. As you type, matching information is displayed on the screen.
3. To select a matched item, touch the item.

Using Playlists

Create a playlist to organize your music.

Creating Playlists

1. Open the Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song you want to add and touch **Add to playlist**.
3. On the Add to playlist window, touch **New playlist**.
4. Type the name of your new playlist and touch **OK**. After you save the playlist, it's added to the Playlists library.

Adding Song to Existing Playlists

1. Open the Music library and browse for the song that you want to add to the playlist.
2. Touch  next to the song you want to add and touch **Add to playlist**.
3. On the Add to playlist window, touch the name of the playlist that you want to add the song to.

Removing Song From Playlists

1. Open the Playlists library.
2. Touch the playlist that contains the music you want to remove.
3. Touch  next to the song you want to remove and touch **Remove from playlist**.

Renaming Playlists

1. Open the Playlists library.
2. Touch  next to the playlist you want to rename and touch **Rename**.

3. Type the new name of the playlist and touch **Rename**.

Playing Song in Playlists

1. Open the Playlists library.
2. Touch  next to the song you want to play and touch **Play**.

Deleting Playlists

1. Open the Playlists library.
2. Touch  next to the playlist you want to delete and touch **Delete**.
3. Touch **OK** to confirm.

Backing Up Your Downloaded Music Files

Boost Mobile recommends you back up your downloaded music files to your computer. Although the downloaded files can only be played on your device and on your account, backing them up to your computer lets you access the files in case your microSD card is lost or damaged, or if you install a new microSD card. See [Use the Device's microSD Card as a USB Drive](#).

1. Connect your device to your computer using a USB cable.
2. Use your computer to navigate to the microSD card's Music folder.
3. Select and copy the music files to a folder on your computer's hard drive.

BoostZone

Important Privacy Message – Boost Mobile's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Boost Mobile to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third party application's policies, don't use the application.

BoostZone is a free application that lets you stay connected to all the latest news and information from Boost Mobile. Included here are, news, feedback, featured applications and trips/tricks for your device.

1. Press **Home** , and touch  > **BoostZone**.
2. From the BoostZone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.

Web and Data

Your device's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

- Wi-Fi
- Data Services

This section addresses your device's data connections and the built-in Web browser. Additional data-related features can be found in [Messaging](#), [Applications and Entertainment](#), and [Tools and Calendar](#).

Wi-Fi

Data Services

Browser

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your device's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

[Turn Wi-Fi On and Connect to a Wireless Network](#)

[Check the Wireless Network Status](#)

[Connect to a Different Wi-Fi Network](#)

Turn Wi-Fi On and Connect to a Wireless Network

1. Press **Home**  > **Menu** , and touch **System settings**.
2. If  is displayed at the right of **Wi-Fi**, Touch it to turn Wi-Fi on.  is displayed and the device will scan for available wireless networks.
3. Touch **Wi-Fi**. The network names and security settings (open network or secured with WEP/WPA/WPA2 PSK) of detected Wi-Fi networks are displayed.
4. Touch a Wi-Fi network to connect. If you selected an open network, you will be automatically connected to the network. If you selected a network that is secured, enter the key, and then touch **Connect**.

Depending on the network type and its security settings, you may also need to enter more information or choose a security certificate.

When your device is connected to a wireless network, the Wi-Fi icon () appears in the status bar and tells you the approximate signal strength. (The above icon indicates maximum signal strength.)

If **Network notification** is enabled, this icon () appears in the status bar whenever the device detects an available open wireless network within range. Press **Menu** () > **Advanced**, and check **Network notification**.

Note: The next time your device connects to a previously accessed secured wireless network, you will not be prompted to enter the security key again, unless you reset your device to its factory default settings.

Note: Wi-Fi networks are self-discoverable, which means no additional steps are required for your device to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

Check the Wireless Network Status

1. Press **Home** () > **Menu** () , and touch **System settings** > **Wi-Fi**.
2. Touch the wireless network that the device is currently connected to. You will see a message box showing the Wi-Fi network name, status, speed, signal strength, and other details.

Note: If you want to remove the device's wireless network settings, touch **Forget** on this window. You need to enter the settings again if you want to connect to this wireless network.

Connect to a Different Wi-Fi Network

1. Press **Home** () > **Menu** () , and touch **System settings** > **Wi-Fi**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section. To manually scan for available Wi-Fi networks touch **SCAN**.
2. Touch another Wi-Fi network to connect to it.

Note: If the wireless network you want to connect to is not in the list of detected networks, scroll down the screen, and touch **ADD NETWORK**. Enter the wireless network settings and touch **Save**.

Data Services

With your service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your device.

Important: Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.

Your User Name

Launch a Web Connection

Data Connection Status and Indicators

Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@myboostmobile.sprintpcs.com." (For example, the third John Smith to sign up for Boost Mobile data services might have jsmith003@ myboostmobile.sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Network. Your user name is automatically programmed into your device. You don't have to enter it.

Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your device.

1. Press **Home**  > **Menu** , and touch **System settings** > **System update**.
2. Touch **Update profile**.

Launch a Web Connection

Launching a Web connection is as simple as opening the browser on your device.

- ▶ Press **Home** , and touch  > **Browser**. (Your data connection starts and you see the home page.)

Note: Internet connections can be made either through the data service or via Wi-Fi (configured within the **Settings** > **Wi-Fi**).

While connecting, you may see an animation. Once complete, you are connected to the default home page.

Tip: To change the device's default launch page to your current page, press **Menu** , and touch **Settings > General > Set homepage > Current page**.

Note: The Browser automatically launches when a Web link is touched from within either an email or text message.

Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

	Your device is connected to the 3G Network. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page).
	Your device is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open).

In any state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see [Launch a Web Connection](#).

Browser

Your device's Web browser gives you full access to both mobile and traditional websites on the go, using data service, or Wi-Fi data connections.

[Learn to Navigate the Browser](#)

[Browser Menu](#)

[Select Text on a Web Page](#)

[Adjust Browser Settings](#)

[Adjust Browser Privacy and Security Settings](#)

[Adjust Browser Accessibility Settings](#)

[Adjust Browser Advanced Settings](#)

[Adjust Browser Bandwidth Management Settings](#)

[Adjust Browser Labs Settings](#)

[Set Search Engine](#)

[Create Website Settings](#)

[Reset the Browser to Default](#)

[Set the Browser Home Page](#)

[Read Web Page Offline](#)

[Manage Bookmarks](#)

Learn to Navigate the Browser

Navigating through menus and websites during a data session is easy once you have learned a few basics.

Note: Before you access the home page, you may be asked to enter your 10-digit wireless phone number and touch **OK**. Entering your phone number is not required for access to other Web pages.

Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll through a website's page:

- ▶ In a single motion, touch and drag across or up and down a page.

Selecting

To select onscreen items or links:

- ▶ Drag across a page, and then touch or touch an onscreen link to select the link.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Go Back

To go back one page:

- ▶ Press **Back**  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Go to a Web Page

1. Touch the Address field (top of the browser window) and enter a new Web address.
 - As you enter the address, possible matches are displayed within an onscreen list. Touch an entry to launch the desired website.
2. Touch **Go** to launch the new page.

Note: Not all websites are viewable on your device.


Browser Menu

The browser menu offers additional options to expand your use of the Web on your device.

Open the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** . You will see the browser menu.

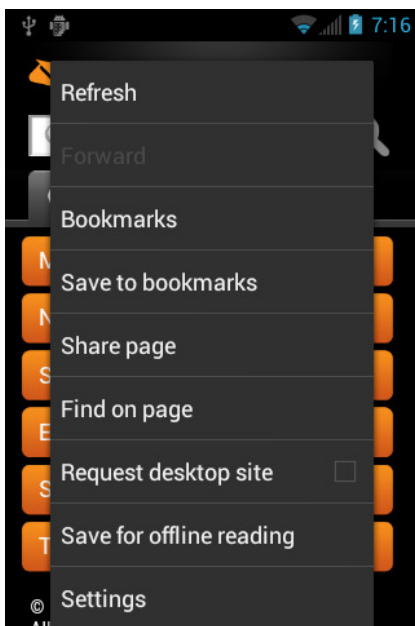

Options available within the browser menu include:


- **Stop:** Stops loading the current Web page.
- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page.
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Save to bookmarks:** Adds the currently viewed page as a bookmark.
- **Share page:** Allows you to send a URL via Gmail, SMS, Email, or Bluetooth.
- **Find on page:** Searches the current Web page for a word.
- **Request desktop site:** Displays the PC site of the current Web page.

- **Save for offline reading:** Saves the current Web page in cache to read it offline.
- **Settings:** Lets you configure and manage your browser settings.

Select Text on a Web Page

You can highlight text on a Web page and copy it, search for it, or share it.

1. Scroll to the area of the Web page containing the text you want to select.
2. Touch and hold the text you want to copy. Drag tabs to expand or reduce the range of selected text. Any selected text will appear highlighted.

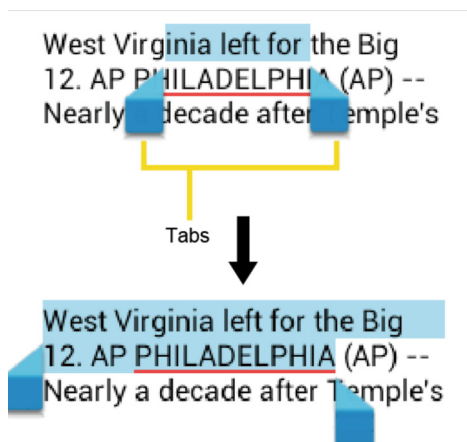

Tip: Touch **SELECT ALL** to select all the text on the Web page.

3. Touch  and select the following options.
 - **Copy** to copy the selected text.
 - **Share** to share the selected text via Bluetooth, Gmail, or messaging, etc.
 - **Find** to find the selected text on the Web page.
 - **Web Search** to search the selected text on Internet.

Adjust Browser Settings

You can change the settings for your browser, including setting your home page, and more.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **General**.
3. Select from one of the following browser general settings.
 - **Set homepage:** Sets the current home page for the Web browser.

- **Form auto-fill:** Fills out web forms with a single touch.
- **Auto-fill text:** Sets up text to auto-fill in web forms.

Adjust Browser Privacy and Security Settings

You can adjust your browser's privacy and security settings such as whether or not to save passwords, history, or cache.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > Privacy & security**.
3. Select from one of the following browser privacy and security settings.
 - **Clear cache:** Deletes all currently cached data. Touch **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Touch **OK** to complete the process.
 - **Show security warnings:** Notifies you if there is a security issue with the current website. Clear the check mark to disable this function.
 - **Accept cookies:** Allows sites that require cookies to save and read cookies from your device.
 - **Clear all cookie data:** Clears all current browser cookie files. Touch **OK** to complete the process.
 - **Remember form data:** Allows the device to store data from any previously filled-out forms. Clear the check mark to disable this function.
 - **Clear form data:** Deletes any stored data from previously filled out forms. Touch **OK** to complete the process.
 - **Enable location:** Allows sites to request access to your current location (using the built-in GPS function).
 - **Clear location access:** Clears location access for all websites. Touch **OK** to complete the process.
 - **Remember passwords:** Stores user names and passwords for visited sites. Clear the check mark to disable this function.
 - **Clear passwords:** Deletes any previously stored user names or passwords. Touch **OK** to complete the process.

Adjust Browser Accessibility Settings

You can adjust your browser's accessibility settings such as font size or screen inversion.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > Accessibility**.
3. Select from one of the following browser accessibility settings.
 - **Force enable zoom:** Overrides a website's request to control zoom behavior.
 - **Text scaling:** Changes text size as you see on its preview screen.
 - **Zoom on double-tap:** Enables zoom function by double-tapping the screen.
 - **Minimum font size:** Sets the minimum font size on the Web as you see on its preview screen.
 - **Inverted rendering:** Inverts the screen image. Black becomes white and vice versa. When enabled, you can set the contrast using the Contrast slider.

Adjust Browser Advanced Settings

You can adjust your browser's advanced settings such as setting search engine or default zoom.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > Advanced**.
3. Select from one of the following browser advanced settings.
 - **Set search engine:** Sets the search engine. See [Set Search Engine](#).
 - **Open in background:** New pages are launched in a separate page and displayed behind the current one. Clear the check mark to disable this function.
 - **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Clear the check mark to disable this function.
 - **Enable plug-ins:** Allows you to determine the way your device handles program enhancements. Select **Always on**, **On demand**, or **Off**.
 - **Website settings:** Allows you to configure advanced settings for individual websites.
 - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
 - **Open pages in overview:** Provides an overview of recently opened pages.
 - **Auto-fit pages:** Allows Web pages to be resized to fit as much of the screen as possible.

- **Block pop-ups:** Prevents pop-up advertisements or windows from appearing onscreen. Clear the check mark to disable this function.
- **Text encoding:** Adjusts the current text encoding.
- **Reset to default:** Resets the browser settings to default.

Adjust Browser Bandwidth Management Settings

You can adjust your browser's bandwidth management settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Bandwidth management**.
3. Select from one of the following browser bandwidth management settings.
 - **Search result preloading:** Allows browser to preload high confidence search results in the background.
 - **Load images:** Displays images on Web pages.

Adjust Browser Labs Settings

You can adjust your browser's labs settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Labs**.
3. Select from one of the following browser labs settings:
 - **Quick controls:** Opens the Quick controls and hide application and URL bars.
 - **Fullscreen:** Enables the full screen mode and hide the status bar.

Set Search Engine

You can select the default search engine.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings** > **Advanced**.
3. Touch **Set search engine** and select a search engine you want to use.

Create Website Settings

You can create settings for individual websites.

1. Press **Home** , and touch  > **Browser**.

2. Press **Menu**  and touch **Settings > Advanced > Website settings**.
3. Touch the website you want to create settings. These advanced settings can be configured for individual sites.
4. Touch the settings(for example, **Clear location access**) to complete the process.

Reset the Browser to Default

You always have the option to restore your browser to its default settings.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > Advanced > Reset to default**.
3. Touch **OK** to complete the process.

Set the Browser Home Page

Customize your Web experience by setting your browser's home page.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu**  and touch **Settings > General > Set homepage**.
3. Select the page you want to set as a home page. Touch **Current page** to select the current page as the home page.

Read Web Page Offline

You can save web pages for offline reading.

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Save for offline reading**. The Web page will be saved in **SAVED PAGES** of the bookmark.

To view the saved pages:

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch the **SAVED PAGES** tab and select the page you want view. If you want to view the page online, press **Menu**  > **Go live**.

Manage Bookmarks

Make browsing easier by setting up and using custom bookmarks.

Show Bookmarks

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**. Three tabs are revealed.
 - **BOOKMARKS**: Displays a list of your current Web bookmarks.
 - **HISTORY**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Last 7 days**, and **Most visited**.
 - **SAVED PAGES**: Displays a list of websites you saved for offline reading. Touch an entry to launch the selected page.

Create Bookmarks

1. Press **Home** , and touch  > **Browser**.
2. Open the Web page you want to bookmark.
3. Press **Menu** , and touch **Save to bookmarks**.
4. Enter a descriptive name for the new bookmark.
5. Select an account you want to add the bookmark.
6. Select where to save the bookmark and touch **OK**.

Create Bookmarks From History Tab

1. Press **Home** , and touch  > **Browser**.
2. Press **Menu** , and touch **Bookmarks**.
3. Touch the **HISTORY** tab.
4. Touch an entry from the list and press  > **Save to bookmarks**.

Camera and Video

You can use the camera or camcorder to take and share pictures and videos. Your device comes with a 3.2 megapixel camera that lets you capture sharp pictures and videos.

[Take Pictures](#)

[Record Videos](#)

[Camera/Video Settings](#)

[View Pictures and Videos Using Gallery](#)

[Working with Photos](#)

[Share Photos and Videos](#)

Take Pictures

Important: Make sure the microSD card is installed before you use the camera or camcorder. All pictures or videos that you capture using your device are stored on the microSD card. For more information on how to install a microSD card on your device, see [Install a microSD Card](#).

[Open the Camera](#)

[Camera Viewfinder Screen](#)

[Review Screen](#)

[Take a Picture](#)

[Close the Camera](#)

Open the Camera


Follow the instructions below to open the camera in photo mode and take photos.

► Press **Home** , and touch  > **Camera**.

Tip: You can open the camera from the lock screen. Flick .

Camera Viewfinder Screen

You'll find the following controls on the camera viewfinder screen.

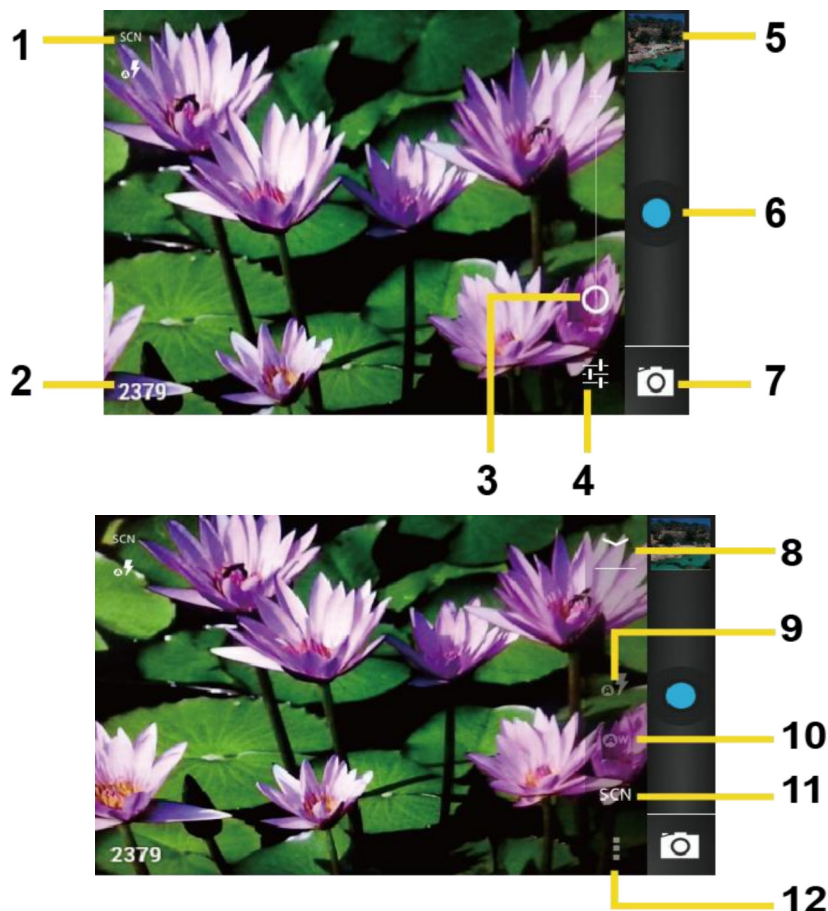

1. **Camera mode icons:** Displays the current camera modes.
2. **Available shot:** Displays the number of shots left available (depending on the capacity of the microSD card).
3. **Zoom slider:** Drag this slider to change the zoom settings. You can also change the zoom settings by pressing the volume button up or down.
4. **Settings button:** Reveals the additional camera mode buttons (8-12).
5. **Thumbnail:** Thumbnail of the latest picture. Touch to view and manage.
6. **Shutter button:** Touch to take a picture.
7. **Switch button:** Touch to select camera or camcorder.
8. **Close button:** Touch to close the camera mode buttons(9-12) and return to the zoom slider.
9. **Flash mode button:** Touch to select the flash mode.

10. **White balance button:** Touch this button to change the white balance to enable the camera to capture colors more accurately by adjusting to your current lighting.


11. **Scene mode button:** Touch to select a scene mode.

Note: If you select items other than **Auto**, you cannot select **Auto Exposure**, **Flash mode**, and **White balance**.

12. **Camera settings button:** Opens the camera settings menu and lets you change the camera settings. For more information, see [Camera/Video Settings](#).

Review Screen

After capturing a photo or video, touch the thumbnail and the review screen is displayed. You can instantly share your photos or videos. See [Share Photos and Videos](#). Touch the Gallery icon to edit your photos or videos. See [View Pictures and Videos Using Gallery](#).

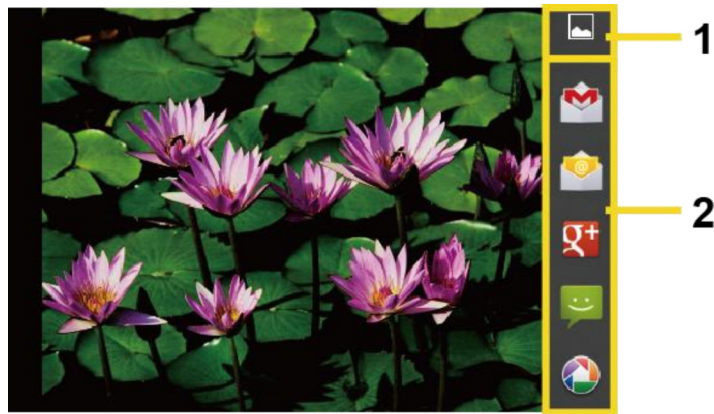

1. **Gallery:** Opens the Gallery application to edit your photos or videos.

2. **Share:** Displays the available applications to share your photos or videos.

Take a Picture

You can take high-resolution pictures using your device's camera.

1. Press **Home** , and touch  > **Camera**.
2. Change the settings if necessary.
3. Frame your subject on the screen.

Tip: Hold the device vertically when taking portrait shots or hold the device horizontally when taking landscape shots. Then you will not need to rotate the photo after capturing it.

4. Touch  to take the photo.

5. Choose what you want to do with the photo you've just taken. See [Review Screen](#) for details.

Close the Camera

On the camera screen, press **Home**  or **Back** .

Record Videos


Record high-quality videos (up to 480p resolution) using your device's video camera.

[Video Viewfinder Screen](#)

[Record a Video](#)

Video Viewfinder Screen

You'll find the following controls on the video viewfinder screen.

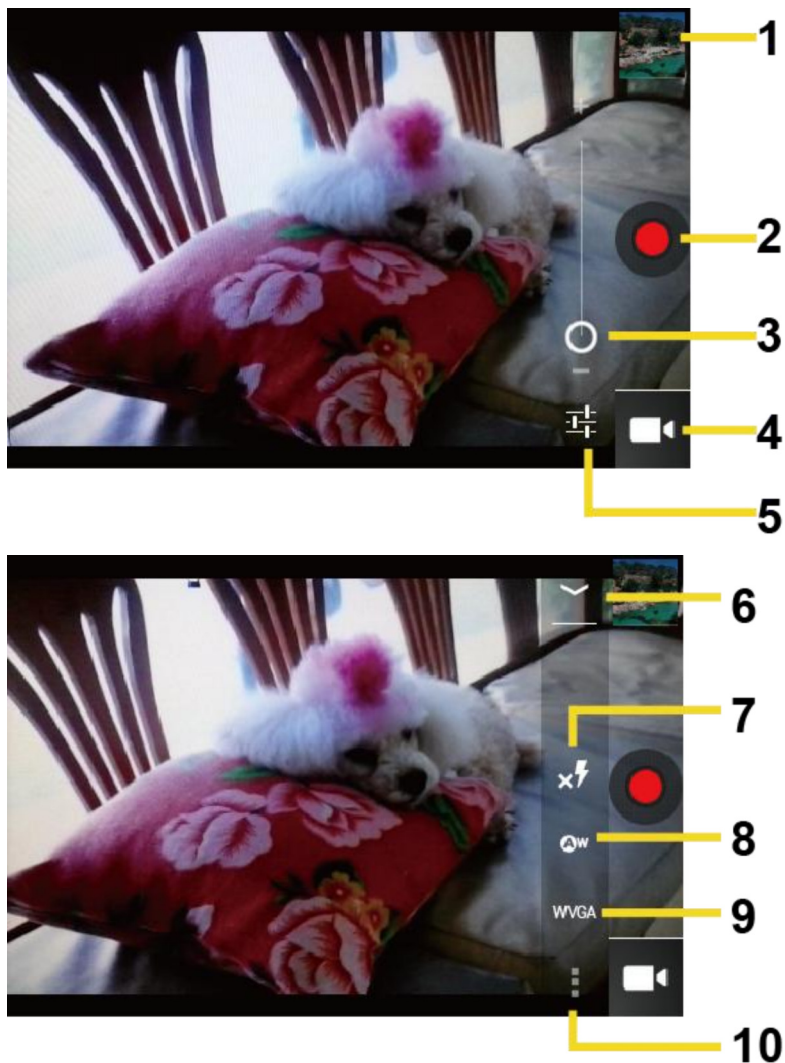

1. **Thumbnail:** Thumbnail of the latest video. Touch to view and manage.
2. **Recorder button:** Touch to take a video. Touch again to stop.
3. **Zoom slider:** Drag this slider to change the zoom settings. You can also change the zoom settings by pressing the volume button up or down.
4. **Switch button:** Touch to select camera or camcorder.
5. **Settings button:** Reveals the additional video mode buttons (6-10).
6. **Close button:** Touch to close the video mode buttons (7-10) and return to the zoom slider.
7. **Flash mode button:** Touch to select the flash mode.
8. **White balance button:** Touch this button to change the white balance to enable the video to record colors more accurately by adjusting to your current lighting.
9. **Video quality button:** Touch to select a video quality.
10. **Video settings button:** Touch this button to change the video settings. For more information, see [Camera/Video Settings](#).

Record a Video

1. Press **Home** , and touch  > **Camera**.
2. Touch  and then touch  to activate camcorder mode.
3. Select **MMS** or **Long video**.
 - **MMS:** Select this option to attach the captured video to your mail. The quality will be automatically set to QCIF (176x144) and the maximum length of a video is 30 seconds.
 - **Long video:** Select this option to capture a long video. The quality can be selectable.
4. Frame your subject on the screen.
5. Touch  to start capturing video.
6. Touch  to stop capturing.
7. Choose what you want to do with the video you've just captured. See [Review Screen](#) for details.

Camera/Video Settings

Follow the steps below to change the camera/video settings.

1. Press **Home** , and touch  > **Camera**.
2. Touch  and then touch  to show the camera/video settings menu.
 - **Store location:** Stores the location information of the picture/video.
 - **Picture size:** Selects from: **3.2M(2048x1536)**, **2.0M(1600x1200)**, **0.8M(1024x768)**, **VGA(640x480)**, or **HVGA(480x320)** (camera only).
 - **Picture quality:** Selects the quality of the pictures from: **Super fine**, **Fine**, or **Normal** (camera only).
 - **Color effect:** Adds a color effect to the picture. Choose from: **None**, **Mono**, **Sepia**, **Negative**, or **Aqua**.
 - **Auto exposure:** Selects the exposure metering range from: **Frame average**, **Center weighted**, or **Spot metering**.
 - **Restore defaults:** Restores all of the camera/video settings to their default values.

View Pictures and Videos Using Gallery

Using the Gallery application, you can view photos and watch videos that you've taken with your device's camera, downloaded, or copied onto your microSD card.

For photos that are on your microSD card, you can do editing. You can also easily make a photo as your contact picture or wallpaper and share photos with your friends.

[Open Gallery](#)

[View Photos and Videos](#)

[Zoom In or Out on a Photo](#)


[Watch a Video](#)

[Close Gallery](#)

Open Gallery

The Gallery application opens in the Albums view where your photos and videos organized by albums for easy viewing.

- Press **Home** , and touch  > **Gallery**.

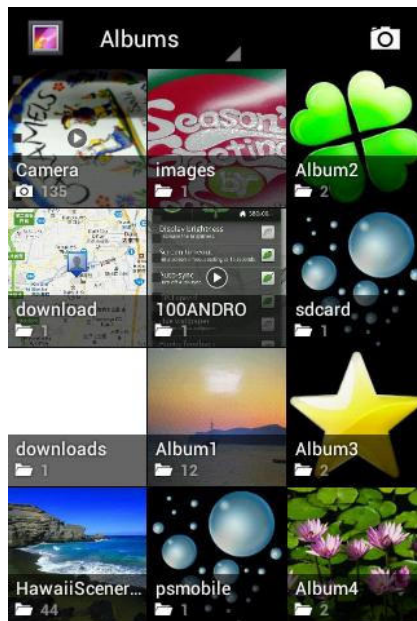

Photos or videos you took with the internal camera are stored in **Camera** album.


Folders in your storage card that contain photos and videos will also be treated as albums and will be listed below **Camera**. The actual folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **download** album.

When viewing pictures in Gallery, scroll left or right the screen to view more albums. Simply touch an album to view the photos or videos in that album.

Note: Depending on the number of pictures stored on the microSD card, it may take some time for Gallery to load all your photos on the screen.

View Photos and Videos

After selecting an album, you can browse through the photos and videos of that album in grid view. Touch a photo or video to view.

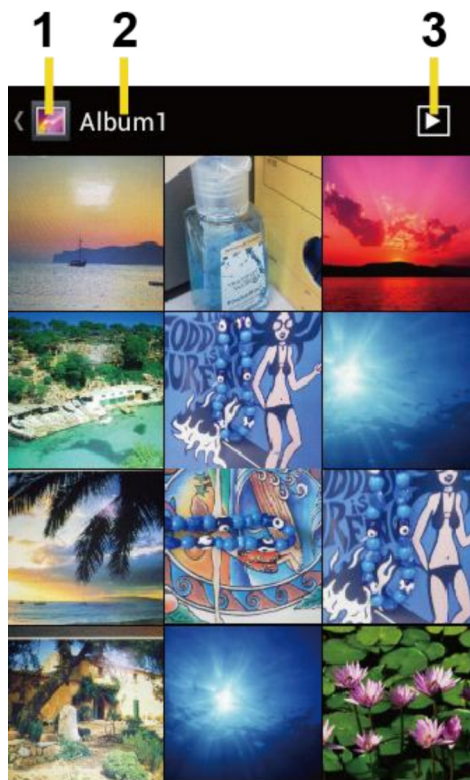

1. Touch to go back to the Gallery screen.
2. Name of the album.
3. Touch to show the slideshow of pictures in this album.

► Press **Menu**  to select pictures or sort pictures.

Zoom In or Out on a Photo

There are two ways you can zoom in or out of a photo.

- Touch the screen twice quickly to zoom in, then touch the screen twice quickly again to zoom out.

- or -

Pinch the screen using your thumb and forefinger to zoom out or spread the screen to zoom in.

Watch a Video

Use the onscreen controls to play, pause, or stop the video.

- Touch  to play the video.

- Touch  to pause the video.

Close Gallery

- While in the Gallery screen, press **Home** .

Working with Photos

You can manage your photos or videos.

Photo Options Menu

Edit a Photo

Rotate and Save a Photo

Crop a Photo

Photo Options Menu


With the picture displayed, press **Menu**  to show the following menu.

- **Delete:** Deletes the selected picture/video.
- **Slideshow:** Starts the slideshow of the pictures stored.
- **Edit:** Edits the picture. See [Edit a Photo](#).
- **Rotate left/Rotate right:** Rotates the picture.
- **Crop:** Crops the picture. See [Crop a Photo](#).
- **Details:** Shows the details of the picture.
- **Set picture as:** Sets the picture as the contact photo or wallpaper.
- **Show on map:** Shows the location where you took the picture in Google Maps if Store location is set to ON. See [Camera/Video Settings](#).

Edit a Photo

Your device has a built in editing tool and you can alter the picture you took easily.

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album and then touch a picture.
3. Press **Menu**  > **Edit**.

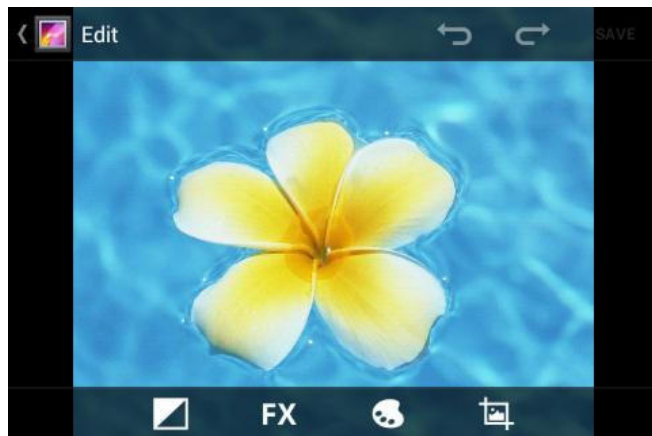

4. Touch the following icon to edit the picture and scroll left and right to select your favorite effect.

-  to add exposure effect.
-  to add artistic effect.
-  to add color effect.
-  to add additional effect.
-  to undo the action.
-  to redo the action.

5. When finished, touch **SAVE**.

Rotate and Save a Photo

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album and then touch a picture.
3. Press **Menu** , and touch **Rotate left** or **Rotate right**.

Crop a Photo

1. Press **Home** , and touch  > **Gallery**.
2. Touch an album, and then touch a picture.
3. Press **Menu** , and touch **Crop**. A crop box then appears on the photo.



4. To adjust the crop box size, press and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
5. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
6. Touch **CROP** to apply the changes to the picture.

The cropped picture is saved on the storage card as a copy. The original picture remains unedited.

Share Photos and Videos

The Gallery application lets you send photos and videos using email or multimedia messages. You can share photos on your social networks such as Picasa and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

[Send Photos or Videos by Email/Gmail](#)

[Send Photos or Videos by Multimedia Message](#)

[Send Photos or Videos Using Bluetooth](#)

[Share Photos or Videos on Google+](#)

[Share Photos on Picasa](#)

[Share Videos on YouTube](#)

Send Photos or Videos by Email/Gmail

You can send several photos, videos, or both in an email/Gmail message. They are added as file attachments in your email.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Press the photo or video until you see a blue frame on it. Touch multiple photos and videos to select them.
4. Touch  > **Gmail** or **Email**. If you cannot find it, touch **See all...**
5. Compose your message and then touch .

Note: If you selected **Email** and you have multiple email accounts, the default email account will be used.

Send Photos or Videos by Multimedia Message

Although you can send several photos or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Press the photo or video until you see a blue frame on it. Touch multiple photos and videos to select them.
4. Touch  > **Messaging**. If you cannot find it, touch **See all...**
5. Compose your message and then touch  .

Send Photos or Videos Using Bluetooth

You can select several photos, videos, or both and send them to another phone or your computer using Bluetooth.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Press the photo or video until you see a blue frame on it. Touch multiple photos and videos to select them.
4. Touch  > **Bluetooth**.

5. In the next few steps, you'll be asked to turn on Bluetooth on your device and connect to the receiving Bluetooth device so the files can be sent. For more information, see [Bluetooth](#).

Share Photos or Videos on Google+

You need to be signed in to a Google account to share photos, videos, or both on Google+.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Press the photo or video until you see a blue frame on it. Touch multiple photos and videos to select them.
4. Touch  > **Google+**.
5. Follow the instructions on the screen.

Share Photos on Picasa

You need to be signed in to a Google account to upload pictures to the Picasa™ photo organizing service.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Press the photo or video until you see a blue frame on it. Touch multiple photos and videos to select them.
4. Touch  > **Picasa**.
5. Select the online album where you want to upload the pictures, or touch  to create a new album.
6. Touch **Upload**. You can view the photos online at picasaweb.google.com.

Share Videos on YouTube

You can share your videos by uploading them to YouTube™. Before you do this, you must create a YouTube account and sign in to that account on your device.

1. Press **Home** , and touch  > **Gallery**.
2. Touch the album that contains the videos you want to share.
3. Press the video until you see a blue frame on it. Touch multiple videos to select them.
4. Touch  > **YouTube**.

5. Enter the prompted information, such as description and tags, and select a privacy option.
6. Touch **Upload**.

Tools and Calendar

Learn how to use many of your device's productivity-enhancing features.

[Calendar](#)

[Clock & Alarm](#)

[Calculator](#)

[Voice Service](#)

[Eco Mode](#)

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your device's Calendar stays in sync with your Calendar on the Web, or the corporate calendar.

[Add an Event to the Calendar](#)

[Invite Guests to Your Event](#)

[Event Alerts](#)

[View Events](#)

[Erase Events](#)

[Show or Hide Calendars](#)

[Synchronize Calendars with Your Device](#)

Add an Event to the Calendar

Add events to your calendar directly from the Calendar application.

1. Press **Home** , and touch  > **Calendar**.
2. On any Calendar view, press **Menu** , and touch **New event**.
3. If you have more than one calendar, select a calendar in which to add the event.

Note: You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the

Calendar application on your device. For more information about creating and managing multiple Google Calendars, visit the Google website: calendar.google.com.

Note: If you have synchronized your device with a corporate account, you can also select these calendars.

4. Enter a name for the event.
5. Enter the event location.
6. To specify the date and time of the event, do one of the following:
 - If there is a time frame for the event, touch the **FROM** and **TO** dates and times to set them.
 - If the event is a special occasion such as a birthday or an all-day event, set the **FROM** and **TO** dates, and then select the **ALL DAY** check box.
7. Select the time zone for the event.
8. Enter email addresses to invite guests to your event and add the event descriptions. See [Invite Guests to Your Event](#).
9. If the event occurs on a regular basis, touch the **REPETITION** box and then choose how often the event occurs.
10. Set the event reminder time and select how you are notified.

Note: You can add another reminder time in a Google Calendar event. Touch **Add reminder** to add another reminder.

11. Select your status to be displayed on your calendar.
12. Set the privacy status of this event.
13. Touch **DONE**.

Invite Guests to Your Event

If you want to invite guests to your event, you need to create and add the event in your Google Calendar.

An email invitation will be sent to your guests using your Google or Corporate account.

1. Open Calendar and create a new event. Select your Google account (or one of your other Google Calendars). See [Add an Event to the Calendar](#).
2. Add details about the event, such as date and time, location, and more.
3. In the **GUESTS** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas.

4. Add the description of the event to be displayed on the email to your guests.
5. Touch **DONE** to add the event to your Google Calendar.

If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.

Event Alerts

When your device is turned on and you have an event alarm scheduled, your device alerts you and displays the event summary.

There are several ways your device alerts you to scheduled events:

- By playing the assigned ringtone or vibration.
- By showing the  icon on the status bar.
- By showing the Alert pop-up screen.

Event Reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you of the upcoming event.

To view, dismiss, or postpone the reminder:

1. Slide the status bar down to open the Notifications panel.
2. Touch the upcoming event name to display the event.

Note: If you have other pending event reminders, these events will also appear on the screen.

3. Do one of the following:
 - Touch **Snooze all** to postpone all event reminders for five minutes.
 - Touch **Dismiss all** to dismiss all event reminders.
 - Press **Back**  to keep the reminders pending in the notifications area of the status bar.

To set reminder settings:

- On any Calendar view, press **Menu** , and touch **Settings > General settings**, and set the items under **REMINDER SETTINGS**.


View Events

You can display the Calendar in daily, weekly, monthly, or agenda view. To change the Calendar view, touch the month and year displayed at the upper left corner, and touch **Day**, **Week**, **Month**, or **Agenda**.

The color of the events indicate the type of calendar that includes the event. To find out what each color represents, press **Menu** , and then touch **Calendars to display**.

Day View and Agenda View


Day view displays a list of the events of one day. Agenda view shows a list of all your events in chronological order.

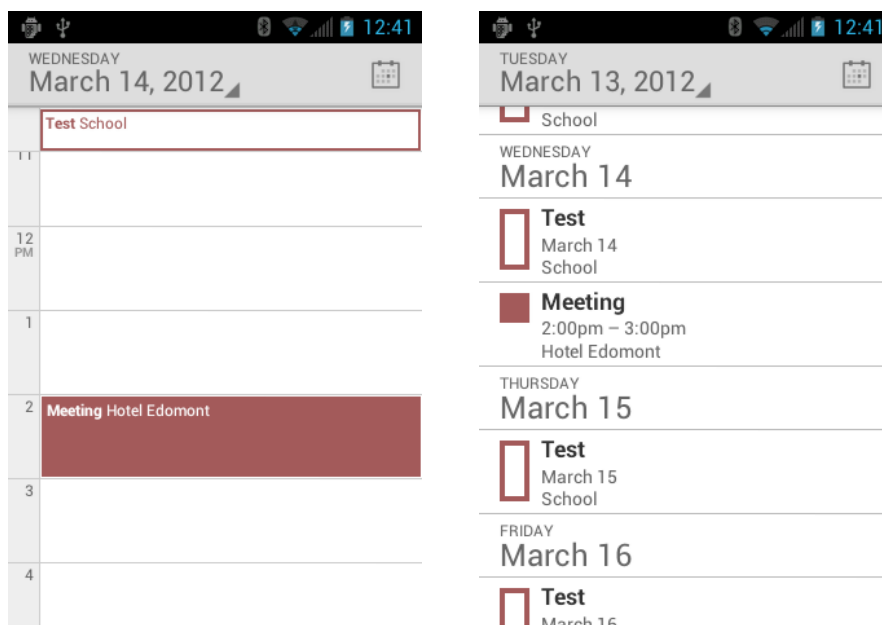

When in Day view, slide left or right across the screen to view earlier or later days.

Week View

Week view displays a chart of the events of one week.

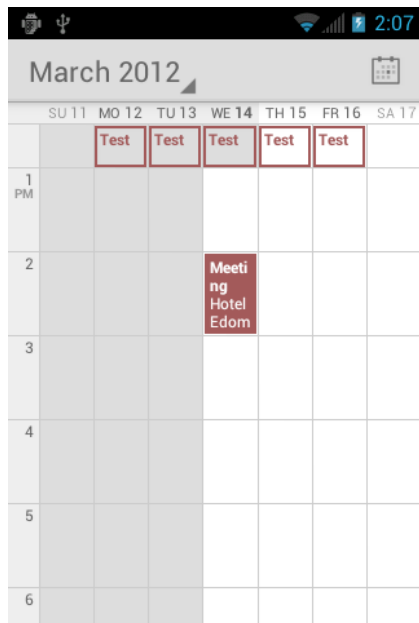


When in Week view:

- You can touch and hold on a time slot to create an event.
- Touch an event to view its details.
- Slide left or right across the screen to view earlier or later weeks.

Month View

In Month view, you'll see markers on days that have events.

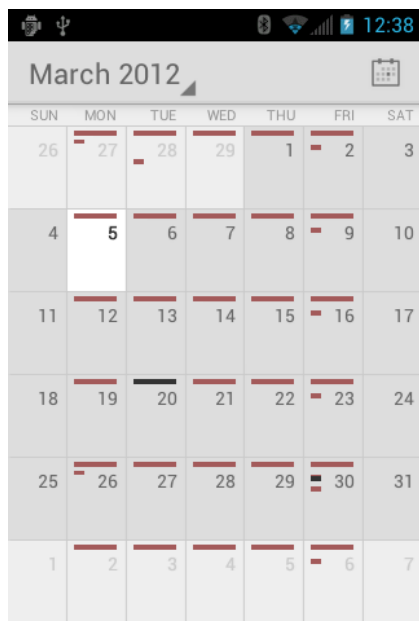

When in Month view:

- Touch a day to view the events of that day.
- Slide up or down the screen to view earlier or later months.

Erase Events

1. Press **Home** , and touch  > **Calendar**.
2. Open the calendar event details.
 - In **Agenda**, **Day**, and **Week** views, touch the calendar event you want to delete.
 - In **Month** view, touch the date where the calendar event occurs, and touch the calendar event.

3. Touch  > **OK**.

- or -

If the calendar event is recurring, select **Only this event**, **This and future events**, or **All events**, and touch **OK**.

Show or Hide Calendars

- ▶ In any Calendar view, press **Menu** , touch **Calendars to display**, and then touch a calendar to check to display or uncheck to hide it.

Synchronize Calendars with Your Device

You can choose which Google Calendars to keep synchronized on your phone or which ones to stop synchronizing.

Synchronizing a Google Calendar

1. Press **Home** , > **Menu** , and touch **System settings** > **Accounts & sync**.
2. Touch the account you want to sync with.
3. Touch **Sync Calendar**.
4. In any Calendar view, press **Menu** , > **Calendars to display** > **Calendars to sync**.
5. Check the calendar to sync and touch **OK**.

Synchronize a Corporate Calendar

If you have set up a corporate account on your device, you can also synchronize corporate calendar events on your device. Calendar events on your corporate account will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

Clock & Alarm

The Clock application functions as a desk clock that shows the date and time. You can also use it to turn your device into an alarm clock.

Opening Clock


Setting an Alarm

Changing Alarm Settings

Opening Clock


The instructions below show how to open the Clock application.

- Press **Home** , and touch  > **Clock**.

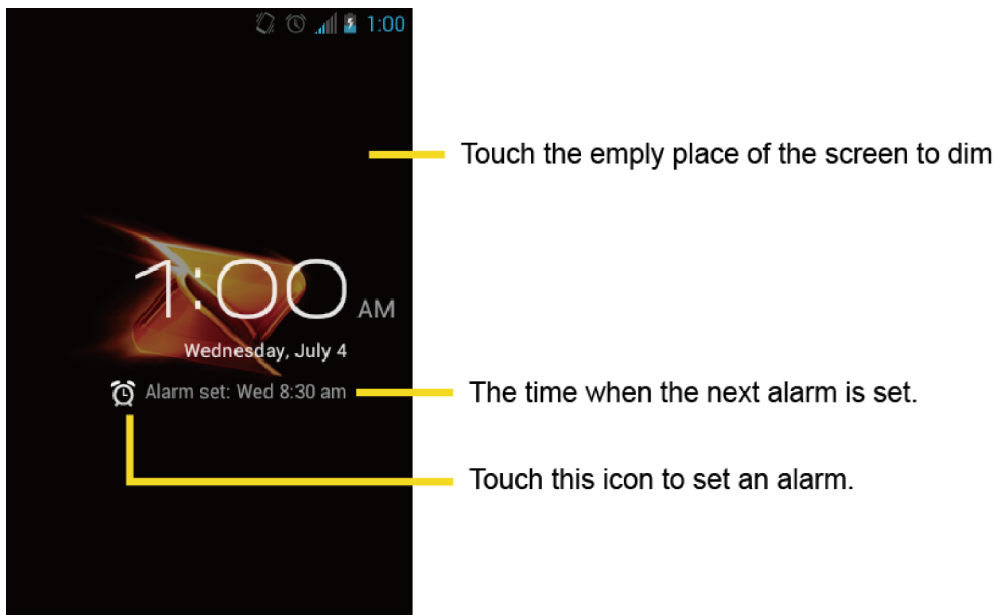

Setting an Alarm

1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.

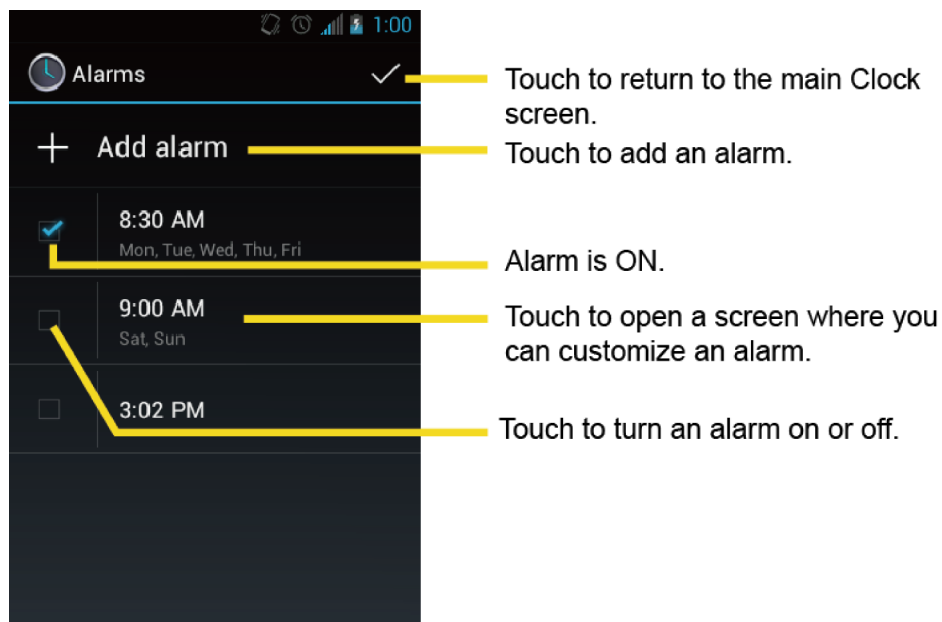

Note: When you first open the alarms, two alarms are set up by default and ready for you to customize. These alarms are turned off by default.

3. Touch an existing alarm to change the settings or touch **Add alarm** to add a new one and set the alarm time.
4. Touch **Time** to adjust the hour and minute by touching  or .
5. Touch **Repeat** to select a repeat status for the alarm.
6. Touch **Ringtone** to select a ringtone that will play as an alarm.
7. Touch **Vibrate** to add a vibration feature to the alarm.
8. Touch **Label** to enter a name for the alarm.
9. Touch **Turn alarm on** to set the alarm on.
10. When you're finished, touch **OK**. (Alarms that are set are checked in blue.)
 - Touch the checkmark next to an alarm to turn it on or off.

To delete an Alarm:

1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.
3. From the Alarms screen, touch a desired alarm, and then touch **Delete**.
4. Touch **OK** to confirm the deletion.

Changing Alarm Settings

1. Press **Home** , and touch  > **Clock**.
2. Touch  on the screen.
3. From the Alarms screen, press **Menu** , and touch **Settings**.
4. Configure the following options.
 - **Alarm in silent mode:** Select to sound the alarm even while the device is in silent mode.
 - **Alarm volume:** Select to set the alarm volume.
 - **Snooze duration:** Select to set the snooze duration from 5 to 30 minutes in 5-minute intervals.
 - **Auto-silence:** Set how long the alarm sounds.
 - **Volume button behavior:** Selects the behavior of the volume button when pressed while the alarm sounds. Choose from: **None**, **Silence**, **Snooze**, or **Dismiss**.
 - **Set default ringtone:** Select to set the ringtone for the alarm.

Calculator

Your device comes with a built-in calculator.

1. Press **Home** , and touch  > **Calculator**.
2. Enter numbers by touching the onscreen keys.
3. Touch **DELETE** to clear a number. Touch and hold to clear an entire number.
4. To access more advanced features, flick the screen left or press **Menu** , and touch **Advanced panel**.
5. Press **Back**  to close the calculator.

Voice Service

[Automatic Speech Recognition \(ASR\)](#)

[Text-to-speech Settings](#)

[Voice Search](#)

Automatic Speech Recognition (ASR)

You can use your device's built-in automatic speech recognition (ASR) software (Voice Dialer) to dial a phone number in your People or to launch device functions. All you have to do is talk into the device, and ASR will recognize your voice and complete tasks by itself.

Activating the Voice Dialer

- Press **Home** , and touch  > **Voice Dialer**.

The device prompts you to say a command from the list displayed on the screen. To complete your task, simply follow the onscreen prompts or touch an onscreen option.

If the application does not recognize the number, name, or application name, it will find the most likely matches and display a list. Touch a selection or touch **Cancel** to exit the Voice Dialer.

Tip: Use ASR in a quiet environment so it can accurately recognize your commands.

Making a Voice Call with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Call** [contact]” or “**Dial** [number].”
3. For example, say “**Call John Smith on mobile**,” to call John Smith’s mobile phone. Your device dials the number stored for the contact “John Smith” with the label “Mobile.”

Opening an Application with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [application name].”
 - For example, say “**Open Calendar**,” to open the Calendar. The application screen is displayed.

Opening a Settings Menu with the Voice Dialer

1. Press **Home** , and touch  > **Voice Dialer**.
2. When prompted to speak, say “**Open** [settings menu name].”
3. For example, say “**Open sound settings**.” The Sound settings menu screen is displayed.

Text-to-speech Settings

Your device can convert text into speech in some downloaded applications. You may select the language you hear or adjust its speed.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Text-to-speech output** under **SPEECH**.
3. Select your engine. Touch  to configure the settings of the selected engine.
4. Touch **Speech rate** and select a speed.
5. Touch **Listen to an example** to play a short demonstration of the set speech synthesis.

Voice Search

Voice Search allows you to find information on the web as well as items and information on your device by speaking your search terms.

1. Touch  on the Google Search Bar.

- or -

Press **Home** , and touch  > **Search** > .

2. Speak clearly into the device's microphone. If an error occurs, touch **Speak again**.
3. Touch a matching item from the onscreen list.

Voice Search Settings

You can configure the settings of the voice search feature.

1. Press **Home**  > **Menu** , and touch **System settings** > **Language & input**.
2. Touch **Voice Search** under **SPEECH**.
 - **Language** to set the language used when entering text by speaking.
 - **SafeSearch** to filter explicit text and images from the search results. Select from **Off**, **Moderate**, or **Strict**.
 - **Block offensive words** to replace recognized offensive words in transcriptions with [#] when entering text by speaking.
 - **Personalized recognition** to improve speech recognition accuracy.
 - **Google Account dashboard** to manage your collected data.

Eco Mode

The Eco Mode allows you to save battery life while using your device.

1. Press **Home** , and touch  > **Eco Mode**.
2. Drag the onscreen slider to select when you use the Eco Mode.
 - **Never**: Disables the Eco Mode.
 - **10-90%**: Selects the remaining battery power when the Eco Mode activates. For example, 40% means the Eco Mode activates when the remaining battery power reaches 40%.
 - **Always**: Sets your device to always use the Eco Mode.
3. Touch **Eco settings** to select the Eco level.
4. Touch the leaf of the following items to select.
 - **Sleep** to set the screen timeout to 15 seconds.
 - **Display brightness** to decrease the display brightness.
 - **Wallpaper** to select the Eco wallpaper.
 - **Auto-sync** to disable automatic synchronization with applications.
 - **Haptic feedback** to turn off Haptic feedback feature.
 - **Auto-rotate screen** to disable the Auto-rotate screen feature.
5. Touch **Close**.

When Eco Mode is on, the Eco Mode icon  appears on the status bar.

Configured settings in the Eco Mode are automatically reflected in the respective **Settings** menu, and vice versa.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

[Turn Bluetooth On or Off](#)

[The Bluetooth Menu](#)

[Connect a Bluetooth Headset or Car Kit](#)

[Reconnect a Headset or Car Kit](#)

[Disconnect or Unpair From a Bluetooth Device](#)

[Send and Receive Information Using Bluetooth](#)

Turn Bluetooth On or Off

Use the Bluetooth menu to enable or disable your device's Bluetooth capabilities.

1. Press **Home**  > **Menu** , and touch **System settings**.
2. If **OFF**  is displayed at the right of **Bluetooth**, touch it to turn Bluetooth on. **ON**  is displayed and the device will scan for available Bluetooth devices.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals. Touch **ON**  and confirm **OFF**  is displayed.

The Bluetooth Menu

You can access to information and controls for your device's Bluetooth feature.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. Touch your device name (at the top of the list) to set your device visible from other devices.

Note: Touch again to set your device not visible from other device. Time duration your device is visible can be changed.

3. Press **Menu**  and set the following options.
 - **Rename phone** to rename your device. See [Change the Device Name](#).

- **Visibility timeout** to select the time duration your device is visible from other devices.
- **Show received files** to show files received using the Bluetooth feature.

Change the Device Name

The device name identifies your device to other devices.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. If the **Bluetooth** is not turned on, touch  to turn Bluetooth on.
3. Press **Menu**  > **Rename phone**.
4. Enter the name for your device in the dialog box, and then touch **Rename**.

Connect a Bluetooth Headset or Car Kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

To listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. If the **Bluetooth** is not turned on, touch  to turn Bluetooth on.
3. Make sure that the headset is discoverable, so that your device can find the headset. Refer to the instructions that came with the headset to find out how to set it to discoverable mode.
4. Touch **SEARCH FOR DEVICES**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of your headset displayed in the Bluetooth devices section, touch the name. Your device then automatically tries to pair with the headset.
6. If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth devices section. When the Bluetooth headset or car kit is connected to your device, the Bluetooth connected icon  is displayed in the status bar. Depending on the type of headset or car kit you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

Note: Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Reconnect a Headset or Car Kit

When you have paired a headset with your device, you should be able to reconnect it automatically by turning on Bluetooth on your device and then turning on the headset. However, sometimes you will need to reconnect manually, for example if you have been using your headset with another Bluetooth device.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. If the **Bluetooth** is not turned on, touch  to turn Bluetooth on.
3. Make sure that the headset is discoverable.
4. Touch the headset's name in the Bluetooth devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the headset or car kit documentation to find the passcode.
6. If you still cannot reconnect to the headset or car kit, follow the instructions in [Disconnect or Unpair From a Bluetooth Device](#), and then follow the instructions in [Connect a Bluetooth Headset or Car Kit](#).

Disconnect or Unpair From a Bluetooth Device

You can manually disconnect or unpair from a Bluetooth device through the Bluetooth settings menu.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. In the Bluetooth devices section, touch the device to disconnect.
3. Touch **OK**.

To unpair from a Bluetooth device:

You can make your device forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. Press **Home**  > **Menu** , and touch **System settings** > **Bluetooth**.
2. In the Bluetooth devices section, touch  at right of the device to unpair.
3. Touch **Unpair**.

Send and Receive Information Using Bluetooth

You can use Bluetooth to transfer information between your device and another Bluetooth-enabled device such as a phone or notebook computer. The first time you transfer information between your device and another device, you need to enter or confirm a security passcode. After that, your device and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

Send Information From Your Device to Another Device

Receive Information From Another Device

Send Information From Your Device to Another Device

You can send the following types of information, depending on the device you are sending to.

- Images and videos
 - Contacts information
1. Set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files.” Refer to the device’s documentation for instructions on receiving information over Bluetooth.
 2. On the device, open the application that contains the information or file you want to send. For example, if you want to send a photo, press **Home** , and touch  > **Gallery**.
 3. Follow the steps for the type of item you want to send:
 - Photo or video (in Camera): After capturing a photo, on the preview screen, touch .
 - Photos and videos (in Gallery): On the Albums tab, touch an album, and select the items you want to share. Touch , and then touch **Bluetooth**.
 - Contacts information: Touch the entry, and then press **Menu** , and touch **Share** > **Bluetooth**.
 4. If you are prompted to turn on Bluetooth, touch **Turn on**.
 5. Touch the name of the receiving device.
 6. If prompted, accept the connection on the receiving device, and enter the same passcode on both your device and the other device, or confirm the auto-generated passcode.
 7. On the receiving device, accept the file.

The location where the information is saved depends on the type of information and the receiving device:

- If you send a contact, it is normally added directly to the contact application on the receiving device.
- If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.
 - On Windows XP, the path may be: C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange.
 - On Windows Vista, the path may be: C:\Users\[your username]\Documents.
- If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another wireless phone, it may be saved in a folder named "Images."

Receive Information From Another Device

Your device is capable of receiving a wide variety of file types with Bluetooth, including photos, videos, or contacts.

To receive files from another device, you need to have a microSD card installed in your device.

1. Press **Home**  > **Menu** , and touch **System settings > Bluetooth**.
2. If the Bluetooth is not turned on, touch  to turn Bluetooth on.
3. Touch your device name to set it visible from other devices.
4. Press **Menu**  > **Visibility timeout**.
5. Select the time duration your device is visible to others.
6. On the sending device, send one or more files to your device. Refer to the device's documentation for instructions on sending information over Bluetooth.
7. If prompted, enter the same passcode on both your device and the other device, or confirm the auto-generated passcode. A Bluetooth authorization request is displayed on your device.
8. Touch **OK**.
9. When your device receives a file transfer request notification, slide down the notifications panel, and then touch **Accept**.
10. When a file is transferred, a notification is displayed. To open the file immediately, slide down the notifications panel, and then touch the relevant notification.

When you open a received file, what happens next depends on the file type:

- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

microSD Card

Your device is equipped with a 2 GB microSD™ (Secure Digital) memory card that allows you to store images, videos, music, documents, and voice data on your device.

Important: Your device comes with the microSD card preinstalled.

[Remove the microSD Card](#)

[Install a microSD Card](#)

[View the microSD Card Memory](#)

[Format the microSD Card](#)

[Use the Device's microSD Card as a USB Drive](#)

[Use the Device's microSD Card as a Media Device](#)


Remove the microSD Card

Remove the battery cover and battery to remove a compatible microSD card into your device.


1. Remove the battery cover. See [Set Up Your Device](#).
2. Grasp the white pull-tab extending from the battery pack and pull the battery out of its compartment.

WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.

3. Slide the SD card holder in the direction of the arrow to unlock it (①).
4. Raise the card and card holder with your fingers (②).
5. Gently pull out the card from the holder (③).

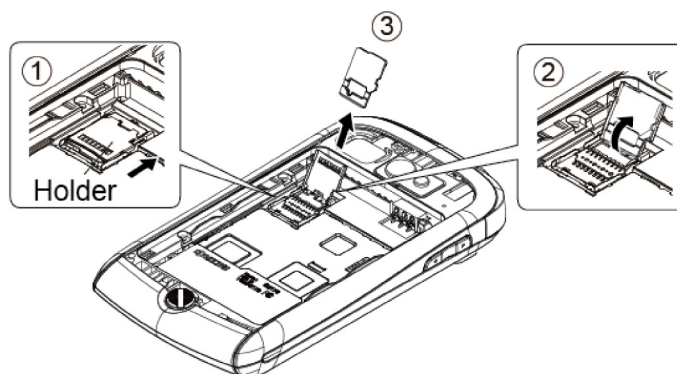

6. Replace card holder and gently press them, and then slide the holder in the direction of arrow to lock it ((4) to (6)).

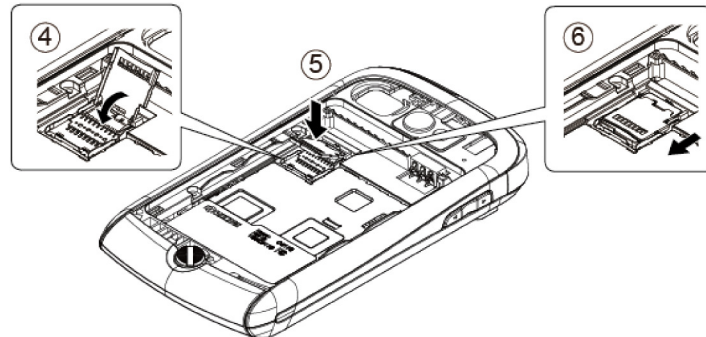

7. Place the battery back into its compartment and replace the battery cover.


Note: You can easily damage the microSD card by improper operation. Please be careful when inserting, removing, or handling the microSD card.

Note: Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.


Install a microSD Card

Remove the battery cover and battery to insert a compatible microSD card into your device.

1. Remove the battery cover and battery.
2. Slide the card holder in the direction of arrow to unlock it.
3. Raise the card holder with your finger.
4. Insert a microSD card into the holder. Make sure to check the position of the gold terminals.

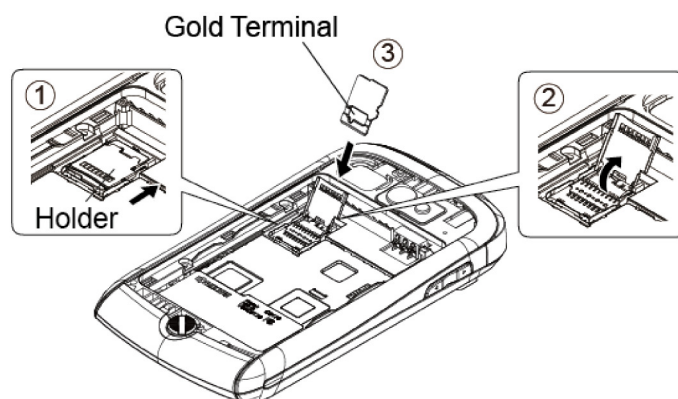

5. Replace the card and card holder and gently press them, and then slide the holder in the direction of arrow to lock it.

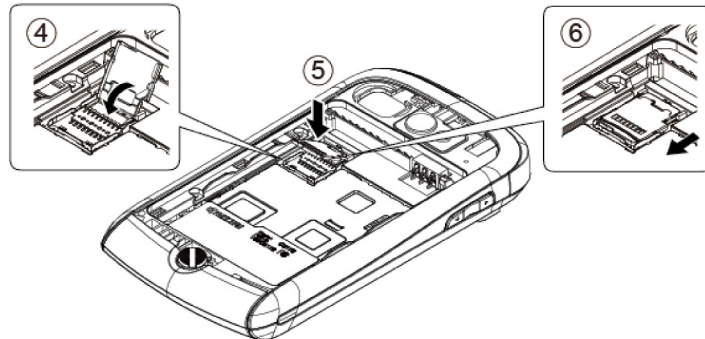

6. Place the battery back into its compartment and replace the battery cover.

View the microSD Card Memory

The Apps settings menu gives you access to your microSD card memory information.

1. With the microSD card inserted, press **Home**  > **Menu** , and touch **System settings > Apps**.
2. Touch **ON SD CARD** tab. The total and available memory space will be displayed at the bottom of the screen.

Format the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press **Home**  > **Menu** , and touch **System settings > Storage**.
2. Scroll down the screen, touch **Erase SD card > Erase SD card > Erase everything**.

Note: The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Use the Device's microSD Card as a USB Drive

To transfer music, pictures, and other files from your computer to your device's microSD card, you need to set the device's microSD card as a USB drive.

1. Connect the device to your computer using the supplied USB cable.
2. If you see  on the status bar, slide it down to open the Notifications panel and touch the USB connection notification.

3. Touch **Mass Storage > Done**. See [PC Connection](#).
4. On your computer, the connected device is recognized as a removable disk. Navigate to this removable disk and open it.
5. Do one of the following.
 - Copy files from the computer to the root folder on the device's storage card.
 - Copy files from the device's storage card to a folder on your computer or computer desktop.
6. After copying the files, unmount the removable disk (that is, the connected device) as required by your computer's operating system to safely remove your device, and disconnect the device from the computer.

Note: The device will not recognize the microSD card when it is connected to a computer as a disk drive. You will not be able to use some of the device's applications such as the Camera or Play Music.

Use the Device's microSD Card as a Media Device

You can connect your device as a media device to your computer.

1. Connect the device to your computer using the supplied USB cable.
2. If you see  on the status bar, slide it down to open the Notifications panel and touch the USB connection notification.
3. Touch **Media Transfer > Done**. See [PC Connection](#).

Important Safety Information

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the portions of your phone where the internal antennas are located while using the phone.
- Speak directly into the mouthpiece.
- Your phone is water-resistant but not waterproof.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.
- Authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all wireless networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Using your phone while driving (or operating the phone without a hands-free device) is prohibited in certain jurisdictions. Laws vary as to specific restrictions. Remember to focus on driving first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Personal Implantable Medical Devices

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always request permission before using the phone in healthcare facilities or near medical equipment.

Turning Off Your Phone Before Flying

To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To help prevent the risk of interference, regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They may include:

- Fueling areas, such as gas stations.
- Below deck on ships and boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.

- Any other area where you would normally be advised to turn off your vehicle's engine, for example.

Note: Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone, make inadvertent emergency calls, or make other calls that may impact your Boost account.

Water Resistance

Your Hydro is water-resistant. To ensure that your device maintains water resistance, the following precautions must be observed.

- Make sure the battery cover is properly attached and locked.
- Make sure the charger/accessory jack is properly sealed, with no foreign objects obstructing the seal. A headphone jack has no cover but it is water-proof.
- Do not expose your phone to water heated in excess of 104° F (40° C), or to liquids other than water, such as detergent, beverages, or chlorinated or treated water.
- Dry your phone as quickly as possible when wet.

Charging

- Dry your phone with a clean cloth before charging.
- Do not touch the charger, charging cable, or charger/accessory jack with wet hands. Doing so may cause electric shock, injury, or product failure.
- Do not charge your phone in a wet or damp place, such as in a bathroom or near a kitchen sink.

Warning: Your phone is designed to withstand exposure to water for up to 30 minutes at a depth not exceeding one meter (about 3.25 feet). Exposing your phone to water outside these limits or not following the above precautions can result in water damage.

Using Your Phone With a Hearing Aid Device

A number of Boost phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was

developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users to find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your Hydro has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise, even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Note: New Technologies, Including Wi-Fi This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be newer wireless technologies (including Wi-Fi) used in this phone that have not been tested for use with hearing aids.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Boost further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store. More information about hearing aid compatibility may be found at: <http://www.fcc.gov>, <http://www.fda.gov>, and <http://www.accesswireless.org>.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display backlight settings to ensure the minimum time interval (see Sleep within [Display](#) section):
 1. Press **Home**  > **Menu** , and touch **System settings > Display > Sleep**.
 2. Touch a delay time to select it.
- Position the phone so the internal antennas are farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Boost is not aware of similar problems with Boost phones resulting from the proper use of batteries and accessories approved by the manufacturer of your phone. Use only manufacturer-approved batteries and accessories through your phone's manufacturer. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- Do not disassemble or open crush, bend or deform, puncture or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Keep the metal contacts on top of the battery clean.
- Battery usage by children should be supervised.

Charging

- In order to avoid damage, charge the battery only in temperatures that range from 32°F to 113°F (0°C to 45°C).

- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Storing

- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4°F to 140°F (-20°C to 60°C)

More than one month:

-4°F to 113°F (-20°C to 45°C)

Disposal of Lithium Ion (Li-Ion) Batteries

- Promptly dispose of used batteries in accordance with local regulations.
- Never dispose of the battery by incineration.
- Do not handle a damaged or leaking Li-Ion battery as you can be burned.
- For safe disposal options of your Li-Ion batteries, contact your nearest Boost authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and

physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Boost-supplied or Boost-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antennas are at least **0.590 inches (1.5 centimeters)** from your body when transmitting. Use of non-Boost-approved accessories may violate FCC RF exposure guidelines.

Other accessories used with this phone for body-worn operations must not contain any metallic components and must provide at least **0.590 inches (1.5 centimeters)** separation distance between the antennas and the user's body.

For more information about RF exposure, visit the FCC website at <http://www.fcc.gov>.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the Hydro are:

PCS mode (Part 24):

Head: 1.14 W/kg; Body-worn: 0.58 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: V65C5170.

More information on the phone's SAR can be found from the following FCC website:

<http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Hydro

Serial No.:

Manufacturer's Warranty

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

Manufacturer's Warranty

Kyocera Communications, Inc. ("KCI") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

A. ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of original purchase, KCI will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS: For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, KCI will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address must be presented to obtain warranty service.

This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by KCI for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the Kyocera device for which it is specified.

This limited warranty covers the Product only as originally supplied and does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KCI for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire,

water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KCI and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); (xi) third party software or applications, data and equipment not originally supplied with the Product; (xii) any Product in which the software has not been updated to the current version; (xiii) any Product in which the operating system has been unlocked (allowing installation of a third party operating system); or (xiv) any Products which have been opened, repaired, modified or altered by anyone other than KCI or a KCI authorized service center. Before returning any Product for service, be sure to back up data and remove any confidential, proprietary, or personal information from the Product. KCI is not responsible for damage to or loss of any software, applications, data or removable storage media.

This warranty is valid only in the United States.

REPAIR OR REPLACEMENT, AS HEREIN ABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. KCI SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT OR LOST APPLICATIONS). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS." KCI MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State. To obtain warranty service, contact Kyocera Communications, Inc.

Attention : Customer Services for Wireless Products

Phone : 1-800-349-4478

Web : <http://www.kyocera-wireless.com>

End Users License Agreement

Kyocera Communications, Inc. (“Kyocera ”) End User License Agreement

CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS (“AGREEMENT”) BEFORE USING OR OTHERWISE ACCESSING THE SOFTWARE OR SERVICES PROVIDED WITH YOUR KYOCERA DEVICE. THE SOFTWARE AND SERVICES PROVIDED WITH YOUR KYOCERA DEVICE ARE SOLELY FOR PERSONAL USE BY YOU, THE ORIGINAL END USER, AS SET FORTH BELOW. BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS KYOCERA DEVICE AND/OR THE SOFTWARE PROVIDED WITH IT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE, DOWNLOAD OR OTHERWISE ACCESS THE SOFTWARE OR SERVICES AND (I) PROMPTLY RETURN THE SOFTWARE OR SERVICE TO KYOCERA OR DELETE IT; OR (II) IF YOU HAVE PURCHASED THE KYOCERA DEVICE ON WHICH THE SOFTWARE OR SERVICE IS PRE-INSTALLED, PROMPTLY RETURN THE DEVICE AND THE ACCOMPANYING SOFTWARE (INCLUDING DOCUMENTATION AND PACKAGING) TO KYOCERA OR THE KYOCERA AUTHORIZED DISTRIBUTOR FROM WHICH YOU PURCHASED THE KYOCERA DEVICE.

License: Subject to the terms and conditions of this Agreement and any other terms that may be incorporated by reference or otherwise presented to you prior to your use of the Software, Kyocera grants you a limited, non-exclusive, license to use Kyocera and third party proprietary software and services found in your Kyocera device and/or packaged with your Kyocera device, including any updates to such material by whatever means provided, and any related documentation (“Software”). You may use the Software only as expressly authorized by this Agreement.

Limitations: This Software is licensed for use only on the single Kyocera device you originally purchased. You acknowledge and agree that ownership of the Software and all other rights associated with the Software not expressly granted in this Agreement are retained by Kyocera or its suppliers or licensors. You are not permitted to, in any way, distribute the Software or make it available over a network for use on more than the single Kyocera device for which it was originally supplied. The Software may be copied only as permitted by applicable law and as necessary for backup purposes. You may not remove any proprietary notices or labels on the Software or any copies thereof. You may not in any way, modify, reverse engineer, decompile, disassemble or create derivative works based on the Software (except to the extent that this restriction is expressly prohibited by law). You agree that you will not attempt to circumvent, disable or modify any security technology associated with the Software. You may use the Software only in a manner that complies with all applicable laws in the jurisdictions in

which you use it, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights and/or the export control regulations.

Some of the Software packaged with your Kyocera device may be provided by third parties ("Third Party Software"). Third Party Software may also be available from third party content distributors such as application stores. Third Party content may be subject to different or additional terms and conditions as determined by the Third Party Software provider. **THIRD PARTY SOFTWARE IS NOT A KYOCERA PRODUCT. KYOCERA IS NOT RESPONSIBLE FOR AND HAS NO LIABILITY WITH REGARD TO THIRD PARTY SOFTWARE.**

Open Source Software: The Software contains certain open source software which may be subject to the GNU General Public License ("GPL"), GNU Library/Lesser General Public License ("LGPL") and/or other copyright licenses, disclaimers and notices ("Open Source License Terms"). The applicable Open Source License Terms for the corresponding Open Source Software are reproduced and available at <http://www.opensource.org/licenses>. Please refer to the Open Source License Terms regarding your rights under such licenses to the Open Source Software. To the extent any such agreement requires that Kyocera provide you the rights to copy, modify, distribute or otherwise use any Open Source Software that are inconsistent with the limited rights granted to you in this Agreement, then such rights in the applicable Open Source License shall take precedence over the rights and restrictions granted in this Agreement, but solely with respect to such Open Source Software.

Disclaimer of Warranty and Liability: THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND. KYOCERA FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, TITLE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION AND SATISFACTORY QUALITY. TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW, THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE REMAINS WITH YOU. IN NO EVENT WILL KYOCERA, ITS EMPLOYEES, OFFICERS, SHAREHOLDERS, LICENSORS, SUPPLIERS, CARRIER OR DISTRIBUTOR CUSTOMERS OR AFFILIATES BE HELD LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF KYOCERA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY IS DEEMED TO HAVE FAILED ITS ESSENTIAL PURPOSE. KYOCERA'S TOTAL LIABILITY FOR ANY DAMAGES UNDER THIS AGREEMENT SHALL NEVER EXCEED THE PURCHASE PRICE YOU PAID FOR THE KYOCERA DEVICE.

No software is fault free. The Software is designed for use in systems that do not require fail-safe performance. You may not use the software in any device or system in which a malfunction

of the software would result in foreseeable risk of loss, injury or death to any person. This includes operation of nuclear or infrastructure facilities, medical equipment, aircraft navigation or communication systems or use in risky or dangerous situations or environments.

Consent to Use of Data: You agree that Kyocera, its affiliates and its designated agents may collect and use technical and related information, gathered in any manner, as part of its product support services. Kyocera, its affiliates and designated agents may use this information solely to improve its products or to provide customized services or technologies to you. Kyocera will collect and use this information in accordance with its privacy policy and accordance with applicable data protection laws. Kyocera, its affiliates and designated agents may disclose this information to others, but not in a form that personally identifies you.

Modification of Software and Terms of Use: Kyocera reserves the right to from time to time modify any portion of the Software. Kyocera may be required to take these actions due to restrictions from third party licensors or due to safety or security concerns or government restrictions or court orders.

Kyocera reserves the right to modify the terms of this Agreement at its sole discretion. Any such modification will be effective upon Kyocera or a Kyocera affiliate or agent sending notice to you by email, text message, other electronic communication or postal mail. Your continued use of the Software after such notice will constitute your binding acceptance of the Agreement as revised. Additionally, some Software may be subject to different or additional terms presented to you through a separate click-through or other type of agreement or notice prior to your use of such Software.

Termination: This License Agreement will automatically terminate without notice from or action by Kyocera if you fail to comply with any term hereof.

Governing Law: This Agreement is governed by the laws of State of California except any conflict of law provisions. The U.N. Convention on Contracts for the International Sales of Goods is hereby excluded in its entirety from this Agreement.

Severability: If any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality or enforceability of the remaining provisions will not in any way be impacted or impaired.

Entire Agreement: By using or otherwise accessing the Software, you agree that this Agreement sets forth the entire agreement between you and Kyocera with regard to the Software and supersedes all prior agreements, notwithstanding the terms of any such agreements.

Notes

- Instructions to perform tasks in this guide may change depending on the software version on your phone.
- All screens in this guide are simulated. Actual displays may vary.
- Certain mobile phone features are dependent on the capabilities and settings of Boost Mobile's network. Additionally certain features may not be activated by Boost Mobile, and/or Boost Mobile's network settings may limit the feature's functionality. Always contact Boost Mobile about feature availability and functionality. All features, functionality and other specifications, as well as the information contained in this user guide are based upon the latest available information and are believed to be accurate at the time of printing. Kyocera Communications, Inc. reserves the right to change or modify any information or specifications without notice or obligation.

Copyrights

© 2012 Kyocera Corporation. All Rights Reserved. BOOST and BOOSTMOBILE and Logo, and the Logo are trademarks of Boost. Other marks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

Android, Google Play, Google Maps, Gmail, and Google Talk are trademarks of Google, Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.



microSD and microSDHC Logos are trademarks of SD-3C, LLC..

Swype and the Swype logos are registered trademarks or trademarks of Nuance Communications, Inc. © 2012 Nuance Communications, Inc. All rights reserved.



Index

- 3-Way Calling, 42
- 411, 7
- Accessory Jack, 10
- Account
 - Google Account, 27
 - Internet Call, 33
 - Manage, 6
- Airplane Mode, 49
- Alarm, 142
 - Changing, 144
- Android Keyboard
 - Settings, 25
 - User Dictionary, 25
 - Voice Input, 24
- Answer a Call, 35
- Applications, 95
- Auto-rotate Screen, 53
- Back Key, 9
- Battery
 - Charge, 3
 - Install, 2
- Bluetooth, 148
 - Car kit, 149
 - Device Name, 149
 - Disconnect, 150
 - Headset, 149
 - Menu, 148
 - Receiving, 152
 - Reconnect, 150
 - Sending, 151
 - Sharing, 133, 134
 - Turning on/off, 148
 - Unpair, 150
- BoostZone, 109
- Brightness, 53
- Browser, 113
 - Accessibility Settings, 117
 - Advanced Settings, 118
 - Bandwidth Management Settings, 119
 - Bookmarks, 120

- Browser Labs Settings, 119
- General Settings, 116
- Menu, 115
- Navigating, 114
- Offline Reading, 120
- Opening, 112
- Privacy Settings, 117
- Resetting, 120
- Search Engine, 119
- Security Settings, 117
- Selecting Text, 116
- Setting Homepage, 120
- Website Settings, 119
- Calculator, 144
- Calendar, 136
 - Adding Event, 136
 - Erasing Event, 141
 - Event Alert, 138
 - Event Reminders, 138
 - Hiding, 141
 - Inviting Guest, 137
 - Synchronizing, 141
 - Viewing Event, 139
- Call Forwarding, 43
- Call Log, 46
 - Clear, 47
- Call Waiting, 42
- Caller ID, 42
- Camcorder, 125
 - Recording, 126
 - Viewfinder, 125
- Camera, 122
 - Closing, 125
 - Lens, 10
 - Opening, 122
 - Review Screen, 124
 - Settings, 126
 - Viewfinder, 122
 - Zoom, 129
- Charge Battery, 3
- Charger/Accessory Jack, 10
- Clock, 142
- Copy, 26
- Copyrights, 172

- Credential Storage, 60
- Data Connection
 - Stauts Indicator, 113
- Data Service, 112
 - User Name, 112
- Date & Time, 62
- Device Administration, 59
- Device Layout (illustration), 9
- Drag, 12
- Eco Mode, 146
- Email, 77
 - Sending Photos, 133
- Emergency Call, 32
- Enhanced 911 (E911), 32
- Enter Text, 17
- Entertainment, 95
- Factory Data Reset, 61
- Favorites tray, 15
- Folder, 15
- Gallery, 127
 - Closing, 130
 - Opening, 127
 - Viewing, 128
- Gestures, 12
- Google Account, 27
 - Add, 29
 - Create, 27
 - Settings, 29
 - Sign In, 28
- Google Talk, 90
- Home Key, 9
- Home Screen, 13
 - Add Items, 14
 - Customize, 14
 - Move or remove items, 14
- In-Call Options, 45
- Incoming Calls
 - Answer, 35
 - Reject, 35
- Internet Call, 33
- Keyboard
 - Android, 22
 - Swype, 17
- Location

- Settings, 56
- Menu Key, 9
- Messaging, 75
 - Sending Photos, 133
- microSD Card, 154
 - Formatting, 156
 - Installing, 155
 - Media Device, 157
 - Memory Information, 156
 - Removing, 154
 - USB Drive, 156
- Mobile ID, 5
 - Installing, 5
 - Switching, 6
- Music
 - Backing up files, 109
 - Playlist, 108
 - Searching, 108
- Mute
 - Ringtone, 35
- My Location, 56
- Notification Icons, 16
- Notifications, 15, 16
- Operator Service, 7
- Paste, 26
- People, 66
- Phone, 30
- Phone Call
 - From People, 31
 - From Recent Calls, 31
 - From text message, 32
 - Make calls, 30
 - Plus Code Dialing, 33
 - Receive, 34
 - Use Internet Call, 33
 - Using phone dialpad, 30
 - With Pause, 33
- Picasa, 134
- Pictures
 - Crop, 131
 - Editing, 130
 - Options Menu, 130
 - Rotating, 131
 - Taking, 124

- Pictures, 122
- Power Button, 10
- Power On, 11
- Proximity Sensor, 10, 54
- Recent Calls
 - Options, 46
 - View, 46
- Reject Incoming Call, 35
- Reset Phone, 61
- Rotate, 13
- Screen Timeout, 53
- Screen Unlock Password, 58
- Screen Unlock Pattern, 57
- Screen Unlock PIN, 58
- Set up
 - Your device, 2
- Settings, 48
 - Android Keyboard, 25
 - Swype, 21
- Setup Application, 3
- Sharing
 - Photos and Videos, 132
- Silent Mode, 51
- Slide or Flick, 12
- Speaker, 10
- Speakerphone
 - Visual Voicemail, 39
- Status Bar, 15
- Status Icons, 15
- Storage
 - Settings, 54
- Swype
 - Settings, 21
 - User Dictionary, 20
 - Voice Input, 20
- Text Entry, 17
- Text Message
 - Make call from, 32
- Text-to-speech, 145
- Tools, 136
- Touch, 12
- Touch and Hold, 12
- Touchscreen
 - Navigation, 12

- Turn on, 11
- Touchscreen keyboard, 17
- Trademarks, 172
- TTY mode, 44
- Turn Device On, 11
- User Dictionary
 - Android Keyboard, 25
 - Swype, 20
- Video, 125
 - Recording, 126
 - Settings, 126
 - Watching, 129
- Visual Voicemail, 35
 - Configure options, 37
 - Enable Speakerphone, 39
 - Listen to multiple messages, 37
 - Review, 36
 - Set up, 4, 36
 - Settings, 38
- Voice Dial, 145
- Voice Input
 - Android Keyboard, 24
 - Swype, 20
- Voice Search, 146
- Voicemail, 4, 36, 40
 - Retrieve messages, 41
 - Set up, 40
- Volume, 51
 - Button, 10
- Wallpaper, 14
- Web, 110
- Wi-Fi, 110
 - Checking Status, 111
 - Connecting, 110, 111
 - Settings, 48
- YouTube, 89, 134