



LG

Life's Good

ENGLISH

User Guide

GS170

P/N : MMBB0386801 (1.0) **H**
Printed in Korea

www.lg.com

Bluetooth QD ID B016032

Congratulations on your purchase of the advanced and compact GS170 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GS170 User Guide

Contents

For Your Safety	3
Getting to know your phone.....	41
Installing the SIM Card & Charging the Battery	42
Menu Map	43
Call History	44
Contacts.....	46
Messaging	47
Media	50
Organizer	51
Web2go	53
Bluetooth	55
Settings.....	57
Software Update.....	62
Accessories	63

For Your Safety

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.

Caution

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble, open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery

For Your Safety

- may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please read the manual of proper installation and removal of the battery.
- Please read the manual of specified charger about charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric

- shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Short-circuit of the terminal may damage the battery and cause an explosion. Always cover the receptacle when not in use.

For Your Safety

- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Never store your phone in temperature less than -4 °F or greater than 122 °F.
- Charging temperature range is between 32 °F and 113 °F. Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has protection circuit to avoid the danger. Do not use near places that can generate static electricity more than 100V which could damage the protection circuit. Damaged protection circuits may generate smoke, rupture or ignite.

- When using the battery for the first time, if it emits a bad smell, you see rust on it, or anything else abnormal, do not use the equipment and bring the battery to the shop which it was bought.
- Keep batteries away from babies and small children. If children use the battery, their parents or legal guardians are responsible for supervising and teaching them about the safe handling of batteries and how to use batteries according to the manual with care.
- If liquid from the battery rubs against skin or clothing, wash with fresh water. It may cause the skin inflammation. Remove and do not use the battery. Be careful that children do not swallow any parts (such as earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation resulting in serious injury or death.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

For Your Safety

- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.

General Notice

- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.

- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
 - Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
 - The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
 - When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
 - Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

For Your Safety

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules.

Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326,

adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must

be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and ve-

hicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna.

A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

For Your Safety

Consumer Information About Radio Frequency Emissions

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

Are wireless phones safe?

Scientific research on the subject of wireless phones and radio frequency ("RF") energy has been conducted worldwide for many years, and continues. In the United States, the

Food and Drug Administration ("FDA") and the Federal Communications Commission ("FCC") set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, "The scientific community at large ... believes that the weight of scientific evidence does not show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the

world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under "c" in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted. The FCC issued its own website publication stating that "there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety

of other problems, including headaches, dizziness or memory loss." This publication is available at <http://www.fcc.gov/oet/rfsafety> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

What does "SAR" mean?

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by

For Your Safety

the FCC. One of these limits is expressed as a Specific Absorption Rate, or "SAR." SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue. Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported SAR value. This is because the SAR value may

vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone to the body while in use, and the use of hands-free devices. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.91 W/kg and when worn on the body, as described

in this user guide, is 0.54 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on GS170.

For more information about SARs, see the FCC's OET Bulletins 56 and 65 at http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins or visit the Cellular Telecommunications Industry Association website at http://www.ctia.org/consumer_info/index.cfm/AID/10371. You may also wish to contact the manufacturer of your phone.

Can I minimize my RF exposure?

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can

For Your Safety

place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that "hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety

requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit." Also, if you use your wireless phone while in a car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your wireless phone manufacturer's instructions for the safe operation of your phone.

Do wireless phones pose any special risks to children?

The FDA/FCC website states that "the scientific evidence does not show a danger to users of wireless communication devices, including children." The FDA/FCC

website further states that "some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all". For example, the Stewart Report from the United Kingdom ["UK"] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. [The UK's] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy of the UK's leaflet is

available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at www.iegmp.org.uk and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

Where can I get further information about RF emissions?

For further information, see the following additional resources (websites current as of April 2005):

For Your Safety

U.S. Food and Drug Administration

FDA Consumer

magazine

November-December
2000

Telephone: (888)

INFO-FDA

<http://www.fda.gov>

(Under "c" in the subject
index, select Cell Phones
> Research.)

U.S. Federal Communications Commission

445 12th Street, S.W.

Washington, D.C. 20554

Telephone: (888)

225-5322

<http://www.fcc.gov/oet/rfsafety>

Independent Expert Group on Mobile Phones

<http://www.iegmp.org.uk>

Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices

283 Sparks Street

Ottawa, Ontario K1R 7X9

Canada

Telephone: (613)

991-6990

World Health Organization

Avenue Appia 20

1211 Geneva 27

Switzerland

Telephone: 011 41 22

791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

**International
Commission on Non-
Ionizing Radiation
Protection**

c/o Bundesamt für
Strahlenschutz
Ingolstaedter Landstr. 1
85764 Oberschleis-
heim
Germany
Telephone: 011 49 1888
333 2156
<http://www.icnirp.de>

**American National
Standards Institute**

1819 L Street, N.W., 6th
Floor
Washington, D.C. 20036
Telephone: (202)
293-8020
<http://www.ansi.org>

**National Council on
Radiation Protection
and Measurements**

7910 Woodmont
Avenue, Suite 800
Bethesda, MD 20814-
3095
Telephone: (301)
657-2652
<http://www.ncrponline.org>

**Engineering in
Medicine and Biology
Society, Committee
on Man and Radiation
(COMAR) of the
Institute of Electrical
and Electronics
Engineers**

<http://ewh.ieee.org/soc/embs/comar/>

For Your Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international

standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86
(1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection
Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna.

Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently: Don't touch the antenna unnecessarily

when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference

For Your Safety

with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect

that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

For Your Safety

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include:

- fueling areas (such as gasoline stations);
- below deck on boats;
- fuel or chemical transfer or storage facilities;
- vehicles using liquefied petroleum gas (such as propane or butane);
- areas where the air contains chemicals or

particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used.

They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

For Your Safety

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of

wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves,

For Your Safety

the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from

the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor

For Your Safety

development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary

brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide

answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop – if they do – may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones.

Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

For Your Safety

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development

of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with

independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed

For Your Safety

by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for

measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place

For Your Safety

more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For

example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000.

For Your Safety

This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved

by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones

(<http://www.fda.gov/>

Radiation-EmittingProducts/RadiationEmitting-ProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm)

Federal Communications Commission (FCC) RF Safety Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board (UK)

(<http://www.hpa.org.uk/radiation/>)

For Your Safety

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Getting to know your phone



Installing the SIM Card and Charging the Battery


Installing the SIM Card

When you start your cellular service, you are provided with a SIM card that is loaded with your subscription details, any optional services available, and many other features.

Important! : The SIM card and its contents can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of the reach of small children.

SIM Card Instructions:

- 1 Slide the battery cover downwards and lift it away from the phone.
- 2 Lift the battery up and out to remove it.
- 3 Carefully slide the SIM card into the SIM card slot. Make sure that the card's gold contacts are facing downwards.
- 4 Align the battery's gold contacts with the gold contacts on the phone's battery compartment and press down on the battery until it snaps into place.
- 5 Replace the battery cover by lining up the cover (as shown in the corresponding illustration below) and then sliding it upwards until it snaps into place.
- 6 To charge the battery, unfasten the Headset/Charger port cover on the right side of the phone and plug in the power adapter's connector into it. Make sure that side 'B' of the small end of the adapter facing upwards. Plug in the adapter into a standard AC wall outlet.

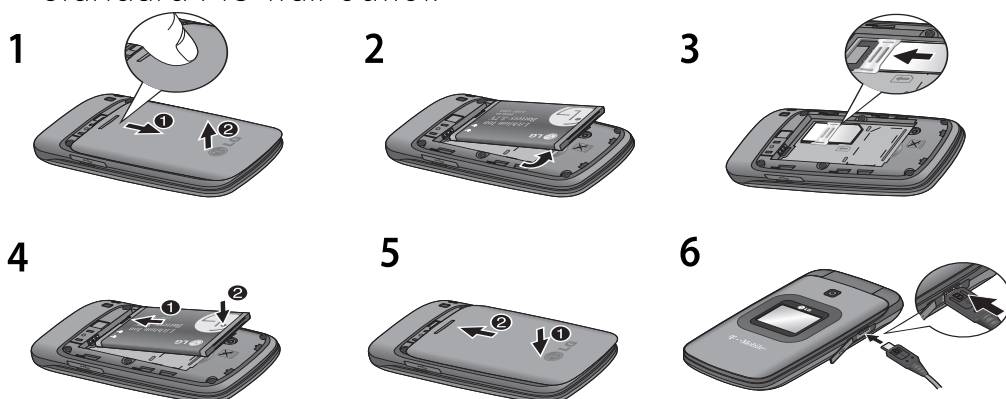

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu Map

1 Downloads

2. Call History

- 2.1. All Calls
- 2.2. Missed Calls
- 2.3. Received Calls
- 2.4. Dialed Calls
- 2.5. Call Duration

3. web2go

- 3.1. Home
- 3.2. Enter URL
- 3.3. Bookmarks
- 3.4. Saved pages
- 3.5. Recent pages
- 3.6. Browser settings

4. Organizer

- 4.1. Alarm Clock
- 4.2. Calendar
- 4.3. Tasks
- 4.4. Notes
- 4.5. Secret Notes
- 4.6. Calculator
- 4.7. Stopwatch
- 4.8. Date Finder
- 4.9. Unit Converter
- 4.10. World Clock
- 4.11. Settings

5. Messaging

- 5.1. Create Message
- 5.2. Inbox
- 5.3. Audio Postcard
- 5.4. Drafts
- 5.5. Sentbox
- 5.6. Saved items
- 5.7. Voicemail
- 5.8. Emoticons
- 5.9. Message Settings

6. Media

- 6.1. Camera
- 6.2. Voice Recorder
- 6.3. Pictures
- 6.4. Sounds
- 6.5. Games & apps
- 6.6. Other Files

7. Help

8. Contacts

- 8.1. Contacts
- 8.2. New Contact
- 8.3. Speed Dial
- 8.4. Groups
- 8.5. Service Dial Numbers
- 8.6. Own Number
- 8.7. My Business Card
- 8.8. Settings

9. Settings

- 9.1. Profiles
- 9.2. Display
- 9.3. Connectivity
- 9.4. Call
- 9.5. Phone
- 9.6. Network
- 9.7. Application Settings
- 9.8. Memory Manager
- 9.9. Phone Information

Call History

Making a call

1. From the Idle screen, enter the number you wish to dial by using the keypad. To delete a digit press .
2. Press  to initiate the call.
3. To end the call, press .

TIP! To enter + when making an international call, press and hold .

Making a call from your contacts

1. Press the **Contacts** soft key from the Idle screen.
2. Select **Contacts** from the list that is displayed.
3. Using the keypad, enter the first letter of the contact you want to call.

4. Press the **View** soft key and then select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, open the flip or press  (depending on your Answer mode setting) to answer the call. When your phone rings during an incoming call, you can silence the ringing by pressing the Up volume key the **Silent** soft key or reject the call by pressing the right soft key twice (when you press the **Silent** soft key, the option changes to **Reject**). Note that during the call, you can control the voice volume by pressing the side volume keys.

TIP! You can change the settings on your phone to answer calls in different ways. Press the **Menu** soft key, select **Settings**, and choose **Call**. Select **Answer mode** and choose from **Press send key, Open flip** and **Press any key**.

Viewing your Call history

If your network supports Calling Line Identification (CLI) you can check the call history of missed, received, and dialed calls. Press  from the idle screen to see your most recent calls.

Speed dialing

You can assign a speed dial number to a frequently called contact. Press the **Contacts** soft key from the Idle screen and select **Speed Dial**. Highlight a Speed Dial digit, press the **Add** soft key and then select a contact from your Contacts list.

Contacts

Searching for a contact

1. Press the **Contacts** soft key from the Idle screen.
2. Select **Contacts**.
3. Use the keypad to enter the name of the contact you want to call. Or scroll through the contacts using the up and down directional keys.

Adding a new contact

1. Press the **Contacts** soft key and select **New Contact**.
2. Enter the desired information (be sure to press the **Options** soft key for more contact field options) and press the **Done** soft key to save the contact.

Adding a contact to a group

You can save your contacts into different groups. For example, to keep your work colleagues and family separate. There are a number of groups including **Family, Friends, Colleagues, School,** and **VIP** already set up on the phone. In the list, press **View**, then call the desired member.

Sending a business card

Press the **Contacts** soft key from the Idle screen, choose **My Business card**, press the **Options** soft key and choose **Send business card**. This allows you to send your saved contact details to another person as a business card. Choose to send as a **Text message, Multimedia msg.,** or via **Bluetooth**.

Messaging

Your GS170 includes functions to send text messages and multimedia messages and as well as the network's service messages.

Sending a message

1. Press the **Menu** soft key, select **Messaging**, and choose **Create Message**.
2. Select **Message** and a new message editor will open. The message editor allows you to send **Text message** and **Multimedia messages** into one intuitive and easy way. If you enter text only, without adding attachments, your message will be sent as a text message.
3. Enter the number or e-mail address of the recipient.
4. Scroll down to the Text field and enter your message.
5. Press the **Options** soft key and choose **Insert** to add an **Image, Sound Clip, Schedule, Business Card, Note, Text Field, Task**, or a **Text template**.
6. Press the **Send** soft key to send the message.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode, and 123 mode.

Messaging

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognize words you're entering based on the key sequences you press. Simply press each number key once for each letter, to enter a word, and the dictionary will recognize the word once all the letters are entered.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three, or four times, until the letter is displayed.

In a text field, toggle between Abc and T9 text entry mode by holding down .

123 mode

This mode allows you to enter numbers. You can also add numbers while remaining in T9 or Abc mode by pressing and holding the desired key. In a text field, press  until '123' appears on the top right of your screen.

Message folders

Press the **Menu** soft key, select **Messaging**. The following options are available:

- **Create Message** - Allows you to create new messages.
- **Inbox** - Recently received messages are placed into your Inbox.

- **Audio Postcard** -
Allows you to create a new Audio Postcard.
- **Drafts** - Saved message drafts are located in this folder.
- **Sentbox** - Recently sent messages are placed here.
- **Saved items** - You can access your Saved Messages, Text templates, and Multimedia templates
- **Voicemail** - Allows you to call your voicemail to check voice messages.
- **Emoticons** - Displays a list of emoticons and allows you to create, edit, and delete emoticons.
- **Message Settings** -
Allows you to set the configuration for your message settings.

Media

Press the **Menu** soft key and select **Media** to access the following options:

Camera

Taking a photo

Use this option to take pictures. You can also press the Camera key  from the Idle screen.

Voice recorder

Use the **Voice recorder** function to record voice memos or other sounds.

Pictures

The **Pictures** folder contains default images and pictures taken on your phone's camera.

Sounds

The **Sounds** folder contains ringtones, voice recordings, and default sounds. From here you can manage, send, or set sounds as ringtones.

Games and apps

Your GS170 comes with preloaded games to keep you amused when you have time to spare. Downloaded applications are saved to the Applications folder.

Organizer

Press the Menu soft key and select **Organizer** for the following options:

Alarm Clock

You can set up to 5 alarm clocks to go off at a specified time.

Calendar

The Calendar allows you to keep track of schedule appointments. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Tasks

You can view, edit, delete, and add tasks.

Notes

You can view, edit, delete, and add notes to yourself.

Secret Notes

You can view, edit, delete, and add secret notes to yourself. Your security code needs to be entered when accessing this menu, thus preventing anyone who does not have the code from accessing it.

Calculator

The Calculator function allows your phone to calculate simple mathematical equations.

Stopwatch

This option allows you to use your phone as a stopwatch.

Date Finder

This function allows you to find out what the date will be after a specified number of days.

Organizer

Unit Converter

This function allows you to convert various types of measurements into units you desire.

World Clock

You can add a required city to the list of world clock. You can also check the current time and major cities around the world.

Remember to adjust for Daylight Savings, if necessary.

Settings

This feature allows you to configure various settings for the Organizer function.

Web2go

Accessing the Web

web2go(SM) is a portal to the Internet on your phone. You can view your favorite websites, download games, pictures and more.

The browser opens to the homepage, by default.

You can also manually enter an URL address and access the associated web page (if supported by your phone). Please note that access to all websites may be not be possible due to your phone's limited capacity.

1. Press the **Menu** soft key and select **web2go**.
2. To access the Web2go homepage directly, select **Home**. Alternately, select **Enter URL** and type in your desired URL.

Accessing Bookmarks

To access the Bookmarks, press the **Menu** soft key from the Idle screen, select **web2go** , then select **Bookmarks**.

Accessing a Saved Pages

While browsing with web2go, you can save the web pages using **Save items** on the **Options menu**. To access the Saved Pages, press the Menu soft key, select **web2go** and then select **Saved Pages**.

Accessing a Recent Pages

To access the Recent Pages, press the **Menu** soft key, select **web2go** and then select **Recent Pages**.

Web2go

Changing web browser settings

To change the web browser settings, press the **Menu** soft key, select **web2go** and then select **Browser Settings**. You can edit the **Profiles**, **Appearance settings**, **Cache, Cookies** and **Security settings**.

Bluetooth

Changing your Bluetooth™ settings

1. Press the **Menu** soft key, select **Settings** , then select **Connectivity**. Choose **Bluetooth**.
2. Select **Settings**.

The following options are available :

- **My Visibility** - Choose whether to show or hide your device to other Bluetooth devices.
- **My Device Name** - Allows you to set a name for your LG GS170.
- **Supported Services** - Shows the Bluetooth profiles that your phone supports.
- **My Address** - View your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GS170 and another device, the two devices can communicate and even share files (if the necessary profiles are supported).

1. Check that your GS170's Bluetooth functionality is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My Visibility**, then **Visible**.
2. Select **Search New Device** from the **Bluetooth** menu.
3. When the search is completed, **Add** and **Refresh** will appear on screen. Highlight the device you want to pair with and press

Bluetooth

the **Add** soft key. Then enter the matching passcodes.

4. If necessary, enter, or confirm, matching passcodes for both devices.

5. Your phone will then connect to the other device.

Settings

Press the **Menu** soft key from the Idle screen and select **Settings** for the following options:

Profiles

Allows you to select a sound profile for your phone. You can also personalize each profile by highlighting the profile you want to edit and press the **Options** soft key, then press **Edit**

- For example, highlight the Silent mode, press the **Options** soft key, then press **Edit**, and set the Vibrate alert.

Flight mode

Use this option to activate or deactivate flight mode. When **Flight mode** is active you will not be able to make calls or, connect to the internet.

Display

Allows you to personalize various display settings.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone straightaway. If you want to change any settings, use this menu.

Press the **Menu** soft key from the Idle screen, select **Settings** and select **Connectivity**. Your options are:

- **Bluetooth** - Set up your GS170 for Bluetooth use. You can adapt your visibility to other devices or connect to devices your phone is paired with.

Settings

- **Internet profiles** - This menu shows the Internet profiles. You can create new profiles, delete or edit them using the Options menu. However, you cannot delete or edit default configurations.
- **Access points** - This menu shows the access points list. You can create new profiles, delete or edit them by using the Options menu. However, you cannot delete or edit default configurations.
- **Call divert** - Choose whether to divert your calls and when to divert them.
- **Send my number** - Depending on your network provider, this option allows you to choose whether your number will be displayed when you call someone.
- **Auto redial** - Allows you to choose if you want your phone to automatically redial the last number if you were unable to connect.

Changing the call settings

You can set the menu relevant to a call. Press the **Menu** soft key, select **Settings** and choose **Call**. The following options are available:

- **Answer mode** - Choose whether to answer the phone using Send key, opening the flip, or pressing any key.

- **BT answer mode** - Allows you to set the answer mode for when a Bluetooth device is connected to the phone.
- **Free call timer** - Allows you to set a predetermined number of minutes so that you can keep track of minutes used.
- **Minute minder** - Allows your phone to notify you with a tone every time a certain amount of time passes.
- **Save new number** - If set to On, the phone will prompt you to save a new (unsaved) number after a call is completed.
- **Call waiting** - Depending on your network provider, this option allows you to be alerted when you have a call waiting.
- **Call reject** - Allows you to reject incoming calls by type of caller (for example, from a certain Group, unregistered numbers, and more).
- **Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone if this option is turned on.
- **TTY** - Select to turn TTY On/TTY Off.
- **Hearing Aid** - Select to turn Hearing Aid On/Hearing Aid Off

Settings

Phone

Date & Time

Allows you to set your date and time settings on your phone.

Language

Allows you to set the phone menu and display language.

Shortcuts

Allows you to set shortcuts that you can access from the Idle screen by pressing the left directional key.

Security

This function allows you to change your security settings to keep your GS170 and the important information it holds protected. The following options are available:

- **PIN code request** - This function requires a PIN code to be entered

every time the phone is turned on.

- **Phone lock** - This function locks your phone immediately and requires a security code to unlock
- **Lock If SIM is Changed** - This function requires a PIN code to be entered every time a new SIM card is inserted.
- **Change codes** - Allows you to change your PIN code, PIN2 code, and Security Code.

Reset settings

To reset all the phone's settings to their factory defaults, use this menu. You will need to enter the security code to reset your phone.

Note: The security code is "0000" by default

Network

The Network feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: Consult your carrier regarding Roaming capabilities and possible additional charges.

- **Automatic** - You are connected to the first available network when roaming.
- **Manual** - The phone begins searching for available networks. Highlight the desired network and then press center soft key. The phone scans the selected network and attempts to connect. If a connection is available, you are connected.

Application Settings

This menu allows you to change the available settings for Messaging, Browser and Java.

Memory Manager

You can use the memory manager to determine how each memory is used and see how much space is available in the following storage locations: **Handset common memory, Handset reserved memory, SIM memory.**

Phone Information

This feature allows you to view the following phone information: Phone Number, Model Number and Software Version.

Software Update

LG Mobile Phone Software Update Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>.

This feature allows you to update your software to the latest version quickly and conveniently over the Internet without needing to visit our service center.

As the mobile phone software update program requires your full attention throughout the update process, please make sure you check all instructions and notes that appear at each step before moving on to the next step. Please note that removing the USB

data communication cable or batteries during the update may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the update process, you are advised to back up any important information in advance for safekeeping.


Accessories

There are a variety of accessories available for your mobile phone; some may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability. **(Items described below may be optional.)**


Battery



Travel Adapter

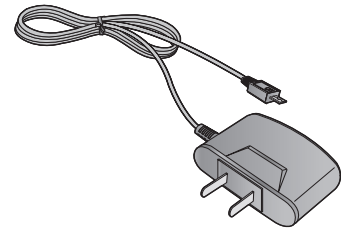

Stereo headset

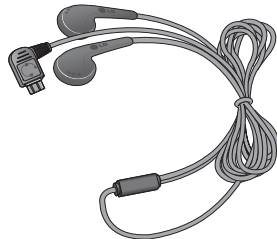

User Guide

Learn more about your GS170.



NOTE:

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.

- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

